



**Warranty
& Service**

Not For Reproduction

LAND CRUISER
LAND CRUISER STATION WAGON

New Vehicle Information Statement

SELLING DEALER TO COMPLETE USING BLOCK LETTERS

Owner's Details

Name

Address

Town

State Post Code

Selling Dealer's Stamp:

Selling Dealer's Signature:

.....

Vehicle's Details

Model Name

Model Code

Registration Number

Built (Production) Date

Vehicle Identification Number (VIN):

| | | | | | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| | | | | | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|

Warranty Commencement Date

Important Notice

In the event that we need to contact you about your Toyota, please notify us if there is any change to name, address or ownership. Use the "Owner Information Change Forms" at the end of this booklet or contact our Customer Relations Centre on 1800 252 097.

Welcome to the growing group of value-conscious people who drive Toyotas. We are proud of the advanced engineering and quality construction of each vehicle we build.

Please read this booklet carefully. It contains important information about warranty, maintenance requirements, and the extensive customer support available through Toyota and its dealerships. It also has space to record the maintenance service history of your Toyota which should be kept up-to-date. Following the information in this booklet will help you enjoy many years of safe and trouble-free motoring.

Please leave this booklet in this vehicle at the time of resale. The next owner will also need this information.

All information in this booklet is current at the time of printing. However, because of Toyota's policy of continual improvement, we reserve the right to make changes at any time without notice.

This booklet applies to the models nominated on the outside rear cover, and explains the warranty and service of all factory installed equipment and options for these models. Due to the specification differences among these models, you may find some explanations for equipment and options which are not installed on your vehicle.

Toyota Motor Corporation Australia Limited

A.B.N. 64 009 686 097

Toyota and Privacy

Toyota is committed to protecting your privacy and is required to comply with the National Privacy Principles in the *Privacy Act* 1988 (Cth) when it collects and handles your personal information. This includes providing you with the right to access and correct your personal information (subject to some exceptions allowed by law).

For further information about Toyota and privacy, please see the Toyota Privacy Policy (available at www.toyota.com.au). You can also contact us by calling 1800 252 097, or by sending your query to the Toyota Privacy Contact, PO Box 187 Caringbah, NSW, 2229, Australia.

Not For Reproduction

TOYOTA CUSTOMER CARE

| | |
|---|----------|
| Your Toyota Dealer | 2 |
| Toyota Customer Relations Centre | 3 |
| Genuine Toyota Parts | 4 |
| Genuine Toyota Accessories | 5 |

TOYOTA WARRANTY

| | |
|---|-----------|
| Toyota New Vehicle Warranty | 6 |
| Important Notice | 6 |
| Definitions | 6 |
| Warranty Period | 7 |
| What is Covered | 7 |
| What is Not Covered | 8 |
| Odometer Change Record | 10 |
| Owner's Responsibilities | 11 |
| Toyota Warranty Guidance | 12 |
| Answers to Some Typical Questions | 12 |
| Toyota Extra Care | 21 |
| Toyota Extra Care Ascend | 21 |
| Toyota Extra Care Assist | 21 |
| Toyota Extra Care Extended Warranty | 22 |

TOYOTA SERVICE

| | |
|---|------------|
| Maintenance of your Toyota | 23 |
| Toyota's Lubricants and Coolant | 23 |
| Your Toyota's Identification | 25 |
| Checks Recommended At Least Weekly | 26 |
| Driving Through Deep Water, Mud or Sand | 26 |
| Additional Maintenance Recommended by your Toyota Dealer | 28 |
| Determining the Proper Maintenance Interval | 28 |
| Following the Toyota Maintenance Schedule | 30 |
| Toyota Maintenance Schedule | 33 |
| Maintenance Service Times | 39 |
| Maintenance Record | 43 |
| Pre-Delivery Service | 43 |
| Free 1,000 km Service | 45 |
| 5,000 km ~ 200,000 km Services | 47~126 |
| Toyota Dealer Directory | 127 |
| Owner Information Change Forms..... | 139 |

Your Toyota Dealer

Regular maintenance is essential to maintaining the high level of performance, safety and reliability built into your Toyota. It also helps to protect your investment and to ensure many years of trouble-free motoring.

Your Toyota Dealer is best equipped to carry out maintenance and repairs on your Toyota because:

1. They have highly qualified technicians that are kept abreast of the latest technological developments and servicing techniques through continuing education that Toyota provides.
2. They have specially designed tools and equipment to service your Toyota correctly and economically.
3. Toyota dealers are provided with the latest technical information about your specific model. They also have direct access to Toyota if they need further information.

4. Toyota Dealers have Genuine Toyota Parts for all of your servicing needs. These parts have the same high quality standard as the original parts on your vehicle, and they are covered by a factory warranty.

Your Toyota Dealer can also help you with many other matters relating to your Toyota. So, if you need assistance,

Talk to Your Toyota Dealer First.

For your nearest Toyota Dealer, see the *"Toyota Dealer Directory"* in this booklet. You may need to quote your vehicle's details. These can be found on the inside front cover of this booklet.



If you need further assistance after contacting your Toyota Dealer, you may call Toyota direct via our Customer Relations Centre on:

1800 252 097 (free-call)

9710 3955 (within Sydney metropolitan area)

If you would prefer to write, our address is:

Toyota Customer Relations Centre

PO Box 187

Caringbah NSW 2229

You may need to quote your vehicle's details. These can be found on the inside front cover of this booklet.

The Toyota Customer Relations Advisors can help you with information on our products, our Dealer Network, maintenance of Toyota vehicles, and assist with any questions you may have.

Toyota Surveys

To improve the service that Toyota and its Dealer Network provides, we periodically survey our customers. If you receive one of these surveys, please take a few moments to complete and return it. In doing so, you will assist Toyota to provide its customers with an even higher level of satisfaction.

Genuine Toyota Parts

To safeguard the quality, reliability and value of your vehicle, Toyota recommends using only Genuine Toyota Parts for maintenance and repairs. Like all Toyota products, Genuine Toyota Parts are built to the highest standards of quality and performance. They are also designed to fit your vehicle's exact specifications.

Your Toyota Dealership has Genuine Toyota Parts to meet your vehicle service needs. And because it is linked electronically to Toyota's Parts Distribution Centres, the dealership has quick access to any parts it may not have in stock.

Genuine Toyota Parts are warranted for 12 months (regardless of kilometres travelled) or for the remainder of any applicable New Vehicle Warranty, whichever is longer. Non-Genuine Toyota Parts, and any damage or failures resulting from their use, are not covered by Toyota Warranty.

For all your maintenance and repair needs, insist on the quality and peace of mind you get with Genuine Toyota Parts.



When you want to personalise your Toyota vehicle, be sure to do it without sacrificing Toyota quality and performance. How? By choosing Genuine Toyota Accessories.

Genuine Toyota Accessories are designed and manufactured specifically for Toyota vehicles. In addition, they undergo rigorous testing to ensure first-rate quality, precise fit and long-term durability. Aftermarket accessories do not always meet these same high standards.

The quality of Genuine Toyota Accessories is also backed by the integrity of a Toyota warranty. If Genuine Toyota Accessories are fitted at the time of new vehicle purchase, they are warranted for the duration of the new vehicle warranty of 3 years or 100,000 km, whichever occurs first. If the accessories are fitted after new vehicle purchase, they are warranted for the remainder of the new vehicle warranty or for 12 months, whichever is the longer. And remember that Genuine Toyota Accessories can be purchased from an authorised Toyota Dealer.



Toyota New Vehicle Warranty

Important Notice

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of such vehicle which the owner has under the Trade Practices Act (Commonwealth) and other State and Territory laws.

Definitions

Warranty Commencement Date

The Warranty Commencement Date means the date the vehicle is either:

- (a) delivered to its first owner, or
- (b) first put into service by Toyota or an authorised Toyota Dealer as a company or demonstration vehicle,

whichever date is the earlier.

Warranty Repair

Warranty Repair means a repair performed during the Warranty Period under the Toyota New Vehicle Warranty to rectify a defect caused by faulty materials and or workmanship at the time of vehicle manufacture.

Maintenance Service

Maintenance Service means the regular inspections, adjustments, changes of oils, coolant, fluids and lubricants, and the regular replacement of expendable items, necessary due to the passage of time and or the accumulation of kilometres travelled by the vehicle.

Warranty Period

Warranty Commencement Date

The *"Warranty Commencement Date"* is shown on the *"New Vehicle Information Statement"* on the inside front cover of this booklet.

Vehicle Warranty

This warranty applies to all new Toyota vehicles sold in Australia for 3 years or 100,000 kilometres, whichever occurs first, from the *"Warranty Commencement Date"*.

Paint Defect and Surface Rust

Paint defect or surface rust is warranted for 3 years or 100,000 kilometres, whichever occurs first, from the *"Warranty Commencement Date"*.

Corrosion Perforation Warranty

This warranty is in addition to the *"Vehicle Warranty"* and applies for 5 years unlimited kilometres from the *"Warranty Commencement Date"*.

Accessory Warranty

Genuine Toyota accessories fitted at the time of new vehicle purchase are warranted for the duration of the new vehicle warranty 3 years or 100,000 km, whichever occurs first. If the accessories are fitted after new vehicle purchase, they are warranted for the remainder of the new vehicle warranty or for 12 months, whichever is the longer.

What is Covered

Vehicle Warranty

Toyota warrants that within the warranty period it will repair or replace free of charge any Toyota components (except those items listed under *"What is Not Covered"*) installed in your vehicle as original equipment found to be defective in materials or workmanship under normal use and operation in Australia.

Toyota New Vehicle Warranty

Paint Defect and Surface Rust

Any paint defect or surface rust appearing on any of the painted body panels is warranted for the duration of the warranty period, except in those instances listed under *"What is Not Covered"*.

For information on how to protect your vehicle from corrosion, see *"Corrosion Prevention and Appearance Care"* in the Owner's Manual.

Corrosion Perforation Warranty

Toyota warrants that within the warranty period it will repair or replace any original body panel that develops perforation from corrosion (rust-through), except in those instances listed under *"What is Not Covered"*.

Accessory Warranty

Genuine Toyota Accessories are warranted against defect for the duration of the warranty period, except in those instances listed under *"What is Not Covered"*.

Towing

Where a warranted part has failed, and the vehicle is inoperative or unsafe to drive, towing of a vehicle to the nearest authorised Toyota Dealer is covered under the terms and conditions of this warranty. Refer to *"Question 2"* page 13 for further details.

Battery

During the first 12 months of service, regardless of kilometres travelled, a defective original equipment battery will be replaced free of charge. Should the battery fail during the second 12 months of service, 50% of the replacement cost will be covered by the warranty.

What is Not Covered

General

Under normal circumstances, no responsibility will be accepted where a part has required repair or replacement as a direct or indirect result of:

- the failure by a non-Toyota repairer, owner or operator to follow the manufacturer's recommendations; or
- the use of non-genuine Toyota parts or accessories; or
- the faulty workmanship, default or negligence of a non-Toyota repairer.

Tyres

The Toyota New Vehicle Warranty does not cover tyres. They are covered by the tyre manufacturer's warranty.

Factors Beyond the Manufacturer's Control Including but Not Limited to:

- Repairs required as a result of misuse (racing, overloading, etc.), negligence, water ingress, modification, alteration, tampering, disconnection, improper adjustment or repairs, accident, parts not supplied by Toyota, and the use of add-on parts or materials are not covered.

- Cosmetic or surface corrosion from stone chips or scratches in the paint are not covered.
- Damage or surface corrosion from the environment such as acid rain, airborne fall-out (chemicals, tree sap, etc.), salt, hail, windstorms, lightning, floods, or other like acts are not covered.
- Incidental and consequential damages such as telephone calls, car rental charges, hotel bills, loss of income or time, inconvenience or commercial loss are not covered.

Lack of Maintenance Service or Use of Incorrect Fuel, Oils, Lubricants, Coolant or Fluids Including but Not Limited to:

Repairs caused by improper maintenance, lack of Maintenance Service and the use of other than the fuel, oils, lubricants, coolant or fluids specified in the Owner's Manual are not covered.

Toyota New Vehicle Warranty

Maintenance Service or Expendable Parts Including but Not Limited to:

Engine tune-up, lubrication, cleaning and polishing, replacement of filters, coolant, spark plugs, fuses, worn wiper blades, worn brake pads, linings and clutch linings are some of the normal Maintenance Services required by all vehicles.

Normal Noise, Vibration and Deterioration Including but Not Limited to:

Normal noise, vibration, wear and tear, and deterioration such as discolouration, flaking, deformation or blur are not covered.

Altered Odometer

Failure of a vehicle in which the odometer has been altered, tampered with or defaced so that the number of kilometres travelled by the vehicle cannot be readily ascertained is not covered.

Odometer Change Record

If at any time it becomes necessary for a new odometer to be installed in your vehicle, please have your Toyota Dealer record the date of the change and the kilometres shown on the original odometer below.

Not For Reproduction

Odometer changed at:
..... km
Date odometer changed:
.....
Toyota Dealer's name:
.....
Toyota Dealer's signature:
..... Date

Owner's Responsibilities

- You must present this booklet to any authorised Toyota Dealer whenever Warranty Repair is required.
- You must deliver the vehicle to any authorised Toyota Dealer in order to obtain the Warranty Repair.
- You must properly operate, maintain and care for your Toyota in accordance with the instructions contained herein and in the Owner's Manual.
- When you change your name and or address, you are requested to complete the "Owner Information Change Form" in this booklet and return it to Toyota as outlined. Likewise, new owners of the Toyota vehicle are also requested to complete the form.



Extra Care

See "Toyota Extra Care" page 21 for information about Toyota's extended warranty and other products.

Toyota Warranty Guidance

Answers to Some Typical Questions

To help you understand the New Vehicle Warranty for your Toyota, the following provides answers to some typical questions.

Question 1

How do I get my vehicle repaired or checked if it malfunctions during the warranty period?

Answer

All new Toyota vehicles are covered by warranty. Should you want to arrange for work to be carried out on your Toyota, or should you want to discuss a Warranty Repair or Maintenance Service problem, follow the steps given below, in the sequence listed, for the fastest possible response.

Talk to Your Toyota Dealer

This is the most direct way to solve your problem. Every Toyota Dealer is ultimately responsible for providing the Warranty Repair you may need, and has the knowledge, tools and resources available to keep your Toyota in top condition.

First, talk to the Dealer Service Advisor or Customer Relations Manager, explaining the problem fully.

Then, if you feel that your problem has not been resolved or that your questions have not been answered, ask to see the Service Manager.

If, after that, you feel you would like more information, ask to discuss the matter with the Dealer's Owner or General Manager. Since it is their business, they will be most interested in your continued patronage.

Question 2

What do I do in an emergency if my vehicle breaks down and Warranty Repair is required but there is not a Toyota Dealer nearby to supply such a service?

Answer

Should such a situation arise, first check the *"Toyota Dealer Directory"* in this booklet and contact the nearest Toyota Dealer to your location for advice. If the Dealer cannot be contacted, then ring the Toyota Customer Relations Centre on the toll-free telephone number: 1800 252 097, or 9710 3955 within the Sydney metropolitan area.

If a Toyota Dealer or the Toyota Customer Relations Centre cannot be contacted and, in an emergency, a repair or replacement of a type which normally would be covered by the Toyota New Vehicle Warranty is necessary to enable the vehicle to be operated safely, the Warranty Repair may be carried out by a suitably qualified repairer.

Do not make any attempt to drive your vehicle if it is unsafe to do so.

At the earliest possible time after the repair, you must take your vehicle to your Toyota Dealer, or to the nearest Toyota Dealer to the breakdown, for inspection and further Warranty Repair if it is felt necessary by that Dealer.

Also, at the time of inspection, you must present the invoice for the emergency repair so that a claim for the reasonable cost may be made by the Dealer. See *"Toyota New Vehicle Warranty"* in this booklet for more details.

If this is not possible, please send your claim to the Toyota Service Manager in your state (see *"State Distributor"* in the *"Toyota Dealer Directory"* for address details) and ensure that the following information is included:

Toyota Warranty Guidance

- Name/s of the selling and servicing Toyota Dealers.
- Full address of the emergency repairer.
- Odometer reading at the time of the emergency repair and at the time of making the claim.
- All vehicle particulars given on the inside front cover of this booklet.
- A full explanation of the reason for the emergency repair.

Question 3

Will the Toyota New Vehicle Warranty apply if my vehicle is used to tow a caravan or trailer?

Answer

Your vehicle may be used for towing a caravan or trailer and be covered by warranty providing:

- Your Toyota is serviced correctly and regularly according to the *"Toyota Maintenance Schedule"* in this booklet.

- That any towing modifications specified for your vehicle by Toyota have been correctly installed. Contact your Toyota Dealer for further information.
 - The towing equipment is properly installed.
 - That you adhere to the instructions for the use and operation of the towing equipment fitted to your vehicle, including any instructions on the use and operation of any other recommended equipment.
 - The vehicle, caravan or trailer weights do not exceed those specified for your vehicle in the State or Territory in which the combination is to operate.
- Regulations and requirements vary so if you have any doubts regarding the caravan or trailer you propose to tow, consult the appropriate motoring organisation.
- Your vehicle is driven and operated properly, carefully, and at speeds at which it and the caravan or trailer can be safely controlled.
 - Your vehicle and caravan or trailer is not overloaded.

Further, all owners should remember that towing a caravan or trailer can have an adverse effect on stability, safety, durability and operating economy of your vehicle. Such problems will largely be overcome if the towing equipment, loads and vehicle operation are as recommended by Toyota.

There are many factors that can affect stability, safety, durability and operating economy. Such things as caravan or trailer shape, as well as trailer and vehicle loading, can cause problems. However, if the caravan or trailer being towed is the correct size and weight, not overloaded and is within the operating capacity of your vehicle, your vehicle is not overloaded, and is operated properly and carefully at speeds at which it and the caravan or trailer can be safely controlled, the adverse effects of towing can be minimised.

Question 4

Are Toyota parts and accessories covered by a warranty?

Answer

Yes, genuine Toyota parts and accessories obtained from a Toyota Dealer are warranted against defects in factory materials or poor workmanship. See "Toyota New Vehicle Warranty" in this booklet for more details.

Question 5

If my vehicle is with a Toyota Dealer receiving a Warranty Repair, are out of pocket expenses such as accommodation, travel or commercial loss included in the Toyota New Vehicle Warranty?

Answer

The Toyota New Vehicle Warranty covers repair or replacement of parts that are defective in materials or workmanship at the Toyota Dealer premises. It does not cover claims for compensation.

Toyota Warranty Guidance

Question 6

What costs are not covered by the Toyota New Vehicle Warranty?

Answer

Labour, parts or lubricants used in the provision of Maintenance Service and normal maintenance of parts, for example, spark plugs, filter, brake and clutch linings, except where parts are found to be defective or any other item that has been the subject of wear and tear. See "Toyota New Vehicle Warranty" in this booklet for more details.

Question 7

If I have my vehicle converted so that it runs on Liquefied Petroleum Gas (LPG), will the Toyota New Vehicle Warranty remain valid?

Answer

Although Toyota Motor Corporation Australia Limited does not recommend conversion to Liquefied Petroleum Gas (LPG), and accepts no responsibility or liability whatsoever in respect to engine mechanical breakdown and or accident involving LPG conversion equipment, the warranty will continue to cover defects which arise solely as a result of faulty Toyota materials and workmanship.

The Toyota New Vehicle Warranty will not cover:

- faults and defects in the parts used and the installation of the LPG conversion. The Company providing the conversion should provide this cover;
- faults and defects which may be caused by the installation and use of the conversion;
- removal of LPG conversion equipment to effect a warranty repair.

Question 8

Will the Toyota New Vehicle Warranty become void if I have my vehicle modified in such a way that there is no adverse affect on the vehicle?

Answer

No, the Toyota New Vehicle Warranty will continue to apply to original components of the vehicle providing they have not been altered or adjusted in any way. Also, the Toyota New Vehicle Warranty will continue to apply if your vehicle is modified with Toyota approved parts such as Toyota towbars and trailer harnesses, providing they are installed correctly. However, non-genuine Toyota modifications will not be covered by the Toyota New Vehicle Warranty.

Question 9

Are the tyres on my vehicle covered by the Toyota New Vehicle Warranty?

Answer

No, the tyres are covered by the tyre manufacturer's warranty. This does not mean you are deprived of your statutory rights in respect of these items. Your Toyota Dealer or servicing dealer will be able to advise you if you have any questions on tyre warranty.

Question 10

What is not covered by the Toyota New Vehicle Warranty?

Answer

Repair and service adjustments caused by misuse (racing, rallying, overloading, etc.), negligence, water ingress, modification, alterations, tampering, disconnection, improper adjustments or repairs, accident, defects caused by the fitment of non-Toyota approved parts, add-on parts, improper maintenance and lack of Maintenance Service.

Toyota Warranty Guidance

In addition, warranty does not cover Maintenance Service costs.

It should be noted that the 1,000 km and 5,000 km services as specified in this booklet are free of charge (except for the addition, where necessary, of normal maintenance items, lubricants and other materials) provided always that the vehicle has been used and operated normally.

You will be required to pay for the following Maintenance Service items, except where they are required as a result of defects in factory materials or workmanship.

- (i) Engine tune, including replacement spark plugs.
- (ii) Maintenance and servicing of emission control devices.
- (iii) Cleaning or flushing of the fuel, cooling, engine, transaxle/ transmission, axle and brake systems after the 1,000 km free service.

- (iv) Replacement of any filters.
- (v) Addition to, or replacement of, lubricants.
- (vi) Addition to, or replacement of, air conditioner refrigerant.
- (vii) Wheel balancing and wheel alignment.
- (viii) Tyre wear.
- (ix) De-dusting or de-glazing of brake linings, brake disc pads, brake drums and brake discs.
- (x) Brake shoe lining, brake disc pads wear or damage.
- (xi) Brake drums and brake disc wear.
- (xii) Adjustment of clutch and brakes.
- (xiii) The removal of body rattles which are a result of normal operation and not caused by a manufacturing defect.
- (xiv) Door, hood or hatch lock adjustments.

- (xv) Chipped glass or breakage.
- (xvi) Repair/rectification of paint and panel damage.
- (xvii) Repair/replacement of trim and appearance items.
- (xviii) Battery recharging.

Question 11

What is the most important thing for me to do after taking delivery of my new vehicle?

Answer

It is most important to you and to Toyota that you thoroughly check your vehicle and ensure that it meets with your satisfaction. Any problems which you detect, particularly those that may affect your warranty, should be brought to the attention of your Toyota Dealer at or before the 1,000 km first service.

Question 12

Should I keep my vehicle in the service care of my Toyota Dealer Network?

Answer

Yes. Of course it is your choice, however, we strongly recommend that during your ownership of your Toyota you retain the expert and professional technical services which only your Toyota Dealer can offer. The services that your Toyota Dealer can offer, such as the use of genuine Toyota parts and accessories, and technicians who are trained in the latest technological advances built into your Toyota, will ensure that your Toyota is serviced to the highest possible standard.

Toyota Dealers can also maintain the service history of your Toyota, and recommend when service is required based on your driving conditions.

Toyota Warranty Guidance

Question 13

What if I am travelling or planning to travel and I need Maintenance Service or Warranty Repair— what do I do?

Answer

You can visit any Toyota Dealer in Australia as all Toyota Dealers are authorised and equipped to satisfy your service needs. For the nearest Toyota Dealer, see the *"Toyota Dealer Directory"* in this booklet.

Question 14

What about fluid additives like coolant additives, fuel additives, etc.?

Answer

Toyota recommends genuine parts for all applications of such additives where it considers it relevant and where the product has been designed for the purpose to suit the particular vehicle. Please read this booklet and the accompanying Owner's Manual for more details in this regard.

Question 15

What about fuel containing Ethanol?

Answer

Toyota approves the use of petrol with an ethanol content up to a limit of 10%.

Toyota will **not** cover failures or faults due to vehicle operation on petrol with an ethanol content greater than 10%.

Toyota Extra Care

Toyota Extra Care is an extensive range of products developed exclusively for Toyota customers by Toyota. Toyota Extra Care products include:

Toyota Extra Care Ascend

Toyota Extra Care Ascend combines all the features and benefits of Toyota Extra Care Assist and Toyota Extra Care Extended Warranty together in one easy package. We will help you, wherever you are in Australia, if you:

- Break down
- Run out of fuel
- Lock your keys in the car
- Have a flat battery
- Incur minor mechanical faults
- Experience operating difficulties
- Require towing, car rental, accommodation or meals

Toyota Extra Care Assist

Toyota Extra Care Assist provides you with access to roadside assistance 24 hours a day, 7 days a week 365 days a year. We will help you, wherever you are in Australia, if you:

- Break down
- Run out of fuel
- Lock your keys in the car
- Have a flat battery
- Incur minor mechanical faults
- Experience operating difficulties

Toyota Extra Care

Toyota Extra Care Extended Warranty

Toyota Extra Care Extended Warranty is a factory-backed extended warranty. Whether your Toyota is new or used, Toyota Extra Care Extended Warranty can help protect you from big repair bills and rising costs for years to come. And with over 240 Toyota dealerships across Australia, help is never far away.

Toyota Extra Care Extended Warranty also offers you the advantage of having no claim limits, there are no excesses to pay and you can make an unlimited number of claims.

Toyota Extra Care Extended Warranty on New Toyotas:

Is available for up to 5 years or 100,000 km whichever occurs first.

Need to Know More About These or Other Toyota Extra Care Products?

Please contact your Toyota Dealer (see the *"Toyota Dealer Directory"* in this booklet) or ring Toyota Extra Care direct on 1800 267 908 toll free.



Toyota's Lubricants and Coolant

It is essential that Toyota's approved lubricants and coolant be used when replacing them in Toyota vehicles. When your vehicle was being designed, great care was taken by Toyota engineers in selecting lubricants and coolant for your vehicle. They are the product of extensive research and development and have been designed to provide maximum performance and protection when replaced according to the *"Toyota Maintenance Schedule"*. Toyota's approved lubricants and coolant are specified in your Owner's Manual.

The use of non-genuine additives with Toyota's approved lubricants and coolant is not recommended. Their use is unnecessary; they will not only increase maintenance costs but they may also be detrimental to the operation of your vehicle.

Engine Oil

To ensure continued efficiency and long life of your Toyota's engine, the engine oil must be kept at the correct level and changed according to the *"Toyota Maintenance Schedule"* in this booklet.

See *"Checking the engine oil level"* in your Owner's Manual for further information. This requirement is essential on all Toyota engines.

WARNING - Oil Thickening Diesel Engines

Oil thickening is a phenomenon which occurs when particles of unburnt fuel and combustion by-products cause a build-up of carbon (called soot) in the engine oil forming a jelly type substance.

This phenomenon may result in serious engine damage due to components being starved of lubricating oil.

Maintenance of your Toyota

Oil thickening may occur when engine oil change intervals are exceeded, and is more prevalent when cold temperatures, short running and low oil level conditions are experienced. High speed wide open throttle driving conditions may also cause oil thickening.

It is therefore essential that the engine oil in diesel engines be changed according to the *"Toyota Maintenance Schedule"* in this booklet.

NOTICE

To prevent possible harm to the engine, always replace engine oil with Toyota's approved engine oil according to the *"Toyota Maintenance Schedule"*.

Engine Coolant

Your engine cooling system must contain ethylene-glycol based antifreeze containing anticorrosive.

Ethylene-glycol antifreeze coolant containing anticorrosive is the type of coolant your new Toyota was delivered with. In addition to providing antifreeze protection preventing subsequent damage to the cooling system as a result of freezing, the coolant also protects the cooling system components from corrosion.

When replacing coolant, it is essential that all existing coolant be thoroughly flushed from the system (includes engine, radiator, heater and hoses) and Toyota's approved coolant added together with clean demineralised or distilled water.

See *"Checking the engine coolant level"* in your Owner's Manual for further information. Toyota's approved coolant must be used to provide maximum protection.

NOTICE

To maintain designed cooling system protection and efficiency, the mixing of Toyota's approved coolant with any other coolant or additive must not occur.

Use only clean demineralised or distilled water to fill the cooling system.

Do not use alcohol type antifreeze or plain water alone.

Whenever coolant is replaced, the system must be thoroughly flushed as described in the applicable Toyota Repair Manual.

Your Toyota's Identification

The Vehicle Identification Number (VIN) is the primary identifier for your Toyota vehicle. It is stamped on the engine compartment bulkhead and on the portion of the vehicle's frame that lies within the right hand side (driver's side) front wheel arch.

The manufacturer's plate also contains the VIN and other model data such as the date of manufacture. It is located in the engine compartment.

Date of manufacture, hereinafter called the "Built Date", means the calendar month and year in which the body shell and power train sub-assemblies are conjoined and the vehicle is driven or moved from the production line.

The VIN, built date and other model data are also recorded on the inside front cover of this booklet.

For more information, see *"Your Toyota's identification"* in the Owner's Manual.

Maintenance of your Toyota

Checks Recommended At Least Weekly

In addition to the periodic maintenance specified in the *"Toyota Maintenance Schedule"*, the following items should be checked at least weekly.

For information on how to check these items, see *"Do-it-yourself maintenance"* and *"Operation of instruments and controls"* in the Owner's Manual.

Checks

- Engine coolant level
- Engine oil level
- Tyre pressure (when cold), including spare
- Windscreen washer fluid level
- Operation of air conditioner for at least five minutes
- Operation of horn, all exterior and interior lights and service reminder indicators
- Vehicle exterior (See *"Corrosion Prevention and Appearance Care"* in the Owner's Manual for more information)

Driving Through Deep Water, Mud or Sand

Items such as those following, require daily service when you drive through deep water, mud or sand:

- Brake lines and hoses
- Brake linings/drums and brake pads/discs
- Engine air filter
- Front and rear differential oil
- Steering linkage
- Transfer oil
- Transmission fluid or oil
- Wheel bearings
- Propeller shafts and drive shafts

NOTICE

Avoid driving through water that may enter the engine compartment. Water entering the engine compartment may enter the engine air intake and other components causing serious damage and or the engine to stop and not restart.

Should you need to drive through deep water, first ascertain that the depth of the water is not above the bottom of the front bumper bar and that the surface of the ground under the water is firm and even with no deep holes, then you can proceed slowly in low gear.

If the water level is deeper than above, it is advisable to wait until the water level has dropped or to find another crossing.

If your Toyota is caught in a flood and is submerged over the engine, do not start it or have it towed in a manner that may cause damage or unsafe operation. Water may have entered the engine, transmission, differential and other assemblies. Before your Toyota can be started and driven again, each assembly must be checked and serviced, otherwise, serious damage may occur.

For additional information on driving and towing your Toyota, see the vehicle's "*Owner's Manual*".

Maintenance of your Toyota

Additional Maintenance Recommended by Your Toyota Dealer

In addition to the maintenance recommended by Toyota, your Dealer may recommend maintenance to ensure the continued efficiency and reliability of your Toyota according to your particular operating conditions. This maintenance may include:

- Adjustment of valve clearance
- Headlight realignment
- Replacement of wiper blades
- Brake system inspection
- Balance and rotation of wheels
- Wheel alignment
- Leak test and regas of air conditioner system
- Other maintenance or service work as recommended by your Toyota Dealer

Determining the Proper Maintenance Interval

The operating conditions of your Toyota determine the maintenance interval as shown below. Use the odometer or time interval, whichever occurs first, to determine when maintenance is due.

In certain circumstances, your Toyota may require more frequent maintenance than that specified.

Your Toyota Dealer will be able to help you determine the appropriate maintenance for your Toyota according to your operating conditions.

UZJ100, HDJ100 Models

5,000 km or 3 Months Intervals

Use 5,000 km or 3 months intervals, and the corresponding "Service" vouchers in this booklet, if you frequently operate your Toyota under any of the following severe conditions:

- Operating on rough, muddy or snow-melted roads.
- Operating on dusty roads.
- Repeated short trips less than 8 km and outside temperature remains below freezing.
- Towing a trailer, using a camper or car top carrier.
- Extensive idling and or low speed driving for a long distance such as police cars, taxis or door-to-door calls.

If you occasionally operate your Toyota under any of the above conditions, you need only perform maintenance every 10,000 km or 6 months.

10,000 km or 6 Months Intervals

Use 10,000 km or 6 months intervals, and the corresponding "Service" vouchers in this booklet, if you operate your Toyota under conditions other than those listed above.

FZJ78/79, HZJ78/79/105, HDJ78/79 Models

5,000 km or 3 Months Intervals

Use 5,000 km or 3 months intervals, and the corresponding "Service" vouchers in this booklet, regardless of the operating conditions.

Maintenance of your Toyota

Following the Toyota Maintenance Schedule

The "*Toyota Maintenance Schedule*" is an easy-to-use quick reference for the maintenance requirements of your Toyota. It identifies the maintenance required at each kilometres interval and corresponding time interval, and it also indicates the maintenance operations required as follows:

I = Inspect and correct or replace as necessary

R = Replace

T = Tighten

L = Lubricate

A = Adjust

The information in the "*Toyota Maintenance Schedule*" is replicated in the corresponding "*Service*" vouchers in this booklet.

Maintenance beyond the last kilometres or time interval specified in the schedule should continue to be performed at the same intervals.

Determining Additional Maintenance for Severe Operating Conditions

Certain items in the schedule require more frequent maintenance when your Toyota is operated under severe conditions. The intervals at which this maintenance should occur for these items is indicated by the following bracketed maintenance operations:

(I) = Inspect and correct or replace as necessary

(R) = Replace

(L) = Lubricate

(T) = Tighten

The maintenance schedule items requiring more frequent maintenance specific to each severe operating condition are as follows:

Operating on Rough, Muddy or Snow-Melted Roads:

- Inspect parking brake linings and drums
- Inspect brake pads and discs
- Inspect brake pipes and hoses
- Inspect ball joints and dust covers (UZJ100, HDJ100 models)
- Lubricate propeller shaft
- Inspect tightness of propeller shaft bolts
- Inspect steering wheel, linkage and steering gearbox oil
- Inspect drive shaft boots (UZJ100, HDJ100 models)
- Inspect front and rear suspensions
- Inspect tightness of chassis and body bolts and nuts

Operating on Dusty Roads:

- Replace engine oil and engine oil filter
 - Inspect air filter
 - Inspect parking brake linings and drums
 - Inspect brake pads and discs
 - Lubricate propeller shaft
- Inspect tightness of propeller shaft bolts

Maintenance of your Toyota

Towing a Trailer, Using a Camper or Car-Top Carrier:

- Replace engine oil and engine oil filter
- Inspect parking brake linings and drums
- Inspect brake pads and discs
- Lubricate propeller shaft
- Inspect tightness of propeller shaft bolts
- Inspect automatic transmission fluid
- Replace automatic transmission fluid
- Replace manual transmission oil
- Replace transfer oil
- Replace front and rear differential oil
- Inspect front and rear suspensions
- Inspect tightness of chassis and body bolts and nuts

Repeated Short Trips Less Than 8 km and Outside Temperature Remains Below Freezing:

- Replace engine oil and engine oil filter

Extensive Idling and or Low Speed Driving for a Long Distance Such as Police Cars, Taxis or Door-to-Door Calls:

- Inspect parking brake linings and drums
- Inspect brake pads and discs

Continuous High Speed Driving (80% or More at Maximum Vehicle Speed) for Over 2 Hours:

- Inspect automatic transmission fluid
- Replace automatic transmission fluid
- Replace manual transmission oil
- Replace transfer oil
- Replace front and rear differential oil

Toyota Maintenance Schedule (See page 30 for information on how to follow this maintenance schedule.)

| Maintenance Intervals Kilometres x 1,000 Months Maintenance Items | | | | | | | | | | | | | | | | | | | | | | | | |
|--|--------------------------|-----|----|-----|----|-----|----|-----|----|-----|----|-----|----|-----|----|-----|----|-----|----|-----|-----|-----|--|--|
| | 1 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 | | | |
| | - | 3 | 6 | 9 | 12 | 15 | 18 | 21 | 24 | 27 | 30 | 33 | 36 | 39 | 42 | 45 | 48 | 51 | 54 | 57 | 60 | | | |
| Engine | | | | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Timing belt (UZJ100 and diesel models) | Replace every 150,000 km | | | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Valve clearance (HDJ# models) | - | - | - | - | A | - | - | - | A | - | - | - | A | - | - | - | A | - | - | - | - | A | | |
| <input type="checkbox"/> Valve clearance (HZJ# models) ¹ | - | - | - | - | - | - | - | - | I | - | - | - | - | - | - | - | I | - | - | - | - | - | | |
| <input type="checkbox"/> Valve clearance (petrol models) ² | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | I | - | - | - | - | - | | |
| <input type="checkbox"/> Drive belts | - | - | - | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | | |
| <input type="checkbox"/> Engine oil ^{3,4} | - | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | | |
| <input type="checkbox"/> Engine oil filter | | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | | |
| <input type="checkbox"/> Cooling and heater system ⁵ | | - | - | - | - | - | - | - | I | - | - | - | - | - | - | - | I | - | - | - | - | I | | |

¹ Inspect valve clearance using a thickness gauge and adjust clearances if necessary.

² Inspect tappet noise and engine vibration at idle and adjust clearances if necessary.

³ Diesel models: Use engine oil grade API: CF-4; API CF or G-DLD-1 (API: CE or CD) may also be used. See "Toyota's lubricants and coolant" page 23 for more details.

⁴ Petrol models: Use engine oil grade API SJ, SL or ILSAC. See "Toyota's lubricants and coolant" page 23 for more details.

⁵ Check that the radiator and condenser are not blocked with leaves, dirt, or insects, and the hose connections for installation condition and corrosion.

Maintenance of your Toyota

| Maintenance Intervals | | | | | | | | | | | | | | | | | | | | | | |
|--|--|--------------------------|-----|-----|-----|----|-----|-----|-----|----|-----|-----|-----|----|-----|-----|-----|----|-----|-----|-----|-----|
| Kilometres x 1,000 | | 1 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
| Months | | | | | | | | | | | | | | | | | | | | | | |
| Maintenance Items | | - | 3 | 6 | 9 | 12 | 15 | 18 | 21 | 24 | 27 | 30 | 33 | 36 | 39 | 42 | 45 | 48 | 51 | 54 | 57 | 60 |
| <input type="checkbox"/> Engine coolant, include checking radiator fins (Toyota Genuine Super LLC pink) ⁶ . | | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | I | - | - | - | - |
| <input type="checkbox"/> Exhaust pipes and mountings | | - | - | - | - | I | - | - | - | I | - | - | - | I | - | - | - | I | - | - | - | I |
| Fuel system | | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Fuel injection pipes (HDJ100 models) | | Replace every 150,000 km | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Single fuel filter type (diesel models) | | - | - | - | - | R | - | - | - | R | - | - | - | R | - | - | - | R | - | - | - | R |
| <input type="checkbox"/> Double fuel filter type (diesel models) ⁷ : | | | | | | | | | | | | | | | | | | | | | | |
| _Main filter | | | | (R) | - | R | - | (R) | - | R | - | (R) | - | R | - | (R) | - | R | - | (R) | - | R |
| _Pre filter | | - | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R | (R) | R |
| <input type="checkbox"/> Fuel filter (petrol models) | | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | R | - | - | - | - |

⁶ Replace initially after the first 160 000km, then every 80 000km.

⁷ If the fuel being used contains high levels of impurities, as could occur when refueling from a drum, replace the main filter every 10,000 km or 6 months and the pre filter every 5,000 km or 3 months.

| Maintenance Intervals | Kilometres x 1,000 | | Months | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|--------------------|-----|--------|-----|-----|-----|-----|-----|----|-----|-----|-----|-----|-----|-----|-----|----|-----|-----|-----|-----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| | 1 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 | | | | | | | | | | | | | | | | | | | | | |
| | - | 3 | 6 | 9 | 12 | 15 | 18 | 21 | 24 | 27 | 30 | 33 | 36 | 39 | 42 | 45 | 48 | 51 | 54 | 57 | 60 | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Water sedimenter (diesel models) ... | - | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Air filter | - | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I | (I) | R | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Idle speed (HZJ# models) | A | - | - | - | A | - | - | - | A | - | - | - | A | - | - | - | A | - | - | - | A | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Diesel smoke (diesel models) | - | - | - | - | - | - | - | - | I | - | - | - | - | - | - | - | I | - | - | - | - | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Fuel tank cap, fuel lines, connections | - | - | - | - | - | - | - | - | I | - | - | - | - | - | - | - | I | - | - | - | I | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Fuel vapour control valve (petrol models) | - | - | - | - | - | - | - | - | I | - | - | - | - | - | - | - | I | - | - | - | I | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Charcoal canister (petrol models) | - | - | - | - | - | - | - | - | I | - | - | - | - | - | - | - | I | - | - | - | - | | | | | | | | | | | | | | | | | | | | | |
| Electrical system | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Spark plugs (FZJ7# models) | - | - | - | - | - | - | - | - | R | - | - | - | - | - | - | - | R | - | - | - | - | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Spark plugs (UZJ100 models) | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | R | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Battery | - | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | | | | | | | | | | | | | | | | | | | | | |
| Chassis and body | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Clutch pedal | I | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Brake pedal and parking brake | I | - | (I) | - | I | - | (I) | - | I | - | (I) | - | I | - | (I) | - | I | - | (I) | - | I | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Parking brake linings and drums | - | - | (I) | - | (I) | - | (I) | - | I | - | (I) | - | (I) | - | (I) | - | I | - | (I) | - | (I) | | | | | | | | | | | | | | | | | | | | | |

| Maintenance Intervals | Kilometres x 1,000 | | | | | | | | | | | | | | | | | | | | |
|---|--------------------|-----|-----|-----|----|-----|----|-----|------|-----|----|-----|----|-----|----|-----|------|-----|----|-----|-----|
| | 1 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
| | Months | | | | | | | | | | | | | | | | | | | | |
| Maintenance Items | - | 3 | 6 | 9 | 12 | 15 | 18 | 21 | 24 | 27 | 30 | 33 | 36 | 39 | 42 | 45 | 48 | 51 | 54 | 57 | 60 |
| <input type="checkbox"/> Propeller shaft ⁸ (NLGI No.2) | - | (L) | L | (I) | L | (L) | L | (L) | L | (L) | L | (L) | L | (L) | L | (L) | L | (I) | L | (L) | L |
| <input type="checkbox"/> Propeller shaft bolts | - | (T) | T | (T) | T | (T) | T | (T) | T | (T) | T | (T) | T | (T) | T | (T) | T | (T) | T | (T) | T |
| <input type="checkbox"/> Drive shaft boots (UZJ100, HDJ100 models) | - | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I |
| <input type="checkbox"/> Ball joints and dust covers (UZJ100, HDJ100 models) | - | - | (I) | I | - | (I) | - | I | - | (I) | - | I | - | (I) | - | I | - | (I) | - | I | |
| <input type="checkbox"/> Automatic transmission fluid (Type T-IV) | - | - | - | - | - | - | - | - | I | - | - | - | - | - | - | - | I(R) | - | - | - | - |
| <input type="checkbox"/> Manual transmission oil (API: GL-4 or GL-5) | - | - | - | - | - | - | - | - | I(R) | - | - | - | - | - | - | - | I(R) | - | - | - | - |
| <input type="checkbox"/> Transfer oil (API: GL-4 or GL-5) | - | - | - | - | - | - | - | - | I(R) | - | - | - | - | - | - | - | I(R) | - | - | - | - |

⁸ Lubricate within 24 hours after submerging in water.

Maintenance of your Toyota

| Maintenance Intervals | | Kilometres x 1,000 | | | | | | | | | | | | | | | | | | | | |
|--|--|--------------------|---|-----|-----|------|-----|----|-----|----|-----|-----|-----|------|-----|-----|-----|----|-----|-----|-----|------|
| | | 1 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
| Months | | - | 3 | 6 | 9 | 12 | 15 | 18 | 21 | 24 | 27 | 30 | 33 | 36 | 39 | 42 | 45 | 48 | 51 | 54 | 57 | 60 |
| Maintenance Items | | - | 3 | 6 | 9 | 12 | 15 | 18 | 21 | 24 | 27 | 30 | 33 | 36 | 39 | 42 | 45 | 48 | 51 | 54 | 57 | 60 |
| <input type="checkbox"/> Front and rear differential oil (API: GL-5)..... | | - | - | - | - | I(R) | - | - | - | R | - | - | - | I(R) | - | - | - | R | - | - | - | I(R) |
| <input type="checkbox"/> Wheel bearing grease ⁹ (NLGI No.2) | | - | - | - | - | R | - | - | - | R | - | - | - | R | - | - | - | R | - | - | - | R |
| <input type="checkbox"/> Front and rear suspensions | | I | - | (I) | - | I | - | I | - | I | - | (I) | - | I | - | (I) | - | I | - | (I) | - | I |
| <input type="checkbox"/> Chassis and body bolts and nuts | | - | - | - | - | - | - | - | - | - | - | (T) | - | - | - | - | - | - | - | - | - | T |
| <input type="checkbox"/> Tyres and inflation pressures | | - | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I |
| <input type="checkbox"/> Lights, horns, wipers and washers | | - | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I | - | I |
| <input type="checkbox"/> Air conditioner, including refrigerant level via sight glass | | - | - | - | - | I | - | - | - | I | - | - | - | I | - | - | - | I | - | - | - | I |
| Road test | | | | | | | | | | | | | | | | | | | | | | |
| <input type="checkbox"/> Road test vehicle | | (I) | I | (I) | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I | (I) | I |

⁹ Except rear wheel bearing grease on UZJ100, HDJ100 models which have maintenance free rear wheel bearings.

Maintenance Service Times

The following gives the recommended service time in hours to perform each service. It does not include time for additional maintenance that may be recommended by your Toyota Dealer. Ask your Toyota Dealer for the required service time to perform additional maintenance.

Service Times for Normal Operating Conditions

| Maintenance Intervals | Kilometres x 1,000 | | 1 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
|-----------------------|--------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| | Months | | - | 3 | 6 | 9 | 12 | 15 | 18 | 21 | 24 | 27 | 30 | 33 | 36 | 39 | 42 | 45 | 48 | 51 | 54 | 57 | 60 |
| FZJ78/79 models | - | 0.4 | 1.6 | 0.4 | 3.8 | 0.4 | 1.6 | 0.4 | 4.8 | 0.4 | 1.6 | 0.4 | 3.8 | 0.4 | 1.6 | 0.4 | 1.6 | 0.4 | 5.1 | 0.4 | 1.6 | 0.4 | 3.9 |
| UZJ100 models | - | - | 1.2 | - | 2.9 | - | 1.2 | - | 3.9 | - | 1.2 | - | 2.9 | - | 1.2 | - | 1.2 | - | 4.1 | - | 1.2 | - | 3.2 |
| HZJ78/79 models | - | 0.4 | 1.6 | 0.4 | 4.1 | 0.4 | 1.6 | 0.4 | 5.0 | 0.4 | 1.6 | 0.4 | 4.1 | 0.4 | 1.6 | 0.4 | 1.6 | 0.4 | 5.0 | 0.4 | 1.6 | 0.4 | 4.2 |
| HDJ78/79 models | - | 0.4 | 1.6 | 0.4 | 4.7 | 0.4 | 1.6 | 0.4 | 5.3 | 0.4 | 1.6 | 0.4 | 4.7 | 0.4 | 1.6 | 0.4 | 1.6 | 0.4 | 5.3 | 0.4 | 1.6 | 0.4 | 4.8 |
| HZJ105 models | - | 0.4 | 1.6 | 0.4 | 4.1 | 0.4 | 1.6 | 0.4 | 5.0 | 0.4 | 1.6 | 0.4 | 4.1 | 0.4 | 1.6 | 0.4 | 1.6 | 0.4 | 5.0 | 0.4 | 1.6 | 0.4 | 4.2 |
| HDJ100 models | - | - | 1.3 | - | 3.9 | - | 1.3 | - | 4.9 | - | 1.3 | - | 3.9 | - | 1.3 | - | 1.3 | - | 4.9 | - | 1.3 | - | 3.9 |

Maintenance of your Toyota

Service Times for Normal Operating Conditions - continued

| Maintenance Intervals | Kilometres x 1,000 | 105 | 110 | 115 | 120 | 125 | 130 | 135 | 140 | 145 | 150 | 155 | 160 | 165 | 170 | 175 | 180 | 185 | 190 | 195 | 200 | 205 |
|--------------------------|--------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| | Months | 63 | 66 | 69 | 72 | 75 | 78 | 81 | 84 | 87 | 90 | 93 | 96 | 99 | 102 | 105 | 108 | 111 | 114 | 117 | 120 | 123 |
| FZJ78/79 models | | 0.4 | 1.6 | 0.4 | 4.8 | 0.4 | 1.6 | 0.4 | 3.8 | 0.4 | 1.6 | 0.4 | 5.3 | 0.4 | 1.6 | 0.4 | 3.8 | 0.4 | 1.6 | 0.4 | 4.8 | 0.4 |
| UZJ100 models | | - | 1.2 | - | 3.9 | - | 1.2 | - | 2.9 | - | 2.9 | - | 4.3 | - | 1.2 | - | 2.9 | - | 1.2 | - | 4.2 | - |
| HZJ78/79 models | | 0.4 | 1.6 | 0.4 | 5.0 | 0.4 | 1.6 | 0.4 | 4.1 | 0.4 | 2.4 | 0.4 | 5.2 | 0.4 | 1.6 | 0.4 | 4.1 | 0.4 | 1.6 | 0.4 | 5.1 | 0.4 |
| HDJ78/79 models | | 0.4 | 1.6 | 0.4 | 5.3 | 0.4 | 1.6 | 0.4 | 4.7 | 0.4 | 2.5 | 0.4 | 5.5 | 0.4 | 1.6 | 0.4 | 4.7 | 0.4 | 1.6 | 0.4 | 5.4 | 0.4 |
| HZJ105 models | | 0.4 | 1.6 | 0.4 | 5.0 | 0.4 | 1.6 | 0.4 | 4.1 | 0.4 | 2.4 | 0.4 | 5.2 | 0.4 | 1.6 | 0.4 | 4.1 | 0.4 | 1.6 | 0.4 | 5.1 | 0.4 |
| HDJ100 models | | - | 1.3 | - | 4.9 | - | 1.3 | - | 3.9 | - | 3.0 | - | 5.1 | - | 1.3 | - | 3.9 | - | 1.3 | - | 4.8 | - |

Service Times for Severe Operating Conditions

| Maintenance Intervals | Kilometres x 1,000 | 1 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
|------------------------------|--------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| | Months | - | 3 | 6 | 9 | 12 | 15 | 18 | 21 | 24 | 27 | 30 | 33 | 36 | 39 | 42 | 45 | 48 | 51 | 54 | 57 | 60 |
| FZJ78/79 models | - | 1.2 | 1.9 | 1.2 | 3.9 | 1.2 | 1.9 | 1.2 | 4.9 | 1.2 | 2.1 | 1.2 | 3.9 | 1.2 | 1.9 | 1.2 | 5.3 | 1.2 | 1.9 | 1.2 | 4.0 | |
| UZJ100 models with M/T | - | 1.0 | 1.7 | 1.0 | 3.4 | 1.0 | 1.7 | 1.0 | 4.0 | 1.0 | 1.7 | 1.0 | 3.4 | 1.0 | 1.7 | 1.0 | 4.3 | 1.0 | 1.7 | 1.0 | 3.7 | |
| UZJ100 models with A/T | - | 1.0 | 1.7 | 1.0 | 3.4 | 1.0 | 1.7 | 1.0 | 4.0 | 1.0 | 1.7 | 1.0 | 3.4 | 1.0 | 1.7 | 1.0 | 4.5 | 1.0 | 1.7 | 1.0 | 3.7 | |
| HZJ78/79 models | - | 1.2 | 2.0 | 1.2 | 4.2 | 1.2 | 2.0 | 1.2 | 5.2 | 1.2 | 2.2 | 1.2 | 4.2 | 1.2 | 2.0 | 1.2 | 5.2 | 1.2 | 2.0 | 1.2 | 4.3 | |
| HDJ78/79 models | - | 1.2 | 2.0 | 1.2 | 4.9 | 1.2 | 2.0 | 1.2 | 5.5 | 1.2 | 2.1 | 1.2 | 4.9 | 1.2 | 2.0 | 1.2 | 5.5 | 1.2 | 2.0 | 1.2 | 5.0 | |
| HZJ105 models | - | 1.3 | 2.0 | 1.3 | 4.3 | 1.3 | 2.0 | 1.3 | 5.2 | 1.3 | 2.1 | 1.3 | 4.3 | 1.3 | 2.0 | 1.3 | 5.2 | 1.3 | 2.0 | 1.3 | 4.4 | |
| HDJ100 models with M/T | - | 1.0 | 1.8 | 1.0 | 4.4 | 1.0 | 1.8 | 1.0 | 5.0 | 1.0 | 1.9 | 1.0 | 4.4 | 1.0 | 1.8 | 1.0 | 5.0 | 1.0 | 1.8 | 1.0 | 4.4 | |
| HDJ100 models with A/T | - | 1.0 | 1.8 | 1.0 | 4.4 | 1.0 | 1.8 | 1.0 | 4.9 | 1.0 | 1.9 | 1.0 | 4.4 | 1.0 | 1.8 | 1.0 | 5.2 | 1.0 | 1.8 | 1.0 | 4.4 | |

Maintenance of your Toyota

Service Times for Severe Operating Conditions - continued

| Maintenance Intervals | Kilometres x 1,000 | 105 | 110 | 115 | 120 | 125 | 130 | 135 | 140 | 145 | 150 | 155 | 160 | 165 | 170 | 175 | 180 | 185 | 190 | 195 | 200 | 205 |
|------------------------------|--------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| | Months | 63 | 66 | 69 | 72 | 75 | 78 | 81 | 84 | 87 | 90 | 93 | 96 | 99 | 102 | 105 | 108 | 111 | 114 | 117 | 120 | 123 |
| FZJ78/79 models | | 1.2 | 1.9 | 1.2 | 4.9 | 1.2 | 1.9 | 1.2 | 4.0 | 1.2 | 2.1 | 1.2 | 5.5 | 1.2 | 1.9 | 1.2 | 4.0 | 1.2 | 1.9 | 1.2 | 5.0 | 1.2 |
| UZJ100 models with M/T | | 1.0 | 1.7 | 1.0 | 4.0 | 1.0 | 1.7 | 1.0 | 3.4 | 1.0 | 3.2 | 1.0 | 4.5 | 1.0 | 1.7 | 1.0 | 3.4 | 1.0 | 1.7 | 1.0 | 4.3 | 1.0 |
| UZJ100 models with A/T | | 1.0 | 1.7 | 1.0 | 4.0 | 1.0 | 1.7 | 1.0 | 3.4 | 1.0 | 3.2 | 1.0 | 4.7 | 1.0 | 1.7 | 1.0 | 3.4 | 1.0 | 1.7 | 1.0 | 4.2 | 1.0 |
| HZJ78/79 models | | 1.2 | 2.0 | 1.2 | 5.2 | 1.2 | 2.0 | 1.2 | 4.3 | 1.2 | 3.0 | 1.2 | 5.4 | 1.2 | 2.0 | 1.2 | 4.3 | 1.2 | 2.0 | 1.2 | 5.3 | 1.2 |
| HDJ78/79 models | | 1.2 | 2.0 | 1.2 | 5.5 | 1.2 | 2.0 | 1.2 | 4.9 | 1.2 | 3.0 | 1.2 | 5.7 | 1.2 | 2.0 | 1.2 | 4.9 | 1.2 | 2.0 | 1.2 | 5.6 | 1.2 |
| HZJ105 models | | 1.2 | 2.0 | 1.2 | 5.2 | 1.2 | 2.0 | 1.2 | 4.3 | 1.2 | 2.9 | 1.2 | 5.4 | 1.2 | 2.0 | 1.2 | 4.3 | 1.2 | 2.0 | 1.2 | 5.3 | 1.2 |
| HDJ100 models with M/T | | 1.0 | 1.8 | 1.0 | 5.0 | 1.0 | 1.8 | 1.0 | 4.4 | 1.0 | 3.5 | 1.0 | 5.2 | 1.0 | 1.8 | 1.0 | 4.4 | 1.0 | 1.8 | 1.0 | 5.0 | 1.0 |
| HDJ100 models with A/T | | 1.0 | 1.8 | 1.0 | 4.9 | 1.0 | 1.8 | 1.0 | 4.4 | 1.0 | 3.5 | 1.0 | 5.4 | 1.0 | 1.8 | 1.0 | 4.4 | 1.0 | 1.8 | 1.0 | 4.9 | 1.0 |

Pre-Delivery Service Maintenance Record

To ensure that your new Toyota is delivered to you in top condition, and that you are familiar with your new vehicle and matters relating to it, the following factory approved pre-delivery service has been performed.

- Inspect vehicle exterior ☐
- Inspect vehicle interior ☐
- Inspect under hood ☐
- Inspect luggage compartment..... ☐
- Inspect under vehicle (on hoist) ☐
- Road test ☐
- Final inspection ☐
- Supply fuel ☐
- Complete vehicle documentation, including
"New Vehicle Information Statement" on the
inside front cover of this booklet ☐

- Review vehicle owner's manuals ☐
- Explain vehicle service requirements ☐
- Demonstrate features and accessories ☐
- Explain operation of Dealership Service
and Parts Departments, including contact
names, business hours, etc. ☐

Yours sincerely,

.....
Dealer Principal / General Manager

.....
Sales Manager

.....
Service Manager

Pre-Delivery Service Maintenance Record



Not For Reproduction



Km:

TOYOTA DEALER SERVICE VERIFICATION

Presentation of this booklet to a Toyota Dealer entitles the owner to the following free labour service*:

- ❑ Adjust idle speed (HZJ# models)

- ❏ Inspect the following:

___ Brake/clutch pedal and parking brake

Brake pipes/hoses

Brake/clutch fluid

____Front/rear suspensions

- ❑ IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

* Please note that oils and materials used, and additional maintenance will be charged to the owner at the normal rate. For lubricant and coolant specifications, see pages 33 ~ 38.

Model Code VIN

[illegible]

Owner's Name and Address

Selling Dealer Selling Dealer Code

Servicing Dealer Servicing Dealer Code

Servicing Dealer's Signature Service Date

I hereby acknowledge receipt of the 1,000 km free labour service:

Owner's Signature

Free 1,000 km Maintenance Record



Not For Reproduction

5,000 km/3 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

5,000 km/3 mths Maintenance Record

Presentation of this booklet to a Toyota Dealer entitles the owner of Land Cruiser models with rigid front axle to the following free labour service*.

Maintenance for normal operating conditions:

☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

*Please note that the free labour service does not apply to UZJ100, HDJ100 models, nor does it apply to additional maintenance such as for severe operating conditions. Any oils and materials used will be charged to the owner at the normal rate.

Model Code VIN

| | | | | | | | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| | | | | | | | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|

Owner's Name and Address

Selling Dealer Selling Dealer Code

Servicing Dealer Servicing Dealer Code

Servicing Dealer's Signature Service Date

I hereby acknowledge receipt of the 5,000 km free labour service:

Owner's Signature

5,000 km/3 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



10,000 km/6 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

10,000 km/6 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter (diesel models with double fuel filter type)
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ7#, HDJ7# models)
- ☐ Inspect the following:
 - __ Engine drive belts
 - __ Water separator (diesel models)
 - __ Air filter
 - __ Battery
 - __ Brake pads/discs
 - __ Brake/clutch fluid
 - __ Power steering fluid
 - __ Drive shaft boots (UZJ100, HDJ100 models)
 - __ Tyres and inflation pressures
 - __ Lights, horns, wipers, washers
- ☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.
- ☐ Road test vehicle

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

10,000 km/6 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

☐ Replace main fuel filter if impure fuel is used (diesel models with double fuel filter type)

☐ Inspect the following:

___ Brake pedal, parking brake

___ Parking brake linings/drums

___ Brake pipes/hoses

___ Steering wheel/linkage/gearbox oil

___ Ball joints, dust covers
(UZJ100, HDJ100 models)

___ Front/rear suspensions

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



15,000 km/9 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

15,000 km/9 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39

Continued next page

15,000 km/9 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- | | |
|--|--|
| <input type="checkbox"/> Replace engine oil and filter | <input type="checkbox"/> Lubricate propeller shaft |
| <input type="checkbox"/> Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type) | <input type="checkbox"/> Tighten propeller shaft bolts |
| <input type="checkbox"/> Inspect the following: | |
| __Air filter | __Drive shaft boots |
| __Brake pads/discs | (UZJ100, HDJ100 models) |
| <input type="checkbox"/> Road test vehicle | |

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



20,000 km/12 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

20,000 km/12 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Adjust valve clearance (HDJ# models)
- ☐ Replace engine oil and filter
- ☐ Replace fuel filter/s (diesel models)
- ☐ Adjust idle speed (HZJ# models)
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models)
- ☐ Inspect the following:
 - __ Drive belts
 - __ Exhaust pipes/mountings
 - __ Battery
 - __ Water sedimenter (diesel models)
 - __ Air filter
 - __ Brake pedal, parking brake
 - __ Brake pads/discs
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Replace wheel bearing grease (FZJ7#, HZJ#, HDJ7# models)
- ☐ Replace front wheel bearing grease (UZJ100, HDJ100 models)
- __ Brake/clutch fluid
- __ Power steering fluid
- __ Brake pipes/hoses
- __ Steering wheel/linkage/gearbox oil
- __ Drive shaft boots (UZJ100, HDJ100 models)

Continued next page

20,000 km/12 mths Maintenance Record

Maintenance for normal operating conditions - *continued:**

☐ Inspect the following - *continued*:

__ Ball joints, dust covers
(UZJ100, HDJ100 models)

__ Front/rear differential oil

__ Front/rear suspensions

__ Tyres and inflation pressures

__ Lights, horns, wipers, washers

__ Air conditioner including refrigerant
level

☐ **IMPORTANT:** Check for any outstanding
campaigns or safety recalls on this vehicle.

☐ Road test vehicle

**Additional maintenance for severe operating conditions; see pages
30~32 for details*:**

☐ Replace front/rear differential oil

☐ Inspect the following:

__ Parking brake linings/drums

**For details on additional maintenance that may be recommended by
your Toyota Dealer, see page 28.**

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance
service times, see page 39.



25,000 km/15 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

25,000 km/15 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

25,000 km/15 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



30,000 km/18 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

30,000 km/18 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter (diesel models with double fuel filter type)
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ7#, HDJ7# models)
- ☐ Inspect the following:
 - ___ Engine drive belts
 - ___ Water separator (diesel models)
 - ___ Air filter
 - ___ Battery
 - ___ Brake pads/discs
 - ___ Brake/clutch fluid
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ___ Power steering fluid
- ___ Drive shaft boots (UZJ100, HDJ100 models)
- ___ Tyres and inflation pressures
- ___ Lights, horns, wipers, washers
- ☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.
- ☐ Road test vehicle

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

30,000 km/18 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace main fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Inspect the following:
 - __ Brake pedal, parking brake
 - __ Parking brake linings/drums
 - __ Brake pipes/hoses
 - __ Steering wheel/linkage/gearbox oil
 - __ Ball joints, dust covers (UZJ100, HDJ100 models)
 - __ Front/rear suspensions

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



35,000 km/21 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

35,000 km/21 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

35,000 km/21 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



40,000 km/24 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

40,000 km/24 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Adjust valve clearance (HDJ# models)
- ☐ Replace engine oil and filter
- ☐ Replace spark plugs (FZJ7# models)
- ☐ Replace fuel filter/s (diesel models)
- ☐ Adjust idle speed (HZJ# models)
- ☐ Replace brake fluid
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models)
- ☐ Lubricate propeller shaft
- ☐ Inspect the following:
 - ___ Valve clearance (HZJ# models)
 - ___ Drive belts
 - ___ Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects and the hose connections for installation condition and corrosion
 - ___ Radiator fins
 - ___ Engine coolant
 - ___ Exhaust pipes/mountings
 - ___ Battery
 - ___ Water sedimenter (diesel models)
 - ___ Air filter
 - ___ Diesel smoke (diesel models)
 - ___ Fuel tank cap, fuel lines, connections
- ☐ Tighten propeller shaft bolts
- ☐ Replace front/rear differential oil
- ☐ Replace wheel bearing grease (FZJ7#, HZJ#, HDJ7# models)
- ☐ Replace front wheel bearing grease (UZJ100, HDJ100 models)

Continued next page

40,000 km/24 mths Maintenance Record

Maintenance for normal operating conditions - *continued:**

☐ Inspect the following - *continued*:

- | | |
|--|--|
| <input type="checkbox"/> Fuel vapour control valve (petrol models) | <input type="checkbox"/> Drive shaft boots (UZJ100, HDJ100 models) |
| <input type="checkbox"/> Charcoal canister (petrol models) | <input type="checkbox"/> Ball joints, dust covers (UZJ100, HDJ100 models) |
| <input type="checkbox"/> Brake pedal, parking brake | <input type="checkbox"/> Automatic transmission fluid |
| <input type="checkbox"/> Parking brake linings/drums | <input type="checkbox"/> Manual transmission oil |
| <input type="checkbox"/> Brake pads/discs | <input type="checkbox"/> Transfer oil |
| <input type="checkbox"/> Clutch fluid | <input type="checkbox"/> Front/rear suspensions |
| <input type="checkbox"/> Power steering fluid | <input type="checkbox"/> Tyres and inflation pressures |
| <input type="checkbox"/> Brake pipes/hoses | <input type="checkbox"/> Lights, horns, wipers, washers |
| <input type="checkbox"/> Steering wheel/linkage/gearbox oil | <input type="checkbox"/> Air conditioner including refrigerant level |

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

☐ Road test vehicle

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace manual transmission oil
- ☐ Replace transfer oil

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



45,000 km/27 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

45,000 km/27 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

45,000 km/27 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



50,000 km/30 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

50,000 km/30 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter (diesel models with double fuel filter type)
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ7#, HDJ7# models)
- ☐ Inspect the following
 - __ Engine drive belts
 - __ Water sedimentator (diesel models)
 - __ Air filter
 - __ Battery
 - __ Brake pads/discs
 - __ Brake/clutch fluid
 - __ Power steering fluid
 - __ Drive shaft boots (UZJ100, HDJ100 models)
 - __ Tyres and inflation pressures
 - __ Lights, horns, wipers, washers
- ☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.
- ☐ Road test vehicle

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

50,000 km/30 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace main fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Tighten chassis/body bolts/nuts
- ☐ Inspect the following:
 - __ Brake pedal, parking brake
 - __ Parking brake linings/drums
 - __ Brake pipes/hoses
 - __ Steering wheel/linkage/gearbox oil
 - __ Ball joints, dust covers (UZJ100, HDJ100 models)
 - __ Front/rear suspensions

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



55,000 km/33 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

55,000 km/33 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

55,000 km/33 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



60,000 km/36 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

60,000 km/36 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Adjust valve clearance (HDJ# models)
- ☐ Replace engine oil and filter
- ☐ Replace fuel filter/s (diesel models)
- ☐ Adjust idle speed (HZJ# models)
- ☐ Lubricate steering knuckle, drag link,
steering linkage (FZJ#7, HZJ#, HDJ7#
models)
- ☐ Inspect the following:
 - __ Drive belts
 - __ Exhaust pipes/mountings
 - __ Battery
 - __ Water sedimenter (diesel models)
 - __ Air filter
 - __ Brake pedal, parking brake
 - __ Brake pads/discs
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Replace wheel bearing grease
(FZJ7#, HZJ#, HDJ7# models)
- ☐ Replace front wheel bearing grease
(UZJ100, HDJ100 models)
- __ Brake/clutch fluid
- __ Power steering fluid
- __ Brake pipes/hoses
- __ Steering wheel/linkage/gearbox oil
- __ Drive shaft boots
(UZJ100, HDJ100 models)

Continued next page

60,000 km/36 mths Maintenance Record

Maintenance for normal operating conditions - *continued:**

☐ Inspect the following - *continued*:

__ Ball joints, dust covers
(UZJ100, HDJ100 models)

__ Front/rear differential oil

__ Front/rear suspensions

__ Tyres and inflation pressures

__ Lights, horns, wipers, washers

__ Air conditioner including refrigerant
level

☐ **IMPORTANT:** Check for any outstanding
campaigns or safety recalls on this vehicle.

☐ Road test vehicle

**Additional maintenance for severe operating conditions; see pages
30~32 for details*:**

☐ Replace front/rear differential oil

☐ Inspect the following:

__ Parking brake linings/drums

**For details on additional maintenance that may be recommended by
your Toyota Dealer, see page 28.**

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance
service times, see page 39.



65,000 km/39 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

65,000 km/39 mths Maintenance Record

Maintenance for normal operating conditions*:

☐ Lubricate steering knuckle, drag link,
steering linkage (FZJ7#, HZJ#, HDJ7#
models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding
campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance
service times, see page 39.

Continued next page

65,000 km/39 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



70,000 km/42 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

70,000 km/42 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter (diesel models with double fuel filter type)
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ7#, HDJ7# models)
- ☐ Inspect the following:
 - ___ Engine drive belts
 - ___ Water separator (diesel models)
 - ___ Air filter
 - ___ Battery
 - ___ Brake pads/discs
 - ___ Brake/clutch fluid
 - ___ Power steering fluid
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
 - ___ Tyres and inflation pressures
 - ___ Lights, horns, wipers, washers
- ☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.
- ☐ Road test vehicle

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

70,000 km/42 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

☐ Replace main fuel filter if impure fuel is used (diesel models with double fuel filter type)

☐ Inspect the following:

__ Brake pedal, parking brake

__ Parking brake linings/drums

__ Brake pipes/hoses

__ Steering wheel/linkage/gearbox oil

__ Ball joints, dust covers
(UZJ100, HDJ100 models)

__ Front/rear suspensions

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



75,000 km/45 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

75,000 km/45 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

75,000 km/45 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



80,000 km/48 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

80,000 km/48 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Adjust valve clearance (HDJ# models)
- ☐ Replace engine oil and filter
- ☐ Replace spark plugs (FZJ7# models)
- ☐ Replace fuel filter/s
- ☐ Adjust idle speed (HZJ# models)
- ☐ Replace brake fluid
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models)
- ☐ Inspect the following:
 - ___ Valve clearance (FZJ7#, HZJ# models)
 - ___ Drive belts
 - ___ Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects and the hose connections for installation condition and corrosion
 - ___ Engine coolant
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Replace front/rear differential oil
- ☐ Replace wheel bearing grease (FZJ7#, HZJ#, HDJ7# models)
- ☐ Replace front wheel bearing grease (UZJ100, HDJ100 models)
- ___ Radiator fins
- ___ Exhaust pipes/mountings
- ___ Battery
- ___ Water sedimenter (diesel models)
- ___ Air filter
- ___ Diesel smoke (diesel models)
- ___ Fuel tank cap, fuel lines, connections
- ___ Fuel vapour control valve (petrol models)

Continued next page

80,000 km/48 mths Maintenance Record

Maintenance for normal operating conditions - continued*:

☐ Inspect the following - *continued*:

- | | |
|---|--|
| <input type="checkbox"/> Charcoal canister (petrol models) | <input type="checkbox"/> Ball joints, dust covers |
| <input type="checkbox"/> Brake pedal, parking brake | (UZJ100, HDJ100 models) |
| <input type="checkbox"/> Parking brake linings/drums | <input type="checkbox"/> Automatic transmission fluid |
| <input type="checkbox"/> Brake pads/discs | <input type="checkbox"/> Manual transmission oil |
| <input type="checkbox"/> Clutch fluid | <input type="checkbox"/> Transfer oil |
| <input type="checkbox"/> Power steering fluid | <input type="checkbox"/> Front/rear suspensions |
| <input type="checkbox"/> Brake pipes/hoses | <input type="checkbox"/> Tyres and inflation pressures |
| <input type="checkbox"/> Steering wheel/linkage/gearbox oil | <input type="checkbox"/> Lights, horns, wipers, washers |
| <input type="checkbox"/> Drive shaft boots | <input type="checkbox"/> Air conditioner including refrigerant level |
| (UZJ100, HDJ100 models) | |

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

☐ Road test vehicle

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- | | |
|---|---|
| <input type="checkbox"/> Replace automatic transmission fluid | <input type="checkbox"/> Replace transfer oil |
| <input type="checkbox"/> Replace manual transmission oil | |

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



85,000 km/51 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

85,000 km/51 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

85,000 km/51 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



90,000 km/54 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

90,000 km/54 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter (diesel models with double fuel filter type)
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ7#, HDJ7# models)
- ☐ Inspect the following:
 - ___ Engine drive belts
 - ___ Water separator (diesel models)
 - ___ Air filter
 - ___ Battery
 - ___ Brake pads/discs
 - ___ Brake/clutch fluid
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ___ Power steering fluid
- ___ Drive shaft boots (UZJ100, HDJ100 models)
- ___ Tyres and inflation pressures
- ___ Lights, horns, wipers, washers
- ☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.
- ☐ Road test vehicle

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

90,000 km/54 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

☐ Replace main fuel filter if impure fuel is used (diesel models with double fuel filter type)

☐ Inspect the following:

__ Brake pedal, parking brake

__ Parking brake linings/drums

__ Brake pipes/hoses

__ Steering wheel/linkage/gearbox oil

__ Ball joints, dust covers
(UZJ100, HDJ100 models)

__ Front/rear suspensions

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



95,000 km/57 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

95,000 km/57 mths Maintenance Record

Maintenance for normal operating conditions*:

☐ Lubricate steering knuckle, drag link,
steering linkage (FZJ7#, HZJ#, HDJ7#
models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding
campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance
service times, see page 39

Continued next page

95,000 km/57 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



100,000 km/60 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

100,000 km/60 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Adjust valve clearance (HDJ# models)
- ☐ Replace engine oil and filter
- ☐ Replace fuel filter/s (diesel models)
- ☐ Replace air filter
- ☐ Adjust idle speed (HZJ# models)
- ☐ Replace spark plugs (UZJ100 models)
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models)
- ☐ Inspect the following:
 - ___ Drive belts
 - ___ Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects and the hose connections for installation condition and corrosion
 - ___ Exhaust pipes/mountings
 - ___ Battery
 - ___ Water sedimenter (diesel models)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Replace wheel bearing grease (FZJ7#, HZJ#, HDJ7# models)
- ☐ Replace front wheel bearing grease (UZJ100, HDJ100 models)
- ☐ Tighten chassis/body bolts/nuts
- ___ Fuel tank cap, fuel lines, connections
- ___ Fuel vapour control valve (petrol models)
- ___ Brake pedal, parking brake
- ___ Brake pads/discs
- ___ Brake/clutch fluid
- ___ Power steering fluid
- ___ Brake pipes/hoses

Continued next page

100,000 km/60 mths Maintenance Record

Maintenance for normal operating conditions - *continued:**

☐ Inspect the following - *continued*:

__Steering wheel/linkage/gearbox oil

__Drive shaft boots
(UZJ100, HDJ100 models)

__Ball joints, dust covers
(UZJ100, HDJ100 models)

__Front/rear differential oil

__Front/rear suspensions

__Tyres and inflation pressures

__Lights, horns, wipers, washers

__Air conditioner including refrigerant
level

☐ **IMPORTANT:** Check for any outstanding
campaigns or safety recalls on this vehicle.

☐ Road test vehicle

**Additional maintenance for severe operating conditions; see pages
30~32 for details*:**

☐ Replace front/rear differential oil

☐ Inspect the following:

__Parking brake linings/drums

**For details on additional maintenance that may be recommended by
your Toyota Dealer, see page 28.**

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance
service times, see page 39.



105,000 km/63 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

105,000 km/63 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

105,000 km/63 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- | | |
|--|--|
| <input type="checkbox"/> Replace engine oil and filter | <input type="checkbox"/> Lubricate propeller shaft |
| <input type="checkbox"/> Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type) | <input type="checkbox"/> Tighten propeller shaft bolts |
| <input type="checkbox"/> Inspect the following: | |
| __Air filter | __Drive shaft boots |
| __Brake pads/discs | (UZJ100, HDJ100 models) |
| <input type="checkbox"/> Road test vehicle | |

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



110,000 km/66 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

110,000 km/66 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Replace engine oil and filter
- ☐ Lubricate propeller shaft
- ☐ Replace pre fuel filter (diesel models with double fuel filter type)
- ☐ Tighten propeller shaft bolts
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models)
- ☐ Inspect the following
 - __ Engine drive belts
 - __ Power steering fluid
 - __ Water separator (diesel models)
 - __ Drive shaft boots (UZJ100, HDJ100 models)
 - __ Air filter
 - __ Tyres and inflation pressures
 - __ Battery
 - __ Lights, horns, wipers, washers
 - __ Brake pads/discs
 - __ Brake/clutch fluid
- ☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.
- ☐ Road test vehicle

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

110,000 km/66 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

☐ Replace main fuel filter if impure fuel is used (diesel models with double fuel filter type)

☐ Inspect the following:

___ Brake pedal, parking brake

___ Parking brake linings/drums

___ Brake pipes/hoses

___ Steering wheel/linkage/gearbox oil

___ Ball joints, dust covers
(UZJ100, HDJ100 models)

___ Front/rear suspensions

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



115,000 km/69 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

115,000 km/69 mths Maintenance Record

Maintenance for normal operating conditions*:

☐ Lubricate steering knuckle, drag link,
steering linkage (FZJ7#, HZJ#, HDJ7#
models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding
campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance
service times, see page 39.

Continued next page

115,000 km/69 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Lubricate propeller shaft
 - ☐ Tighten propeller shaft bolts
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



120,000 km/72 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

120,000 km/72 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Adjust valve clearance (HDJ# models)
- ☐ Replace engine oil and filter
- ☐ Replace spark plugs (FZJ7# models)
- ☐ Replace fuel filter/s (diesel models)
- ☐ Adjust idle speed (HZJ# models)
- ☐ Replace brake fluid
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models)
- ☐ Inspect the following:
 - __ Valve clearance (HZJ# models)
 - __ Drive belts
 - __ Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects and the hose connections for installation condition and corrosion
 - __ Radiator fins
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Replace front/rear differential oil
- ☐ Replace wheel bearing grease (FZJ7#, HZJ#, HDJ7# models)
- ☐ Replace front wheel bearing grease (UZJ100, HDJ100 models)
- __ Engine coolant
- __ Exhaust pipes/mountings
- __ Battery
- __ Water sedimenter (diesel models)
- __ Air filter
- __ Diesel smoke (diesel models)
- __ Fuel tank cap, fuel lines, connections

Continued next page

120,000 km/72 mths Maintenance Record

Maintenance for normal operating conditions - continued*:

☐ Inspect the following - *continued*:

- | | |
|--|--|
| <input type="checkbox"/> Fuel vapour control valve (petrol models) | <input type="checkbox"/> Ball joints, dust covers |
| <input type="checkbox"/> Charcoal canister (petrol models) | <input type="checkbox"/> (UZJ100, HDJ100 models) |
| <input type="checkbox"/> Brake pedal, parking brake | <input type="checkbox"/> Automatic transmission fluid |
| <input type="checkbox"/> Parking brake linings/drums | <input type="checkbox"/> Manual transmission oil |
| <input type="checkbox"/> Brake pads/discs | <input type="checkbox"/> Transfer oil |
| <input type="checkbox"/> Clutch fluid | <input type="checkbox"/> Front/rear suspensions |
| <input type="checkbox"/> Power steering fluid | <input type="checkbox"/> Tyres and inflation pressures |
| <input type="checkbox"/> Brake pipes/hoses | <input type="checkbox"/> Lights, horns, wipers, washers |
| <input type="checkbox"/> Steering wheel/linkage/gearbox oil | <input type="checkbox"/> Air conditioner including refrigerant level |
| <input type="checkbox"/> Drive shaft boots | |
| <input type="checkbox"/> (UZJ100, HDJ100 models) | |

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

☐ Road test vehicle

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace manual transmission oil ☐ Replace transfer oil

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



125,000 km/75 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

125,000 km/75 mths Maintenance Record

Maintenance for normal operating conditions*:

☐ Lubricate steering knuckle, drag link,
steering linkage (FZJ7#, HZJ#, HDJ7#
models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding
campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance
service times, see page 39.

Continued next page

125,000 km/75 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



130,000 km/78 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

130,000 km/78 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter (diesel models with double fuel filter type)
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ7#, HDJ7# models)
- ☐ Inspect the following
 - __ Engine drive belts
 - __ Water separator (diesel models)
 - __ Air filter
 - __ Battery
 - __ Brake pads/discs
 - __ Brake/clutch fluid
 - __ Power steering fluid
 - __ Drive shaft boots (UZJ100, HDJ100 models)
 - __ Tyres and inflation pressures
 - __ Lights, horns, wipers, washers
- ☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.
- ☐ Road test vehicle

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

130,000 km/78 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

☐ Replace main fuel filter if impure fuel is used (diesel models with double fuel filter type)

☐ Inspect the following:

__ Brake pedal, parking brake

__ Parking brake linings/drums

__ Brake pipes/hoses

__ Steering wheel/linkage/gearbox oil

__ Ball joints, dust covers
(UZJ100, HDJ100 models)

__ Front/rear suspensions

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



135,000 km/81 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

135,000 km/81 mths Maintenance Record

Maintenance for normal operating conditions*:

☐ Lubricate steering knuckle, drag link,
steering linkage (FZJ7#, HZJ#, HDJ7#
models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding
campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance
service times, see page 39

Continued next page

135,000 km/81 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



140,000 km/84 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

140,000 km/84 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Adjust valve clearance (HDJ# models)
- ☐ Replace engine oil and filter
- ☐ Replace fuel filter/s (diesel models)
- ☐ Adjust idle speed (HZJ# models)
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models)
- ☐ Inspect the following:
 - ___ Drive belts
 - ___ Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects and the hose connections for installation condition and corrosion
 - ___ Exhaust pipes/mountings
 - ___ Battery
 - ___ Water sedimenter (diesel models)
 - ___ Fuel tank cap, fuel lines, connections
 - ___ Fuel vapour control valve (petrol models)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Replace wheel bearing grease (FZJ7#, HZJ#, HDJ7# models)
- ☐ Replace front wheel bearing grease (UZJ100, HDJ100 models)
- ___ Air filter
- ___ Brake pedal, parking brake
- ___ Brake pads/discs
- ___ Brake/clutch fluid
- ___ Power steering fluid
- ___ Brake pipes/hoses
- ___ Steering wheel/linkage/gearbox oil
- ___ Drive shaft boots (UZJ100, HDJ100 models)

Continued next page

140,000 km/84 mths Maintenance Record

Maintenance for normal operating conditions - *continued**:

☐ Inspect the following - *continued*:

__ Ball joints, dust covers
(UZJ100, HDJ100 models)

__ Front/rear differential oil

__ Front/rear suspensions

__ Tyres and inflation pressures

__ Lights, horns, wipers, washers

__ Air conditioner including refrigerant
level

☐ **IMPORTANT:** Check for any outstanding
campaigns or safety recalls on this vehicle.

☐ Road test vehicle

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

☐ Replace front/rear differential oil

☐ Inspect the following:

__ Parking brake linings/drums

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



145,000 km/87 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

145,000 km/87 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

145,000 km/87 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



150,000 km/90 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

150,000 km/90 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Replace timing belt
(UZJ100 and diesel models)
- ☐ Replace engine oil and filter
- ☐ Replace fuel injection pipes (HDJ100 models)
- ☐ Replace pre fuel filter (diesel models with double fuel filter type)
- ☐ Inspect the following:
 - __ Engine drive belts
 - __ Water sedimenter (diesel models)
 - __ Air filter
 - __ Battery
 - __ Brake pads/discs
- ☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.
- ☐ Road test vehicle
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- __ Brake/clutch fluid
- __ Power steering fluid
- __ Drive shaft boots
(UZJ100, HDJ100 models)
- __ Tyres and inflation pressures
- __ Lights, horns, wipers, washers

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

150,000 km/90 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace main fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Tighten chassis/body bolts/nuts
- ☐ Inspect the following:
 - __ Brake pedal, parking brake
 - __ Parking brake linings/drums
 - __ Brake pipes/hoses
 - __ Steering wheel/linkage/gearbox oil
 - __ Ball joints, dust covers (UZJ100, HDJ100 models)
 - __ Front/rear suspensions

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



155,000 km/93 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

155,000 km/93 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39

Continued next page

155,000 km/93 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



160,000 km/96 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

160,000 km/96 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Adjust valve clearance (HDJ# models)
- ☐ Replace engine oil and filter
- ☐ Replace engine coolant
- ☐ Replace spark plugs (FZJ7# models)
- ☐ Replace fuel filter/s
- ☐ Adjust idle speed (HZJ# models)
- ☐ Replace brake fluid
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models)
- ☐ Inspect the following:
 - ___ Valve clearance (FZJ7#, HZJ# models)
 - ___ Drive belts
 - ___ Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects and the hose connections for installation condition and corrosion
 - ___ Radiator fins
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Replace front/rear differential oil
- ☐ Replace wheel bearing grease (FZJ7#, HZJ#, HDJ7# models)
- ☐ Replace front wheel bearing grease (UZJ100, HDJ100 models)
- ___ Exhaust pipes/mountings
- ___ Battery
- ___ Water sedimenter (diesel models)
- ___ Air filter
- ___ Diesel smoke (diesel models)
- ___ Fuel tank cap, fuel lines, connections
- ___ Fuel vapour control valve (petrol models)

Continued next page

160,000 km/96 mths Maintenance Record

Maintenance for normal operating conditions - *continued:**

☐ Inspect the following - *continued*:

- | | |
|---|--|
| <input type="checkbox"/> Charcoal canister (petrol models) | <input type="checkbox"/> Drive shaft boots |
| <input type="checkbox"/> Brake pedal, parking brake | <input type="checkbox"/> (UZJ100, HDJ100 models) |
| <input type="checkbox"/> Parking brake linings/drums | <input type="checkbox"/> Ball joints, dust covers |
| <input type="checkbox"/> Brake pads/discs | <input type="checkbox"/> (UZJ100, HDJ100 models) |
| <input type="checkbox"/> Clutch fluid | <input type="checkbox"/> Automatic transmission fluid |
| <input type="checkbox"/> Power steering fluid | <input type="checkbox"/> Manual transmission oil |
| <input type="checkbox"/> Brake pipes/hoses | <input type="checkbox"/> Transfer oil |
| <input type="checkbox"/> Steering wheel/linkage/gearbox oil | <input type="checkbox"/> Front/rear suspensions |
| | <input type="checkbox"/> Tyres and inflation pressures |
| | <input type="checkbox"/> Lights, horns, wipers, washers |
| | <input type="checkbox"/> Air conditioner including refrigerant level |

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

☐ Road test vehicle

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- | | |
|---|---|
| <input type="checkbox"/> Replace automatic transmission fluid | <input type="checkbox"/> Replace transfer oil |
| <input type="checkbox"/> Replace manual transmission oil | |

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



165,000 km/99 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

165,000 km/99 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39

Continued next page

165,000 km/99 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



170,000 km/102 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

170,000 km/102 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Replace engine oil and filter
- ☐ Lubricate propeller shaft
- ☐ Replace pre fuel filter (diesel models with double fuel filter type)
- ☐ Tighten propeller shaft bolts
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ7#, HDJ7# models)
- ☐ Inspect the following:
 - ___ Engine drive belts
 - ___ Power steering fluid
 - ___ Water separator (diesel models)
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
 - ___ Air filter
 - ___ Tyres and inflation pressures
 - ___ Battery
 - ___ Lights, horns, wipers, washers
 - ___ Brake pads/discs
 - ___ Brake/clutch fluid
- ☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.
- ☐ Road test vehicle

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

170,000 km/102 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

☐ Replace main fuel filter if impure fuel is used (diesel models with double fuel filter type)

☐ Inspect the following:

___ Brake pedal, parking brake

___ Parking brake linings/drums

___ Brake pipes/hoses

___ Steering wheel/linkage/gearbox oil

___ Ball joints, dust covers
(UZJ100, HDJ100 models)

___ Front/rear suspensions

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



175,000 km/105 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

175,000 km/105 mths Maintenance Record

Maintenance for normal operating conditions*:

☐ Lubricate steering knuckle, drag link,
steering linkage (FZJ7#, HZJ#, HDJ7#
models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding
campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance
service times, see page 39.

Continued next page

175,000 km/105 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



180,000 km/108 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

180,000 km/108 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Adjust valve clearance (HDJ# models)
- ☐ Replace engine oil and filter
- ☐ Replace fuel filter/s (diesel models)
- ☐ Adjust idle speed (HZJ# models)
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models)
- ☐ Inspect the following:
 - ___ Drive belts
 - ___ Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects and the hose connections for installation condition and corrosion
 - ___ Exhaust pipes/mountings
 - ___ Battery
 - ___ Water sedimenter (diesel models)
 - ___ Fuel tank cap, fuel lines, connections
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Replace wheel bearing grease (FZJ7#, HZJ#, HDJ7# models)
- ☐ Replace front wheel bearing grease (UZJ100, HDJ100 models)
- ___ Fuel vapour control valve (petrol models)
- ___ Air filter
- ___ Brake pedal, parking brake
- ___ Brake pads/discs
- ___ Brake/clutch fluid
- ___ Power steering fluid
- ___ Brake pipes/hoses
- ___ Steering wheel/linkage/gearbox oil

Continued next page

180,000 km/108 mths Maintenance Record

Maintenance for normal operating conditions - *continued:**

☐ Inspect the following - *continued*:

__ Drive shaft boots
(UZJ100, HDJ100 models)

__ Ball joints, dust covers
(UZJ100, HDJ100 models)

__ Front/rear differential oil

__ Front/rear suspensions

__ Tyres and inflation pressures

__ Lights, horns, wipers, washers

__ Air conditioner including refrigerant
level

☐ **IMPORTANT:** Check for any outstanding
campaigns or safety recalls on this vehicle.

☐ Road test vehicle

**Additional maintenance for severe operating conditions; see pages
30~32 for details*:**

☐ Replace front/rear differential oil

☐ Inspect the following:

__ Parking brake linings/drums

**For details on additional maintenance that may be recommended by
your Toyota Dealer, see page 28.**

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance
service times, see page 39.



185,000 km/111 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

185,000 km/111 mths Maintenance Record

Maintenance for normal operating conditions*:

☐ Lubricate steering knuckle, drag link,
steering linkage (FZJ7#, HZJ#, HDJ7#
models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding
campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance
service times, see page 39

Continued next page

185,000 km/111 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



190,000 km/114 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

190,000 km/114 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Replace engine oil and filter
- ☐ Lubricate propeller shaft
- ☐ Replace pre fuel filter (diesel models with double fuel filter type)
- ☐ Tighten propeller shaft bolts
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models)
- ☐ Inspect the following:
 - __ Engine drive belts
 - __ Brake/clutch fluid
 - __ Water sedimenter (diesel models)
 - __ Power steering fluid
 - __ Air filter
 - __ Drive shaft boots
 - __ Battery
 - __ Tyres and inflation pressures
 - __ Brake pads/discs
 - __ Lights, horns, wipers, washers
- ☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.
- ☐ Road test vehicle

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

190,000 km/114 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

☐ Replace main fuel filter if impure fuel is used (diesel models with double fuel filter type)

☐ Inspect the following:

___ Brake pedal, parking brake

___ Parking brake linings/drums

___ Brake pipes/hoses

___ Steering wheel/linkage/gearbox oil

___ Ball joints, dust covers
(UZJ100, HDJ100 models)

___ Front/rear suspensions

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



195,000 km/117 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

195,000 km/117 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models with rigid front axle)

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.

Continued next page

195,000 km/117 mths Maintenance Record

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace engine oil and filter
- ☐ Replace pre fuel filter if impure fuel is used (diesel models with double fuel filter type)
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Inspect the following:
 - ___ Air filter
 - ___ Brake pads/discs
 - ___ Drive shaft boots (UZJ100, HDJ100 models)
- ☐ Road test vehicle

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38 for information on maintenance service times, see page 39.



200,000 km/120 mths Maintenance Record



This service has been completed
by a Toyota Dealer:

Date:

Km:

TOYOTA DEALER SERVICE VERIFICATION

200,000 km/120 mths Maintenance Record

Maintenance for normal operating conditions*:

- ☐ Adjust valve clearance (HDJ# models)
- ☐ Replace engine oil and filter
- ☐ Replace spark plugs (petrol models)
- ☐ Replace fuel filter/s (diesel models)
- ☐ Replace air filter
- ☐ Adjust idle speed (HZJ# models)
- ☐ Replace brake fluid
- ☐ Lubricate steering knuckle, drag link, steering linkage (FZJ7#, HZJ#, HDJ7# models)
- ☐ Inspect the following:
 - ___ Valve clearance (HZJ# models)
 - ___ Drive belts
 - ___ Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects and the hose connections for installation condition and corrosion
 - ___ Radiator fins
- ☐ Lubricate propeller shaft
- ☐ Tighten propeller shaft bolts
- ☐ Replace front/rear differential oil
- ☐ Replace wheel bearing grease (FZJ7#, HZJ#, HDJ7# models)
- ☐ Replace front wheel bearing grease (UZJ100, HDJ100 models)
- ☐ Tighten chassis/body bolts/nuts

- ___ Engine coolant
- ___ Exhaust pipes/mountings
- ___ Battery
- ___ Water sedimenter (diesel models)
- ___ Diesel smoke (diesel models)
- ___ Fuel tank cap, fuel lines, connections

Continued next page

200,000 km/120 mths Maintenance Record

Maintenance for normal operating conditions - *continued:**

☐ Inspect the following - *continued*:

- | | |
|--|--|
| <input type="checkbox"/> Fuel vapour control valve (petrol models) | <input type="checkbox"/> Ball joints, dust covers |
| <input type="checkbox"/> Charcoal canister (petrol models) | <input type="checkbox"/> (UZJ100, HDJ100 models) |
| <input type="checkbox"/> Brake pedal, parking brake | <input type="checkbox"/> Automatic transmission fluid |
| <input type="checkbox"/> Parking brake linings/drums | <input type="checkbox"/> Manual transmission oil |
| <input type="checkbox"/> Brake pads/discs | <input type="checkbox"/> Transfer oil |
| <input type="checkbox"/> Clutch fluid | <input type="checkbox"/> Front/rear suspensions |
| <input type="checkbox"/> Power steering fluid | <input type="checkbox"/> Tyres and inflation pressures |
| <input type="checkbox"/> Brake pipes/hoses | <input type="checkbox"/> Lights, horns, wipers, washers |
| <input type="checkbox"/> Steering wheel/linkage/gearbox oil | <input type="checkbox"/> Air conditioner including refrigerant level |
| <input type="checkbox"/> Drive shaft boots | |
| <input type="checkbox"/> (UZJ100, HDJ100 models) | |

☐ **IMPORTANT:** Check for any outstanding campaigns or safety recalls on this vehicle.

☐ Road test vehicle

Additional maintenance for severe operating conditions; see pages 30~32 for details*:

- ☐ Replace manual transmission oil
- ☐ Replace transfer oil

For details on additional maintenance that may be recommended by your Toyota Dealer, see page 28.

* For lubricant and coolant specifications, see pages 33 ~ 38; for information on maintenance service times, see page 39.



New South Wales

Metropolitan Dealers

ALBION PARK

Tory Toyota, Corner Princes Highway and Miall Way
Service Centre: 3 Rivulet Crescent

(02) 4256 3022
(02) 4257 1977

ARTARMON

Chatswood Toyota,
Service Centre: 12 Marden Street

(02) 9206 6966

BLACKTOWN

Lander Toyota, 161 Main Street
Service Centre: 7 Jane Street

(02) 9622 6333
(02) 8822 4487

BROOKVALE

Bill Buckle Toyota, 790 Pittwater Road
Service Centre: 196 Harbord Road
Satellite Service Centre: 47 Bassett Street, Mona Vale

(02) 9939 7766
(02) 9905 3977
(02) 9997 7300

CAMPBELLTOWN

Clintons Toyota, 3-17 Queen Street

(02) 4628 1888

CAMPERDOWN

Sydney City Toyota, 141 Parramatta Road

(02) 9550 2233

CARDIFF

Cardiff Toyota, 54 Macquarie Road

(02) 4954 7844

CASTLE HILL

Castle Hill Toyota, 2 Victoria Road

(02) 9680 2111

CHATSWOOD

Chatswood Toyota, 728 Pacific Highway
Service Centre: 12 Marden Street, Artarmon

(02) 9201 4444
(02) 9206 6966

CHULLORA

Noble Toyota, 135 Hume Highway

(02) 9735 2888

CROYDON

Truscotts Toyota,
Service Centre: 644 Parramatta Road
Parts Centre: 644 Parramatta Road

(02) 9582 9477
(02) 9582 9499

FIVE DOCK

Truscotts Toyota, 147-153 Parramatta Road
Body Repair Centre: 129 Parramatta Road
Service Centre: 644 Parramatta Road, Croydon
Parts Centre: 644 Parramatta Road, Croydon

(02) 9714 9888
(02) 9714 9823
(02) 9582 9477
(02) 9582 9499

GATESHEAD

Charles Town Toyota, Corner Pacific Highway and Oakdale Road

(02) 4943 7777

GOSFORD

Brian Hilton Toyota, Brooks Avenue
Satellite Service Centre: 37 George Street, Woy Woy

(02) 4328 2888
(02) 4344 1455

GRANVILLE

Terry Shields Toyota,
Service Centre: 233-239 Parramatta Road

(02) 9204 6500

GUILDFORD

Western Toyota, 662 Woodville Road

(02) 9681 8100

HURSTVILLE

Fergusons Toyota, 23-29 Treacy Street

(02) 9579 5077

KINGSWOOD

Penrith Toyota, 87-101 Great Western Highway

(02) 4736 4888

LAKEMBA

Clintons Toyota, 875 Canterbury Road

(02) 9750 0011

LIDCOMBE

Phil Gilbert Toyota, 66-76 Parramatta Road

(02) 9735 8400

LIVERPOOL

Warren Toyota,
Service Centre: 26 Elizabeth Drive

(02) 9828 8777

Not For Reproduction

Toyota Dealer Directory

| | | | |
|--|----------------------------------|--|----------------|
| MONA VALE Bill Buckle Toyota, Satellite Service Centre: 47 Bassett Street | (02) 9997 7300 | WINDSOR Windsor Toyota, 98 Macquarie Street | (02) 4587 7677 |
| MOSMAN Mosman Toyota, 501 Military Road | (02) 9969 2555 | WOLLONGONG Wollongong Toyota, Corner Station and Flinders Streets | (02) 4229 8333 |
| NEWCASTLE Newcastle City Toyota, 65 Tudor Street, Hamilton | (02) 4969 1311 | WOY Woy Brian Hilton Toyota, Satellite Service Centre: 37 George Street | (02) 4344 1455 |
| NARELLAN Clintons Toyota, 10 Yarmouth Place Narellan | (02) 4648 8888 | WYONG Brian Hilton Toyota, 170 Pacific Highway | (02) 4353 1122 |
| PARRAMATTA Terry Shields Toyota, Corner Church and Raymond Streets Service Centre: 233-239 Parramatta Road, Granville | (02) 9204 6444 (02) 9204 6444 | State Distributor Toyota Motor Corporation Australia Limited Corner Captain Cook and Gannon Roads, Woolongare Bay, Caringbah | (02) 9710 3333 |
| PENNANT HILLS Pennant Hills Toyota, 320 Pennant Hills Road | (02) 9875 0222 | Rural Dealers | |
| ROCKDALE Stewart Toyota, 286 Princes Highway | (02) 9599 4000 | ARMIDALE New England Toyota, 210 Rusden Street | (02) 6771 5044 |
| RYDE WEST Ryde Toyota, 1046 Victoria Road | (02) 9858 1788 | BALLINA WEST Ballina Toyota, Corner Pacific Highway and Sunset Avenue | (02) 6686 3322 |
| SUTHERLAND Stewart Toyota, 489-497 Princes Highway | (02) 952 7111 | BATHURST Bathurst Toyota, 8 Corporation Avenue | (02) 6334 2224 |
| SYDNEY (WATERLOO) Sydney City Toyota, 824 Bourke Street, Waterloo | (02) 9690 9999 | BEGA Peter Dawson Toyota, 137-141 Auckland Street | (02) 6492 2277 |
| WAITARA Phil McCarroll Toyota, 46 Pacific Highway | (02) 9488 2188 | BOMBALA Cottrell Toyota, 152 Maybe Street | (02) 6458 3341 |
| WARWICK FARM Warren Toyota, Todman Avenue Service Centre: 26 Elizabeth Drive, Liverpool | (02) 9828 8777 (02) 9828 8877 | BROKEN HILL Broken Hill Toyota, 320-328 Beryl Street | (08) 8088 2444 |
| WATERLOO Sydney City Toyota, 824 Bourke Street | (02) 9690 9999 | CESSNOCK Cessnock Toyota, 250 Maitland Road | (02) 4990 2722 |

COBAR

Cobar Toyota, Corner Lewis and Louth Roads

(02) 6836 4007

COFFS HARBOUR

Coffs Harbour Toyota, 192-196 Orlando Street

(02) 6652 1933

COONABARABRAN

Mack Toyota, 24 Charles Street

(02) 6842 1499

COOTAMUNDRA

O'Connor Toyota, 91 Parker Street

(02) 6942 1888

COWRA

Oliver Toyota, 191-193 Kendal Street

(02) 6342 1988

DENILIQUIN

Deniliquin Toyota, 47-57 Davidson Street

(03) 5881 2933

DUBBO

Dubbo City Toyota, 6-10 Bourke Street

(02) 6882 1511

EDEN

Fraser Motors, 137-145 Imlay Street

(02) 6496 1509

FORBES

Jeffery Toyota, 34 Dowling Street

(02) 6851 1644

GILGANDRA

Gilgandra Toyota, 18-26 Warren Road

(02) 6847 2106

GLOUCESTER

Gloucester Toyota, 89 Church Street

(02) 6558 1100

GOULBURN

Goulburn City Toyota, 32-42 Bradley Street

(02) 4822 2888

GRAFTON

Doug Clark Toyota, 106 Prince Street

(02) 6642 2644

GRIFFITH

Owen Toyota, 120 Wakedin Street

(02) 6962 8888

GUNNDAH

Gunnedah Toyota, 72 Barber Street

(02) 6742 3322

HAY

Lugsdin Toyota, 439 McCauley Street

(02) 6993 1661

HILLSTON

Harveys Service Centre, 120 High Street

(02) 6967 2143

INVERELL

New England Toyota, 29-31 Evans Street

(02) 6722 1088

KEMPSEY

Kempsey Toyota, 132 Belgrave Street

(02) 6562 6466

LAVINGTON

Jacob Toyota, 393 Wagga Road

(02) 6040 2111

LEETON

Owen Toyota, 1 Ridley Avenue

(02) 6953 3533

LISMORE

City Toyota, 29-33 Ballina Street

(02) 6626 4400

Service Centre: 259 Keen Street

(02) 6626 4455

LITHGOW

Lean and Bennett Toyota, 255 Main Street

(02) 6352 2211

MAITLAND

Maitland Toyota, 104-124 New England Highway

(02) 4933 8383

Service Centre: 250 High Street

(02) 4933 7388

MOREE

Tait Toyota, 434 Frome Street

(02) 6752 2988

MORUYA

Ian Russell Toyota, Corner Princes Highway and Vulcan Street

(02) 4474 2000

MOSS VALE

Southern Highland Toyota, 208 Argyle Street

(02) 4868 1477

MUDGE

Mudgee Toyota, 30 Burrundulla Avenue

(02) 6372 1799

MUSWELLBROOK

Muswellbrook City Toyota, 113 Maitland Street

(02) 6543 3066

Not For Reproduction

Toyota Dealer Directory

| | | | |
|--|----------------|---|----------------|
| MURWILLUMBAH | | | |
| Hayes Toyota, 34 Prospero Street | (02) 6672 1666 | Taree Motorama, Satellite Service Centre: 2 Douglas Avenue | (02) 6554 5084 |
| NARRABRI | | TWEED HEADS | |
| Max Orman Toyota, 160 Maitland Street | (02) 6792 2788 | Surf Toyota, 66-70 Pacific Highway | (07) 5524 5011 |
| NOWRA | | Service Centre: Machinery Drive | (07) 5524 6711 |
| Nowra Toyota, 104 Princes Highway | (02) 4421 4777 | ULLADULLA | |
| Service Centre: 104 Princes Highway | (02) 4421 7417 | Ulladulla Toyota, 155-157 Princes Highway | (02) 4455 3777 |
| NYNGAN | | WAGGA WAGGA | |
| Nyngan Toyota, 10 Mitchell Highway | (02) 6832 1477 | Thomas Brothers Toyota, 67 Dobney Avenue | (02) 6925 3622 |
| ORANGE WEST | | WARREN | |
| West Orange Toyota, 32 Forbes Road | (02) 6362 2988 | Macquarie Toyota, Corner Dubbo and Hale Streets | (02) 6847 4266 |
| PARKES | | WEE WEA | |
| Parks Toyota, 131 Clarinda Street | (02) 6862 4911 | Max Orman Pty. Ltd, Boolcarrol Road | (02) 6795 4541 |
| PORT MACQUARIE | | WELLINGTON | |
| Warren Plowright Toyota, 10 Hastings River Drive | (02) 6583 3122 | Rob Stubberfield Toyota, 54 Lee Street | (02) 6845 2522 |
| QUIRINDI | | WOLLONGONG | |
| Gowings Toyota, 80 Pryor Street | (02) 6746 1066 | Wollongong Toyota, Corner Station and Flinders Streets | (02) 4229 8333 |
| SCONE | | WYALONG WEST | |
| Scone Toyota, 225 Kelly Street | (02) 6545 1188 | Armstrong Toyota, 208-210 Main Street | (02) 6972 2400 |
| SINGLETON | | YASS | |
| Singleton Toyota, 31-45 John Street | (02) 6572 3755 | Luff Motors Pty. Ltd., 280 Comur Street | (02) 6226 1122 |
| TAMWORTH | | YOUNG | |
| Tamworth City Toyota, 311-315 Marius Street | (02) 6766 5008 | Watson Toyota, 225 Boorowa Street | (02) 6382 1266 |
| TAREE | | | |
| Taree Motorama, 46-54 Victoria Street | (02) 6552 1200 | | |
| TUMUT | | | |
| Tumut Toyota, 145 Wynyard Street | (02) 6947 1744 | | |
| TUNCURRY | | | |

Australian Capital Territory

| | |
|--|----------------|
| BELCONNEN | |
| Canberra Toyota, 1 Josephson Street | (02) 6253 1900 |
| FYSHWICK | |
| Canberra Toyota, 44-50 Wollongong Street | (02) 6280 7900 |
| PHILLIP | |

Canberra Toyota, 160-164 Melrose Drive

(02) 6285 2900

Victoria

Metropolitan Dealers

BERWICK

Harris Freer Toyota, 751 Princes Highway
Service Centre: 3 Kangan Drive

(03) 9707 4455

(03) 9709 2555

CAMBERWELL

Cannon Toyota, 610 Camberwell Road

(03) 9809 2466

COBURG

Anthony Smith Toyota, 1067 Sydney Road

(03) 9350 3488

CROYDON

Yarra Valley Toyota, 35 Hewish Road

(03) 9725 5555

DANDENONG

Patterson Cheney Toyota, 200 Cheltenham Road

(03) 9215 2102

ESSENDON NORTH

Josh Sady Toyota, 18-32 Keilor Road
Service Centre: Rear of 2 Vida Street, Essendon

(03) 9379 8888

(03) 9331 2222

ELSTERNWICK

Brighton Toyota, 77 Nepean Highway
Satellite Service Centre: 163 Inkerman Street, St Kilda

(03) 9524 2000

(03) 9524 2079

FERNTREE GULLY

Graham Werner Toyota, 1101 Burwood Highway

(03) 9758 8222

FOOTSCRAY

Le Mans Toyota, 4 Hopkins Street

(03) 9689 2944

FRANKSTON

Frankston Toyota, 1 Wells Road

(03) 9783 8877

GEELONG

Blood Toyota, 68-72 Fyans Street

(03) 5222 3000

GLEN WAVERLEY

Lane Toyota, Corner Springvale and Waverly Roads
Service centre: 705 Springvale Road

(03) 9562 1222

(03) 9562 2100

HEIDELBERG

Cannon Toyota, 475 Lower Heidelberg Road

(03) 9459 3277

LILYDALE

Yarra Valley Toyota, 454 Maroondah Highway

(03) 9735 5555

MELBOURNE

Melbourne City Toyota, 621 Elizabeth Street

(03) 9282 8888

MELTON

Melton Toyota, 158-162 High Street

(03) 9743 3233

MORNINGTON

Motor Court Toyota, 911-915 Nepean Highway

(03) 5975 4177

NUNAWADING

Nunawading Toyota, 275 Whitehorse Road
Satellite Service Centre: 381 Canterbury Road, Ringwood

(03) 9877 3133

(03) 9873 0677

OAKLEIGH

Chadstone Toyota, 1547 Dandenong Road

(03) 9568 0933

PRESTON

Gary McMillan Toyota, 687 High Street

(03) 9478 1788

RINGWOOD

Nunawading Toyota,
Satellite Service Centre: 381 Canterbury Road

(03) 9873 0677

(03) 9873 0677

ROSEBUD

Motor Court Toyota, 1343-1353 Nepean Highway

(03) 5986 5000

ST KILDA

Brighton Toyota,
Satellite Service Centre: 163 Inkerman Street

(03) 9524 2079

Not For Reproduction

Toyota Dealer Directory

WERRIBEE

Rick Wolany Toyota, 8 Werribee Street (03) 9741 3344

State Distributor

Toyota Motor Corporation Australia Limited
2 Fennell Street, Port Melbourne (03) 9647 8888

Rural Dealers

ARARAT

Howden Toyota,
Satellite Service Centre: 133 High Street (03) 5352 2777

BAIRNSDALE

Dwyers Toyota, 449 Princes Highway (03) 5152 6011

BALLARAT

Ballarat Toyota, 19 Creswick Road (03) 5331 2666

BENALLA

Benalla Toyota, 127 Bridge Street (03) 5762 2022

BENDIGO

Bendigo Toyota, 41-53 Midland Highway, Epsom (03) 5448 4844

CASTLEMAINE

Castlemaine Toyota, 371 Barker Street (03) 5470 5255

COBRAM

Cobram Toyota, 79 Broadway Street (03) 5872 1088

COLAC

Colac Toyota, 191 Murray Street (03) 5231 5222

ECHUCA

Echuca Toyota, 52 Northern Highway (03) 5482 3377

HAMILTON

D. S. Taylor Motors, 46-50 Lonsdale Street (03) 5572 4244

HEALESVILLE

Healesville Toyota, 110-112 Maroondah Highway (03) 5962 4333

HOPETOUN

Hopetoun Motors, Lascelles Street (03) 5083 3143

KANIVA

Robot Motors, 71 Commercial Street (03) 5392 2335

KYABRAM

Albion Motors Pty. Ltd., 33-39 Albion Street (03) 5852 1977

KYNETON

Mollison Motors Pty. Ltd., 167 Mollison Street (03) 5422 3377

MANSFIELD

Mansfield Toyota, 102-108 High Street (03) 5775 1777

MARYBOROUGH

Don Bruce Toyota, 64 High Street (03) 5461 1666

MILDURA

Righty Motors, Corner Seventh Street and Etiwanda Avenue (03) 5021 2999

SALE

Dwyers Toyota Sale, 303 York Street (03) 5144 1811

SEYMOUR

Seymour Toyota, 21 Emily Street (03) 5792 2266

SHEPPARTON

Tracy Toyota, 8000 Melbourne Road (03) 5823 1301

ST ARNAUD

Freeman Toyota, 212D Ballarat Road (03) 5495 1988

STAWELL

Howden Toyota, 72-76 Longfield Street (03) 5358 1555

Satellite Service Centre: 133 High Street, Ararat (03) 5352 2777

SWAN HILL

Swan Hill Toyota, 59-65 Nyah Road (03) 5033 2800

TRARALGON WEST

Wight's Toyota, Princes Highway (03) 5174 8200

WANGARATTA

Wangaratta Motors, 15 Reid Street

(03) 5722 2000

WARRACKNABEAL

B. Schilling and Sons, 38 Scott Street

(03) 5394 1237

WARRAGUL

Ted Neills Motors Pty. Ltd., 1 Endeavour Street

(03) 5623 1331

WARRNAMBOOL

Warrnambool Toyota, 1075 Princes Highway

(03) 5562 9644

WODONGA

Jacob Toyota, 175 Melbourne Road

(02) 6024 7100

WONTHAGGI

Wonthaggi Toyota, 346 Bass Highway

(03) 5672 1722

YARRAM

Turnbull Toyota, 278 Commercial Road

(03) 5182 5722

Queensland

Metropolitan Dealers

ALBION

Sci-Fleet Toyota, 167 Sandgate Road

(07) 3862 0999

BRENDALE

Strathpine Toyota,
Service Centre: 32 Terrence Road

(07) 3881 2277

CABOOLTURE

Martin Jonkers Motors, 174 Morayfield Road

(07) 5495 1844

CLEVELAND

Oldmac Toyota, 58 Shore Street

(07) 3824 9999

HILLCREST

Motorama Toyota, 74 Anzac Avenue

(07) 3802 6500

IPSWICH

Llewellyn Toyota, 246 Brisbane Road

(07) 3282 2922

KEDRON

Sci-Fleet Toyota, 59 Kitchener Road

(07) 3361 0000

MOOROOKA

Motorama Toyota, 1130 Ipswich Road

(07) 3859 7222

MORNINGSIDE

Downtown Toyota, 753 Wynnum Road

(07) 3399 6733

MT GRAVATT

Southside Toyota, 1922 Logan Rd

(07) 3349 5888

REDCLIFFE

Torque Toyota, Corner Anzac Avenue and Boardman Road

(07) 3000 9000

SALISBURY

Motorama Toyota, 711 Beaudesert Road

(07) 3717 2777

SPRINGWOOD

Oldmac Toyota, 3376 Pacific Highway

(07) 3208 7777

STRATHPINE

Strathpine Toyota, 314 Gympie Road

(07) 3000 8000

Service Centre: 32 Terrence Road, Brendale

(07) 3881 2277

WOOLLOONGABBA

Southside Toyota, 42 Ipswich Road

(07) 3391 8022

Service Centre: 59 Logan Road

(07) 3240 0485

WYNNUM

Downtown Toyota, 306 Tingal Road

(07) 3396 6655

State Distributors

Toyota Motor Corporation Australia Limited

20 Paradise Road, Acacia Ridge

(07) 3307 8555

640 Ingham Road, Bohle, Townsville

(07) 4774 9333

Rural Dealers

ATHERTON

John Cole Toyota, 28 Tolga Road

(07) 4091 2222

Not For Reproduction

Toyota Dealer Directory

AYR

Don West Toyota, 282 Queen Street (07) 4783 1600

BEAUDESERT

Huebner Toyota, 189 Brisbane Street (07) 5541 1666

BILOELA

Linemac Toyota, 7-9 Dawson Highway (07) 4992 1033

BOWEN

Filby's Motors, 49 Powell Street (07) 4786 4555

BRINSMEAD

Pacific Toyota,
Satellite Service Centre: Brinsmead Road (07) 4034 3933

BUNDABERG

Bundaberg Toyota, 4 Takalvan Street (07) 4152 9911

CAIRNS

Pacific Toyota, 235-245 Mulgrave Road (07) 4030 7444

Satellite Service Centres:

- 590 Bruce Highway, Woree (07) 4033 7321

- Shop G.D.B. 1 Smithfield Shopping Centre,
Captain Cook Highway, Smithfield (07) 4038 2344

- Brinsmead Road, Brinsmead (07) 4034 3933

CALOUNDRA

Sunshine Toyota, 689 Nicklin Way (07) 5493 3900

CHARTERS TOWERS

Paul Carney Toyota, 96 Mosman Street (07) 4787 2099

DALBY

Black Toyota, 43 Drayton Street (07) 4662 3166

EMERALD

Fairbairn Toyota, 31 Hospital Road (07) 4982 2233

GATTON

John O'Brien Toyota, 91 Railway Street (07) 5462 1599

GLADSTONE

Bill Robertson Toyota, 80-84 Hanson Road (07) 4972 2766

GOONDIWINDI

Tait Toyota, 54 Russell Street (07) 4671 7300

GYMPIE

John Madill Toyota, 15 Station Road (07) 5480 5555

HERVEY BAY

Jack Casey Toyota, 82 Torquay Road, Pialba (07) 4125 9500

INGHAM

Ingham Toyota, 11-13 Herbert Street (07) 4776 2622

INNISFAIR

John Cole Toyota, 178 Edith Street (07) 4061 2166

JULIA CREEK

Julia Creek Motors Pty. Ltd., Burke Street (07) 4746 7155

KINGAROY

Ken Mills Toyota, Corner River Road and Bunya Highway (07) 4162 2300

MACKAY

Mackay Toyota, Corner Nebo Road and Shakespeare Street (07) 4951 9000

MAROOCHYDORE

Ken Mills Toyota, 36-40 Aerodrome Road (07) 5443 6277

MARYBOROUGH

Jack Casey Toyota, 105 Lennox Street (07) 4190 5400

MAREEBA

Mareeba Toyota, 279-283 Byrne Street (07) 4092 4200

MT ISA

Bell and Moir Toyota, 86 Camooweal Street (07) 4743 3066

MUNDUBBERA

Ken Mills Toyota, Strathdee Street (07) 4165 3400

MURGON

Ken Mills Toyota, Bunya Highway (07) 4168 1392

NAMBOUR

Ken Mills Toyota, Bruce Highway (07) 5441 1544

NERANG

Hinterland Toyota, Corner Spencer Drive and Hildon Court (07) 5583 6999

NOOSAVILLE

John Madill Toyota,
Corner Eumundi Road and Lionel Donovan Drive (07) 5470 0750

OAKEY

Satellite Service Centre: Black Toyota, 177 Bridge Street (07) 4691 1033

PROSERPINE

Filby's Motors, 62 Main Street (07) 4945 1644

ROCKHAMPTON

Ian Weigh Toyota, 127 Denison Street (07) 4927 3244

ROMA

Black Toyota, 73-75 Charles Street (07) 4622 1455

SMITHFIELD

Pacific Toyota,
Satellite Service Centre: Shop G.D.B. 1 Smithfield Shopping Centre,
Captain Cook Highway (07) 4038 2344

SOUTHPORT

Grand Motors Pty. Ltd., 6-12 Cotlew St East (07) 5583 6888

SPRINGSURE

Springsure Motors, 72 Eclipse Street (07) 4984 1177

ST GEORGE

Ross Tait Toyota, 36-40 Victoria Street (07) 4625 3677

THARGOMINDAH

Thargo Motors, Dowling Street (07) 4655 3225

TOOGOOOLAWAH

Seymours Pty. Ltd., 25 Fulham Street (07) 5423 1355

TOOWOOMBA

Butlers Toyota, 597 Ruthven Street (07) 4631 8300

Service Centre: 5 Telford Street (07) 4631 8300

Parts Centre: 8a Mann Street (07) 4631 8300

TOWNSVILLE

Mike Carney Toyota, Corner Duckworth and Dalrymple Roads (07) 4779 6799

TULLY

Bartrac Pty. Ltd., 89 Butler Street (07) 4068 1566

WARWICK

Black Toyota, 36-40 Wood Street (07) 4661 2799

WEST BURLEIGH

Hinterland Toyota, 82-84 Kortum Drive (07) 5569 7888

WOREE

Pacific Toyota,
Satellite Service Centre: 590 Bruce Highway (07) 4033 7321

YEPPOON

Ian Weigh Toyota, 97 John Street (07) 4939 3922

Northern Territory

ALICE SPRINGS

Peter Kittle Toyota, 46 Stuart Highway (08) 8952 5500

DARWIN

Bridge Autos Toyota, 9 Stuart Highway (08) 8946 0000

KATHERINE

Katherine Toyota, 441 Victoria Road (08) 8972 1788

KUNUNURRA

Argyle Toyota, 231 Bloodwood Drive (08) 9168 2236

NHULUNBUY

Gove Toyota, Arnhem Road (08) 8987 1917

PALMERSTON

Bridge Autos Toyota, 72 Chung Wa Terrace (08) 8932 3300

Not For Reproduction

Toyota Dealer Directory

TENNANT CREEK

Peter Kittle Toyota, 1041 Paterson Road (08) 8962 2251

State Distributor

Toyota Motor Corporation Australia Limited
69 Coonawarra Road, Winnellie, Darwin (08) 8922 0220

Western Australia

Metropolitan Dealers

BALCATTA

Big Rock Toyota, 445 Wanneroo Road (08) 9344 1122

CANNINGVALE

Prosser Toyota,
Satellite Service Centre: Unit 1/186 Bannister Road (08) 9256 8088

FREMANTLE

Fremantle Toyota, 47 Queen Victoria Street (08) 9335 6477

GOSNELLS

Prosser Toyota, 2085 Albany Highway (08) 9492 1388

KALAMUNDA

Kalamunda Toyota, 43 Canning Road (08) 9293 3055

MELVILLE

Melville Toyota, 5 Carr Place (08) 9317 2333
Service Centre: 53 McCoy Street, Myaree (08) 9317 2333

MIDLAND

Midland Toyota, 163 Great Eastern Highway (08) 9464 1000
Service Centre: 8 Stanhope Gardens, Midvale (08) 9464 1088

MIDVALE

Midland Toyota,
Service Centre: 8 Stanhope Gardens (08) 9464 1088

MORLEY

GalleriaToyota, 70-84 Collier Road (08) 9262 8888

MYAREE

Melville Toyota,
Service Centre: 53 McCoy Street (08) 9317 2333

NEDLANDS

City Toyota, 199 Stirling Highway (08) 9386 8844

OSBORNE PARK

Scarboro Toyota, 297 Scarborough Beach Road (08) 9273 1000

PERTH

City Toyota, 63 Adelaide Terrace (08) 9221 0888
Service Centre: 165 Aberdeen Street, Northbridge (08) 9228 0888

ROCKINGHAM

Toyota ways, 75 Dixon Road (08) 9527 5755

WANGARA

Grand Toyota, Corner Wanneroo and Lancaster Roads (08) 9403 9000

WELSHPOOL

New Town Toyota, 10 Forward Street (08) 9472 2600

State Distributor

Toyota W.A. Distributor, 63 Adelaide Terrace, Perth (08) 9268 8844
Service Office: 12 Miles Rd, Kewdale (08) 9365 9333

Rural Dealers

ALBANY

Albany Toyota, 352-358 Albany Highway (08) 9841 6355

BROOME

Broome Toyota, 4 McPherson Street (08) 9192 1277

BUNBURY

Bunbury Toyota, 34 Spencer Street (08) 9721 3644

BUSSELTON

Busseton Toyota, 78 West Street (08) 9752 1333

CARNARVON

Westcott Toyota, 167-169 Robinson Street (08) 9941 1029

DALWALLINU

Boekeman Toyota, 547 Great Northern Highway (08) 9661 1002

ESPERANCE

Esperance Toyota, Norseman Road (08) 9071 0107

GERALDTON

Midwest Toyota, 339 Marine Terrace (08) 9921 2200

HALL'S CREEK

Halls Creek Toyota, 137 Duncan Road (08) 9168 6150

KALGOORLIE

Goldfields Toyota, 58 Boulder Road (08) 9021 4711

KARRATHA

Karratha Toyota, 999 Coolawanyah Road (08) 9185 1366

KATANNING

Great Southern Toyota, 155-157 Clive Street (08) 9821 7100

KUNUNURRA

Argyle Toyota, 231 Bloodwood Drive (08) 9168 2236

MANDURAH

Mandurah Toyota, 289 Pinjarra Road (08) 9535 1622

MANJIMUP

Manjimup Toyota, 19 Chopping Street (08) 9771 1033

MERREDIN

Merredin Toyota, 112 Barrack Street (08) 9041 1444

MOORA

Moora Toyota, 92 Gardiner Street (08) 9651 1408

NARROGIN

Narrogin Toyota, 162 Federal Street (08) 9881 2044

NORTHAM

Northam Toyota, Corner Peel Terrace and Fitzgerald Street (08) 9622 5622

PORT HEDLAND

Pilbara Toyota, 38 Anderson Street (08) 9173 1622

Service Centre: 26 Anderson Street (08) 9173 2355

WONGAN HILLS

Boekeman Toyota, Man-Manning Road (08) 9671 1211

South Australia

Metropolitan Dealers

ADELAIDE

C. M. I. Toyota, 152 West Terrace (08) 8238 5555

Satellite Service Centre: 24 Nelson Street, Stepney (08) 8362 2844

CHRISTIES BEACH

C.M.I. Toyota, 150-158 Beach Road, Noarlunga Centre (08) 8382 9000

CLOVELLY PARK

Jarvis Toyota, 1278 South Road 1300 137 733

HAWTHORN

Cornes Toyota, 46 Belair Road (08) 8272 1488

HILLCREST

Northpoint Toyota, 485 North-East Road (08) 8261 4877

PARA HILLS WEST

Salisbury Toyota, 1459 Main North Road (08) 8258 7777

PROSPECT

Peter Davey Toyota, 170 Main North Road (08) 8344 7771

STEPNEY

C. M. I. Toyota, (08) 8362 2844

Satellite Service Centre: 24 Nelson Street

Toyota Dealer Directory

State Distributor

Toyota Motor Corporation Australia Limited
379 Cross Road, Edwardstown (08) 8292 8777

Rural Dealers

BERRI
Big River Toyota, Old Sturt Highway (08) 8582 2277

BORDERTOWN
John Payne Toyota, Dukes Highway (08) 8752 1311

CEDUNA
Ceduna Machinery, 48 McKenzie Road (08) 8625 2999

CLARE
Clare Valley Toyota, 380 Main North Road (08) 8842 2566

JAMESTOWN
Kelly Toyota, 8 Cumnock Street (08) 8664 1253

KINGSCOTE
Kingscote Toyota, 16 Telegraph Road (08) 8553 2213

MAITLAND
Peninsula Toyota, 43 Robert Street (08) 8832 2425

MILLICENT
Millicent Toyota, 79 Mt. Gambier Road (08) 8733 3111

MT BARKER
Adelaide Hills Toyota, Corner Adelaide Road and Morphet Street (08) 8398 2226

MT GAMBIER
Noel Barr Toyota, 35 Bay Road (08) 8725 8155

MURRAY BRIDGE
Chris Dutton Toyota, 169 Adelaide Road (08) 8531 0044

PORT AUGUSTA

Shane Grover Toyota, 18 Young Street (08) 8642 3433

PORT LINCOLN
Eyre Toyota, 7 Mortlock Terrace (08) 8682 2599
Satellite Service Centre: 150 Lacey Street, Whyalla Playford (08) 8644 2800

TANUNDA
Barossa Valley Toyota, 33 Murray Street (08) 8563 2188

WAIKERIE
Errol Matschoss Motors Pty. Ltd., Sturt Highway (08) 8541 2055

WHYALLA PLAYFORD
Eyre Toyota
Satellite Service Centre: 150 Lacey Street (08) 8644 2800

Tasmania

BURNIE
Bruce Gowans Toyota, 181 Bass Highway (03) 6431 5677

DEVONPORT
Bruce Gowans Toyota, 41 Best Street (03) 6424 5177

HOBART
Co-Op Toyota, 267 Argyle Street (03) 6230 1901

INVERMAY
FRM Toyota, 116 Forster Street (03) 6334 5877

KING ISLAND
King Island Toyota, Albert Street, Currie (03) 6462 1155

LAUNCESTON
Bruce Stevenson Toyota, 80 Hobart Road (03) 6344 4000

SMITHTON
Fahey Toyota, 35 Montague Road (03) 6452 2421

State Distributor

Toyota Motor Corporation Australia Limited
2 Fennell Street, Port Melbourne (03) 9647 8888

Owner Information Change Form

If your name or address has changed or you are the new owner of this Toyota, please complete the other side of this form and mail it in a stamped envelope to the following address:

Toyota Motor Corporation Australia Limited

Technical Service Operations

GPO Box 2006S, Melbourne, Victoria, 3001

This will allow Toyota to make a record of your ownership of the vehicle, and to contact you with any important product or safety updates concerning your vehicle. Your information may also be used to send you material about Toyota products or services. If you do not wish to receive this information, please tick the box below. Toyota may provide your details to a mailing house for the purposes set out above. Please see the Privacy Statement at the front of this booklet for further information about Toyota and privacy.

☐

Please tick this box if you do not wish to receive marketing material about our products and services.

Owner Information Change Form

If your name or address has changed or you are the new owner of this Toyota, please complete the other side of this form and mail it in a stamped envelope to the following address:

Toyota Motor Corporation Australia Limited

Technical Service Operations

GPO Box 2006S, Melbourne, Victoria, 3001

This will allow Toyota to make a record of your ownership of the vehicle, and to contact you with any important product or safety updates concerning your vehicle. Your information may also be used to send you material about Toyota products or services. If you do not wish to receive this information, please tick the box below. Toyota may provide your details to a mailing house for the purposes set out above. Please see the Privacy Statement at the front of this booklet for further information about Toyota and privacy.

☐

Please tick this box if you do not wish to receive marketing material about our products and services.

Owner Information Change Form

Please tick the appropriate square.

- ☐ Name and or address change
- ☐ New owner

Please complete the following in BLOCK letters

Vehicle Identification Number (VIN)*

| | | | | | | | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| | | | | | | | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|

Engine number*

Registration number

Owner's name

Address

..... **Post code**

* Refer to "Your Toyota's Identification" in the Owner's Manual for location of VIN and engine number.

Owner Information Change Form

Please tick the appropriate square.

- ☐ Name and or address change
- ☐ New owner

Please complete the following in BLOCK letters

Vehicle Identification Number (VIN)*

| | | | | | | | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| | | | | | | | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|

Engine number*

Registration number

Owner's name

Address

..... **Post code**

* Refer to "Your Toyota's Identification" in the Owner's Manual for location of VIN and engine number.

Not For Reproduction

Not For Reproduction

Not For Reproduction

This Warranty and Service booklet covers Land Cruiser models:

- **FZJ78/79 with 1FZ-FE petrol engine**
- **UZJ100 with 2UZ-FE petrol engine**
- **HZJ78/79/105 with 1HZ diesel engine**
- **HDJ78/79/100 with 1HD-FTE diesel engine**

Part Number: TSO0315

Issue: 0308-00