

# Not For server of the server o

# PRIUS

# Foreword

Welcome to the growing group of value-conscious people who drive Toyotas. We are proud of the advanced engineering and quality construction of each vehicle we build.

This Owner's Manual explains the operation of your new Toyota. Please read it thoroughly and have all the occupants follow the instructions carefully. Doing so will help you enjoy many years of safe and trouble-free motoring. For important information about this manual and your Toyota, read the following pages carefully.

When it comes to service, remember that your Toyota dealer knows your vehicle very well and is interested in your complete satisfaction. Your Toyota dealer will provide quality maintenance and any other assistance you may require.

#### Please leave this Owner's Manual in this vehicle at the time of resale. The next owner will need this information also.

All information and specifications in his manual are current at the time of printing. However, because of Toyota's policy of continual product improvement, we reserve the right to make changes at any time without notice.

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

# **TOYOTA MOTOR CORPORATION**

#### © 2009 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.

# Important information about this manual

# Safety and vehicle damage warnings

Throughout this manual, you will see safety and vehicle damage warnings. You must follow these warnings carefully to avoid possible injury or damage.


The types of warnings, what they look like, and how they are used in this manual are explained as follows:

# 

This is a warning against anything which may cause injury to people if the warning is ignored. You are informed about what you must or must not do in order to reduce the risk of injury to yourself and others.

## NOTICE

This is a warning against anything which may cause damage to the vehicle or its equipment if the warning is ignored. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your vehicle and its equipment.

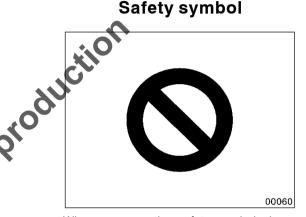

When you see the safety symbol shown above, it means: "Do not..."; "Do not do this"; or "Do not let this happen".

# Occupant restraint systems

Toyota encourages you and your family to take the time to read Section 2–2 of this Owner's Manual carefully. In terms of helping you understand how you can receive the maximum benefit of the occupant restraint systems this vehicle provides, Section 2–2 of this Owner's Manual is the most important section for you and your family to read.

Section 2–2 describes the function and operation concerning seats, seat belts, SRS airbags and child restraint systems of this vehicle and some potential hazards you should be aware of. These systems work together along with the overall structure of this vehicle in order to provide occupant restraint in the event of a crash. The effect of each system is enhanced when it is used properly and together with other systems. No single occupant restraint system can, by itself, provide you or your family with the equal level of restraint which these systems can provide when used together. That is why it is important for you and your family to understand the purpose and proper use of each of these systems and how they relate to each other. The purpose of all occupant restraint systems is to help reduce the possibility of death or serious injury in the event of a collision. None of these systems, either individually or together, can ensure that there is no injury in the event of collision. However, the more you know about these systems and how to use them properly, the greater your chances become of surviving an accident without death or serious injury.

Seat belts provide the primary restraint to all occupants of the vehicle, and every occupant of the vehicle should wear seat belts properly at all times. Children should always be secured in child restraint systems that are appropriate for their age and size. SRS (Supplemental Restraint System) airbags are, as their names imply, designed to work with, and be supplemental to, seat belts and are not substitutes for them. SRS airbags can be very effective in reducing the risk of head and chest injuries by preventing contact of the head and chest with interior portions of the vehicle. In order to be effective, the SRS airbags must deploy with tremendous speed. The rapid deployment of the SRS airbags makes the SRS airbags themselves potential sources of serious injury if an occupant is too close to an airbag, or if an object or some part of his or her body has been placed between the occupant and the airbag at the time of deployment. This is just one example of how the instructions in Section 2–2 of this Owner's Manual will help ensure proper use of the occupant restraint systems, and increase the safety they can provide to you and your family in the event of an accident.

Toyota recommends you to read the provisions in Section 2–2 carefully and refer to them as needed during your time of ownership of this vehicle.

# Accessories, spare parts and modification of your Toyota

A wide variety of non-genuine spare parts and accessories for Toyota vehicles are currently available in the market. You should know that Toyota does not warrant these products and is not responsible for their performance, repair, or replacement, or for any damage they may cause to, or adverse effect they may have on, your Toyota vehicle.

This vehicle should not be modified with non-genuine Toyota products. Modification with non-genuine Toyota products could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from the modification may not be covered under warranty.

# Installation of a mobile two-way radio system

As the installation of a mobile two-way radio system in your vehicle could affect electronic systems such as multiport fuel injection system / sequential multiport fuel injection system, cruise control system, anti-lock brake system, vehicle stability control system, SRS airbag system, seat belt pretensioner system and Toyota hybrid system, be sure to check with your Toyota dealer for precautionary measures or special instructions regarding installation.

# Smart entry and start system

Users of any electrical medical devices such as implanted pacemakers should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices. For details, see "Keys" on page 18 and "Smart entry and start system" on page 22.

# Maintenance schedule

Please refer to the separate "Warranty and Service Booklet".

# Scrapping of your Toyota

The SRS airbag and seat belt pretensioner devices in your Toyota contain explosive chemicals. If the vehicle is scrapped with the airbags and pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by the qualified service shop or by your Toyota dealer before you dispose of your vehicle.

# 

When your vehicle or battery needs to be disposed of, be sure to consult your Toyota dealer. Hybrid batteries must be collected through Toyota dealers. If your vehicle is disposed of without dismantling, someone could receive an electric shock by touching the high voltage parts of the hybrid battery. If the battery is not disposed of properly, its contents can cause death or serious injury.

# Hybrid battery

The hybrid battery has a limited service life. Call your Toyota dealer for information about recycling or disposal of hybrid battery and your vehicle.

#### ∧ CAUTION Precautions for use an accident occurs of hybrid vehicle Pull your vehicle off the road, push the "P" position switch, stop the hybrid system and if the key The vehicle has both high voltage DC and AC systems as is inserted into key slot, remove it. well as a 12-volt system. DC and AC high voltage are both very dangerous and can cause death or serious injury, se-In order to avoid personal injuries, do not touch vere burns and electric shock. any high voltage wirings and their connectors, and • In order to avoid personal injuries, do not touch high voltage parts (inverter unit, hybrid battery, the high voltage cables (orange colored) and their etc.). connectors. • If some exposed electric wires are protruding in-• Follow the caution labels attached to the high woltside or outside of your vehicle, an electric shock may occur. Never touch the electric wires. age parts. • Do not remove or replace the high voltage parts • If fluid leaks or gets in some parts of the vehicle, such as the inverter unit (located in the engine never touch it because it may be electrolyte compartment), hybrid battery (located behind rear (strong alkali) from the hybrid battery. If it gets seat), etc. into your skin or eyes, wash off immediately with a large amount of water, if possible, boric acid • Do not touch the service plug located in the left solution, and get immediate medical attention in side trim of the luggage compartment without hyorder to help avoid serious injury. brid system technical training. (See "Precautions • If a vehicle fire occurs, extinguish it using a fire for use" on page 13.) This component is provided to disable the high voltage system in case of servextinguisher for the exclusive use on electric fires. icing at a Toyota dealer. Or, use a large amount of water to prevent flam-

mable gas from being generated from the batteries.

• If your Toyota needs to be towed, do it with the front wheels raised. For details on towing, see "If your vehicle needs to be towed" on page 248.

NotForRet

# 

# High Voltage

Your vehicle is equipped with cables connected to parts of the vehicle subject to high voltage (about 500 V at maximum). There are some other parts that reach high temperatures while you drive. Never touch battery cables (wrapped in orange-colored harnesses) or their connectors since they are under high voltage and dangerous. Caution labels are applied to these parts to identify them. Carefully observe the instructions on these caution labels.



# ▲ CAUTION *MM* ATTENTION

HIGH VOLTAGE INSIDE

DO NOT remove these covers and/or connectors.

# Table of contents

1	FEA	ATURES ON NEW TOYOTA VEHICLE	Page
	1	Overview of instruments and controls	
	2	Toyota hybrid system	7
2	OPE	ERATION OF INSTRUMENTS AND CONTROLS	
	1	Keys and Doors	17
	2	Occupant restraint systems	45
	3	Steering wheel and Mirrors	89
	4	Lights, Wipers and Defogger	
	5	Gauges, Meters and Service reminder indicators	
	6	"POWER" switch, Transmission and Parking brake	
	7	Multi-information display	
	8	Audio system	
	9	Air conditioning system	
	10	Other equipment	
3		ORMATION BEFORE DRIVING YOUR TOYOTA	
4		ARTING AND DRIVING	
5		CASE OF AN EMERGENCY	
6		<b>RROSION PREVENTION AND APPEARANCE CARE</b>	
7	MA	INTENANCE REQUIREMENTS	261
8	<b>D</b> O-	-IT-YOURSELF MAINTENANCE	
	1	Introduction	265
	2	Engine and Chassis	271
	3	Electrical components	283
9	SPE	ECIFICATIONS	295
10	IND	EX	303

 NotforReproduction


# <u>SECTION 1-1</u>

# FEATURES ON NEW TOYOTA VEHICLE


# Overview of instruments and controls

	Instrument panel overview Instrument cluster and multi–information display overview Indicator symbols on the instrument cluster	
	and multi-information display	5
	rodu	
	Rebi	
40		
yot fo		


# Instrument panel overview

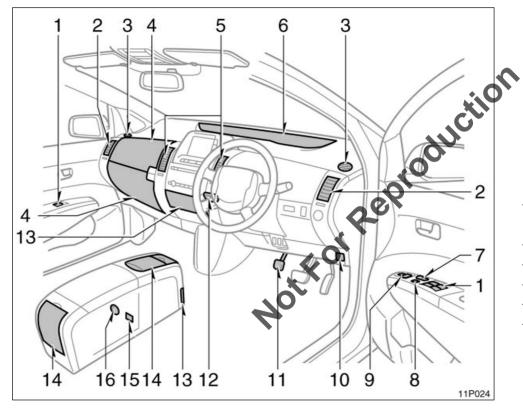

	1.	Power window switches 38
	2.	Side vent 194
	3.	Side defroster outlet
	4.	Glove box 205
	5.	Center vents 194
	6.	Instrument cluster 4
	7.	Power door lock switch 36
	8.	Window lock switch 39
	9.	Power rear view mirror control switches
-	10.	Hood lock release lever 40
	11.	Parking brake pedal 132
-	12.	Tilt steering lock release lever 90
-	13.	Auxiliary box 205
-	14.	Cup holders 206
-	15.	AUX adapter 204
-	16.	Power outlet 203

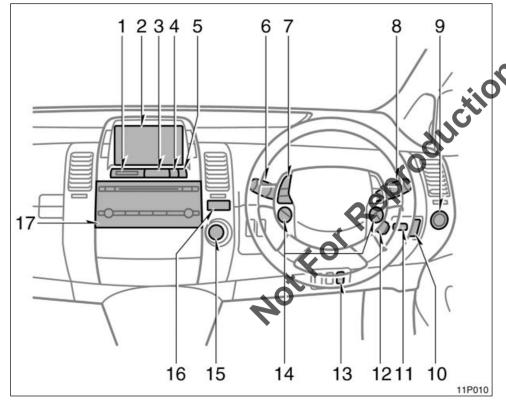

1.	Clock 200
2.	Multi-information display or navigation system including multi-information display (For the navigation system, see the separate "Navigation System Owner's Manual".) 136
3.	Emergency flasher switch 97
4.	Trip meter reset button 105
5.	Instrument panel light control button 106
6.	Wiper and washer switches 100
7.	Audio remote control switches 174
8.	Headlight and turn signal switches
9.	"POWER" switch 121
10.	"EV" drive mode switch 8
11.	Key slot 120
12.	Cruise control switch 132
13.	Smart entry and start system cancel switch
14.	Climate remote control switches
15.	Shift lever (R, N, D, B) $\dots 126$
16.	"P" position switch 126
17.	Audio system 150

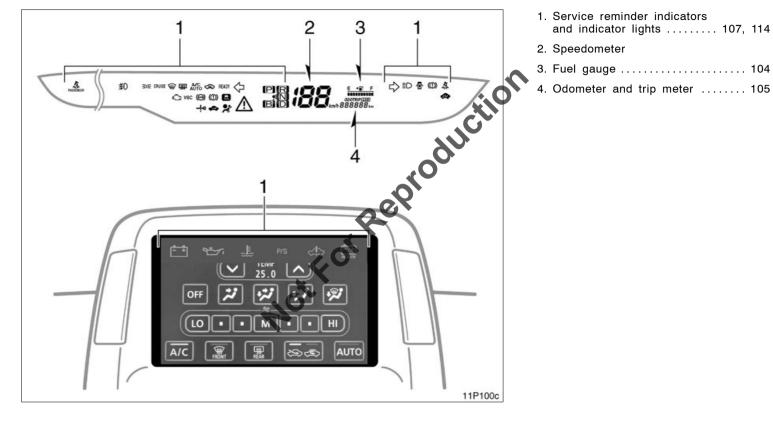

# Instrument cluster and multi-information display overview

	Brake system warning lights* <sup>1</sup>	<u>-</u> +	Charging system warning light*2
4	Driver's seat belt reminder light* <sup>1</sup>	<b>_</b> ∎_	High coolant temperature warning light*2
PASSENGER	Front passenger's seat belt reminder light*1	5	Low engine oil pressure warning light* <sup>2</sup>
	Low fuel level indicator light* <sup>1</sup>	MAIN	Hybrid battery warning light* <sup>2</sup>
Ē	Malfunction indicator lamp*1	P/S PS	Electric power steering system warning light*2
Â	Master warning light*1	< <b>.</b> >	Hybrid system warning light* <sup>2</sup>
(ABS)	Anti-lock brake system warning light <sup>1</sup>	CRUISE	Cruise control indicator light* <sup>3</sup>
	Open door warning light*1	PR N BD	Running mode position indicator light*4
*	SRS warning light*1	<b>!-</b> 0	Smart entry and start system warning light* <sup>5</sup>
VSC	Vehicle stability control system warning light*1	令令	Turn signal indicator lights

# Indicator symbols on the instrument cluster and multi-information display

<b>I</b> D	Headlight high beam indicator light	EV drive mode indicator light
EDDE	Tail light indicator light	Slip indicator light
却	Front fog light indicator light	*1: For details, see "Service reminder indicators and warning buzzers Instrument cluster" on page 107.
READY	Driving ready light	*2: For details, see "Service reminder indicators and warning buzzers— —Multi-information display" on page 114.
A/C AUTO	Automatic air conditioner indicator light	<ul> <li>*3 15 this light flashes, see "Cruise control" on page 132.</li> <li>*4 For details, see "Hybrid transaxle" on page 126.</li> <li>*5: For details, see "Smart entry and start system" on page 22.</li> </ul>
<b>~£</b> >	Recirculate mode indicator light	
Ŵ	Windshield air flow indicator light	
<u></u>	Rear window defogger indicator light	
<b>•</b>	Hybrid vehicle immobilizer / Theft deterrent sys- tem indicator light	

# <u>SECTION 1-2</u>

# FEATURES ON NEW TOYOTA VEHICLE

# Toyota hybrid system

Toyota hybrid system	8
Toyota hybrid system operating condition	9
Starting your vehicle	2
For efficient use of your vehicle	2
Precautions for use 1 1	3
cor Reprodu	
LO.	
10	

## Toyota hybrid system—

Toyota hybrid system combines a gasoline engine and electric motor power to improve the fuel economy and minimize the emissions as well as to provide better power performance than the ordinary gasoline-powered vehicles.


Depending on the driving condition, the vehicle runs on the best combination of;

- Gasoline engine power
- Electric motor power generated by the gasoline engine
- Electric motor power of the hybrid battery

Furthermore, the energy is efficiently used in the following ways:

- When stopping the vehicle, the gasoline engine is automatically stopped.
- When applying the brakes or decelerating, electricity is converted from the turning force of the wheels and stored in the hybrid battery. (This is called regenerative brake.)

Since the battery is charged by the gasoline engine as needed, it does not require charging from an outside source like an electric vehicle.

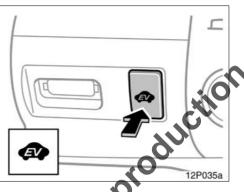

-"EV" drive mode switch

In the "EV" drive mode, your vehicle runs like an electric vehicle, only using the electric motor driven via electricity which is stored in the hybrid battery. This mode is suitable for driving in residential areas in the early morning or in the middle of the night or in the covered parking lot because you do not have to worry about noise or exhaust gases.

# Press the switch to turn on the electric motor power manually.

The indicator light in the instrument cluster comes on. Pressing the switch again will turn off this function and the indicator light.

# 

The driver should pay full attention around the vehicle especially when it is driven only by the electric motor (with the gasoline engine stopped). People in the immediate area might misjudge the hybrid vehicle movement based on the absence of the regular engine noise.

In the following conditions, the "EV" drive mode may not be turned on. In this case, the message appears in the multi-information display and a beep sounds.

- The hybrid system gets hot. (After the vehicle is left in hot weather, after driving on the slopes or high speed driving, etc.)
- The hybrid system gets cold. (After the vehicle has long been left below 0°C (32°F).)
- During gasoline engine warm up
- The hybrid battery assembly charging level is 3 or lower. (You can check the hybrid battery charge level on the "Energy monitor" screen.)
- The vehicle speed is about 55 km/h (34 mph) or over.

9

# • The accelerator pedal is depressed strongly or on the slopes.

• The defroster is in use.

#### Turning on when the engine is cold

When the engine is cold (for example early morning), it will start warming up about 10 seconds after the "READY" light comes on. Durning the warming up, the EV drive mode cannot be turned on. (The time before the engine starting varies depending on the temperature, air conditioning condition, etc.) To use the EV drive mode, press the switch before the engine starts.


In the following conditions, the "EV" drive mode may be automatically cancelled while driving. In this case, a beep sounds and the "EV" drive mode indicator light flashes three times and then goes out.

- The hybrid battery assembly charging level is 2 or lower. (You can check the hybrid battery charge level on the "Energy monitor" screen.)
- The vehicle speed exceeds about 55 km/h (34 mph).
- The accelerator pedal is depressed strongly or on the slopes.


Although the available driving range differs depending on factors such as the hybrid battery charging level or air conditioning condition, it usually ranges from about several hundred meters to 2 km (about 1.2 mile or less) when the vehicle speed is less than about 55 km/h (34 mph). As your vehicle is designed to have the best fuel economy during normal driving (driving in the combination of pasoline engine and electric motor power), frequent use of the "EV" drive mode may worsen tForRepl

# Toyota hybrid system operating condition

Basic operations are described below. Besides, Toyota hybrid system performs various controls depending on the operating condition: The "Energy monitor" screen tells you which power is used currently.

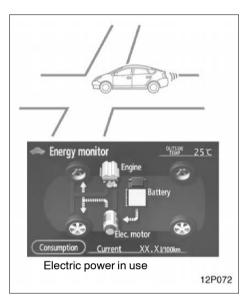



When starting or backing up, etc., the vehicle runs on electric power from hybrid battery, because the gasoline engine efficiency is low.

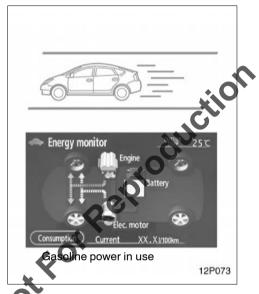


**Purng normal driving,** the vehicle runs mainly on gasoline power. However, the electric motor, using electric power generated by the gasoline engine, can supplement the gasoline engine power.

The vehicle controls the optimum ratio of the gasoline and electric power to help use energy more efficiently. When driving at full throttle, additional electric power is applied from the hybrid battery. Vehicle performance improves.

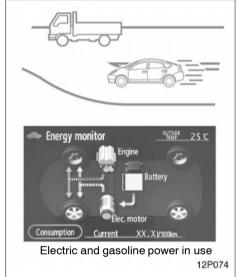


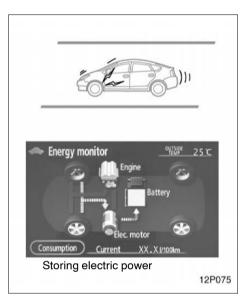

When decreasing speed or applying the brakes, the turning force of the wheels makes the electric motor operate as a generator and additional electricity is stored in the hybrid battery (regenerative brake).

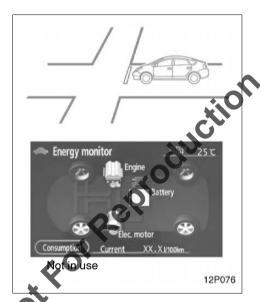

When stopping, the gasoline engine automatically shuts off.

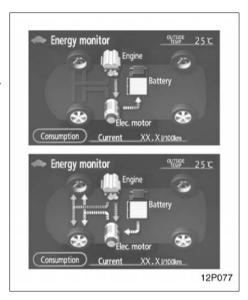

## Charging hybrid battery

When the hybrid battery power is insufficient, the gasoline engine charges the hybrid battery. The system always supplies electricity at a constant level.

## Starting your vehicle

Your vehicle is equipped with push button start system. The hybrid system will start automatically by pressing the "POWER" switch briefly with the brake pedal depressed.

#### With smart function

- 1. Carry the key with you.
- 2. Press the "POWER" switch briefly with the brake pedal depressed.

#### Without smart function

- 1. Insert the key.
- 2. Press the "POWER" switch briefly with the brake pedal depressed.

The "READY" light flashes and stays on. Two beeps sound after a few seconds, and the hybrid system will start. (If the ambient temperature is low such as during winter, it may take time until the "READY" light comes on.) You cannot start your vehicle when the brake pedal is not depressed. (For details, see "How to start ¶ the hybrid system—" on page 226.)

The engine may not start even with the "READY" light on.

# For efficient use of your vehicle

# Drive your vehicle with a smooth acceleration and deceleration.

- While driving, energy is recovered through the regenerative brake as the vehicle decelerates. However, for more efficient use, do not accelerate or de celerate your vehicle more than necessary.
- Avoid abrupt acceleration and deceleration.
- The remaining capacity of the hybrid battery can be confirmed on the energy monitor screen of the multi-information display. See "Information" on page 141 for details. Gradual or non-abrupt acceleration of deceleration will more effectively use the benefits of an electric motor without having to use gasoline engine power.

#### When parking, be sure to put the hybrid transaxle in "P". While driving, use the hybrid transaxle in "D".

 In "N", the gasoline engine operates but electricity cannot be generated. The battery will be discharged requiring unnecessary engine power to recharge. • The hybrid system automatically recharges the hybrid battery when the remaining battery power is reduced. However, the charging is not available if the hybrid transaxle is "N".

#### INFORMATION

The gasoline engine starts and stops automatically. (It stops during a low load driving, deceleration or when the vehicle is stopped.)

If the "READY" light remains on, you can start your vehicle using the electric motor even with the gasoline engine stopped.

The gasoline engine may not stop automatically in the following conditions:

- During gasoline engine warm-up
- During hybrid battery charging
- During low or high hybrid battery temperature

## Precautions for use

The vehicle runs in combination with the gasoline and electric power. Pay special attention to the following items.

Be careful of high voltage and high temperature.

Your vehicle is equipped with the orange colored cables connected to the hybrid battery (about 200 V) and to other components that are all high voltage.


# 

Do not touch or come in contact with orange cables or battery terminals. Electric shock may cause serious injury or death. Read all caution labels.

An electric motor, coolant radiator and some other parts reach high temperature while driving. Caution labels are applied to these parts. Carefully observe the instructions on these caution labels.

# 

Never remove or disassemble any high voltage part, high voltage cables (orange color) and their connectors. It may cause death or serious injury.

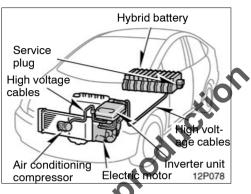

## Do not touch the service plug.

The service plug is installed in the left side trim of the luggage compartment. It is provided to disable high voltage current from the hybrid battery when the vehicle is in need of repairs at your Toyota dealer.

# 

- The shaded parts in the illustration are subjected to high voltage.
- Inappropriate handling may cause an electric shock resulting in serious injury or death. Never touch any item in shaded area.

These high voltage parts or cables consisting of an electromagnetic shielding structure produce relatively the same amount of electromagnetic waves as conventional gasolinefueled vehicles or home electric appliances.

As unwanted noise may occur in the reception of mobile radios, contact your Toyota dealer for installation or removal.

Always keep your hybrid vehicle's driving characteristics in mind.

# 

The driver should pay full attention around the vehicle especially when it is driven only by the electric motor (with the gasoline engine stopped). People in the immediate area might misjudge the hybrid vehicle movement based on the absence of the regular engine noise.

- As the vehicle runs with both the gasoline engine and electric motor, you may hear a motor sound coming from the engine compartment.
- When the hybrid system is started or stopped, you may hear a sound coming from the hybrid battery in the luggage compartment. However, this does not indicate any trouble.
- If the "READY" light is on, you can start even though the gasoline engine may be off.
- When you shift the shift lever to "B" and release it to its original position and your foot from the accelerator pedal, engine braking will be applied. However, during high speed driving you may feel that deceleration by engine braking is less than that of ordinary vehicle.

# Be sure to put the hybrid transaxle in "P" when parking.

In "N", the hybrid battery assembly is not charged, even if the gasoline engine is operating. You cannot run your vehicle if the hybrid transaxle is left in "N" for a long time because the hybrid battery assembly will be discharged.

#### When you leave your vehicle, put the hybrid transaxle in "P" and set the parking brake. Be sure to carry the key with you and lock all the doors.

If you leave the hybrid system in "ACC" or "IG-ON", the hybrid system may not start because the 12 volt battery will be discharged.

If the vehicle is parked for a tong time, the hybrid battery will discharge gradually. To keep the hybrid battery in good condition, drive the vehicle at least once every several months for at least 30 minutes or ten miles. If the hybrid battery becomes fully discharged and the vehicle will not start even with a jump-start to the 12 volt battery, contact your Toyota dealer.

# 

- When you leave your vehicle, be sure to shut off the hybrid system.
- Be sure to put the hybrid transaxle in "P" because the vehicle can start with the "READY" light on and the engine stopped (no engine sound and vibration). When the "READY" light is on, if you leave your vehicle in shift position other than "P" and "N", the vehicle will creep and start abruptly with the accelerator pedal being depressed by mistake. This may cause death or serious injury.

#### Caution

Shift the position into range P when parking. The batteries will not charge if the transmission is in Neutral N.

12P065a

#### Type 1

Caution		
Please pres	s 🖹 to engage	Park.
The batterie transaxle is	s vill not be ch in Neutral 🔟 .	arged if the

When the multi-information display shows this message, the master warning light (/?) comes on in the instrument cluster. Read the message and follow the instruction.

- When you leave your vehicle, or stop or park for a while, put the typic transaxle in "P".
- Charging is necessary. In "N\* charging will not be applied. The electric generator operates in "P", "D" or "B". If you continue driving, put the hybrid transaxle in "D" or "B" and depress the accelerator pedal. Do not leave the hybrid transaxle in "N". When driving in traffic jam, operate in "D".



Do not allow anyone to lean against the side of the rear right seatback, nor put any luggage or other obstructions on it.

- An air vent is provided on the side of the rear right seatback to cool the hybrid battery. If this vent is covered, the hybrid battery will overheat resulting in a reduction of the output performance of the hybrid system.
- The seat belt not properly set in the guide on the top of the rear seat may block the air vent. Be sure to pass the seat belt through the guide properly.

#### Type 2

- Do not wet or put foreign objects over the air vent. Otherwise, the hybrid battery may be adversely affected and be damaged.
- You may hear a cooling fan noise from the air vent.
- If water is used to wash the inside of the vehicle or inside the luggage compartment, or a large volume of water is spilled in these areas, the hybrid battery may be damaged, or a short circuit may occur.

For vehicle repairs or maintenance, be sure to consult your Toyota dealer.

If your vehicle is beyond repair because of accident or something, be sure to consult your Toyota dealer.

As sealed Nickel-Metal hydride batteries are used, be sure to consult your Toyota dealer when disposing of your vehicle. If you are involved in an accident, follow these precautions.

- Move the vehicle to a safe place and perform the followings to e duce the risk of high voltage electricity leakage.
  - Depress the brake pedal and apply the parking brake.
  - Press the "P" position switch and stop the hybrid system.
  - If the key is inserted into key slot, remove it.
- If your vehicle has experienced major damage, you may get an electric shock. To prevent this, never touch the high voltage parts (hybrid battery assembly, etc.) or cables forange color) connecting these parts. If some exposed electric wires are protruding inside or outside of the vehicle, an electric shock may also occur. Never touch them.

- If the fluid leaks or gets in some part of the vehicle, never touch it because it may be electrolyte (strong alkali) from the hybrid battery. If it gets on your skin or eyes, wash off immediately with a large amount of water, if possible, with boric acid solution, and get immediate medical attention in order to help avoid serious injury.
- If a vehicle fire occurs, extinguish it using a fire extinguisher for the exclusive use on electric fires. As a small amount of water may be dangerous, use a large amount of water, for example from a fire hydrant, or wait for a fire-fighting team arrival.
- If your vehicle needs to be towed, do it with the front wheels or all four wheels raised. If the front wheels are on the ground when towing, the electric motor may continue to generate electricity which could leak electricity. A fire could occur depending on the degree of damage. See "If your vehicle needs to be towed" on page 248.


# <u>SECTION 2-1</u>

# OPERATION OF INSTRUMENTS AND CONTROLS

# Keys and Doors


	Keys	
	Hybrid vehicle immobilizer system	20
	Smart entry and start system	22
	Wireless remote control	32
	Side doors	35
	Back door	
	Power windows	
	Hood .	40
	Fueltank cap	12
	0.01	
<u> </u>		
*		
2		

### Keys

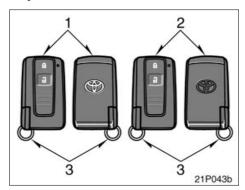

- Master keys with silver ornament (Vehicles equipped with smart entry and start system)—These keys work in every lock. Your Toyota dealer will need one of them to make a new key with a built-in transponder chip. Before you use these keys, be sure to read "Smart entry and start system" on page 22.
- Master keys without silver ornament (Vehicles not equipped with smart entry and start system)—These keys work in every lock. Your Toyota dealer will need one of them to make a new key with a built-in transponder chip.
- Mechanical keys (attached to the master key)—These key work for the driver's door only.

When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit rathorpeorodili dio waves that could interfere with the operation of the aircraft.

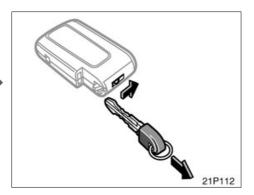

#### USING A MECHANICAL KEY

When you use the mechanical key included on the side of the key, slide the lock knob in the arrow direction and take out the key as shown. To put the key back, slide the lock knob in the arrow direction and replace the key. Be sure to put the key back when not in use.

Since the doors can be locked without a key, you should always carry a spare master key in case you accidentally lock your keys inside the vehicle.

# 


- People with implanted pacemakers or cardiac defibrillators should keep away from the smart entry and start system antennas. For the antenna locations, see "ANTENNA LOCA-TION" on page 24. The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask your Toyota dealer for details, such as the frequency of radio waves and timing of emitting the radio waves. Then, consult your doctor to see if you should disable the entry function.
- Users of any electrical medical device other than implanted pacemakers and implanted cardiac defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

For details for disabling the entry function, see "DEACTIVATING THE SMART FUNCTION" on page 31.

#### NOTICE

When using a key containing a transponder chip, observe the following precautions:

- Do not affix any material that cuts off electromagnetic waves (such as a metal seal) on the key.
- Do not knock the key hard against other objects.
- Do not leave the key exposed to high temperatures for a long period, such as on the cashboard or hood under direct sunlight.
- Do not put the key in water or wash it in an ultrasonic washer.
- Do no keep the key together with the products emitting electromagnetic waves such as a cellular phone.

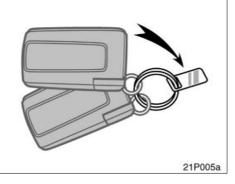


### KEY NUMBER PLATE

Your key number is shown on the plate. Keep the plate in a safe place such as your wallet, not in the vehicle.

If you should lose your keys or if you need additional keys, duplicates can be made by your Toyota dealer using the key number.


We recommend writing down the key number and storing it in a safe place.

# Hybrid vehicle immobilizer system

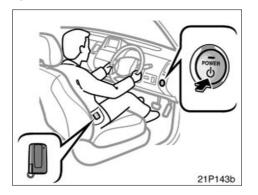

DEACTIVATION USING THE SMART FUNCTION

The hybrid vehicle immobilizer system is a theft prevention system. When you enter the vehicle carrying a smart key and press the "POWER" switch, the electronic code in the key is automatically checked to determine whether it corresponds to the registered ID code for the vehicle. If the ID code is verified, you can start the hybrid system.

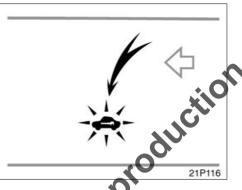

The system is automatically set when the hybrid system is off and driver's door is opened. The indicator light will start flashing to show the system is set.

If any of the following indicator conditions occurs, contact your Toyota dealer.

• The indicator light stays on.


The indicator light does not start flashing when the hybrid system is off and driver's door is opened.

• The indicator light flashes inconsistently. Carrying a smart key and pressing the "POWER" switch automatically cancels the system, which enables the hybrid system to start. The indicator light will go off.

For your Toyota dealer to make you a new key with built-in transponder chip, your dealer will need your key number and master key. However, there is a limit to the number of additional keys your Toyota dealer can make for you.


#### NOTICE

Do not modify, remove or disassemble the hybrid vehicle immobilizer system. If any unauthorized changes or modifications are made, proper operation of the system cannot be guaranteed.

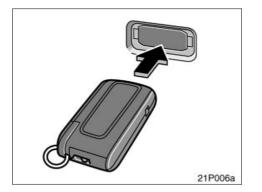

#### DEACTIVATION USING THE KEY

The hybrid vehicle immobilizer system is a theft prevention system. When you insert the key in the key slot, the transponder chip in the key transmits an electronic code to the vehicle. The hybrid system will start only when the electronic code in the chip corresponds to the registered ID code for the vehicle.

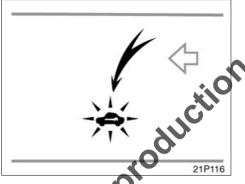

The system is automatically set when the key is removed from the key slot. The indicator light will start flashing to show the system is set.

If any of the following indicator conditions occurs, contact your Toyota dealer.

• The indicator light stays on.

The indicator light does not start flashing when the key is removed from the key slot.


• The indicator light flashes inconsistently. Inserting the registered key in the key slot automatically cancels the system, which enables the hybrid system to start. The indicator light will go off.

For your Toyota dealer to make you a new key with built-in transponder chip, your dealer will need your key number and master key. However, there is a limit to the number of additional keys your Toyota dealer can make for you.

#### NOTICE

Do not modify, remove or disassemble the hybrid vehicle immobilizer system. If any unauthorized changes or modifications are made, proper operation of the system cannot be guaranteed.

### Smart entry and start system

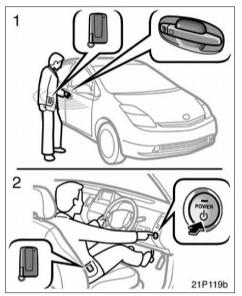

- 1. Locking and unlocking
- 2. Starting the hybrid system

#### By carrying a smart key, you can lock and unlock the doors and start the hybrid system.

For locking the doors, see "Locking the doors with smart function" on page 28 For unlocking the doors, see "Unlocking the door(s) with smart function" on page 29. For starting the hybrid system see "Push button start system" on page 120.

If the smart key battery is discharged, the smart function cannot be used. Use the mechanical key attached to the smart key by inserting it in the driver's door keyhole to lock or unlock door. To start the hybrid system, insert the smart key into the key slot. In order to activate the smart function, the battery should be replaced. For details, see "- Replacing battery" on page 34.

You can deactivate the smart function by using the cancel switch. In this case, all the smart function will be deactivated. For details, see "DEACTIVATING THE SMART FUNCTION" on page 31.


#### INFORMATION

- Be sure to take the smart key with you.
- In the following cases, the smart function or wireless remote control feature may not operate properly. (If this happens, use a mechanical key to lock or unlock the driver's door and a smart key to start the hybrid system.)
  - When facilities issuing strong electromagnetic waves such as TV towers, electric power stations, broadcasting stations are nearby.
  - When you are carrying a smart key together with a mobile communications system such as a two-way radio or cellular phone.
  - When the smart key is in contact with or covered by a metallic object.
  - When another person is operating a wireless remote control function on another vehicle near your vehicle.

 If you do not drive your vehicle, store the smart key, keeping it at least 5 m (16 ft.) away from the vehicle. • People with implanted pacemakers or cardiac defibrillators should keep away from the smart entry and start system antennas. For the antenna locations, see "ANTENNA LOCA-TION" on page 24. The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled Ask your Toyota dealer for details, such as the frequency of radio waves and timing of emitting the radio waves. Then, consult your doctor to see if you should disable the entry function.


• Users of any electrical medical device other than implanted pacemakers and implanted cardiac defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

For details for disabling the entry function, see "DEACTIVATING THE SMART FUNCTION" on page 31.

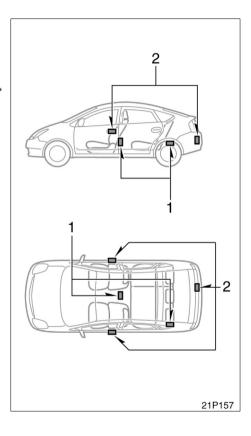

#### ANTENNA LOCATIONS

- 1. Antenna inside cabin
- 2. Antenna outside cabin

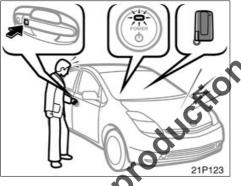

# ALARMS AND WARNING LIGHT

Your vehicle is equipped with alarms inside and outside, as well as warning light in the instrument cluster, that remind you if there is a problem involving the smart entry and start system.

This warning light will come on when the "IC ON" mode is enabled and will go off after a few seconds.

If an alarm sounds or the warning light comes on, be sure to check your vehicle and smart key. (a) The hybrid system was not turned off and the transaxle was in a position other than "P".

When the driver's door is opened with the hybrid system in "ACC" or "IG-ON" and with the transaxle in a position other than "P".

#### Inside alarm: Beeps continuously Multi-information display: Warning message

Alarms will be turned off by any of the following operations:

- Closing the driver's door
- Pressing the "P" position switch
- Turning off the hybrid system

#### (b) The smart key was brought outside the vehicle with the transaxle in a position other than "P".

When the driver's door is opened or closed with the hybrid system not to be turned off and with the transaxle in a position other than "P", it is determined that the smart key is not in the vehicle.

#### Inside alarm: Beeps continuously

#### Outside alarm: Beeps continuously

#### Warning light: On

# Alarms will be turned off by any of the following operations:

- Pressing the "P" position switch
- Bringing the smart key inside the vehicle
- Turning off the hybrid system

# (c) The hybrid system was not turned off with the transaxle in "P".

When the driver's door is opened with the hybrid system in "ACC" and with the transaxle in "P".

#### Inside alarm: 3 beeps

In the "IG-ON" mode, an alarm will not sound.

# (d) The smart key was brought outside the vehicle.

When the driver's door is opened or closed with the hybrid system not to be turned off (and with the transaxle in "P") it is determined that the smart key is not in the vehicle.

Inside alarm: One beep

Outside alarm: 3 beeps

Warning light: On

(e) Locking with smart function was attempted with the hybrid system not to be turned of the system of the sy

When you attempt to lock all the doors using smart locking function with the hybrid system not to be turned off and with the transacter in a position other than "P".

# Outside alarm: One beep (sounds for 2 seconds.)

Warning light: On

At this time, the doors cannot be locked.

# (f) The smart key was brought outside the vehicle.

When a door other than the driver's door is opened or closed with the hybrid system not to be turned off, it is determined that the smart key is not in the vehicle.

Inside alarm: One beep Outside alarm: 3 beeps

Warning light: On

### (g) Preventing the key from being locked inside the vehicle

When you close the door with the hybrid system off but with the smart key left in the vehicle, and attempt to lock all the doors using smart locking function, it is determined that the smart key is in the vehicle.

## Outside alarm: One beep (sounds for 2 seconds)

#### INFORMATION

- This function may not operate when the smart key is left on the instrument panel, luggage cover, floor or in the glove box.
- The function may operate if the smart key is brought outside but it is very close to the door window or door handle.

#### (h) Low smart key battery

When the hybrid system is turned to "ACC" or "OFF" about 20 minutes after the hybrid system is turned on or to "IG-ON", it is determined that the smart key battery voltage is low.

Inside alarm: One beep

#### (i) Outside of effective range

When the "POWER" switch is pressed, it is determined that the smart key is not in the vehicle.

Inside alarm: One beep

Warning light: On (for 5 seconds

(j) Open door warning

When you attempt to lock all the doors using smart locking function with the hybrid system turned off but with any door open.

Outside alarm: One beep (sounds for 10 seconds)


Alarms will be turned off by either of the following operations:

• Closing all the doors


Pressing the unlock button on the smart key

#### Warning and its meaning

Inside warning alarm	Outside warning alarm	Warning light	Causes
One beep (sounds continuously)	_		The driver's door was opened when the hybrid system was in "ACC" or "IG–ON" and when the transaxle was in a position other than "P".
One beep (sounds continuously)	One beep (sounds continuously)	On	The driver brought out the smart key from the vehicle with the hybrid system not to be turned off and with the transaxle in a position other than "P".
Beeps (sound intermittently)	_	_	The driver's door was opened when the hybrid system was in "ACC" and when the transaxle was in "P".
One beep	3 beeps	On	The driver brought out the smart key from the vehicle with the hybrid system not to be turned off and with the transaxle in "P".
_	One beep (sounds for 2 seconds)	On C	The lock switch was pressed with the hybrid system not to be turned off and with the transaxle in "P".
One beep	3 beeps	<b>O</b> on	The passenger brought out the smart key from the vehicle with the hybrid system not to be turned off.
_	One beep (sounds for 2 seconds)	—	The lock switch was pressed when the hybrid system was off but with the smart key left in the vehicle.
One beep	- 1	_	The key battery voltage become about 2 V. (3 V for normal operation)
One beep	_	On (for 5 seconds)	The "POWER" switch was pressed when the smart key was not in the effective range of the system.
_	One beep (sounds for 10 seconds)		The lock switch was pressed when the hybrid system was off but any door was opened.

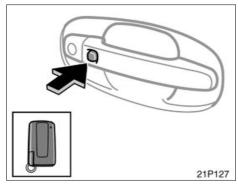

Side door

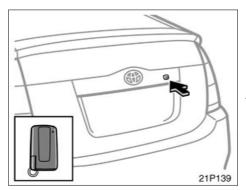

# LOCKING THE DOORS WITH SMART FUNCTION

The smart entry and start system will lock the doors without being inserted into the door keyhole.

When you exit the vehicle carrying the smart key and push the lock button on the outside front door handle or back door with all the doors closed, all the doors will be locked provided that the electronic code in the key corresponds to the registered ID code for the vehicle.

At this time, you will hear one beep and the turn signal lights flash once. However, when you push the lock button on the outside front door handle or back door with any door not closed securely, a beep sounds for 10 seconds.


#### NOTICE

Whe key is in the vehicle, do not perform door locking operation, or you might lock your keys inside the vehicle.

#### **INFORMATION**

- The rear doors are not equipped with smart function.
- When locking the doors, be sure to push the lock button on the outside front door handle or back door slowly and surely. If you push the button quickly, the doors may not lock.
- When opening or closing a door, do not touch the lock button on the outside door handle or back door. If you push the button, an alarm sounds 10 seconds.
- When a wireless remote control is used to lock the doors and a smart key is left in the effective range of the smart function in the vehicle, the doors cannot be unlocked using the smart function. In this case, use the wireless remote function to unlock the doors.
- You cannot activate smart unlocking functions within 3 seconds after the smart locking function is activated.

Back door

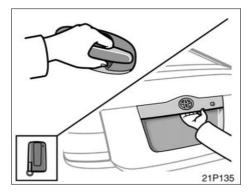

# UNLOCKING THE DOORS WITH SMART FUNCTION

The smart entry and start system can be used to unlock the doors without being inserted into the door keyhole.

When you get close to your vehicle (about 1 m (3 ft.) from each outside front door handle), and are carrying the smart key, the electronic code emitted from the key is automatically checked to determine if it corresponds to the registered ID code for the vehicle. When you take hold of the side back of the outside door handle surface, it will unlock. At this time, two beeps sound and the turn signal lights flash twice. When you push and hold down the back door opener switch, carrying the smart key, the ID code is checked in the same way as in the front door case. And all the doors will unlock. At this time, two beeps sound and the turn signal lights flast twice.

When you get close to your vehicle (about 1 m or 3 ft. from either front doof), carrying the smart key or unlock the back door using smart key function, the interior light comes on for 15 seconds if the interior light switch is in the "DOOR" position. However, the interior lights go out when you push the power door lock switch in the lock position or press the "POWER" switch once or twice from the off setting to select the "ACC" or "IG-ON" mode without depressing the brake pedal. For further information, see "Interior lights" on page 98.

You have 30 seconds to open a door after operating the smart unlocking function. If a door is not opened by then, all the doors will be automatically locked again.

#### **INFORMATION**

- The rear doors are not equipped with smart function.
- When unlocking the doors, be sure to take hold of the back side of the outside door handle firmly as shown in the illustration. Taking hold of the handle with a gloved hand might cause a delay in unlocking.

- When you take hold of the handle or push the back door opener to unlock the doors. be sure to confirm that the doors have been unlocked. If the two beeps and the turn signal lights flash twice, the doors are unlocked. At this time. vou can pull the outside door handle or push the back door opener to open the door. If you quickly move closer to the vehicle or pull the outside door handle or push the back door opener quickly, the doors might not unlock. If you cannot open the door by pulling the outside door handle or pushing the back door at this time, push back the outside door handle to the original position or release your hand from the back door and then try again.
- If you bring the smart key very close to the outside door handle or the back door opener, the doors might not lock.

- If another person who is not carrying a smart key takes hold of an outside door handle or push the back door opener when you are within the effective range of the smart function, the doors may no unlock.
- If a large amount of water is applied to the outside door handle or the back door during heavy rain or a car wash, and someone carrying a smart key is near the vehicle, the doors might be unlocked. However, if the outside front door handle is not pulled out or back door opener not pushed, the doors will lock automatically after about 30 seconds.
- To ensure the unlocking doors, perform unlocking operation within 3 seconds after getting close to the Vehicle (about 1 m or 3 ft. from the front doors or back door). If it takes longer than that, unlocking function may not be enabled.

#### BATTERY POWER SAVING

When doors are locked, the smart entry and start system transmits electromagnetic waves to the outside of the vehicle at regular intervals. For this reason, the vehicle battery will be discharged if the vehicle is left for a long time. If the key is left within the effective range of the smart function outside of the vehicle, the key and the vehicle transmit electromagnetic waves periodically. If these conditions continue for a long time, the battery in the key and vehicle will be discharged.

To prevent the batteries from being discharged, the smart function is automatically deactivated in the following conditions:

- If there is no response from the key for more than 14 days
- If the key is left within the effective range of the smart function outside of the vehicle for more than 10 minutes

To reactivate the smart function, perform any of the following:


- (a) Press the lock button on the outside front door handle or back door while carrying the smart key.
- (b) Perform a wireless remote control operation.
- (c) Insert and turn the mechanical key in the keyhole of the driver's door.

#### **INFORMATION**

- To maintain communication with the vehicle, smart keys use built-in battery power. The battery service life is about 1 to 3 years on average. If battery power becomes insufficient replace the battery with a new one.
- The smart key continually receives electromagnetic waves, and if it receives strong electromagnetic waves over a period of time, the battery can be drastically run down. Therefore, avoid storing smart keys near any electrical appliances.

Here is a list of electrical appliances which may have adverse effects on the smart key performance: TVs, personal computers, cellular phone or cordless phone recharger units, electric light stands and fluorescent desk lights

Note that you should always keep such electrical appliances at least 1 m (3 ft.) away from the smart key.

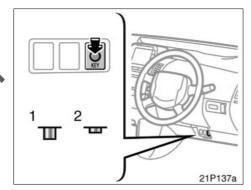

- 1. Smart function is on.
- 2. Smart function is off.

#### DEACTIVATING THE SMART FUNCTION


The cancel switch for this function is located at the bottom of the instrument panel on the driver side. When you push the switch, the smart function will be deactivated. Pushing the switch again will reactivate the function.

When the smart function is deactivated, use a mechanical key or wireless remote control function key to lock and unlock the doors. To start the hybrid system, insert a smart key into the key slot. If you do not intend to drive your vehicle for a long time, push the cancel switch to deactivate the smart function.

#### INFORMATION

The smart function will be deactivated in the following cases:

- The cancel switch is turned on.
- The smart key is inserted into the key slot.
- The battery of the smart key is discharged.

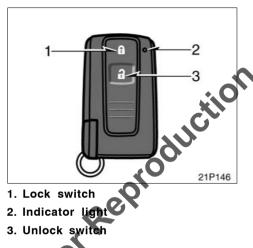

Wireless remote control—

The wireless remote control system is designed to lock or unlock all the side doors and back door, or activate the their deterrent system from a distance within approximately 1 m (3 ft.) of the vehicle.

When you operate any switch, push it slowly and securely. At this time, the indicator light flashes once.

The wireless remote control key is an electronic component. Observe the following instructions in order not to cause damage to the key.

- Do not leave the key in places where the temperature becomes high such as on the dashboard.
- Do not disassemble it.
- Avoid knocking it hard against other objects or dropping it.
- Avoid putting it in water.

If your vehicle is equipped with smart entry and start system, you can use up to 5 master keys for the same vehicle. In case of the vehicle not equipped with smart entry and start system, up to 4 master keys are available. Contact your Toyota dealer for detailed information.

If the wireless remote control key does not actuate the doors, or does not operate from a normal distance, or the indicator light on the key is dimmed or does not come on:

- Check for closeness to a radio transmitter such as a radio station or an airport which can interfere with normal operation of the key.
- The battery may have been consumed. Check the battery in the key. To replace the battery, see following "—Replacing battery" on page 34.

If you lose your key, contact your Toyota dealer as soon as possible to avoid the possibility of theft, or an accident. (See "If you lose your keys" on page 251.)

# —Locking and unlocking doors



Unlocking operation

## To lock and unlock all the doors, push the switches slowly and securely.

To lock: Push the lock switch. All the side doors and back door are locked simultaneously. At this time, the turn signal lights will flash once.

Check to see that the doors are securely locked.

If any of the doors is not securely closed or if the key is in the key slot, locking cannot be performed by the lock switch. At this time, a beep will sound for 10 seconds on the vehicle with smart entry and smart system. However, if the key is in the key slot, a beep will not sound. To stop the beep, close all the side doors and back door securely or push the unlock switch.

The buzzer can be disabled. For details, contact your Toyota dealer.

To unlock: Push the unlock switch. All the doors are unlocked simultaneously. At this time, the turn signal lights flash twice.

You have 30 seconds to open a door after using the wireless remote unlock feature. If a door is not opened by then, all the doors will be automatically locked again. The timing for the automatic door lock function can be changed. For details, contact your Toyota dealer.

If the lock or unlock switch is kept pressed in, the locking or unlocking operation is not repeated. Release the switch and then push it again.

The following adjustments can be made in this system. For details, contact your Toyota dealer:


- Cancelling the wireless door locking or unlocking function
- Cancelling the flash of the turn signal lights

#### -Replacing battery

For replacement, use a CR2032 lithium battery or equivalent and a special screw-driver.



Replace the battery by following procedures.

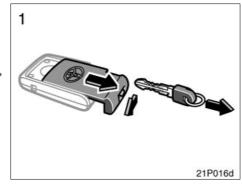

1. Remove the mechanical key and cover with slide the lock knob in the arrow direction.

# 2

2. Remove the 4 screws to take out the lid of the module.

#### NOTICE

Do not bend the terminals.

 Remove the discharged battery and put in a new battery with positive (+) side up.

#### NOTICE

- Make sure the positive side and negative side of the battery are faced correctly.
- Do not replace the battery with wet hands. Water may cause unexpected rust.
- Do not touch or move any components inside the transmitter, or it may interfere with proper operation.
- Be careful not to bend the electrode when inserting the battery and that dust or oils do not adhere to the case.
- 4. Install the lid with the 4 screws.


NOTICE

Take care not to damage or bend the o-ring when installing.

5. Replace the mechanical key and cover with slide the lock knob.

After replacing the battery, check that the key operates properly. If the key still does not operate properly, contact your Toyota dealer.


#### Side doors—

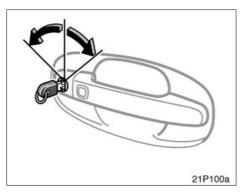

#### LOCKING AND UNLOCKING THE DRIV-ER'S DOOR WITH MECHANICAL KEY

Insert the mechanical key into the keyhole and turn it.

To lock: Turn the key forward. To unlock: Turn the key backward.

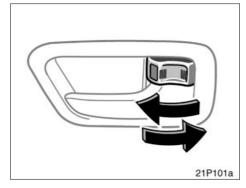


#### LOCKING AND UNLOCKING WITH IN-SIDE LOCK KNOB

#### Move the lock knob.

To lock: Push the knob forward. To unlock: Pull the knob backward.

The driver's door can be opened by pulling the inside door handle even if the lock knob is depressed.

If you want to lock the door from the outside, set the knob in the lock position before closing the door. The outside door handle must be held up while the front door is being closed. Be careful not to lock your keys in the vehicle.

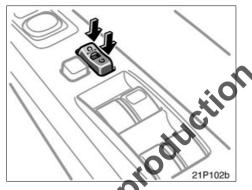


#### LOCKING AND UNLOCKING WITH POWER DOOR LOCK SWITCH

#### Push the switch.

To lock: Push the switch down on the front side.

To unlock: Push the switch down on the rear side.

All the doors lock or unlock simultaneous-

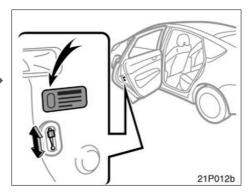

#### REAR DOOR CHILD-PROTECTORS

# Move the lock lever to the "LOCK" position as shown on the label.

When the child-protector is locked, you cannot open the rear door by the inside door handle. We recommend using this feature whenever small children are in the vehicle.

#### **Back door**




Before driving, be sure that the doors are closed and locked, especially when small children are in the vehicle. Along with the proper use of seat belts, locking the doors helps prevent the driver and passengers from being thrown out from the vehicle in an accident. It also helps prevent the doors from being opened unintentionally.

# 

To open the back door, push the back door opener and raise the back door.

If the back door opener does not operate, see "If you cannot operate back door opener on page 252.

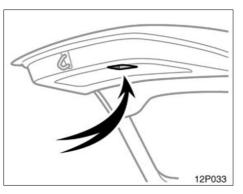

When closing the back door, the inside handle can be used to make the reach easier.

See "Luggage stowage precaution" on page 222 for precautions to observe when loading luggage.

To close the back door, lower it and press down on it. After closing the back door, try pulling it up to make sure it is securely closed.


Keep the back door closed while driving. This not only keeps the luggage from being thrown out, but also prevents exhaust gases from entering the vehicle.

If the 12 volt battery is disconnected or run down, the back door will be automatically locked and the back door system may not work after you reconnect, replace or recharge the 12 volt battery. In any of these cases, normalize the back door svstem by following procedure.

- 1. Unlock the back door with the remote control key or power door lock switch.
- 2. Close the back door completely by hand.

If the back door system does not operate properly after the above procedure, there may be a problem in the system. Contact your Toyota dealer.

#### Power windows

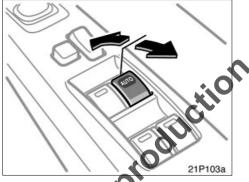



The windows can be operated with the switch on each door.

The power windows work when the "IG-ON" mode is enabled.


Key off operation: If both front doors are closed. they work for 43 seconds even after the hybrid system is stopped. They stop working when either front door is opened.

#### **OPERATING THE DRIVER'S WINDOW**

#### Use the switch on the driver's door.

Normal operation: The window moves as long as you hold the switch.

To open: Lightly push down the switch. To close: Lightly pull up the switch.

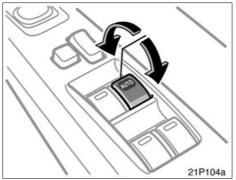

Automatic operation: Push the switch completely down or pull it completely up. and then release it. The window will fully open or close. To stop the window partway. lightly move the switch in the opposite direction and then release it.

Jam protection function: If something gets caught between the window and window frame during automatic closing operation or key off closing operation, the window stops and opens halfway.

If the window receives a strong impact, this function may work even if nothing is caught.

If the 12 volt battery is disconnected or run down, the power window may not operate automatically and the jam protection function will not function correctly after you reconnect, replace or recharge the 12 volt battery. In any of these cases, you should normalize the power window.


To normalize the power window:

- 1. Push down the power window switch and lower the window halfway.
- 2. Pull up the switch until the window closes and hold the switch for a second.

Make sure that the window opens and closes automatically. If the power window cannot be operated properly, have it checked by your Toyota dealer.

#### 

- Never try jamming any part of your body to activate the jam protection function intentionally, as it could result in death or serious injury.
- The jam protection function may not work if something gets caught just before the window is fully closed.

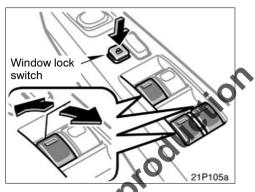


# OPERATING THE PASSENGERS' WINDOWS

Use the switch on each passenger's door or the switches on the driver's door that control each passengers' window.

The window moves as long as you hold the switch.

To open: Push down the switch. To close: Pull up the switch.

If you push in the window lock switch on the driver's door, the passengers' windows cannot be operated.

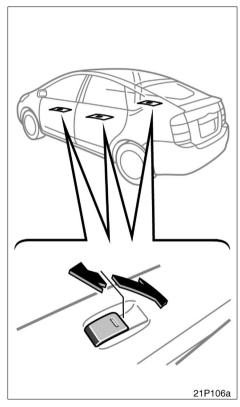

#### 

To avoid death or serious injury, you must do the following.

- Before you close the power windows, always make sure there is nobody around the power windows. You must also make sure the heads. hands and other parts of the bodies of all occupants are kept completely inside the vehicle. If someone's neck, head or hands get caught in a closing window, it could result in death or serious iniury. When anyone closes the power windows, make sure he or she operates the windows safely.
- When small children are in the vehicle, never let them use the power window switches without supervision. Use the window lock switch to prevent them from making unexpected use of the switches.
- Turn the hybrid system "OFF" and take the key with you, when you leave your vehicle.

• Never leave anyone (particularly a small child) alone in your vehicle, especially with the key still inserted or with the hybrid system other "OFF". Otherwise. he/she than could use the power window switches and get trapped in a window. Unattended person (particularly a small child) can be involved in a serious accident.

# ot For Repro

Hood


21P109a

To open the hood:


1. Pull the hood lock release lever. The hood will spring up slightly.

#### CAUTION

Before driving, be sure that the hood is closed and securely locked. Otherwise, the hood may open unexpectedly while driving and an accident may occur.

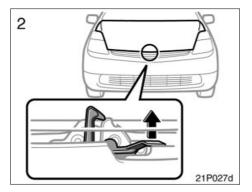

2. In front of the vehicle, pull up the auxiliary catch lever and lift the hood.

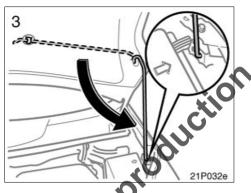

# 3. Hold the hood open by inserting the support rod into the slot.

Before closing the hood, check to see that you have not forgotten any tools, rags, etc. and return the support rod to its clip—this prevents rattles. Then lower the hood and make sure it locks into place. If necessary, press down gently on the front edge to lock it.


#### 

After inserting the support rod into the slot, make sure the rod supports the hood securely from falling down on to your head or body.

#### NOTICE

Be sure to return the support rod to its clip before closing the hood. Closing the hood with the support rod inserted into the slot could cause the hood to bend.

#### Fuel tank cap

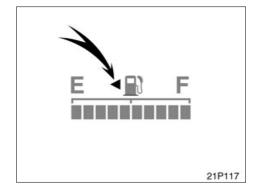

This indicates that the fuel filler door is on the left side of your vehicle.




1. To open the fuel filler door, pull the lever up.

When refueling, turn off the hybrid system


#### 

- Do not smoke, cause spark or allow open flames when refueling. The fumes are flammable.
- When opening the cap, do not remove the cap quickly. In hot weather, fuel under pressure could cause injury by spraying out the filler neck if the cap is suddenly removed.
- Do not fuel additionally after initial auto-stop filling up, or fuel may splash out.

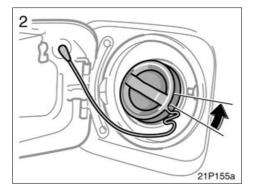

2. To remove the fuel tank cap, turn the cap counterclockwise. Pause slightly before removing it.

It is not unusual to hear a slight swoosh when the cap is opened.

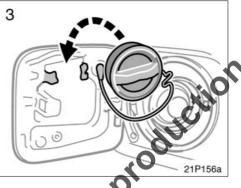

3. The removed cap can be stored on the cap hanger.

When installing the cap, turn the cap clockwise until you hear a click. When you hear the click, the cap is fully closed.

#### 

- Make sure the cap is tightened securely to prevent fuel spillage in case of an accident.
- Use only a genuine Toyota fuel tank cap for replacement. It is designed to regulate fuel tank pressure.

#### NOTICE

To prevent damage to the cap, apply force only in the turning direction to the cap. Do not pull or pry it. NotforReproduction

# SECTION 2-2

# OPERATION OF INSTRUMENTS AND CONTROLS

#### **Occupant restraint systems**

	Seats
	Front seats
	Front seats
	Head restraints
	Armrest
	Seat belts
	SRS airbags
	Child restraint
	0.01
*	
~	

#### Seats

While the vehicle is being driven, all vehicle occupants should have the seatback upright, sit well back in the seat and properly wear the seat belts provided.

#### 

- Do not drive the vehicle unless the occupants are properly seated. Do not allow any passengers to sit on top of a folded-down seatback, or in the luggage compartment or cargo area. Persons not properly seated and/or not properly restrained by seat belts can be severely injured in the event of emergency braking or a collision.
- During driving, do not allow any passengers to stand up or move around between seats. Otherwise, severe injuries can occur in the event of emergency braking or a collision.

#### Front seats— —Front seat precautions

Driver seat

#### 

The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the alibag. Since the risk zone for driver airbag is the first 50-75 mm 12-3 in.) of inflation, placing yourself 250 mm (10 in.) from your diver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 250 mm (10 in.) away now, you can change your driving position in several ways:

• Move your seat to the rear as far or you can while still reaching the pedals comfortably.

- Slightly recline the back of the seat. Although vehicle designs vary, many drivers can achieve the 250 mm (10 in.) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.
- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

The seat should be adjusted as recommended above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls. Front passenger seat

#### 

The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright. Front seats (with SRS side airbags)

#### 

The SRS side airbags are installed in the driver and front passenger seats. Observe the following precautions

- Do not lean against the front door when the vehicle is in use, since the side airbag inflates with considerable speed and force, otherwise, you may be killed or seriously injured.
- Do not use seat accessories which cover the area where the side airbags inflate. Such accessories may prevent the side airbags from activating correctly, causing death or senious injury.
- Do not modify or replace the seats or upholstery of the seats equipped with side airbags. Such change may prevent the side airbag system from activating correctly, disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury.

—Seat adjustment precautions

#### 

- Do not adjust the seat while the vehicle is moving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.
- Be careful that the seat does not hit a passenger or luggage.
- After adjusting the seat position, release the lever and try sliding the seat forward and backward to make sure it is locked in position.
- Make sure the seatback is securely locked by pushing forward and rearward on the top of the seatback.
   Failure to do so will prevent the seat belt from operating properly.
- Do not put objects under the seats. Otherwise, the objects may interfere with the seat-lock mechanism or unexpectedly push up the seat position adjusting lever and the seat may suddenly move, causing the driver to lose control of the vehicle.

 While adjusting the seat, do not put your hands under the seat or near the moving parts. Otherwise, your hands or fingers may be caught and injured.



-Adjusting front seats

1. SEAT HEIGHT ADJUSTING LEVER (Driver's seat only)

Pull up or push down the lever.

2. SEATBACK ANGLE ADJUSTING LEVER

Lean forward and pull the lever up. Then lean back to the desired angle and release the lever.

3. SEAT POSITION ADJUSTING LEVER

Hold the center of the lever and pull it up. Then slide the seat to the desired position with slight body pressure and release the lever.

#### 

To reduce the risk of sliding under the lap belt during a collision, avoid reclining the seatback any more than needed. The seat belts provide maximum protection in a frontal or rear collision when the driver and the front passenger are sitting up straight and well back in the seats. If he/she is reclined, the lap belt may slide past his/her hips and apply restraint forces directly to the abdomen. In the event of a frontal collision, the more the seat is reclined, the greater the risk of death or serious injury.

#### —Flattening seatbacks




1. Remove the head restraint. Hold the center of the lever and pull it up. Then slide the seat further forward than the front-most lock position.




2. Pull the seatback angle adjusting lever to unlock and push down the seatback.

When returning the seatback upright, be careful not to make yourself hit by the seatback which will bound with considerable spring force.

After returning the seat to its original position, be certain to replace the head restraint.

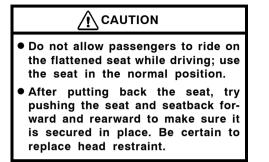


#### Fold-down rear seat

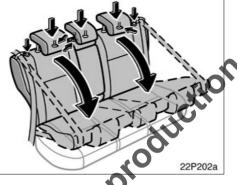

Lower the head restraints to the lowest position. Push down the lock release button and fold the seatback down.

Each seatback can be folded separately. This will emarge the luggage compartment as far as the seatbacks. See "Luggage stowage precautions" on page 222 for precautions when loading luggage.

When only rear left seat is folded down, rear seat alone can be used. Never sit on the center seat because the rear center seat belt cannot be fastened correctly when the rear left seat is folded down.

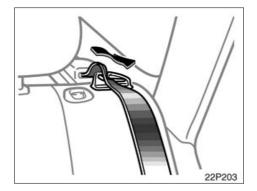

#### BEFORE RETURNING REAR SEAT

Make sure the shoulder belt pass through the guide when returning the seatback up.


If the shoulder belt on the rear right seat is off the guide, the air vent for cooling the hybrid battery may be blocked by the belt. If the hybrid battery cannot be cooled, the output performance is limited, reducing the driving performance.

#### 


When returning the seatback to the upright position, observe the following precautions in order to prevent death or serious injury in a collision or sudden stop:

- Make sure seatback is securely locked by pushing forward and rearward on the top of the seatback.
   Failure to do so will prevent the seat belt from operating properly.
- Make sure the seat belts are not twisted or caught in the seatback and are arranged in the proper position and are ready to use.

#### Head restraints

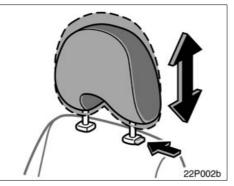

Front

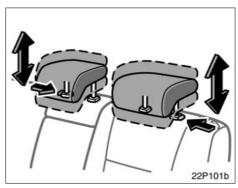

Rear

## For your safety and comfort, adjust the head restraint before driving,

To raise: Pull it up.

To lower: Push it down while pressing the lock release button.


Rear center head restraint—When an occupant sits on the rear center seat, always pull up the rear center head restraint to the lock position.

The head restraint is most effective when it is close to your head. Therefore, using a cushion on the seatback is not recommended.

#### 

- Adjust the center of the head restraint so that it is closest to the top of your ears.
- After adjusting the head restraint, make sure it is locked in position.
- Do not drive with the head restraints removed.

#### Armrest

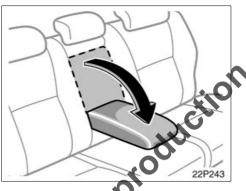

To use the armrest, pull it down as shown in the illustration.

NOTICE

To prevent damage to the armrest, avoid putting heavy loads on it.

#### Seat belts— —Seat belt precautions

Toyota strongly urges that the driver and passengers in the vehicle be properly restrained at all times with the seat belts provided. Failure to do so could increase the chance of injury and/or the severity of injury in accidents.

The seat belts provided for your vehicle are designed for people of adult size, large enough to properly wear them.

**Child**. Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belts. For details, see "Child restraint" on page 73.

If a child is too large for a child restraint system, the child should sit in the rear seat and must be restrained using the vehicle's seat belt. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.

If a child must sit in the front seat, the seat belts should be worn properly. If an accident occurs and the seat belts are not worn properly, the force of the rapid inflation of the airbag may cause death or serious injury to the child. Do not allow any children to stand up or kneel on either rear or front seats. An unrestrained child could suffer serious injury or death during emergency braking or a collision. Also, do not let the child sit on your lap. Holding a child in your arms does not provide sufficient restraint.

**Pregnant woman**. Toyota recommends the use of a seat belt. Ask your doctor for specific recommendations. The lap belt should be worn securely and as low as possible over the hips and not on the waist.

**Injured person**. Toyota recommends the use of a seat belt. Depending on the injury, first check with your doctor for specific recommendations.

If seat belt regulations exist in the country where you reside, please contact your Toyota dealer for seat belt replacement or installation.

#### 

Persons should ride in their seats properly wearing their seat belts whenever the vehicle is moving. Otherwise, they are much more likely to suffer serious bodily injury or death in the event of sudden braking or a collision.

When using the seat bets, observe the following precautions.

- Use the belt for only one person at a time. Do not use a single belt for two or more people—even children.
- Avoid rechning the seatback any more than needed. The seat belts provide maximum protection in a frontal or rear collision when the driver and the front passenger are sitting up straight and well back in the seats. If you are reclined, the lap belt may slide past your hips and apply restraint forces directly to the abdomen or your neck may contact the shoulder belt. In the event of a frontal collision, the more the seat is reclined, the greater the risk of death or personal injury.

- Be careful not to damage the belt webbing or hardware. Take care that they do not get caught or pinched in the seat or doors.
- Inspect the belt system periodically. Check for cuts, fraying, and loose parts. Damaged parts should be replaced. Do not disassemble or modify the system.
- Keep the belts clean and dry. If they need cleaning, use a mild soap solution or lukewarm water. Never use bleach, dye or abrasive cleaners, or allow them to come into contact with the belts—they may severely weaken the belts. (See "Cleaning the interior" on page 257.)
- Replace the belt assembly (including bolts) if it has been used in a severe impact. The entire assembly should be replaced even if damage is not obvious.

Australian owners: Observe the following additional WARNINGS.

WARNING: Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.


It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.

Belts should not be worn with straps twisted.

Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap. WARNING: No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.

# Not For Rept

# —Fastening front and rear seat belts

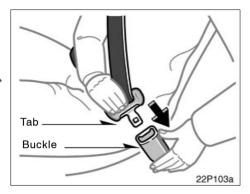

Adjust the seat as needed and sit up straight and well back in the seat. To fasten your belt, pull it out of the retractor and insert the tab into the buckle.

You will hear a click when the tab locks into the buckle.

The seat belt length automatically adjusts to your size and the seat position.


The retractor will lock the belt during a sudden stop or on impact. It also may lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend, and you can move around freely.

When a passenger's shoulder belt is completely extended and is then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system securely. (For details, see "Child restraint" on page 73.) To free the belt again, fully retract the belt and then pull the belt out once more.

If the seat belt cannot be pulled out of the retractor, firmly pull the belt and release it. You will then be able to smoothly pull the belt out of the retractor.

#### 

- After inserting the tab, make sure the tab and buckle are locked and that the belt is not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Toyota dealer. Do not use the seat until the seat belt is fixed, because it cannot protect an adult occupant or your child from death or serious injury.

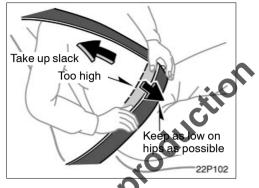


Adjust the position of the lap and shoulder belts.

Position the lap belt as low as possible on your hips not on your waist, then adjust it to a snug fit by pulling the shoulder portion upward through the latch plate.

#### 

- Both high-positioned lap belts and loose-fitting belts could cause death or serious injuries due to sliding under the lap belt during a collision or other unintended event. Keep the lap belt positioned as low on hips as possible.
- Do not place the shoulder belt under your arm.

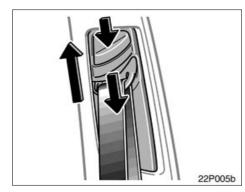

Seat belts with an adjustable shoulder anchor—

Adjust the shoulder anchor position to your size.


To raise: Slide the anchor up. To lower: Push in the lock release button and slide the anchor down.

After adjustment, make sure the anchor is a locked in position.

#### 

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in a collision.




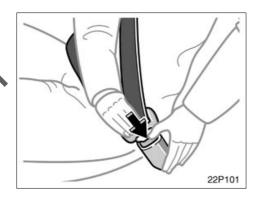

# To release the belt, press the buckle release button and allow the belt to retract.

If the belt does not retract smoothly, pull it out and check for kinks or twists. Then make sure it remains untwisted as it retracts.

#### -Seat belt pretensioners

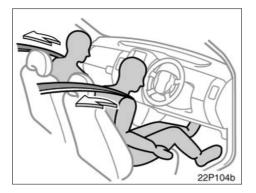


There are seat belt pretensioners for both front seats. They are designed to be activated in response to a severe frontal impact.

When the sensor detects a severe frontal impact, the front seat belts are quickly drawn back by the retractor so that the belts snugly restrain the occupants.

The seat belt pretensioners are activated even with no passenger in the front seat.

The seat belt pretensioner and SRS airbags may not operate together in all collisions.

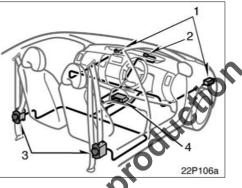

The seat belt pretensioner system consists mainly of the following components and their locations are shown in the illustration.

1. Front airbag sensors

2. SRS warning light

3 Seat belt pretensioner assemblies

Airbag sensor assembly

The seat belt pretensioners are controlled by the airbag sensor assembly. The airbag sensor assembly consists of a safing sensor and airbag sensor. When the seat belt pretensioners are activated, an operating noise may be heard and a small amount of non-toxic gas may be released. This does not indicate that a fire is occurring. This gas is normally harmless.

Once the seat belt pretensioners have been activated, the seat belt retractors remain locked.

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.




Observe the following precautions to reduce the risk of injury in the event of sudden breaking or an accident. Failure to do so may cause death or severe injury.

- If the pretensioner has activated, the seat belt becomes locked: it cannot be further extended, nor will it return to the stowed position. The seatbelt cannot be used again and must be replaced at your Toyota dealer.
- Do not modify, remove, strike or open the seat belt pretensioner assemblies, airbag sensor or surrounding area or wiring. Consult your Toyota dealer about any repair and modification.

#### NOTICE

Do not perform any of the following changes without consulting your Toyota dealer. Such changes can interfere with proper operation of the seat belt pretensioners in some cases.

- Installation of electronic devices such as a mobile two-way radio, cassette tape player or compact disc player
- Repairs on or near the front seat belt retractor assemblies
- Modification of the suspension system
- Modification of the front end structure
- Attachment of a grille guard (bull bar, kangaroo bar, etc.), snowplow, winches or any other equipment to the front end
- Repairs made on or near the front fenders, front end structure or console

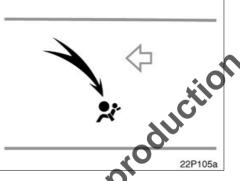


This indicator comes on when the "IG-ON" mode is enabled. It goes off after about 6 seconds. This means the seat belt pretensioners are operating properly.

The waning light system monitors the airbag sensor assembly, front airbag sensors, side and curtain shield airbag sensors, curtain shield airbag sensors, driver's seat position sensor, driver's seat belt buckle switch, seat belt pretensioner assemblies, interconnecting wiring and power sources. (For details, see "Service reminder indicators and warning buzzers" on page 107.) If any of the following conditions occurs, this indicates a malfunction of the airbags or seat belt pretensioners. Contact your Toyota dealer as soon as possible.


- The light does not come on when the "IG-ON" mode is enabled or remains on for more than 6 seconds.
- The light comes on while driving.
- If either front seat belt does not retract or can not be pulled out due to a malfunction or activation of the relevant seat belt pretensioner.
- The seat belt pretensioner assembly or surrounding area has been damaged.

#### SRS airbags— —SRS driver and front passenger airbags

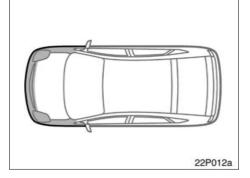

In the following cases, contact your Toyota dealer as soon as possible:

- The front part of the vehicle (shaded in the illustration) was involved in an accident that was not severe enough to cause the seat belt pretensioners to operate.
- The seat belt pretensioner assembly or surrounding area is scratched, cracked, or otherwise damaged.

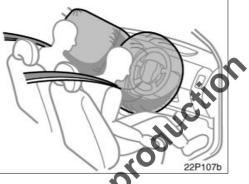

The SRS (Supplemental Restraint System) front airbags are designed to provide further protection for the driver and front passenger in addition to the primary salety protection provided by the seat belts.

In response to a severe frontal impact, the SRS front airbags work with the seat belts to help reduce injury by inflating. The SRS front airbags help reduce injuries mainly to the driver's or front passenger's head or chest caused by hitting the vehicle interior.

The front passenger airbag is activated even with no passenger in the front seat. Always wear your seat belt properly.

#### 

• The SRS front airbag system is designed only as a supplement to the primary protection of the driver and front passenger seat belt systems. The driver and front passenger can be killed or seriously injured by an inflating airbag if they do not wear the available seat belts properly. During sudden braking just before a collision. an unrestrained driver or front passenger can move forward into direct contact with or close proximity to the airbag which may then deploy during the collision. To ensure maximum protection in an accident, the driver and all passengers in the vehicle must wear their seat belts properly. Wearing a seat belt properly during an accident reduces the chances of death or serious injury or being thrown out of the vehicle. For instructions and precautions concerning the seat belt system, see "Seat belts" on page 52.


• Improperly seated and/or restrained infants and children can be killed or seriously injured by the deploying airbags. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Toyota strongly recommends that all infants and children be placed in the rear seat of the vehicle and properly restrained. The rear seat is the safest for infants and children. For instructions concerning the installation of a child restraint system, see "Child restraint" on page 73.

The SRS front airbags are designed to deploy in response to a severe frontal impact within the shaded area between the arrows in the illustration.


The SRS front airbags will deploy if the severity of the impact is above the designed threshold level, comparable to an approximate 25 km/h (15 mph) collision when the vehicle has the impact straight into a fixed barrier that does no move or deform.

However, this threshold velocity will be considerably higher if the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact, or if the vehicle is involved in an underride collision (e.g. a collision in which the front of the vehicle "underrides", or goes under, the bed of a truck, etc.). It is possible that in some collisions where the forward deceleration of the vehole is very close to the designed threshold level, the SRS front airbags and the seat belt pretensioners may not activate together.


Always wear your seat belts properly.

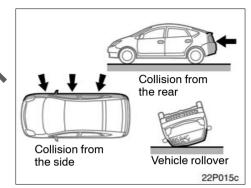

The SRS front airbags are generally not designed to inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a lowspeed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.

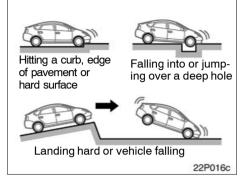

The SRS front airbags may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.

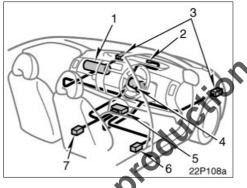

The SRS front airbag system consists mainly of the following components, and their locations are shown in the illustration.

1. Airbag module for front passenger (airbag and inflator)

2. SRS warning light

Front airbag sensors

 Airbag module for driver (airbag and inflator)

5. Airbag sensor assembly

6. Driver's seat position sensor

7. Driver's seat belt buckle switch

The airbag sensor assembly consists of a safing sensor and airbag sensor.

The front airbag sensors constantly monitor the forward deceleration of the vehicle. If an impact results in a forward deceleration beyond the designed threshold level, the system triggers the airbag inflators. At this time a chemical reaction in the inflators very quickly fills the airbags with nontoxic gas to help restrain the froward motion of the occupants. The front airbags then quickly deflate, so that there is no obstruction of the driver's vision should it be necessary to continue driving.

When the airbags inflate, they produce a loud noise and release some smoke and residue along with non-toxic gas. This does not indicate a fire. This smoke may remain inside the vehicle for some time, and may cause some minor irritation to the eyes, skin or breathing. Be sure to wash off any residue as soon as possible to prevent any potential skin irritation with soap and water. If you can safely exit from the vehicle, you should do so immediately.

Deployment of the airbags happens in a fraction of a second, so the airbags must inflate with considerable force. While the system is designed to reduce serious injuries, primarily to the head and chest, it may also cause other, less severe injuries to the face, chest, arms and hands. These are usually in the nature of minor burns or abrasions and swelling, but the force of a deploying airbag can cause more serious injuries, especially if an occupant's hands, arms, chest or head is in close proximity to the airbag module at the time of deployment. This is why it is important for the occupant to: avoid placing any object or part of the body between the occupant and the airbag module; sit straight and well back into the seat: wear the available seat belt properly; and sit as far as possible from the airbag module, while still maintaining control of the vehicle.

Parts of the airbag module (steering wheel a hub, airbag cover and inflator) may be hot for several minutes after deployment, so do not touch! The airbags inflate only once. The windshield may be damaged by absorbing some of the force of the inflating airbag.

## 

The driver or front passenger who is too close to the steering wheel or dashboard during airbag deployment can be killed or seriously injured Toyota strongly recommends that

- The driver sit as far back 5 possible from the steering wheel while still maintaining control of the vehicle.
- The front passenger sit as far back as possible from the dashboard.
- All vehicle occupants be properly restrained using the available seat belts.


₩.



• Do not sit on the edge of the seat or lean against the dashboard when the vehicle is in use, since the front passenger airbag could inflate with considerable speed and force. Anyone who is up against, or very close to, an airbag when it inflates, can be killed or seriously injured. Sit up straight and well back in the seat, and always use your seat belt properly.



- Toyota strongly recommends that all infants and children be placed in the rear seat of the vehicle and be properly restrained.
- Do not allow a child to stand up or kneel on the front passenger seat, since the front passenger airbag could inflate with considerable speed and force. Otherwise, the child may be killed or seriously injured.
- Do not hold a child on your lap or in your arms. Use a child restraint system in the rear seat. For instructions concerning the installation of a child restraint system, see "Child restraint" on page 73.

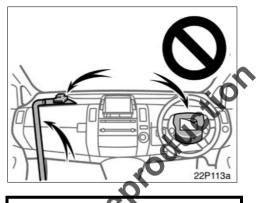


• Do not put anything or any part of your body on or in front of the dashboard or steering wheel pad that houses the front airbag system. They might restrict inflation or cause death or serious injury as iney are projected rearward by the force of the deploying airbags. Likewise, the driver and front passenger should not hold objects in their arms or on their knees. • Do not modify or remove any wiring. Do not modify, remove, strike or open any components, such as the steering wheel pad, steering wheel, column cover, dashboard near the front passenger airbag, front passenger airbag cover, passenger airbag or airbag sensor assembly. Doing so may prevent the front airbag system from activating correctly, cause sudden activation of the system or disable the system, which could result in death or serious injury.

Failure to follow these instructions can result in death or serious injury. Consult your Toyota dealer about any repair and modification.

#### NOTICE

Do not perform any of the following changes without consulting your Toyota dealer. Such changes can interfere with proper operation of the SRS front airbag system in some cases.


- Installation of electronic devices such as a mobile two-way radio, cassette tape player or compact disc player
- Modification of the suspension system
- Modification of the front end structure
- Attachment of a grille guard (bull bar, kangaroo bar, etc.), snowplow, winches or any other equipment to the front end
- Repairs made on or near the front fenders, front end structure, console, steering column, steering wheel or dashboard near the front passenger airbag

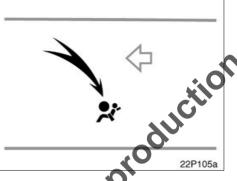

This indicator comes on when the "IG-ON" mode is enabled. It goes off after about 6 seconds. This means the SRS front airbags are operating properly.

The warning light system monitors the airbag sensor assembly, front airbag sensors, side and curtain shield airbag sensors, curtain shield airbag sensors, hiver's seat position sensor, driver's seat belt buckle switch, seat belt pretensioner assemblies, interconnecting wiring and power sources. (For details, see "Service reminder indicators and warning buzzers" on page 107.) If any of the following conditions occurs, this indicates a malfunction of the airbags or seat belt pretensioners. Contact your Toyota dealer as soon as possible.

- The light does not come on when the "IG-ON" mode is enabled or remains on for more than 6 seconds.
- The light comes on while driving.

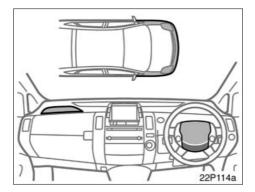

In the following cases, contact your Toyota dealer as soon as possible:


- The SRS front airbags have been inflated.
- The front of the vehicle (shaded in the illustration) was involved in an accident that was not severe enough to cause the SRS front airbags to inflate.
- The pad section of the steering wheel or front passenger airbag cover (shaded in the illustration) is scratched, cracked, or otherwise damaged.

## NOTICE

Do not disconnect the 12 volt battery cables before contacting your Toyota dealer.

# to the time of the

# —SRS side airbags and curtain shield airbags

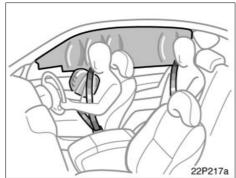

The SRS (Supplemental Restraint System) side airbags and curtain shield airbags are designed to provide further protection for the driver, front passenger and rear outboard passengers in addition to the primary safety protection provided by the seat belts. In response to a severe side impact, the SRS side airbags and curtain shield airbags work with the seat belts to help reduce injury by inflating. The SRS side airbags help reduce injuries mainly to the driver's or front passenger's chest and the SRS curtain shield airbags help reduce injuries mainly to the driver's, front passenger's or rear outboard passenger's head.

The SRS side airbag and curtain shield airbag on the passenger side are activated even with no passenger in the front seat or rear outboard seat.


The SRS curtain shield airbags may activate even when the side airbags are not activated.

Always wear your seat belt properly.


# 

• The SRS side airbag and curtain shield airbag system is designed only as a supplement to the primary protection of the driver, from passenger and rear outside passenger seat belt systems. To ensure maximum protection in an accident. the driver and all passengers in the vehicle must wear their seat belts properly. Wearing a seat belt properly during an accident reduces the chances of death or serious injury or being thrown out of the vehicle. For instructions and precautions concerning the seat belt system, see "Seat belts" on page 52.

- Do not allow anyone to lean his/her head or any part of his/her body against the door or the area of the seat, front pillar, rear pillar or roof side rail from which the SRS side airbag and curtain shield airbag deploy even if he/she is a child seated in the child restraint system. It is dangerous if the SRS side airbag and curtain shield airbag inflate, and the impact of the deploying airbag could cause death or serious injury to the occupant.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by the deploying airbags. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Toyota strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are the safest for infants and children. For instructions concerning the installation of a child restraint system, see "Child restraint" on page 73.

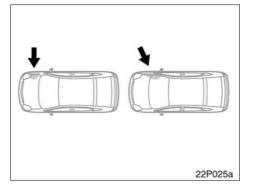

Collision from the rear Collision from the front Venicle rollover 22P026c

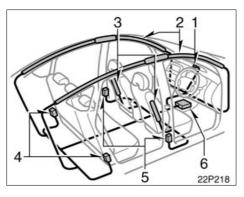

The SRS side airbag and curtain shield airbag system may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment as shown in the illustration.

The SRS side airbags and curtain shield airbags are designed to inflate when the passenger compartment area suffers a severe impact from the side.

Always wear your seat belts properly.

The SRS side airbags and curtain shield airbags are generally not designed to inflate if the vehicle is involved in a front or rear collision, if it rolls over, or if it is involved in a low-speed side collision. The SRS side airbag and curtain shield airbag system consists mainly of the following components, and their locations are shown in the illustration.

- 1. SRS warning light
- 2. Curtain shield airbag modules (airbag and inflator)
- 3. Side airbag modules (airbag and inflator)
- 4. Curtain shield airbag sensors
- 5. Side and curtain shield airbag sensors
- 6. Airbag sensor assembly

The SRS side airbag and curtain shield airbag system is controlled by the airbag sensor assembly. The airbag sensor assembly consists of a safing sensor and airbag sensor.

In a severe side impact, the side and curtain shield airbag sensor and/or the curtain shield airbag sensor trigger(s) the side airbag inflators and/or the curtain shield airbag inflators. At this time a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the lateral motion of the occupants.

When the airbags inflate, they produce a fairly loud noise and release some smoke and residue along with non-toxic gas. This does not indicate a fire. This smoke may remain inside the vehicle for some time, and may cause some minor irritation to the eyes, skin or breathing. Be sure to wash off any residue as soon as possible to prevent any potential skin irritation with soap and water. If you can safely exit from the vehicle, you should do so immediately.

Deployment of the airbags happen in a fraction of a second, so the airbags must inflate with considerable force. While the system is designed to reduce serious injuries, it may also cause minor burns or abrasions and swelling.

Front seats as well as parts of the foort and rear pillars, and roof side rail may be hot for several minutes, but the airbags themselves will not be hot. The airbags are designed to inflate only once.



SRS side airbags and curtain shield airbags inflate with considerable force. To reduce the possibility of death or serious injury when they inflate, the driver, front passenger and rear outside passengers must:


Remain properly seated with their backs upright and against the seats at all times.




- Do not allow anyone to lean against the door when the vehicle is in use, since the side airbag and curtain shield airbag could inflate with considerable speed and force. Otherwise, he/she may be killed or seriously injured. Special care should be taken especially when you have a small child in the vehicle.
- Sit up straight and well back in the seat, distributing your weight evenly in the seat. Do not apply excessive weight to the outer side of the seats with a side airbag, and to the front pillar, rear pillar and roof side rail with a curtain shield airbag.




• Do not allow anyone to get his/her head closer to the area where the side airbag and curtain shield airbag inflate, since these airbags could inflate with considerable speed and force. Otherwise, he/she may be killed or seriously injured. Special care should be taken especially when you have a small child in the vehicle. • Do not allow anyone to kneel on the passenger seat, facing the passenger's side door, since the side airbag and curtain shield airbag could inflate with considerable speed and force. Otherwise, he/site may be killed or seriously injuned. Special care should be taken especially when you have a small child in the vehicle.

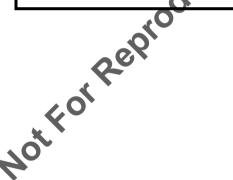


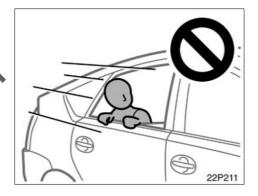

• Do not allow anyone to get his/her head or hands out of windows since the curtain shield airbags could inflate with considerable speed and force. Otherwise, he/she may be killed or seriously injured. Special care should be taken especially when you have a small child in the vehicle.

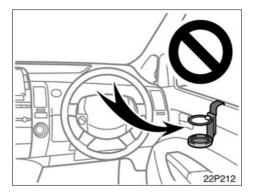

• Do not attach a cup holder or any other device or object on or around the door. When the side airbag inflates, the cup holder or any other device or object will be thrown with great force or the side airbag may not activate correctly, resulting in death or serious injury. Likewise, the driver and front passenger should not hold objects in their arms or on their knees.

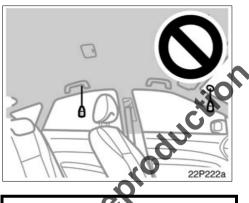

• Do not attach a microphone or any other device or object around the area where the curtain shield airbag activates such as on the windshield glass, side door glass, front and rear pillars, roof side rail and assist grips. When the curtain shield airbag inflates, the microphone or other device or object will be thrown away with great force or the curtain shield airbag may not activate correctly, resulting in death or serious injury.

- Do not hook a hanger, heavy or sharp pointed objects on the coat hook. If the curtain shield airbag inflates, those items will be thrown away with great force or the curtain shield airbag may not activate correctly, resulting in death or serious injury. When you hang clothes, hang them on the coat hook directly.
- Do not use seat accessories which cover the parts where the side airbags inflate. Such accessories may prevent the side airbags from activating correctly, causing death or serious injury.
- Do not modify or replace the seats or upholstery of the seats with side airbags. Such changes may prevent the side airbag system from activating correctly, disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury.

• Do not disassemble or repair the front and rear pillars and roof side rail containing the curtain shield airbags. Such changes may disable the system or cause the curtain shield airbags to inflate accidentally, resulting in death or serious injury.

Failure to follow these instructions can result in death or serious injury. Consult your Toyota dealer about any repair and modification.


## NOTICE

Do not perform any of the following changes without consulting your Toyota dealer. Such changes can interfere with proper operation of the SRS side airbag and curtain shield airbag system in some cases.

- Installation of electronic devices such as a mobile two way radio, cassette tape player or compact disc player
- Modification of the suspension system
- Modification of the side structure of the passenger compartment
- Repairs made on or near the console or front seat


22P105a This indicator comes on when the "IG-ON" mode is enabled. It goes off after about 6 seconds. This means the SRS side airbags and curtain shield airbags are operating properly.

The warning light system monitors the airbag sensor assembly, front airbag sensors, side and curtain shield airbag sensors, curtain shield airbag sensors, driver's seat position sensor, driver's seat belt buckle switch, seat belt pretensioner assemblies, interconnecting wiring and power sources. (For details, see "Service reminder indicators and warning buzzers" on page 107.)

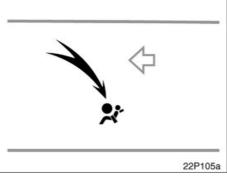

If any of the following conditions occurs, this indicates a malfunction of the airbags or seat belt pretensioners. Contact your Toyota dealer as soon as possible.

- The light does not come on when the "IG-ON" mode is enabled or remains on for more than 6 seconds.
- The light comes on while driving.

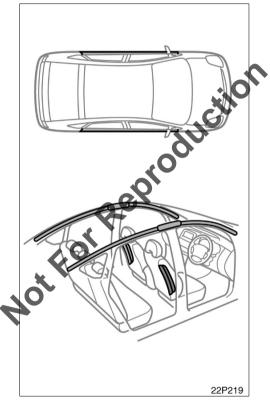

In the following cases, contact your Toyota dealer as soon as possible:

- Any of the SRS side airbags and curtain shield airbags have been inflated.
- The portion of the doors (shaded in the illustration) were involved in an accident that was not severe enough to cause the SRS side airbags and curtain shield airbags to inflate.
- The surface of the seats with the side airbag (shaded in the illustration) is scratched, cracked, or otherwise damaged.
- The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the curtain shield airbags inside (shaded in the illustration) is scratched, cracked, or otherwise damaged.

## NOTICE

Do not disconnect the 12 volt battery cables before contacting your Toyota dealer.

## Child restraint— —Child restraint precautions

#### Toyota strongly urges the use of appropriate child restraint systems for children.

If a child is too large for a child restraint system, the child should sit in the rear seat and must be restrained using the vehicle's seat belt. See "Seat belts" on page 52 for details.

# 

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system depending on the age and size of the child. Holding a child in your arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield, or between you and the vehicle's interior.
- Toyota strongly urges use of a proper child restraint system which conforms to the size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Never install a rear-facing child restraint system on the front passenger seat. In the event of an accident, the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child if the rear facing child restraint system is installed on the front passenger seat.
- A forward-facing child restraint system should be allowed to be installed on the front passenger seat only when it is unavoidable. Always move the seat as far back as possible, because the front passenger airbag could inflate with considerable speed and force. Otherwise, the child may be killed or seriously injured.

- On vehicles with side airbags and curtain shield airbags, do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front or rear pillar or roof side rail from which the side airbags or curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the side airbag and curtain shield airbag inflate, and the impact could cause death or serious injury to the child.
- If child restraint system regulations exist in the country where you reside, please contact your Toyota dealer for the installation of the child restraint system in the front seat.
- Make sure you have complied with all installation instructions provided by the child restraint manufacturer and that the system is properly secured. If it is not secured properly, it may cause death or serious injury to the child in the event of a sudden stop or accident.

• Do not allow children to play with the child restraint lock function belt. If the belt becomes twisted around a child's neck, it will not be possible to pull the belt out leading to choking or other serious injuries that could result in death. If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

## -Child restraint system

A child restraint system for a small child or baby must itself be properly restrained on the seat with the lap portion of the lap/shoulder belt. You must carefully consult the manufacturer's instructions which accompany child restraint system.

To provide proper restraint, use a child restraint system following the manufacturer's instructions about the appropriate age and size of the child for the child restraint system.

Install the child restrain system correctly following the instructions provided by its manufacturer. Control directions are also provided under the following instructions.

The child vestraint system should be installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat. When the child restraint system is not in use:

- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the restraint unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the luggage compartment.

This will prevent it from injuring passengers in the event of a sudden stop or accident.

#### Types of 3-point seat belts

There are two types of 3-point seat belt. Check the type before installing a child restraint system. ALR/ELR (Automatic Locking Retractor/ Emergency Locking Retractor) belt— This belt locks when the belt is pulled out quickly. Also, this belt has an additional fully-extended lock mode; When the shoulder belt is completely extended and is then retracted even slightly, the retractor locks the belt in that position and the belt cannot be extended. When installing a child restraint system, fully extend the belt to put it in the lock mode.

ALR/ELR belts are equipped for the rear seat belts.

ELR (Emergency Locking Retractor) belt— This belt also locks when the belt is pulled out quickly but it does not have an additional fully-extended lock mode. When installing a child restraint system, you will need a locking clip.

If your child restraint system does not provide a locking clip, you can purchase the following item from your Toyota dealer.

Locking clip for child restraint system (Part No. 73119-22010)

# —Types of child restraint system

Child restraint systems are classified into the following 3 types depending on the child's age and size.


(A) Baby (infant) seat

(B) Child (convertible) seat

(C) Junior (booster) seat

Install the child restraint system following the instructions provided by its manufacturer.

An ISOFIX Child Restraint System approved for your vehicle may also be used. See "—Installation with ISOFIX rigid anchor" on page 87.

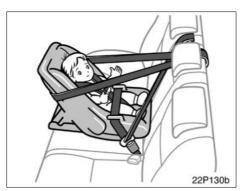

(A) Baby (infant) seat




(B) Child (convertible) seat

# —Installation with 3-point type seat belt (ALR/ELR belt)



(C) Junior (booster) seat

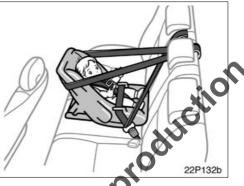


(A) BABY (INFANT) SEAT INSTALLATION A baby (infant) seat must be used in rear-facing position only.



# 

- Do not install a child restraint system on the rear seat if it interferes with the lock mechanism of the front seats. Otherwise, the child or front seat occupant(s) may be killed or seriously injured in case of sudden braking or a collision.
- If the driver's seat position does not allow sufficient space for safe installation, install the child restraint system on the rear left seat. Child restraint system installed on the rear seat should not contact the front seatbacks.

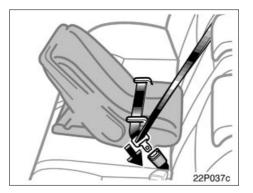


1. Run the lap and shoulder belt through or around the baby (infant) seat following the instructions provided by its manufacturer and insert the tab into the buckle taking care not to twist the belt. Keep the lap portion of the belt tight.

## 


- After inserting the tab, make sure the tab and buckle are locked and that the lap and shoulder portions of the belt are not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, it cannot protect your child from death or serious injury. Contact your forota dealer immediately. Do not install the child restraint system on the seat until the seat belt is fixed.

or

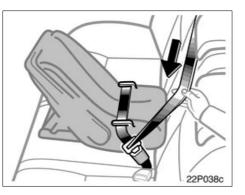


2. Fully extend the shoulder belt to put it in the lock mode. When the belt is then retracted slightly, it cannot be extended.


To hold the baby (infant) seat securely, make sure the belt is in the lock mode before letting the belt retract.

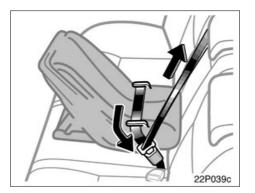

3. While pressing the baby (infant) seat firmly against the seat cushion and seatback, let the shoulder belt retract as far as it will go to hold the baby (infant) seat securely.

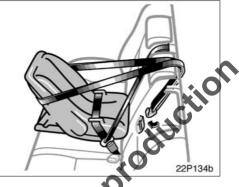


4. Attach the child restraint attaching clip to the child restraint anchor fitting. Make sure the clip is securely attached and tighten the upper anchorage strap. See "Child restraint anchor fittings" on page 86.

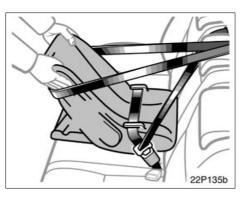

# 

Push and pull the child restraint system in different directions to be sure it is secure. Follow all the installation instructions provided by its manufacturer.

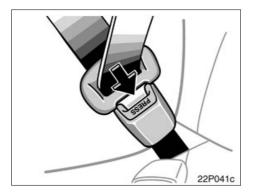

5. To remove the baby (infant) seat, press the buckle release button and allow the belt to retract completely. The belt will move freely again and be ready to work for an adult or older child passenger. Unhook the child restraint attaching clip from the child restraint anchor fitting.




(B) CHILD (CONVERTIBLE) SEAT INSTALLATION

A child (convertible) seat must be used in forward-facing or rear-facing position depending on the age and size of the child. When installing, follow the manufacturer's instructions about the applicable age and size of the child as well as directions for installing the child restraint system.



# 

- Do not install a child restraint system on the rear seat if it interferes with the lock mechanism of the front seats. Otherwise, the child or front seat occupant(s) may be killed or seriously injured in case of sudden braking or a collision.
- If the driver's seat position does not allow sufficient space for safe installation, install the child restraint system on the rear left seat. Child restraint system installed on the rear seat should not contact the front seatbacks.

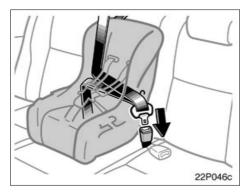


1. Run the lap and shoulder belt through or around the child (convertible) seat following the instructions provided by its manufacturer and insert the tab into the buckle taking care not to twist the belt. Keep the lap portion of the belt tight.

# 


- After inserting the tab, make sure the tab and buckle are locked and that the lap and shoulder portions of the belt are not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, it cannot protect your child from death or serious injury. Contact your forota dealer immediately. Do not install the child restraint system on the seat until the seat belt is fixed.

Jot

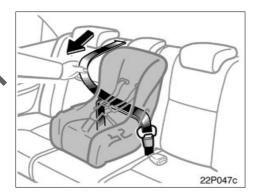


2. Fully extend the shoulder belt to put it in the lock mode. When the belt is then retracted even slightly, it cannot be extended.

To hold the child (convertible) seat securely, make sure the belt is in the lock mode before letting the belt retract.

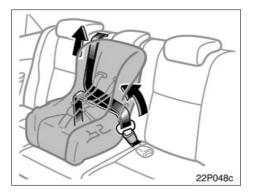

3. While pressing the child (convertible) seat firmly against the seat cushion and seatback, let the shoulder belt retract as far as it will go to hold the child (convertible) seat securely.

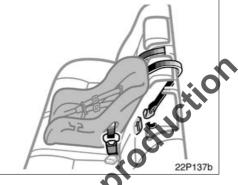


 4. Attach the child estraint attaching clip to the child restraint anchor fitting. Make sure the clip is securely attached and tighten the upper anchorage strap. See "Ohild restraint anchor fittings" on page 86.




#### 

Push and pull the child restraint system in different directions to be sure it is secure. Follow all the installation instructions provided by its manufacturer.

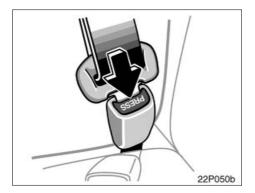

5. To remove the child (convertible) seat, press the buckle release button and allow the belt to retract completely. The belt will move freely again and be ready to work for an adult or older child passenger. Unhook the child restraint attaching clip from the child restraint anchor fitting.

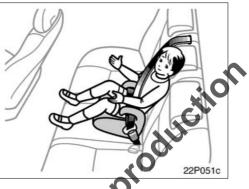

(C) JUNIOR (BOOSTER) SEAT INSTAL-LATION

A junior (booster) seat must be used in forward-facing position only.

, ot




1. Sit the child on a junior (booster) seat. Run the lap and shoulder belt through or around the junior (booster) seat and across the child following the instructions provided by its manufacturer and insert the tab into the buckle taking care not to twist the belt.

Make sure the shoulder belt is correctly across the child's shoulder and that the lap belt is positioned as low as possible on the child's hips. See "Seat belts" on page 52 for details.

# 

- Always make sure the shoulder belt is positioned across the center of child's shoulder. The belt should be kept away from child's neck, but not falling off child's shoulder. Otherwise, the child may be killed or seriously injured in case of sudden braking or a collision.
- Both high-positioned lap belts and loose-fitting belts could cause death or serious injuries due to sliding under the lap belt during a collision or other unintended event. Keep the lap belt positioned as low on a child's hips as possible.
- For child's safety, do not place the shoulder belt under child's arm.
- After inserting the tab, make sure the tab and buckle are locked and that the lap and shoulder portions of the belt are not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.

If the seat belt does not function normally, it cannot protect your child from death or serious injury. Contact your Toyota dealer immediately. Do not install the child restraint system on the seat until the st for Reproduct seat belt is fixed.

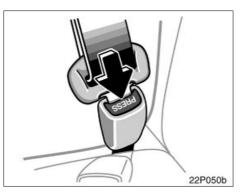

 To remove the junior (booster) seat, press the buckle release button and allow the belt to retract.


# —Installation with 3-point type seat belt (ELR belt)



When installing a child restraint system, follow the instructions provided by its manufacturer.

Depending on the type of your child restraint system, you will need a locking clip to install a child restraint system properly.

If your child restraint system does not provide a locking clip, you can purchase one at your Toyota dealer. (See "--Child restraint system" on page 74.)

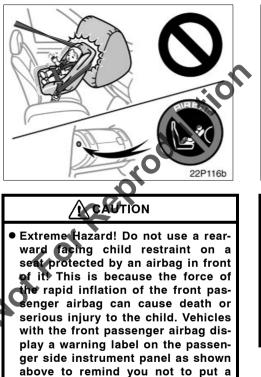

rear-facing child restraint system on the front passenger seat at any

time.




• A forward-facing child restraint system should be allowed to be installed on the front passenger seat only when it is unavoidable. Always move the seat as far back as possible, because the front passenger airbag could inflate with considerable speed and force. Otherwise, the child may be killed or seriously injured.


- On vehicles with side airbags and curtain shield airbags, do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front or rear pillar or roof side rail from which the side airbags or curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the side airbag and curtain shield airbag inflate, and the impact could cause death or serious injury to the child.
- If child restraint system regulations exist in the country where you reside, please contact your Toyota dealer for the installation of the child restraint system in the front seat.

- After inserting the tab, make sure the tab and buckle are locked and that the lap and shoulder portions of the belt are not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, it cannot protect your child from death or serious injury. Contact your Toyota dealer immediately. Do too install the child restraint system on the seat until the seat belt is fixed.

• Push and pull the child restraint system in different directions to be sure it is secure. Follow all the installation instructions provided by its manufacturer.

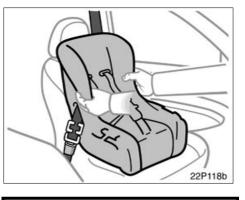

## -Child restraint anchor fittings

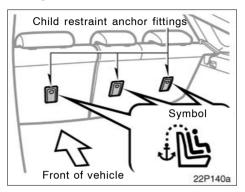

hicle.

For easy installation of child restraints, your vehicle has three child restraint anchor fittings on the back of the rear seatback.

When installing a child restraint, follow both the instructions here and those provided by the manufacturer of your child restraint.

To use the child restraint anchor fittings, remove the luggage cover (See "Luggage cover" on page 209.) and raise the head restraint to the uppermost lock position.


Front of WARNING: child restraint anchorages vehicle are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circum stances are they to be used for adult seat belts, harnesses or for attaching other items or equipment to the ve-Not For Repro Upper anchorage strap Attachingclip Anchor fitting 22P139b —Installation with ISOFIX rigid anchor (ISOFIX child restraint system)

#### ATTACHMENT OF THE ATTACHING CLIP

Open the cover of the child restraint anchor fitting and attach the child restraint attaching clip to the child restraint anchor fitting. Make sure the clip is securely attached and tighten the upper anchorage strap.

# 

Make sure the seat belt is securely locked, and check that the child restraint system is secured by pushing and pulling it in different directions. Follow all the installation instructions provided by its manufacturer.

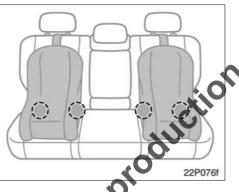


The exclusive fixing bar for the child restraint system interfaced with the ISO specification is equipped on the rear seat.

The bar of about 6 mm (0.2 in.) diameter is installed in the clearance between the seat cushion and seatback of both outside rear seats.

Child restraint system interfaced with a quasi-ISO specification can be fixed with this exclusive bar. In this case, it is not necessary to fix the child restraint system with a seat belt on the vehicle.

#### NOTICE

Ask the manufacturer of child restraint system if the child restraint system is approved for this model.

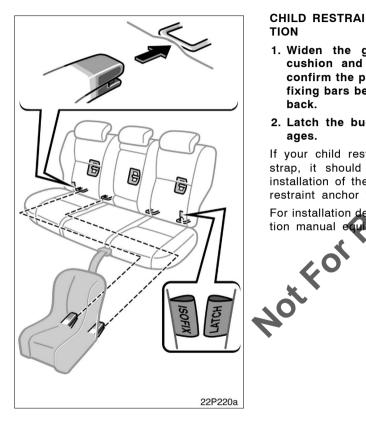

#### CHILD RESTRAINT SYSTEM INSTALLA-TION

- 1. Widen the gap between the seat cushion and seatback slightly and confirm the position of the exclusive fixing bars below the tag in the seat back.
- 2. Latch the buckles onto the anchorages.

If your child restraint system has a top strap, it should be anchored. (For the installation of the top strap, see "--Child restraint anchor fittings" on page 86.)

For installation details, refer to the instruction manual equipped with each product.

## 

- When using the exclusive fixing bar for the child restraint system, be sure that there is no irregular objects around the bar or that the seat belt is not caught.
- Push and pull the child restraint system in different directions to be sure it is secure. Follow all the installation instructions provided by its manufacturer.
- Do not install a child restraint system on the rear seat if it interferes with the lock mechanism of the front seats. Otherwise, the child or front seat occupant(s) may be killed or seriously injured in case of sudden braking or a collision.


# SECTION 2-3

# OPERATION OF INSTRUMENTS AND CONTROLS

## **Steering wheel and Mirrors**

	Tilt steering wheel	
	Outside rear view mirror	
	Anti-glare inside rear view mirror	
	Vanity mirrors	
	802	
	or Reprodu	
	01	
	0.01	
, diffe	<b>O</b> *	
20'		

## Tilt steering wheel

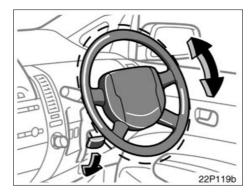


To change the steering wheel angle, hold the steering wheel, push down the lock release lever, tilt the steering wheel to the desired angle and push the lever up to lock the steering wheel in position.

# 

- Do not adjust the steering wheel while the vehicle is moving. Doing so may cause the driver to mishandle the vehicle and an accident may occur resulting in death or serious injuries.
- After adjusting the steering wheel, try moving it up and down to make sure it is locked in position.

When you move the steering wheel, an electrical motor noise may be heard. This is the power steering motor noise, and is not a malfunction.

### Outside rear view mirrors—

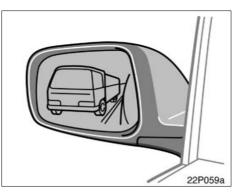


# Adjust the mirror so that you can just see the side of your vehicle in the mirror.

Be careful when judging the size or distance of any object seen in the outside rear view mirror on the passenger's side because it is a convex mirror. Any object seen in a convex mirror will look smaller and farther away than when seen in a flat mirror.

# —Power rear view mirror control

# 

Do not adjust the mirror while the vehicle is moving. Doing so may cause the driver to mishandle the vehicle and an accident may occur resulting in death or serious injuries.

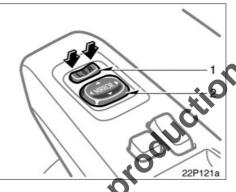


### NOTICE

If ice should jam the mirror, do not operate the control or scrape the mirror face. Use a spray de-icer to free the mirror.

- To adjust a mirror, use the switches.
- 1. Master switch To select the mirror to be adjusted
  - Push the switch to "L" (left) or "R" (right).
- 2. Control switch-To move the mirror
- Rush the switch in the desired direc-
- The mirrors can be adjusted when the hybrid system is in "ACC" or "IG-ON".

## -Folding rear view mirrors

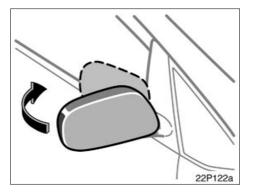


The rear view mirrors can be folded backward for parking in compact areas.

To fold the rear view mirror, push backward.

## 

Do not drive with the mirrors folded backward. Both the driver and passenger side rear view mirrors must be extended and properly adjusted before driving.

# Anti-glare inside rear view mirror

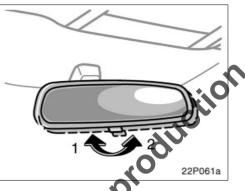

Adjust the mirror so that you can just see the rear of your vehicle in the mirror.

To reduce glare from the headlights of the vehicle behind you during night driving, operate the lever on the lower edge of the mirror.

Daylight driving—Lever at position 1

The reflection in the mirror has greater clarity at this position.


Night driving-Lever at position 2

Remember that by reducing glare you also lose some rear view clarity.


## 

Do not adjust the mirror while the vehicle is moving. Doing so may cause the driver to mishandle the vehicle and an accident may occur resulting in death or serious injuries.

## Vanity mirror

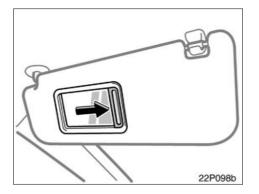

To use the vanity mirror, swing down the sun visor and slide the cover.

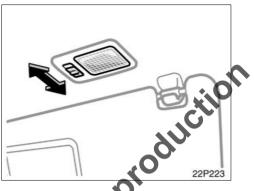

To turn on the vanity light, slide the switch.

The vanity light switch has the following positions:

"ON" Turns the light on when you swing down the sun visor. However, if the visor has been slid out, the light may not come

"OFF"—Turns the light off.

NotforReproduction


# SECTION 2-4

# OPERATION OF INSTRUMENTS AND CONTROLS

## Lights, Wipers and Defogger

	Headlights and turn signals	
	Emergency flashers	
	Emergency flashers	
	Interior light	
	Personal light	
	Luggage compartment light	
	Key slot lights	
	Windshield wipers and washer	100
	Rear window wiper and washer	
	Rear window defogger	101
	0	
× ×		
Notf		

## Headlights and turn signals

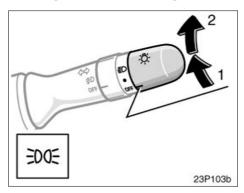

#### HEADLIGHTS

# To turn on the following lights: Twist the headlight/turn signal lever knob.

Position 1—Parking, tail, license plate and instrument panel lights

Position 2—Headlights and all of the above


#### Automatic light cut off system

The lights automatically turn off when the driver's door is opened with the hybrid system off. To turn them on again, press the "POWER" switch twice from the off setting to select the "IG-ON" mode with out depressing the brake pedal or actuate the headlight switch. If you are going to park for over one week, make sure the headlight switch is off.

When the headlight switch is turned to the first or second clickstop, the brightness of the instrument cluster will be reduced slightly unless the extinction canceling button is on.

NOTICE

To prevent the battery from being discharged, do not leave the lights on longer than necessary when the hybrid system is not running.

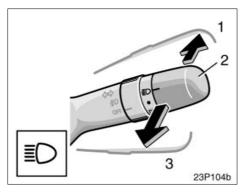


**High-Low beams**—For high beams, turn the headlights on and push the lever away from you (position 1). Pull the lever toward you (position 2) for low beams.

The headlight high beam indicator light (blue light) on the instrument panel will tell you that the high beams are on.

**Flashing the high beam headlights** (position 3)—Pull the lever all the way back. The high beam headlights turn off when you release the lever.

The high beam flasher works even when the headlight switch is off.

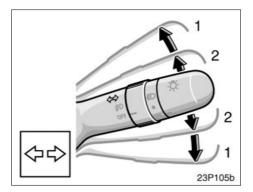


#### TURN SIGNALS

To signal a turn, push the headlight/ turn signal lever up or down to position 1.


The hybrid system must be in the "IG-  $\ensuremath{\mathsf{ON}}$  " mode.

The lever automatically returns after you make a turn, but you may have to return a it by hand after you change lanes.

To signal a lane change, move the lever up or down to the pressure point (position 2) and hold it. If the turn signal indicator lights (green lights) on the instrument panel flash faster than normal, a front or rear turn signal bulb is burned out. See "Replacing light bulbs—" on page 288.

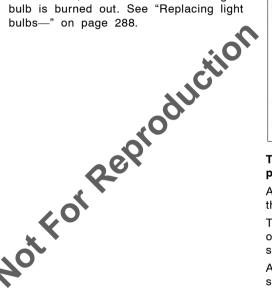

### **Emergency flashers**

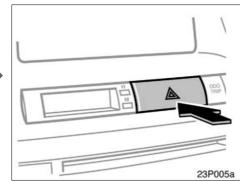

# To turn on the emergency flashers, push the switch.

All the turn signal lights will flash. To turn them off, push the switch once again.

Turn on the emergency flashers to warn other drivers if your vehicle must be stopped where it might be a traffic hazard.

Always pull as far off the road as possible.


The turn signal light switch will not work when the emergency flashers are operating.

#### NOTICE

To prevent the battery from being discharged, do not leave the switch on longer than necessary when the hybrid system is not running.


### Front fog lights

Interior lights

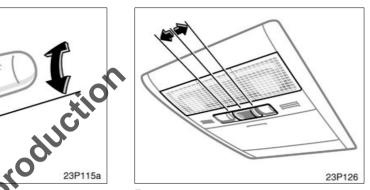


Front

23P115a

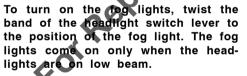


The band automatically returns to the "OFF" position after you release it.

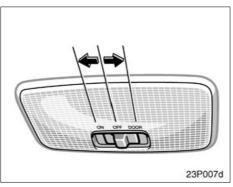

Rear

#### Personal light

Luggage compartment light

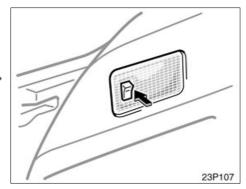

#### To turn on the luggage compartment light, push the switch upwards. To turn it off, push the switch downwards.

The light is located on the left side of the luggage compartment.

Even if you push the switch upwards, the light turns off automatically when you close the back door.

To turn on the interior light, slide the switch.

The interior light switch has the following positions:

"ON"-Keeps the light on all the time.

"OFF"-Turns the light off.

"DOOR"—Turns the light on when any door is opened. The light remains on for 15 seconds when all the doors are closed.


#### ILLUMINATED ENTRY SYSTEM

With the switch in "DOOR" position, the light comes on when any of the doors is opened or when you get close to the front door, carrying the smart key. After all the doors are closed, the light remains on for about 15 seconds and then fades out.

However, in the following cases, the light goes off immediately.


- All the doors are closed when the hybrid system is in "ACC" or "IG-ON".
- $\bullet$  All the doors are closed and locked.

When all the doors are unlocked, the light comes on for about 15 seconds and then fades out, even if the door is not opened.

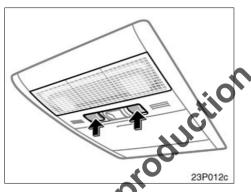


To turn on the personal light, push the switch. To turn it off, push the switch again.

#### Key slot lights

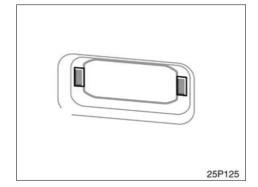

For easy access to the key slot, the key slot lights come on while the interior light is on.

# Windshield wipers and washer

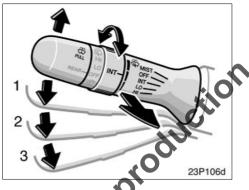

To turn on the windshield wipers, move the lever to the desired setting.

The hybrid system must be in the "IG-ON" mode.

	Lever position	Speed setting
	Position 1	Intermittent
4	Position 2	Slow
•	Position 3	Fast

For a single sweep of the windshield, push the lever up and release it.

Twist the interval adjuster upward to increase the wiping time interval between sweeps, and downward to decrease it.

The wiper lever must be in the "INT" position.

To squirt washer fluid, pull the lever toward you and release it.


If the windshield wipers are off, they will operate a couple of times after the washer squirts.

For instructions on adding washer fluid, see "Adding washer fluid" on page 287.

In freezing weather, warm the windshield with the defroster before using the washer. This will help prevent the washer fluid from freezing on your windshield, which can block your vision.

NOTICE		
Do not operate the wipers if the wind- shield is dry. It may scratch the glass.		

# Rear window wiper and washer

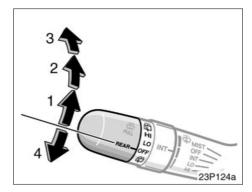


To turn on the rear window wiper, twist the lever knob upward.

The hybrid system must be in the "IG-ON" mode.


Lever position	Speed setting
Position 1	Intermittent
Position 2	Normal

To squirt washer fluid on the rear window, twist the knob upward or downward as far as it will go (position 3 or 4). The knob automatically returns from these positions after you release it. The rear window wiper operates while the washer squirts. For instructions on adding washer fluid, see "Adding washer fluid" on page 287.


# NOTICE Do not operate the rear wiper if the rear window is dry. It may scratch the glass.

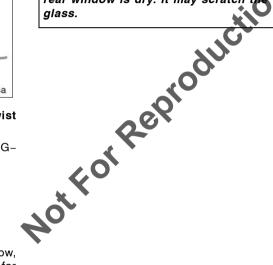

#### Rear window defogger

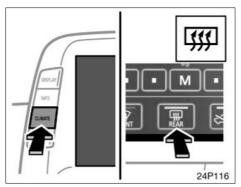

Type 1

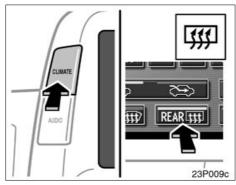

Type 2

To defog or defrost the rear window, push the "CLIMATE" button to display air conditioner screen and touch the switch.

Operating the steering switch can also defog or defrost the rear window. (See "Climate remote control" on page 194.)

The hybrid system must be in the "IG-ON" mode.

The thin heater wires on the inside of the rear window will quickly clear the surface. An indicator will come on to indicate the defogger is operating.


Touch the switch once again to turn the defogger off.

The system will automatically shut off after the defogger has operated about 15 minutes.

Make sure you turn the defogger off when the window is clear. Leaving the defogger on for a long time could cause the 12 volt battery to discharge. The defogger is not designed for drying rain water or for melting snow.

#### NOTICE

When cleaning the inside of the rear window. be careful not to scratch or damage the heater wires or connec-

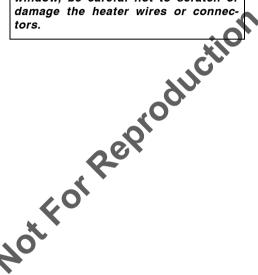


# SECTION 2-5

# OPERATION OF INSTRUMENTS AND CONTROLS

## Gauges, Meters and Service reminder indicators

	Fuel gauge104Odometer and two trip meters105Instrument panel light control button106Service reminder indicators and warning buzzers107
	Reprodu
Notro	

#### Fuel gauge

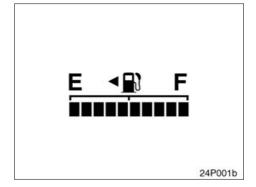


The gauge indicates the approximate quantity of fuel remaining in the tank when the "IG-ON" mode is enabled.


Nearly full-Indicator at "F" Nearly empty-Indicator at "E"

It is a good idea to keep the tank over  $1/4\,$  full.


If the fuel gauge display flashes or the remaining quantity is not displayed after the flashing, there may be a problem in the system. In these cases, contact your Toyota dealer as soon as possible.

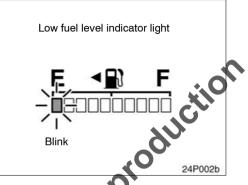

If the fuel level approaches "E" or the low fuel level indicator light blinks, fill the fuel tank as soon as possible.

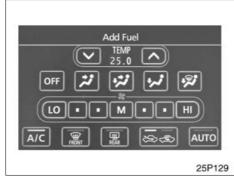


Type 1

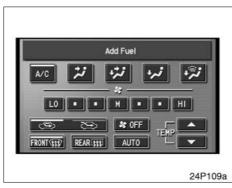

Type 2

# Odometer and two trip meters

At the first blinking of the light, the master warning light in the instrument cluster comes on and the message appears on the multi-information display to remind the driver to fill fuel.

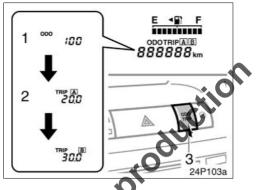

This meter displays the odometer and two trip meters


- 1. Odometer Shows the total distance the vehicle has been driven.
- 2. Two trip meters—Show two different distances independently driven since he last time each trip meter was set to zero.

You can use one trip meter to calculate the fuel economy and the other to measure the distance on each trip. All trip meter data is cancelled if the electrical power source is disconnected. 3. Trip meter reset button—Resets the two trip meters to zero, and also change the meter display.

To change the meter display, quickly push and release the button. The meter display changes in the order from the odometer to trip meter A to trip meter B, then back to the odometer each time you push.

To reset the trip meter A to zero, display the meter A reading, then push and hold the button until the meter is set to zero. The same process can be applied for resetting the trip meter B.

# Instrument panel light control button

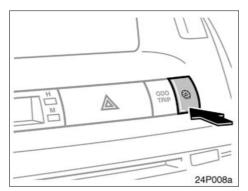

When you push the button with the tail lights on, you can cancel the reduced brightness in the instrument panel. To turn on this function, push the button again.

NotforReproduction

### Service reminder indicators and warning buzzers-

### —Instrument cluster

lf th	ne indicator or buzzer comes on	Do this.
(a)	(indicators and buzzer)	If parking brake is off, stop immediately and contact Toyota dealer. (in red) Take vehicle to Toyota dealer. (in yellow)
(b)	(indicator and buzzer)	Fasten driver's seat belt.
(c)	PASSENGER (indicator and buzzer)	Fasten front passenger's seat belt.
(d)	Ē	Take vehicle to Toyota dealer.
(e)		Gee multi-information display.
(f)	(ABS)	Take vehicle to Toyota dealer. If red brake system warning light is also on, stop imme- diately and contact Toyota dealer.

If any warning comes on, the hybrid system may not start by pushing the "POWER" switch. In that case, push it once again.

If the indicator or buzzer comes on		Do this.	
(g)	×	Take vehicle to Toyota dealer immediately.	
(h)	向	Close all doors.	
(i)		Fill up tank.	
(j)	VSC	Take vehicle to Toyota dealer. If red brake system warning light is also on, stop imme- diately and contact toyota dealer.	
(k)	Key reminder buzzer	Remove key.	
(I)	P position reminder buzzer	Push the "P" position switch.	

If any warning comes on, the hybrid system may not start by pushing the "POWER" switch. In that case, push it once again.

# (a) Brake System Warning Lights and Buzzer

These lights come on in the following cases when the "IG-ON" mode is enabled.

#### **RED WARNING LIGHT**

#### • When the parking brake is applied...

This light comes on when the "IG-ON" mode is enabled, even after the parking brake is released.

If the vehicle speed rises above 5 km/h (3 mph) while the parking brake is applied, a buzzer sounds.

• When the brake fluid level is low ...

## 

It is dangerous to continue driving normally when the brake fluid level is low.

#### YELLOW WARNING LIGHT

• When the regenerative brake system is fails...

#### **RED OR YELLOW WARNING LIGHT**

• When the hydraulic brake system fails...

When the yellow warning light comes on, it is no problem to continue driving. How ever, if the red warning light comes on it indicates a serious problem and you can continue driving no longer.

# Have your vehicle checked at your Toyota dealer in the following cases:

- The lights do not come on even if the parking brake is applied when the "READY" light is on.
- The lights do not come on even if the "POWER" switch is pressed with the parking brake released.

A red or vellow warning light turning on briefly during operation does not indicate a problem.

## 

If any of the following conditions occurs, immediately stop your vehicle at a safe place and contact your Toyota dealer.

- The red warning light does not turn off even after the parking brake is released while the hybrid system is running.
- The red warning light comes on or buzzer sounds continuously.

In either case, this can indicate that the brakes may not work properly and your stopping distance will become longer. Depress the brake pedal firmly and bring the vehicle to an immediate stop.

• The brake system warning light remains on together with the "ABS" and "VSC" warning light.

In this case, not only the anti-lock brake system and vehicle stability control system will fail but also the vehicle will become extremely unstable during braking. In the following case, drive directly to the nearest Toyota dealer.

• The yellow warning light comes on while driving.

Any of the following conditions may occur, but do not indicate the malfunction:

- The red and yellow warning light may stay on for about 60 seconds after the hybrid system is started. It is normal if it turns off after a while.
- Depressing the brake pedal repeatedly may turn on the red and yellow warning light and buzzer. It is normal if the light turns off and the buzzer stops sounding after a few seconds.
- You may hear a small sound in the engine compartment after the hybrid system is started or the brake pedal is depressed repeatedly. This is a pump <sup>4</sup> pulsating sound of the brake system, and it is not a malfunction.
- You may hear a motor sound in the engine compartment when the brake pedal is depressed with the hybrid system off.

- The brake pedal stroke may be short when you press the "POWER" switch with the brake pedal depressed.
- You may hear a sound in the engine compartment when the driver's door is opened or the brake pedal is de pressed with the hybrid system turned off. However, this does not indicate any trouble.
- You may hear a sound in the engine compartment after the hybrid system is turned on or off. However, this does not indicate any trouble.

#### (b) Driver's Seat Belt Reminder Light and Buzzer

The light and buzzer act as a reminder to buckle up the driver's seat belt.

Once the 'IG-ON' mode is enabled, the reminder light flashes if the driver's seat belt is not fastened. Unless the driver fastenes the belt, the light continues flashing.

If the vehicle speed rises above 20 km/h (12 mph) without the belt fastened, a buzzer sounds. To stop the buzzer, fasten the seat belt. If the buzzer still sounds, make sure the front passenger's seat belt is fastened.

#### (c) Front Passenger Seat Belt Reminder Light and Buzzer

The light and buzzer act as a reminder to have the front passenger buckle up the seat belt.

Once the "IG-ON" mode is enabled, the reminder light flashes if a front passenger sits in the front passenger seat and does not fasten the seat belt. Unless the front passenger fastens the belt, the light continues flashing.

If the vehicle speed rises above 20 km/h (12 mph) without the belt fastened, a buzzer sounds. To stop the buzzer, fasten the seat belt. If the buzzer still sounds, make sure the driver's seat belt is fastened.

If luggage load is placed on the front passenger seat, depending on its weight and how it is placed on the seat, built-in sensors in the seat cushion may detect the pressure, causing the reminder light to flash and buzzer to sound.

#### (d) Malfunction Indicator Lamp

This lamp warns that there is a problem somewhere in your engine, hybrid system or throttle control system.

If it comes on while you are driving, have your vehicle checked/repaired by your Toyota dealer as soon as possible.

#### (e) Master Warning Light (/!\)

If the master warning light comes on, the warning light for the faulty system is highlighted or the message such as "Shift the position into range "P" when parking." and "The batteries will not be charged if the transaxle is in Neutral N." appears on the multi-information display. (See "Service reminder indicators and warning buzzers— —Multi-information display" on page 114 or "Precautions for use" on page 13 or "Fuel gauge" on page 104 for instructions.)

#### (f) "ABS" Warning Light

The light comes on when the "IG-ON" mode is enabled. If the anti-lock brake system and the brake assist system work properly, the light turns off after the "READY" light comes on. Thereafter if the system malfunctions, the light comes on again.

When the "ABS" warning light is on (and the brake system warning light is on), the anti-lock brake system does not operate, but the brake system still operates conventionally.

If either of the following conditions occurs, this indicates a malfunction somewhere in the parts monitored by the warning light system. Contact your Toyota dealer as soon as possible to service the vehicle.

• The light does not come on when the GON" mode is enabled, or the light remains on after the "READY" light comes on. • The light comes on while you are driving.

A warning light turning on briefly during operation does not indicate a problem.

# 

If the "ABS" warning light remains on together with the red brake system warning light, immediately stop your vehicle at a safe place and contact your Toyota dealer.

In this case, not only the anti-lock brake system function and brake assist function will fail but also the vehicle will become extremely unstable during braking.

Either of the following conditions may occur, but does not indicate the malfunction:

- The light may stay on for about 60 seconds after the hybrid system is started. It is normal if it turns off after a while.
- Depressing the brake pedal repeatedly may turn on the light. It is normal if it turns off after a few seconds.

#### (g) SRS Warning Light

This indicator comes on when the "IG-ON" mode is enabled. It goes off after about 6 seconds. This means the SRS front airbags, side and curtain shield airbags and seat belt pretensioners are operating properly.

The warning light system monitors the airbag sensor assembly, front airbag sensors, side and curtain shield airbag sensors, curtain shield airbag sensors, driver's seat position sensor, driver's seat belt buckle switch, seat belt pretensioner assemblies, interconnecting wiring and power sources.

If any of the following conditions occurs, this indicates a malfunction of the airbags or seat belt pretensioners. Contact your Toyota dealer as soon as possible.

- The light does not come on when the "IG-ON" mode is enabled or remains on for more than 6 seconds.
- The light comes on while driving.

#### (h) Open Door Warning Light

This light remains on until all the doors are completely closed.

#### (i) Low Fuel Level Indicator Light

This light blinks when the fuel level in the tank becomes nearly empty. Fill up the tank as soon as possible.

At the first blinking of the light, the message appears on the display to remind the driver to fill fuel.

In the following cases, contact your Toyota dealer:

- All the segments blink.
- The "E" math and the segments indicating fuel blink.

#### (j) "VSC" Warning Light

This light warns that there is a problem somewhere in the vehicle stability control system.

The light will come on when the "IG-ON" mode is enabled and will go off after the "READY" light comes on.

If the light comes on while driving, the system does not work. However, as conventional braking operates when applied, there is no problem to continue your driving.

In the following cases, contact your Toyota dealer:

- The warning light does not come on after the "IG-ON" mode is enabled.
- The warning light remains on after the "READY" light comes on.
- The warning light comes on while you are driving.

# 

If the "VSC" warning light remains on together with the red brake system warning light, immediately stop your vehicle at a safe place and contact your Toyota dealer.

In this case, not only the vehicle stability control system will fail but also the vehicle will become extremely unstable during braking.

#### (k) Key Reminder Buzzer

This buzzer act as a reminder to remove the key if you open the driver's door when the hybrid system is off and the key is inserted into the key slot.

#### (I) P Position Reminder Buzzer

This buzzer will sound if the driver's door is opened while the hybrid transaxle is in "N", "D" or "B".


#### CHECKING SERVICE REMINDER INDICA TORS (except the low fuel level warning light)

- 1. Apply the parking brake.
- 2. Open one of the doors. The open door warning light should come on.
- Close the door. The open door warning light should go off.
- 4. Press the "POWER" switch twice without pressing the brake pedal to select the "IG-ON" mode. At this time, all the builds are checked in self-diagnosis mode.

The service reminder indicators except the open door warning light come on. The yellow brake system, "ABS" and "VSC" warning lights turn off after the "READY" light comes on. There may be the case that the yellow brake system, "ABS" and "VSC" warning lights stay on for about 60 seconds after the hybrid system is started. It is normal if they go out after a while.

If any service reminder indicator or warning buzzer does not function as described above, have it checked by your Toyota dealer as soon as possible.

#### -Multi-information display

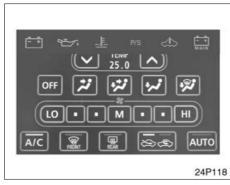






If an error occurs in the system, the warning message and icon appear.

For details on the warning display and how to remedy the system, see the de-

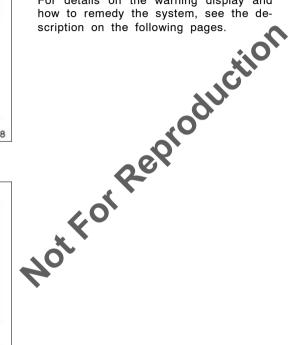



	If the indicator comes on	Do this.
(a)	<u>-</u> ∓	Stop immediately and contact Toyota dealer.
(b)		Stop and check.
(c)		Stop and check.
(d)	P/S or PS	Take vehicle to Toyota dealer.
(e)	< <b>!</b> >	Take vehicle to Toyota dealer immediately.
(f)	Ain Main	Cake vehicle to Toyota dealer.

#### (a) Charging System Warning Light

When there are problems in the charging system while the hybrid system is running, the warning light comes on.

#### NOTICE

When the charging system warning light comes on while the hybrid system is running, malfunctions may have occurred. If the warning light comes on, immediately stop the vehicle in a safe place and contact your Toyota dealer.

#### (b) Low Engine Oil Pressure Warning Light

This light warns that the engine oil pressure is too low.

If it stays on while you are driving, pull off the road to a safe place and stop the engine immediately. Call a Toyota dealer or qualified repair shop for assistance.

The light may come on when the oil level is extremely low. It is not designed to indicate low oil level, and the oil level must be checked using the level dipstick.

## NOTICE

Do not drive the vehicle with the warning light on—even for one block. It may run the engine.

#### (c) High Coolant Temperature Warning Light

The light operates to warn that the hybrid system is almost overheating.

If it comes on while you are driving, stop the vehicle and check your hybrid system. For detailed instructions, see "If your vehicle overheats" on page 240.

Your vehicle may overheat during severe operating conditions, such as:

- Driving up a long hill on a hot day.
- Reducing speed or stopping after high speed driving.

#### NOTICE

- Do not remove the thermostat in the cooling system as this may cause the hybrid system to overheat. The thermostat is designed to control the flow of coolant to keep the temperature of the hybrid system within the specified operating range.
- Continued driving with the light on could result in the overheating of hybrid system.

#### (d) Electric Power Steering System Warning Light

This light comes on when the power steering control system fails.

## 

If this light comes on, take your vehicle to the Toyota dealer as soon as possible. In this case, you may feel the heavy steering wheel maneuvering. Drive your vehicle while gripping the steering wheel firmly.

#### (e) Hybrid System Warning Light (<, )

This light comes on if there is a problem in the electric motor, inverter unit, hybrid battery, etc.

If this light is on, stop your vehicle in a safe place immediately and contact your Toyota dealer.

Even if the hybrid system warning light comes on, you can temporarily increase the vehicle speed by depressing the accelerator pedal. Immediately pull up your vehicle to a safe place and contact your Toyota dealer.

#### (f) Hybrid Battery Warning Light

This light comes on in the following cases.

a. The hybrid battery voltage drops when the hybrid transaxle is left in "N" position.

The system works properly if you put the hybrid transaxle in "P" position and the light goes off.

b. The hybrid battery is discharged.

If this light comes on with the "READY" light on in case of b., stop your vehicle in a safe place and contact your Toyota dealer. NotForReproduction


# SECTION 2-6

# OPERATION OF INSTRUMENTS AND CONTROLS

## "POWER" switch, Transmission and Parking brake

	Push button start system 🚬	120
	Hybrid transaxle	
	Vehicle stability control system	
	Parking brake	
	Cruise control	
	oroc	
	act	
, at F	5	
101		
4		


#### Push button start system—

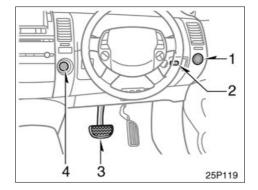

The push button start system is used to start or stop the hybrid system and select "ACC", "IG-ON" or "OFF" mode. (See "—Selecting the push button start system mode" on page 122 and "How to start the hybrid system" on page 226.) The system contains the following components.

- 1. "POWER" switch
- 2. Key slot
- 3. Brake pedal
- 4. Shift lever

### —Key slot

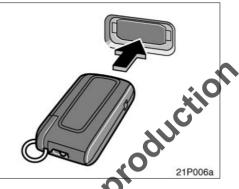

Your vehicle keys and the key slot are different shapes from conventional ones.

Keep the following in mind when operating the key:

- When inserting the key, be sure to push it in all the way.
- Then pulling out the key, be careful because it will be pushed out by the spring and it might fly out.
- If the key cannot be pulled out, push it in all the way again, then pull it out.

## 

Do not put your finger into the key slot. Your finger might be injured.

#### NOTICE

Observe the following instructions, or the key mechanism might be damaged and will not work properly.

- The key should be operated with a clean hand and fingers.
- ◆ Do not insert the key forcibly.
- Do not insert any key other than genuine formal keys into the key slot.
- Do not pull out the key forcibly when it cannot be removed.
- Do not put water, oil, foreign objects, etc. into the key slot.
- Do not insert a wet, oily or damaged key into the key slot.
- ◆ Do not affix a sticker on the key.
- Do not insert the key in the wrong way.

-"POWER" switch

Do not pull out the key ring when removing the key out of the key slot.

Should you find anything unusual, contact your Toyota dealer as soon as possible.



#### NOTICE e following instruc witch start system

Observe the following instructions or the push switch start system may not work properly.

- The switch should be operated with a clean finger. Do not use an oily or dirty finger.
- Be careful not to spill water or other liquid on the switch.

In the following conditions, contact your Toyota dealer as soon as possible.

- If the indicator on the switch flashes in amber, the system may be malfunctioning. Once you turn the power off, it may not turn on again.
- If you find anything unusual in the switch function, refrain from using the vehicle.

In the following condition, have your vehicle inspected by your Toyota dealer.

The indicator light on the "POWER" switch does not come on when the clearance lights are turned on.

# —Selecting the push button start system mode

(with smart function-on some models)



Without depressing the brake pedal

Carrying a smart key allows you to operate the "POWER" switch without the key being inserted into the key slot.

Each time you press the "POWER" switch briefly without the brake pedal depressed, the hybrid system mode changes in the order of "OFF", "ACC", " "IG-ON" and then back to "OFF".

The smart function can be set to become inoperative using the smart cancel switch. For details, see "DEACTIVATING THE SMART FUNCTION" on page 31.

#### 1) "ACC" (Green indicator is turned on) Accessories such as the radio operate.

Pressing the "POWER" switch briefly without depressing the brake pedal in the "OFF" mode turns on this mode.

In the "ACC" mode, pressing the "POW-ER" switch briefly while depressing the brake pedal will start the hybrid system.

If you leave your vehicle in the "ACC" mode for about an hour, the hybrid system is automatically turned off

2) "IG-ON" (Amber indicator is turned on)

#### All accessories are operable.


Pressing the "ROWER" switch briefly without depressing the brake pedal in the "ACC" mode turns on this mode.

In the "IG-ON" mode, pressing the "POW-ER" switch briefly while depressing the brake pedal will start the hybrid system. However, if "N" position is selected, the hybrid system will be turned in the "OFF" mode.

#### 3) "OFF" (Indicator is turned off) The hybrid system is off.

You may hear a motor sound in the engine compartment for a few seconds after the system is turned off and about 90 seconds have passed.

The hybrid vehicle immobilizer system is automatically set. See "Hybrid vehicle immobilizer system" on page 20.

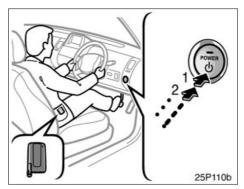

With the brake pedal depressed

#### The hybrid system will start and stop by pressing the "POWER" switch briefly with the brake pedal depressed.

You may hear a motor sound in the engine compartment when the brake pedal is depressed with the hybrid system off.

1) "START" (Amber indicator comes on <sup>6</sup> for a few seconds)

The hybrid system is ready to operate and all accessories are operable. ("IG-ON")

Press the "POWER" switch with the brake pedal depressed.

For starting tips, see "How to start the hybrid system—" on page 226.

If in an emergency, you must turn the hybrid system off while the vehicle is moving, press the "POWER" switch for more than 3 seconds. At this time, the "ACC" mode and shift position "N" are automatically enabled.

2) "OFF" (Indicator is turned off)

The hybrid system is off

You may hear a motor sound in the engine compartment for a few seconds after the system is turned off and about 90 seconds have passed.

The hybrid vehicle immobilizer system is automatically set. See "Hybrid vehicle immobilizer system" on page 20.

#### NOTICE

- The hybrid system cannot be started when the shift position is in "N". Be sure to put it in "P" and then start the system.
- Do not leave the hybrid system in "ACC" or "IG-ON" for a long time. The 12 volt battery will discharge.

The hybrid mode in which the battery is discharged or disconnected is retained in memory, and that mode is turned on when power is applied.


When you leave your vehicle, be sure to turn the "POWER" switch off and carry the smart key.

If you get out of your vehicle while carrying a key without turning off the "POWER" switch and then close the door, a warning tone sounds inside and beeps sound outside.

#### INFORMATION

You can insert a genuine key while in the "IG–ON" mode or with the hybrid system starting. Do not insert any key other than genuine keys.

#### —Selecting the push button start system mode (without smart function)

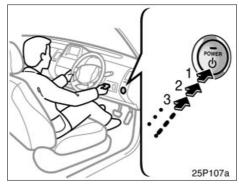

Without depressing the brake pedal

Each time you press the "POWER" switch briefly without the brake pedal depressed, the hybrid system mode changes in the order of "OFF", "ACC", "IG-ON" and then back to "OFF".

1) "ACC" (Green indicator is turned on)

#### Accessories such as the radio operate.

Pressing the "POWER" switch briefly without depressing the brake pedal in the "OFF" mode turns on this mode.

The key can be removed at this position. The hybrid system is automatically turned off. In the "ACC" mode, pressing the "POW-ER" switch briefly while depressing the brake pedal will start the hybrid system.

If you leave your vehicle in the "ACC" mode for about an hour, the hybrid system is automatically turned off.

# 2) "IG-ON" (Amber indicator is turned on)

#### All accessories are operable.

Pressing the "POWER" switch briefly without depressing the brake pedal in the "ACC" mode turns on the mode.


In the "IG-ON" note, pressing the "POWER" switch briefly while depressing the brake pedal will start the hybrid system. However, IN "N" position is selected, the hybrid system will be turned in the "OFF" mode.

#### 3) "OFF" (Indicator is turned off)

# The hybrid system is off. The key can be removed at this position.

You may hear a motor sound in the engine compartment for a few seconds after the system is turned off and about 90 seconds have passed.

Once you remove the key, the hybrid vehicle immobilizer system is automatically set. See "Hybrid vehicle immobilizer system" on page 20.

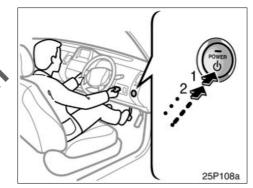

With the brake pedal depressed

#### The hybrid system will start and stop by pressing the "POWER" switch briefly with the brake pedal depressed.

You may hear a motor sound in the engine compartment when the brake pedal is depressed with the hybrid system off.

1) "START" (Amber indicator comes on for a few seconds.)

#### The hybrid system is ready to operate and all accessories are operable. ("IG– ON")

Insert the key and press the "POWER" switch briefly with the brake pedal depressed.

For starting tips, see "How to start the hybrid system—" on page 226.

If, in an emergency, you must turn the hybrid system off while the vehicle is moving, press the "POWER" switch more than 3 seconds. At this time, the "ACC" mode and shift position "N" are automatically enabled.

2) "OFF" (Indicator is turned off)

The hybrid system is off. The key can be removed at this position.

You may hear a motor sound in the engine compartment for a few seconds after the system is turned off and about 90 seconds have passed.


Once you remove the key, the hybrid vehicle immobilizer system is automatically set. See "Hybrid vehicle immobilizer system" on page 20.

#### NOTICE

- The hybrid system cannot be started when the shift position is in "N". Be sure to put it in "P" and then start the system.
- Do not leave the hybrid system in "ACC" or "IG-ON" for a long time. The 12 volt battery will discharge.
- The hybrid mode in which the battery is discharged or disconnected is retained in memory, and that mode is turned on when power is applied.

lotfor

## Hybrid transaxle

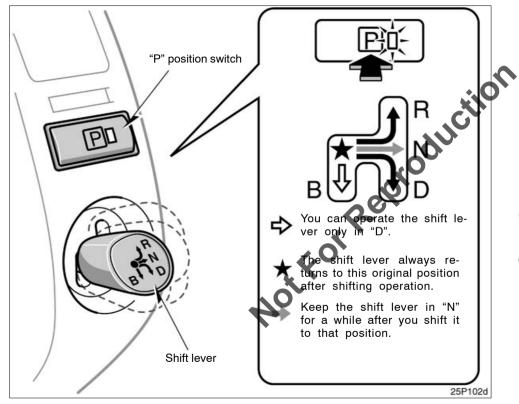

Your hybrid transaxle has a shift-by-wire system to minimize incorrect operation. This means you can only shift to other position from "P" when the brake pedal is depressed.

With the following improper shifting, the rejection function operates and a beep sounds so the hybrid transaxle cannot be shifted.

- (i) When you attempt to shift the transaxle from the "P" position without depressing the brake pedal.
- (ii) When you push the "P" switch while driving.
- (iii) When you operate the shift lever from "D" to "R" or vice versa while the vehicle is moving.
- (iv) When you operate the shift lever to "B" from any position other than "D".

In case of (i), the transaxle remains in "P". In case of (ii) through (iv), the transaxle is automatically shifted to "N".



25P125

#### (a) Shift lever

The shift position is displayed on the inlotfor strument cluster.

- R: Reverse position (buzzer sounds)
- N: Neutral position
- D: Normal driving position
- B: Engine braking position (shown only while in "D")

#### NOTICE

Observe the following instructions. Otherwise, the lever may cause a malfunction, resulting in trouble:

- ◆ Do not remove the knob on the l ver.
- ◆ Do not use a knob other than originally fitted knob.

Do not hang anything on the lever. Should you find anything unusual, contact your Toyota dealer as soon as possible.

#### (b) "P" position switch

The "P" (parking) position is displayed on the instrument cluster, and the indicator on the "P" position switch comes on.


- (c) Normal driving
- 1. Start the hybrid system as instructed in "How to start the hybrid system" on page 226.
- 2. With your foot holding down the brake pedal, shift the shift lever to "D".

# CAUTION

Never put your foot on the accelerator pedal while shifting. Doing so can cause abrupt acceleration.

3. Release the parking brake and brake pedal. Depress the accelerator pedal slowly for smooth starting.

When you shift the transaxle to "D" while backing up, an alarm sounds and the transaxle is shifted to "N".

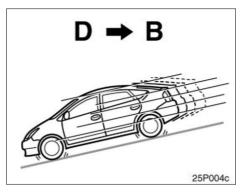

#### (d) Using engine braking

To use engine braking, shift the shift lever to "B" position.

During high speed driving, you may feel that deceleration by engine braking is less than that of a typical vehicle.

Do not continue normal driving with the transaxle in "B" for a long time. This may cause decreased fuel economy. To prevent this, use "D" for normal driving.

When you shift the transaxle to "B" from a position other than "D", an alarm sounds and the transaxle is automatically shifted to "N".

## 

Be careful when downshifting on a slippery surface. Abrupt shifting could cause the vehicle to skid or spin.

(e) Backing up



- 1. Bring the vehicle to a complete stop.
- 2. With the brake pedal held down with your foot, shift the shift lever to the "R" position. You will hear beeps while the transaxle is in R".

When you shift the transaxle to "R" while driving, an alarm sounds and the transaxle is shifted to "N".

## (f) Parking

1. Bring the vehicle to a complete stop.

- 2 with the brake pedal pressed down, fully depress the parking brake pedal to apply the parking brake securely.
- 3. With the brake pedal pressed down, push the "P" position switch.

If you press the "POWER" switch while stopping, the transaxle is automatically shifted to the "P" and the hybrid system is turned off. If the driver's door is opened when the transaxle is in "N", "D" or "B", beep sounds and a warning message appears on the multi-information display to warn you to shift the transaxle to "P".

If you push the "P" position switch while driving, an alarm sounds and the transaxle is automatically shifted to "N".

#### NOTICE

Be sure to put the hybrid transaxle in "P" when parking. In "N", the hybrid battery will not be charged even if the gasoline engine is running. You cannot start your vehicle if the transaxle is left in "N" for a long time because the hybrid battery will discharge.

When shifting the transaxle from "P" on the slope, a large parking lock releasing noise will be generated. However, this does not indicate a malfunction.

#### (g) Vehicle driving characteristics Creeping

In order to hold the vehicle properly on an incline and for better accelerator pedal operation at starting, your vehicle is designed like a typical automatic transmission vehicle which tends to move without depressing the accelerator pedal with the transaxle in a position other than "P" or "N".

With the transaxle in a position other than "P" or "N", depress the brake pedal firmly even when stopped and apply the parking brake as required.

When moving in a compact area or during a traffic jam, it is an effective way to control the speed using only the brake pedal operation without depressing the accelerator pedal.

#### **Regenerative brake**

When the accelerator pedal is released or , the brake pedal is depressed, the electric motor acts as a generator and converts kinetic energy to electric energy to provide deceleration and recover electric energy to charge the hybrid battery.

At this time, the electric motor running noise may increase.

The operation is the same as a typical gasoline powered vehicle.

You may experience the following condition while braking. As they do not indicate a malfunction, perform braking as usual

 In the "OFF" mode, pressing the "POWER" switch once or twice will select "ACC" or "IG-ON" only if the brake pedal is not depressed. In the condition, the brake pedal may move a little.

#### Hybrid driving

This vehicle runs in combination with the gasoline engine and electric motor.

If the "READY" light is on, you can start your vehicle even with the gasoline engine stopped.

#### (h) If the system malfunctions

In the following conditions, there is some problem in the system.

- The indicator on the "P" position switch flashes. However, this does not indicate a malfunction unless a warning message appears in the multi-information display.
- All frames of shift position indicators in the instrument cluster flash.
- The parking system error message appears on the multi-information display.
- The instrument cluster and multi-information display does not come on when the "IG-ON" mode is enabled.

In these cases, stop your vehicle in a safe and level place, apply the parking brake securely and contact your Toyota dealer immediately.

# (i) When the 12 volt battery is disconnected

Before you disconnect the 12 volt battery, confirm the shift position is "P" and apply the parking brake completely.

After you reconnect the 12 volt battery, shift the shift lever to "N" and confirm the shift position is in "N" when the "IG-ON" mode is enabled.


# Vehicle stability control system

The vehicle stability control system automatically controls the brakes and hybrid system to help prevent the vehicle from skidding when cornering on a slippery road surface or operating steering wheel abruptly.

The vehicle stability control system is activated when the vehicle speed is more than about 15 km/h (9 mph).

• Do not rely exclusively on the vehicle stability control system. Even if the vehicle stability control system is operating, you must always drive carefully and attentively to avoid death or serious injury. Reckless driving will result in an unexpected accident. If the slip indicator light flashes, sounding an alarm, special care should be taken while driving.

• Only use tires of specified size. The size, manufacturer, brand and tread pattern for all 4 tires should be the same. If you use tires other than specified, or mixed types or size, the vehicle stability control system may not function correctly. When replacing the tires or wheels, contact your Toyota dealer. (See "Checking and replacing tires" on page 277.)

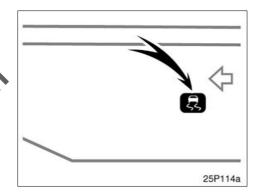


#### Slip indicator light

If the vehicle is going to skid during driving, the slip indicator light blinks and an alarm sounds intermittently. Special care should be taken while driving.

The slip indicator light blinks in the following conditions also.

- The vehicle tires are racing. Utmost care is required when driving.
- When the anti-lock brake system is operating. See "Brake system" on page 217 for details.

The slip indicator light comes on when the "IG-ON" mode is enabled and will go off after the "READY" light comes on. If the indicator light does not come on when the hybrid system is turned on, contact your Toyota dealer.

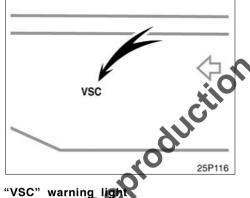

This light warns that there is a problem


somewhere in the vehicle stability control system.

The light will come on when the "IG-ON" mode is enabled and will go off after the "BEADY" light comes on.

If the light comes on while driving, the system does not work. However, because the conventional braking still operates, you can drive your vehicle without damaging it. Contact your Toyota dealer. In the following cases, contact your Toyota dealer:

- The warning light does not come on after the "IG-ON" mode is enabled.
- The warning light remains on after the "READY" light comes on.
- The warning light comes on while driving.

#### Parking brake

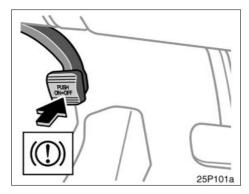

# When parking, firmly apply the parking brake to avoid inadvertent creeping.

To set: Hold the regular brake pedal down with your right foot. Depress the parking brake pedal with your left foot.

To release: Hold the regular brake pedal down with your right foot and depress the parking brake pedal with your left foot. When you lift your left foot, the parking brake pedal will follow it to the released position.

To remind you that the parking brake is set, the parking brake reminder light in the instrument panel remains on until you release the parking brake.

# 

- Driving with the parking brake engaged can reduce braking power.
- Before driving, be sure the parking brake is fully released and the parking brake reminder light is dif.


#### **Cruise control**

The cruise control allows you to cruise the vehicle at a desired speed over 40 km/h (25 mph) even with your foot off the accelerator pedal.

Your cruising speed can be maintained up or down grades within the limits of hybrid system performance, although a slight speed change may occur when driving up or down the grades. On steeper hills, a greater speed change will occur so it is better to drive without the cruise control.

# 

- To help maintain maximum control of your vehicle, do not use the cruise control when driving in heavy or varying traffic, or on slippery (rainy, icy or snow-covered) or winding roads.
- Avoid vehicle speed increases when driving downhill. If the vehicle speed is too fast in relation to the cruise control set speed, cancel the cruise control then shift the shift lever to "B" position to use engine braking to slow down.

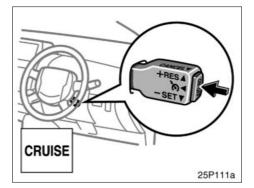


#### TURNING THE SYSTEM ON

To operate the cruise control, push the " $ON \cdot OFF$ " switch. This turns the system on. The indicator light in the instrument panel shows that you can now set the vehicle at a desired cruising speed. Another push on the switch will turn the system completely off.

## 

To avoid accidental cruise control engagement, keep the "ON·OFF" switch off when not using the cruise control.

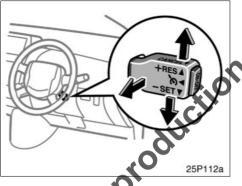

## SETTING AT A DESIRED SPEED

The transaxle must be in "D" before you set the cruise control speed.

Bring you pehicle to the desired speed, push the lever down in the "- SET" direction and release it. This sets the vehicle at that speed.

If the speed is not satisfactory, tap the lever up for a faster speed, or tap it down for a slower speed. Each tap changes the set speed by 1.6 km/h (1.0 mph). You can now take your foot off the accelerator pedal. If you need acceleration—for example, when passing—depress the accelerator pedal enough for the vehicle to exceed the set speed. When you release it, the vehicle will return to the speed set prior to the acceleration.

#### CANCELLING THE PRESET SPEED

You can cancel the preset speed by:

- a. Pulling the control lever in the "CANCEL" direction and releasing it.
- b. Depressing the brake pedal.

If the vehicle speed falls below about 40 km/h (25 mph), the preset speed will automatically cancel out.

If the vehicle speed drops 16 km/h (10 mph) below the preset speed, the preset speed will also automatically cancel out.

If the preset speed automatically cancels out other than for the above cases, have your vehicle checked by your Toyota dealer at the earliest opportunity.

#### **RESETTING TO A FASTER SPEED**

Push the lever up in the "+ RES" direction and hold it. Release the lever when the desired speed is attained. While the lever is held up, the vehicle will gradually gain speed.

However, a faster way to reset is to accelerate the vehicle and then push the control lever down in the "- SET" direction.

#### **RESETTING TO A SLOWER SPEED**

Push the lever down in the "- SET" direction and hold it. Release the lever when the desired speed is attained. While the lever is held down, the vehicle speed will gradually decrease.

However, a faster way to reset is to depress the brake pedal and then push the control lever down in the "- SET" direction.

#### **RESUMING THE PRESET SPEED**

If the preset speed is cancelled by pulling the control lever or by depressing the brake pedal, pushing the lever up in the "+ RES" direction will restore the speed set prior to cancellation.

However, once the vehicle speed fall below about 40 km/h (25 mph), the preset speed will not be resumed.

#### CRUISE CONTROL FAILURE WARNING

If the "CRUISE" indicator light in the instrument cluster flashes when using the cruise control, press the "ON·OFF" button to turn the system of and then press it again to turn it on.

If any of the following conditions then occurs, there is some trouble in the cruise control system.

• The indicator light does not come on.

The indicator light flashes again.

The indicator light goes out after it comes on.

If this is the case, contact your Toyota dealer and have your vehicle inspected.

# <u>SECTION 2-7</u>


# OPERATION OF INSTRUMENTS AND CONTROLS

# Multi-information display

	Reference	
	Before using the multi-information display	138
	Switch operation	138
	Functions	
	Information	
	Adjustment .	145
	Outside temperature display	146
t FO	Rept	
40,		

## Reference



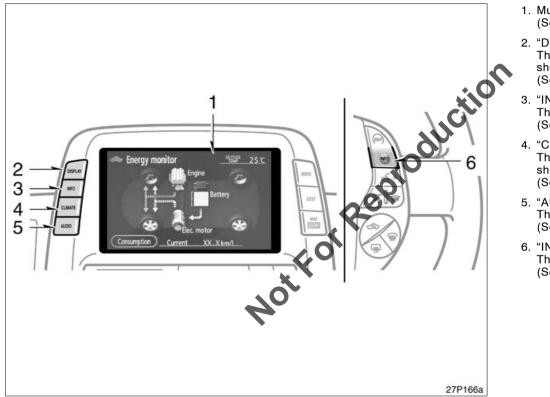


- 1. Multi-information display (See page 138 for details.)
- "DISPLAY" button The display adjustment screen is shown.

(See page 145 for details.)

- "INFO" button The information menu screen is shown. (See page 141 for details.)
- 4. "CLIMATE" button The air conditioning operation screen is shown.
  (See page 184 for details.)
- "AUDIO" button The audio operation screen is shown. (See page 150 for details.)
- 6. "INFO" button (on the steering pad) The trip information screen is shown. (See page 143 for details.)



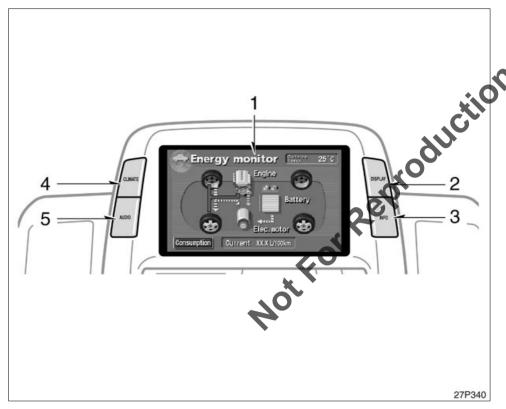


- 1. Multi-information display (See page 138 for details.)
- "DISPLAY" button The display adjustment screen is shown.

(See page 145 for details.)

- "INFO" button The information menu screen is shown. (See page 141 for details.)
- 4. "CLIMATE" button The air conditioning operation screen is shown.
  (See page 184 for details.)
- "AUDIO" button The audio operation screen is shown. (See page 150 for details.)

# Before using the multi-information display

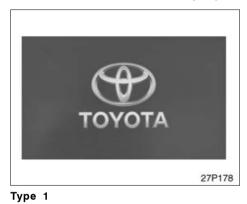



<sup>26</sup>P049b

# Operate the multi-information display with the ignition switch on.

When the "ACC" mode is enabled, the initial screen appears and the system begins operating.

After a few seconds, the previous mode display will appear.

If the electrical power source has been disconnected from the multi-information display, the display will be automatically set to the initial mode.

# 

Do not adjust the display while the vehicle is moving. Be sure to adjust the display only when the vehicle is stopped


## Switch operation

This system operates mainly by the switches on the screen. To protect the screen, lightly touch switches on the screen with your finger. When you touch a switch on the screen or on the bezel, a beep sounds.

- If the system does not respond to a touch of a switch, move your finger away from the screen and then touch it again.
- You cannot operate dimmed switches.
- Wipe off fingerprints on the surface of the display using a glass cleaning cloth.
- The displayed image may become darker and moving images may be slightly distorted when the display is cold.
- When you look at the screen through polarized material such as polarized sunglasses, the screen may be dark and hard to see. If so, look at the screen from different angles, adjust the screen settings on the "Display" screen, or take off your sunglasses.



## **Functions**

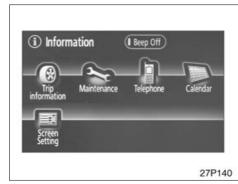


Туре	1*
------	----




#### 1. Trip information, Language and Screen setting

For details, see page 141.


\*: For other functions (Maintenance, Telephone, Calender and Beep setting), see the separate "Navigation System Own

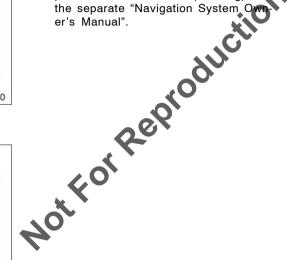

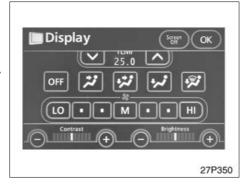

#### 2. Adjustment

The contrast and brightness on the screen are adjusted. For details, see page 145.

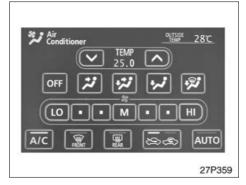


#### 3. Air conditioner

Climate setting operations are available. For details, see page 184.




The radio and cassette tape operations avana. are available. For details, see page 150.

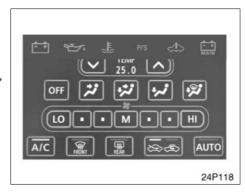


### 5. Warning display

The warning symbol for the faulty system appears. For details, see page 114.

## Information

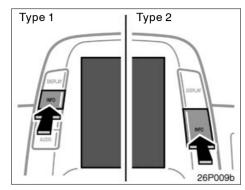

Push the "INFO" button to display the "Information Menu" screen.

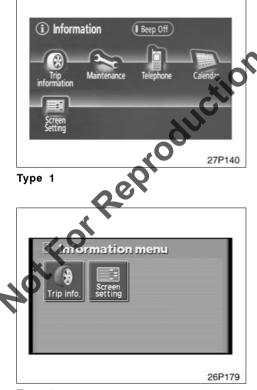


Type 2

**Trip information:** The energy monitor and fuel consumption screen are selected.

**Screen setting:** The screen setting screen is shown.

## -Trip information

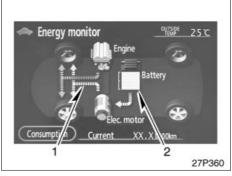


Type 1

#### Energy monitor screen


Touch the "Energy" switch. Vehicle driving condition, hybrid system operating condition and energy recovery condition are shown.


- Indicates the flow of energy by orange and yellow arrows. While the energy is recovered, the arrows change the pointing direction and turn green.
- 2. Indicates the remaining capacity of the hybrid battery.

The screen display updates every 3 seconds, so it may not coincide with the actual status.

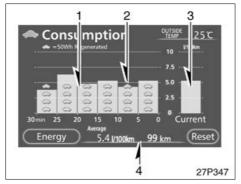



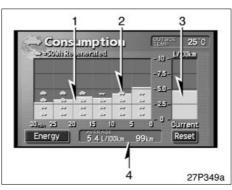

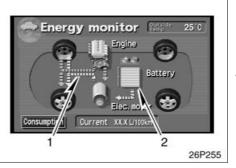



Type 2


#### Fuel consumption screen

Touch the "Consumption" switch. Average fuel consumption, momentary fuel consumption and recovered energy are shown.

- 1. Indicates the past momentary fuel consumption every 5 minutes.
- Indicates the energy recovered for 5 minutes with symbols. One symbol refers to 50 Wh or the energy by which a 50 W bulb illuminates for an hour. Up to 4 symbols will be shown.
- **3.** Indicates the current momentary fuel consumption.

However, when the vehicle is stopped with the gasoline engine not running, note that the display may indicate the maximum level.

 Indicates the average fuel consumption after being reset. When the "Reset" switch is touched or more than 10 L (2.6 gal., 2.2 Imp.gal.) fuel is supplied, the average fuel consumption is reset.

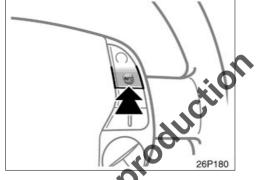

# Steering switch operation (with Navigation system)

The trip information screen appears directly by pressing the "INFO" button on the right side of the steering pad. Each press changes the "Energy Monitor" and "Consumption" screens alternately.

## -Screen setting

Screen setting	(0)
Automatic transition from Audio / Ai	r Conditioner
to Navigation / etc.	0n0ff
Switch colour Gr	een Orange
Delete perso	mal data
Leiere perso	



#### AUTOMATIC TRANSITION

The function returning to the previous screen from the audio or air conditioner screen is selectable. Select "On" or "Off" and then touch "OK".

- **On:** The previous screen automatically returns from the audio or air conditioner screen 20 seconds after the end of audio or air conditioner screen operation.
- Off: The audio or air conditioner screen remains on.

#### SWITCH COLOR

Select the desired switch color and touch "OK".


#### **DELETE PERSONAL DATA**

The following personal data can be deleted or returned to their default settings:

- Maintenance conditions
- Maintenance information "off" setting
- Memory points
- Areas to avoid
- Previous points
- Route trace
- User selection settings
- Phone book data
- Dialed numbers and received calls
- Speed dial
- Bluetooth phone data
- Security code

This function is available only when the vehicle is not moving.

For details, see the separate "Navigation System Owner's Manual".

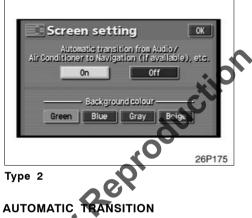


The function returning to the previous screen from the audio or air conditioner screen is selectable. Select "On" or "Off" and then touch "OK".

- The previous screen automatically returns from the audio or air conditioner screen 20 seconds after the end of audio or air conditioner screen operation.
- **Off:** The audio or air conditioner screen remains on.


#### BACKGROUND COLOR

Select the desired background color and touch "OK".

## Adjustment

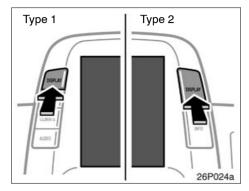

Push the "DISPLAY" button to display the "Display" screen.

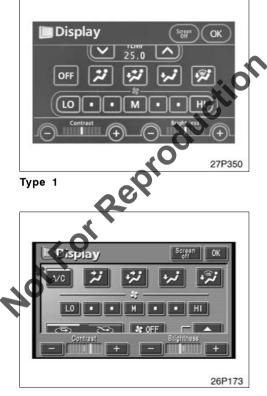

#### Contrast and brightness adjustment

Contrast "+":

Strengthens the contrast of the screen.

#### Contrast "-":


Weakens the contrast of the screen.

Brightness "+": Brightens the screen.

Brightness "-": Darkens the screen.

The screen turns off when you push the "Screen off". To turn the display screen back on, push any bezel switch such as "INFO", etc. The selected screen appears.



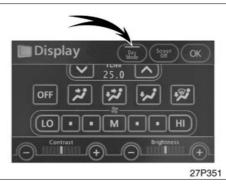

Type 1





#### Depending on the position of the headlight switch, the screen changes to the day mode or night mode.

To display the screen in the day mode even with the headlight switch on, touch "Day mode" on the adjustment screen for brightness and contrast control.


However, if the instrument panel light control button is on, mode switching cannot be done. It remains in the day mode. In this case, "Day mode" is not shown on the screen.

If the screen is set in the day mode with the headlight switch turned to on, this condition is memorized in the system even with the hybrid system turned off.

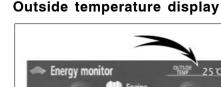

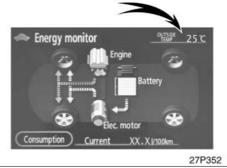



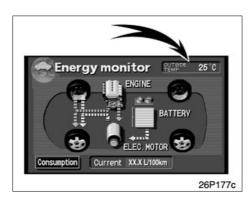



The outside temperature is shown ranging from  $-30^{\circ}$ C ( $-22^{\circ}$ F) up to  $50^{\circ}$ C ( $122^{\circ}$ F) at the upper right of the energy consumption or energy monitor screen or the upper left/right of the air conditioner screen.

Separate to the above screen, when the outside temperature drops below  $3^{\circ}C$  ( $37^{\circ}F$ ),  $4^{\circ}$  and the outside temperature are displayed in the upper portion of the screen for a few seconds.

(This outside temperature is displayed even if on the map screen etc.)

\*: A may not be displayed depending on the display type.

Not For Reproduction

NotForReproduction

# SECTION 2-8


# OPERATION OF INSTRUMENTS AND CONTROLS

# Audio system

	Reference	
	Using your audio system	
	Using your audio system	
	Compact disc player operation (Type 1)	
	Compact disc player operation (Type 2)	
	MP3/WMA player operation	
	Audio remote controls	
. (	Audio system operating hints	175
Notf		

## Reference

►Type 1

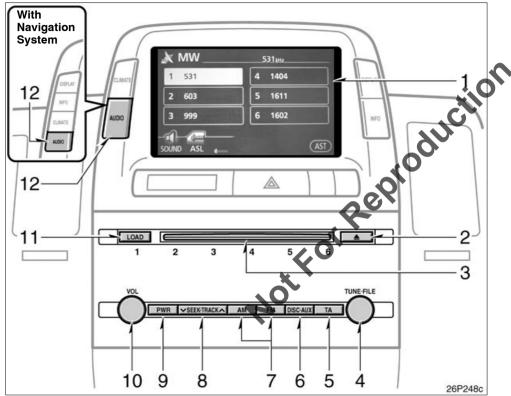

- 1. Multi-information display screen (See page 154 for details.)
- 2. Ejecting a compact disc (See page 163 for details.)
- 3. Compact disc slot (See page 163 for details.)
- 4. Frequency tuning and file search (See page 158 and 171 for details.)


5. Scan tuning (See page 160 for details.)

- Compact disc or AUX adapter mode button (See page 164 for details.)
- 7. Radio mode button (See page 158 for details.)
- 8. Radio mode: Seek tuning (See page 160 for details.)

Compact disc mode:

- Direct access to a desired program (See page 168 for details.)
- 9. Turning the system on (See page 153 for details.)
- 10. Adjusting the volume (See page 153 for details.)
- 11. Compact disc load button (See page 163 for details.)
- 12. Audio operation screen display button (See page 154 for details.)



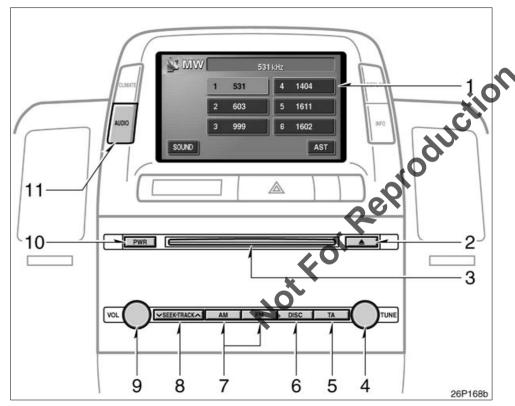

- 1. Multi-information display screen (See page 154 for details.)
- 2. Ejecting a compact disc (See page 168 for details.)
- 3. Compact disc slot (See page 168 for details.)
- 4. Frequency tuning (See page 158 for details.)
- 5. Scan tuning (See page 160 for details.)
- 6. Compact disc mode button (See page 168 for details.)
- 7. Radio mode button (See page 158 for details.)
- 8. Radio mode: Seek tuning (See page 160 for details.)

Compact disc mode:

Direct access to a desired program (See page 168 for details.)

- 9. Adjusting the volume (See page 153 for details.)
- 10. Turning the system on (See page 153 for details.)
- 11. Audio operation screen display button (See page 154 for details.)


### Using your audio system— —Some basics

This section describes some of the basic features of the Toyota audio system. Some information may not pertain to your system.

Your audio system works when the hybrid system is in "ACC" or "IG-ON".


#### NOTICE

To prevent the battery from being discharged, do not leave the audio on longer than necessary when the hybrid system is not running.

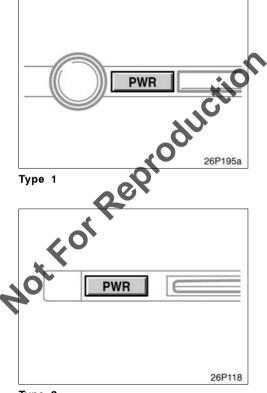

#### TURNING THE SYSTEM ON AND OFF


Push "PWR" button to turn the audio system on and off. The system turns on in the last mode used.

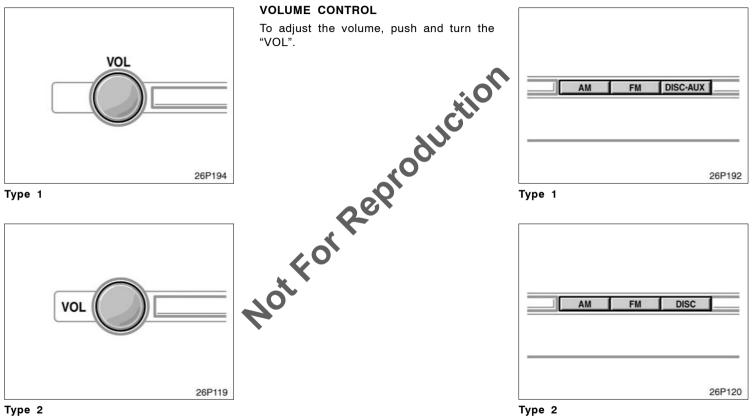


Push the "AM", "FM", "DISC" or "DISC·AUX" button to turn on that mode. The selected mode turns on directly.

Push these buttons if you want to switch from one mode to another.

If the disc is not set, the compact disc player does not turn on.

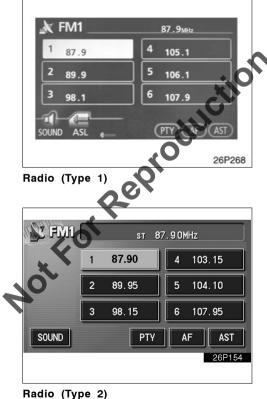

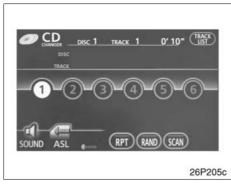


Compact disc (Type 1)




Compact disc (Type 2)

The switches for radio and compact disc player operation are displayed on the liquid crystal display. Touch them lightly and directly on the screen.

The selected switch is highlighted in green.

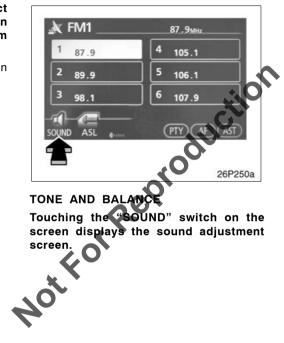

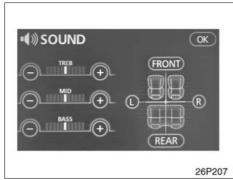

**TREB** "+" or "-": Adjusts high-pitched tones.

MID "+" or "-" (Type 1 only): Adjusts mid-pitched tones.

**BASS** "+" or "-": Adjusts low-pitched tones.

"FRONT" or "REAR": Adjusts sound balance between the front and rear speakers.


"L" or "R": Adjusts sound balance between the left and right speakers.

"OK": The previous screen returns.

How good an audio program sounds to you is largely determined by the mix of the treble, mid-range and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid-range, and bass.

A good balance of the left and right stereo channels and of the front and rear sound levels is also important.

Keep in mind that if you are listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of one group of sounds while decreasing the volume of another.

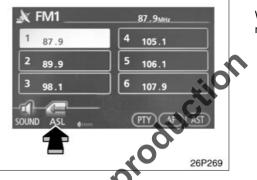

#### AUTOMATIC SOUND LEVELIZER (ASL) (Type 1 only)

When the audio sound becomes difficult to be heard due to road noise, wind noise, etc. during driving, the system adjusts to the optimum volume and tone quality according to the noise level. Touch the "ASL" switch.

When the system is on, the sound adjustment level is displayed on the screen.

#### YOUR RADIO ANTENNA

To remove an antenna on the roof, carefully turn it counterclockwise.

#### NOTICE

To prevent damage to the antenna, make sure to remove it before driving your Toyota through an automatic car wash.

#### YOUR COMPACT DISC PLAYER


When you insert a disc, gently push it in with the label side up.

The discs set in the player are played continuously, starting with disc number 1 The disc number of the disc currently be ing played, the track number and the time from the beginning of the program appear on the display.

#### Type 1 only

When play of one disc ends, the first track of the following disc starts. When play of the final disc ends, play of the first disc starts again

The player will skip any empty disc number.

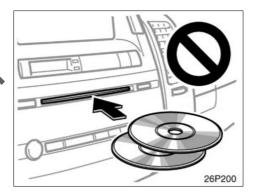


#### NOTICE

- Do not stack up two discs for insertion, or it will cause damage the compact disc player. Insert only one compact disc into slot at a time.
- Never try to disassemble or oil any part of the compact disc player. Do not insert anything other than compact discs into the slot.

The player is intended for use with 12 cm (4.7 in.) discs only.


## **Radio operation**

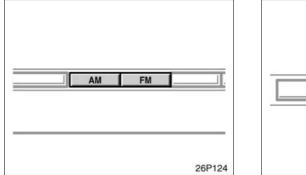

(a) Listening to the radio


# Push these buttons to choose either an MW or FM station.

"MW", "FM1", "FM2" or "FM3" appears on the display.

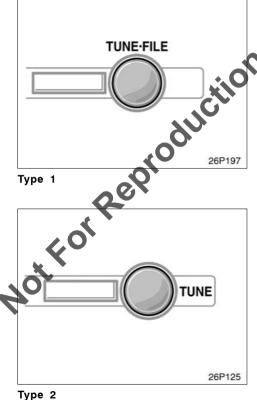

# Push and turn this knob to step up the station band or to step down.

Your radio automatically changes to stereo reception when a stereo broadcast is received. "ST" appears on the display. If the signal becomes weak, the radio reduces the amount of channel separation to prevent the weak signal from creating noise. If the signal becomes extremely weak, the radio switches from stereo to mono reception. In this case, "ST" disappears from the display.

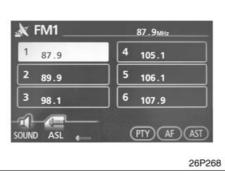

Type 1

🔀 FMI	ST 87.90MHz				
	1	87.90	4 103.15		
	2	89.95	5 104.10		
	3	98.15	6 107.95		
SOUND		PTY	AF AST		
			26P156		

#### (b) Presetting a station

1. Tune in the desired station.

2. Touch one of the station selector switches (1-6) and hold it until a beep is heard. This sets the station to the switch and the frequency pears on the switch.

Each switch can store MW, FM1, FM2 and FM3. To change the preset station to a different one, follow the same procedure.

The preset station memory is cancelled when the power source is interrupted by battery disconnection or a blown fuse.

# AUTOMATICALLY PRESET

#### AST (Autostore)

This switch is used to automatically preset frequencies of up to 6 radio stations for each band (MW and FM). Touch the "AST" switch until a beep is heard. To cancel it, touch the switch again.

If you use the "AST" switch in the FM mode (FM1, FM2, FM3), it will be automatically stored in FM3. For example, even if you autostore in FM1, the mode will change to FM3.

If the radio cannot seek out any stations, it will receive the frequency before you operate "AST".


#### (c) Selecting a station

Tune in the desired station using one of the following methods.

**Preset tuning:** Touch the switch (1-6) for the station you want. The switch (1-6) is highlighted in green and station frequency appears on the display.

**Manual tuning:** Turn the "TUNE FILE" and "TUNE" knob briefly. Each time you turn the knob, the radio will step up or down to another frequency.

**Seek tuning:** Push the "SEEK·TRACK" button on either side. The radio will begin seeking up or down for a station of the nearest frequency and will stop on reception. Each time you push the button, the stations will be searched out one after another.

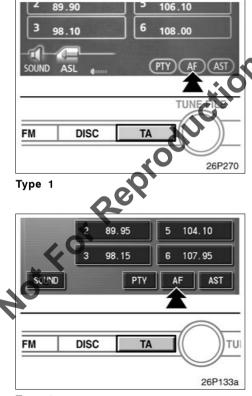



(d) RDS (Radio Data System)

This function can be operated only when the RDS station is received.

(1) AF (Alternative Frequency) function:

A station providing good reception is automatically selected if current reception worsens.

Each touch of "AF" switch changes as in the following:

**AF-ON, REG-OFF mode:** "AF" appears on the display. For switching over to the broadcasting station providing good reception within the same RDS network; convenient for following the appropriate stations in a wide region.

**AF-ON, REG-ON mode:** "AF" and "REG" appear on the display. For switching over to a broadcasting station within the same local program network.

**AF-OFF, REG-OFF mode:** The AF function does not work.

TA (Traffic Announcement) function: A station that regularly broadcasts traffic information is automatically located and broadcast when the program starts.

When receiving FM:

Push the "TA" button. The TP mode turns on and "TP" appears on the display.

In the TP mode, the radio will begin seeking a TP station after 20 seconds. "TP SEEK" appears on the display. When a TP station is received, the program service name will appear on the display.

If the radio cannot seek out a TP station, "NOTHING" will appear on the display for 2 seconds and the radio will receive the frequency before you operate "TA". If you need to seek again, push "SEEK" button.

Push the "TA" button in the "TP" mode. The TA mode turns on and "TA" appears on the display. At this time, FM broadcast is muted.


In the TA mode, the radio will begin seeking a TP station. When a TP station is received, the program service name will appear on the display.

If the radio cannot seek out a TP station, "NOTHING" will appear on the display for 2 seconds and the radio will begin seeking again after 20 seconds. EON (Enhanced Other Network) system— If the RDS station (with EON data) you are listening to is not broadcasting a traffic information program in the TP mode, the radio will be switched to the traffic information program automatically by using the EON AF list. After the traffic information ends, the radio will return to the initial program automatically. One heep will sound to tell you when this feature starts and ends operation.


When listening to a CD

With the "TA" button pushed in the "CD" mode, a station broadcasting traffic information is sought and "TA" appears on the display.

When the traffic information program starts, the CD" mode is interrupted and the traffic information is automatically broadcasted. When the program ends, the initial operation resumes.

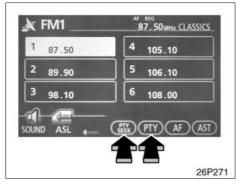



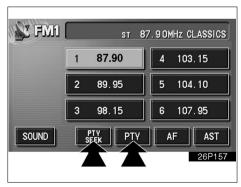



#### (2) PTY (Program Type)

The frequency, program service name and program type appear on the display during receiving from the RDS station.

When you touch "PTY" with the program type shown on the display, the letters of the program type turns green. When you touch "PTY" again, the program type changes to NEWS, SPORTS, TALK, POP and CLASSICS in this order. When you touch "PTY SEEK", the radio seeks an RDS station for the relevant program type. On reception of the program, you can listen to the broadcasting program. If the radio cannot receive any RDS station, "NOTHING" and then the program type currently being received appear on the display.

#### AF REG 87.50 MHz Alarm 1 4 87.50 105.10 5 2 89.90 106.10 6 3 98.10 108.00 SOUND ASI 26P272 Type 1 Alarm sт 87.90MHz 87.90 4 103.15 5 104.10 89.95 2 3 98.15 6 107.95 SOUND PTY AST AF 26P135

#### Type 2

#### (3) Emergency broadcasts

If an emergency broadcast is received during FM broadcasting or playing back of a cassette tape or CD, "Alarm" appears on the display and the current program will be interrupted by the emergency broadcast.

# Compact disc player operation (Type 1)

- (a) Inserting or ejecting compact disc
- Setting a single compact disc:
- 1. Push the "LOAD" button briefly.

The amber indicators at both ends of the slot blinking. The amber blinking indicators change to continuous green illumination.

#### 2. Insert only one disc.

You can set a disc at the lowest empty disc number.

After insertion, the set disc is automatically loaded.

If the label faces down, the disc cannot be played. In this case, "CD CHECK" appears on the display.

If you need to insert the next disc, repeat the same procedure to insert another disc.

- Setting all the discs:
- 1. Push the "LOAD" button until you hear a beep.

The amber indicators at both ends of the slot blinking. The amber blinking indicators change to continuous green illumination

2. Insert only one disc.

The amber indicators blink.

- 3. Insert the next disc after the amber blinking indicators change to continuous green illumination.
- 4. Repeat this procedure until you insert all the discs


To cancel the operation, push the "LOAD" button.

Your automatic changer can store up to 6 discs.

If you do not insert the discs within 15 seconds after pushing the "LOAD" button, the operation will be canceled automatically.

## NOTICE

Do not insert one disc stacked on top of another one or feed them in continuously, to prevent discs from getting stuck in the player.

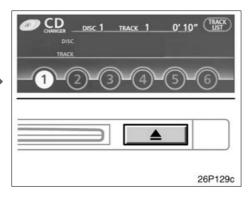


- Ejecting a single alone:
- 1. Touch the switch (1-6) to highlight the disc number you want to eject.
- 2. Push the "A" button for the compact disc briefly.


At this time, the amber indicators of the slot start blinking.

• Ejecting all the discs:

Push the "**≜**" button for the compact disc until you hear a beep.

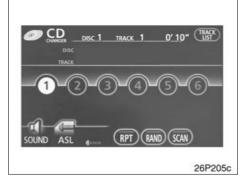

The numbers of the trays where the compact disc is not set are dimmed.

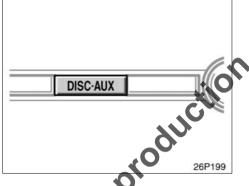


(b) Playing a compact disc Push the "DISC AUX" button if the disc is already loaded in the player.

"CD CHANGER" appears on the display. The discs set in the player are played continuously, starting with the last disc you inserted. The disc number of the disc currently being played, the track number and the time from the beginning of the program are shown on the display.

When play of one disc ends, the first track of the following disc starts. When play of the final disc ends, play of the first disc starts again.

The player will skip any empty disc trays.

When the AUX adapter is in use, each time you push the "DISC·AUX" button, the audio switches the compact disc mode and AUX mode alternately. For details about AUX adapter, see page 204.

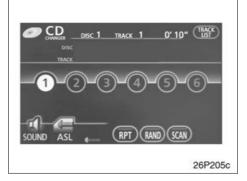


# (c) Selecting a desired disc

#### Touch the desired disc number.

The selected disc number is highlighted in green.

The player will start playing the selected disc from the first track.

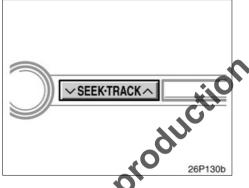

## (d) Selecting a desired track "SEEK·TRACK" button:

Push the "SPEK TRACK" button. The player will start playing the selected track from the beginning.

## Track list screen:

Touch the desired track displayed on the track list screen.

The track list screen cannot be displayed while driving.


For details about the track list screen, see "Displaying the track list" on page 167.

#### (e) Fast Forward/Reverse

Push the "SEEK·TRACK" button and hold it to fast forward/reverse the disc. When you release the switch, the player will resume playing.

When fast forwarding, if you reach the end of the final track, the player will go back to the start track and continue operation.

When reversing, if you reach the beginning of the start track, reverse is cancelled, even if you continue to hold down the button.

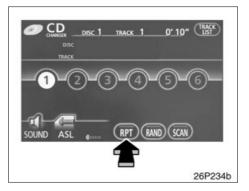

#### (f) Repeating the same track

Touch the "RPT" switch briefly. When the track is finished, the player will automatically go back to the beginning of the track and play the track again. To cancel it, touch the "RPT" switch once again.

#### (g) Repeating the same disc

Touch the "RPT" switch and hold it until you hear a beep. When the disc is finished, the player will automatically go back to the beginning of the disc and play the disc again. To cancel it, touch the "RPT" switch once again.



#### (h) Listening to the tracks in the disc you are listening to, in random order

Touch the "RAND" switch briefly, the system selects a track in the disc you are currently listening to. To cancel it, touch the "RAND" switch once again.

# i Listening to the tracks in all the discs set, in random order

Touch the "RAND" switch and hold it until you hear a beep, the system selects a track in all the discs which are set and plays it. To cancel it, touch the "RAND" switch once again.

# DISC TRACK 1 0' 10" TASK DISC TRACK 0 3 4 5 6 50UND ASL EPT RAND SCAN 26P218c


#### (j) Searching for a desired track

Touch the "SCAN" switch briefly, the player will play the next track for 10 seconds, then scan again. To select a track, touch the "SCAN" switch a second time.

After all the tracks are scanned in one pass, normal play resumes.

#### (k) Searching for a desired disc

Touch the "SCAN" switch and hold it until you hear a beep, the track at the beginning of each disc will be played for 10 seconds. To continue listening to the track of your choice, touch the "SCAN" switch a second time. After all the discs are scanned in one pass, normal play resumes.

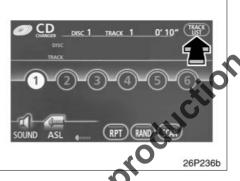

(I) Displaying the track list Touch the "TRACK LIST" switch.

The track list screen will be displayed.

If there are more than 6 tracks, touch " $\blacktriangle$ " or " $\checkmark$  to change the page.

If you touch a track, that track will be played.

Could track names of 13 characters or less can be displayed. Furthermore, track names may not be displayed correctly or at all, depending on the recorded content.

#### (m) If the player malfunctions

If the player or another unit equipped with the player malfunctions, your audio system will display the following error messages.

If "CD CHECK" appears on the display, it indicates that the disc is dirty, damaged or it was inserted up side down. Clean the disc or insert it correctly.


If "CD ERROR" appears on the display, the following causes are possible.

- There is trouble inside the system. Eject the disc.
- The inside of the player unit may be too hot due to the very high ambient temperature. Eject the disc and allow the player to cool down.

If the malfunction is not rectified, take your vehicle to your Toyota dealer.

# Compact disc player operation (Type 2)


(a) Inserting or ejecting compact disc When you insert a disc, the player will automatically start. To eject the disc, push the "**≜**" button.

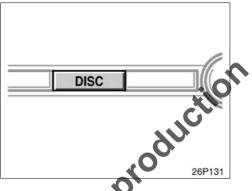

#### (b) Playing a compact disc Push the "DISC" button if the disc is already loaded in the player.

"CD" appears on the display.

The discs set in the player are played continuously. The track number and the time from the beginning of the program are shown on the display.

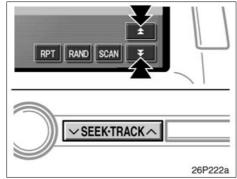


#### (c) Selecting a desired track

"SEEK·TRACK" button: Use for direct access to a desired track.

Push either side of the "SEEK-TRACK" button. The player will start playing the selected track from the beginning.

Fast forward: Touch the "★" switch and hold it to fast forward the disc. When you release the switch, the compact disc player will resume playing from that position.


**Reverse:** Touch the " $\clubsuit$ " switch and hold it to reverse the disc. When you release the switch, the compact disc player will resume playing.

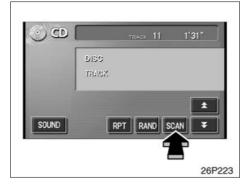

# (d) Searching for a desired track Touch the "SCAN" switch.

"SCAN" will be highlighted in green. The compact disc player will play the next track for 10 seconds, then scan again. To select a track, touch the "SCAN" switch a second time. If the player reaches the end of the disc, it will continue scanning at track 1.

After all the tracks are scanned in one pass, normal play resumes.

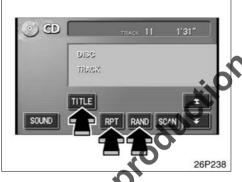

(e) Other compact disc player functions "RPT" switch: Use it for automatic repeat of the track you are currently listening to.

Touch the switch while the track is playing. When the track is finished, the player will automatically go back to the beginning of the track and play the track again. To cancel it, touch the switch once again.

**\*RAND**" switch: Use it for automatic and random selection of the disc which you are currently listening to.

When the switch is touched, the system selects a track in the disc you are currently listening to. To cancel it, touch the switch once again. **"TITLE" switch:** Use it for displaying the disc and track title while the CD-TEXT disc is playing.

The switch is not displayed on the screen while the CD-TEXT disc is not playing. Up to 29 letters can be displayed. To cancel it, touch the "TITLE OFF" switch.

#### (f) If the player malfunctions

If the player or another unit equipped with the player malfunctions, your audio system will display the following error messages.

If "CD CHECK" appears on the display, it indicates that the disc is dirty, damaged or it was inserted up side down. Clean the disc or insert it correctly.

If "CD ERROR" appears on the display, the following causes are possible.

- There is trouble inside the system. Eject the disc.
- The inside of the player unit may be too hot due to the very high ambient temperature. Eject the disc and allow the player to cool down.

If the malfunction is not rectified, take your vehicle to your Toyota dealer.

#### MP3/WMA player operation

#### (a) Inserting or ejecting MP3/WMA disc


Refer to the "(a) Inserting or ejecting compact disc" on page 163.

#### (b) Playing a compact disc

Refer to the "(b) Playing a compact disc on page 164.

#### (c) Selecting a desired disc

Refer to the "(c) Selecting a decired disc" on page 165.

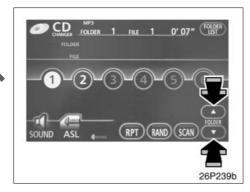

#### (d) Selecting a desired folder "FOLDER" switch:


Touch either side of the "FOLDER" switch. The player will start playing the file in the selected folder.

#### Folder list screen:

Touch the desired folder displayed on the folder list screen.

The folder list screen cannot be displayed while driving.

For details the folder list screen, see "Displaying the folder list" on page 173.

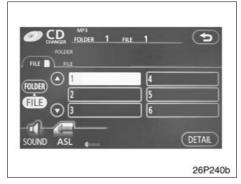

#### (e) Selecting a desired file "TRACK" button:

Push the "SEEK·TRACK" button. The player will start playing the selected file from the beginning.

#### File list screen:


Touch the desired file displayed on the file list screen.

The file list screen cannot be displayed while driving.

For details about the file list screen, see "Displaying the file list" on page 173.

#### "TUNE·FILE" knob:

Turn the knob clockwise to search up the files. Turn the knob counterclockwise to search down the files.

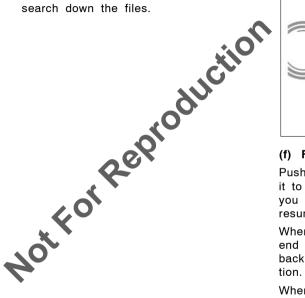


SEEKTRACK	
	26P130b

#### (f) Fast Forward/Reverse

Push the "SEEK·TRACK" button and hold it to fast forward/reverse the disc. When you release the switch, the player will resume playing.

When fast forwarding, if you reach the end of the final file, the player will go back to the start file and continue operation.

When reversing, if you reach the beginning of the start file, reverse is cancelled, even if you continue to hold down the button.

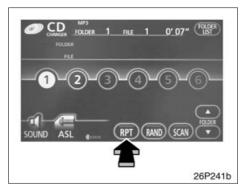

#### (g) Repeating the same file

Touch the "RPT" switch briefly. When the file is finished, the player will automatically go back to the beginning of the file and play the file again. To cancel it, touch the "RPT" switch once again.

#### (h) Repeating the same folder

Touch the "RPT" switch and hold it until you hear a beep. When the folder is finished, the player will automatically go back to the beginning of the folder and play the folder again. To cancel it, touch the "RPT" switch once again.




#### (i) Listening to the files in the folder you are listening to, in random order

Touch the "RAND" switch briefly, the system selects a file in the folder you are currently listening to. To cancel it, touch the "RAND" switch once again.

#### Listening to the files in all the folders, in random order

Touch the "RAND" switch and hold it until you hear a beep, the system selects a file in all the folders which are set and plays it. To cancel it, touch the "RAND" switch once again.

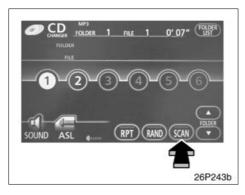

#### (k) Searching for a desired file


Touch the "SCAN" switch briefly, the player will play the next file for 10 seconds, then scan again. To select a file, touch the "SCAN" switch a second time.

After all the files are scanned in one pass, normal play resumes.

#### (I) Searching for a desired folder

Touch the "SCAN" switch and hold it until you hear a beep, the file at the beginning of each folder will be played for 10 seconds. To continue listening to the file of your choice, touch the "SCAN" switch a second time.

After all the folders are scanned in one pass, normal play resumes.

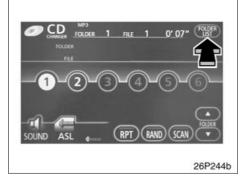

#### (m) Displaying the folder list Touch the "FOLDER LIST" switch.

The folder list screen will be displayed. If there are more than 6 folders, touch " $\blacktriangle$ " or " $\blacktriangledown$ " to change the page.

If you touch a folder, that folder will be played.

Up to 13 characters of folder name can be displayed. However, folder names may not be displayed correctly or at all, depending on the recorded content.

If you touch the "FILE" switch, the file list screen will be displayed.




(n) Displaying the file list Touch the "FILE" switch.

The file list screen will be displayed.

If there are more than 6 files, touch " $\blacktriangle$ " or " $\checkmark$ " to change the page.

If you touch a file, that file will be played. Up to 13 characters of file name can be displayed. However, file names may not be displayed correctly or at all, depending on the recorded content.

If you touch the "FOLDER" switch, the folder list screen will be displayed.

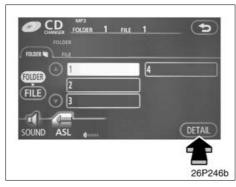

#### (o) Displaying the file information Touch the "DETAIL" switch on the fold-

#### er list or file list screen.

Up to 32 characters of album title, track, artist's name or music genre can be displayed. However, some information may not be displayed correctly or at all, depending on the recorded content.

## Audio remote controls (steering switches)

#### (p) If the player malfunctions

If the player or another unit equipped with the player malfunctions, your audio system will display the following error messages.


If "CD CHECK" appears on the display, it indicates that the disc is dirty, damaged or it was inserted up side down. Clean the disc or insert it correctly.

If "CD ERROR" appears on the display, the following causes are possible.

- There is trouble inside the system. Eject the disc.
- The inside of the player unit may be too hot due to the very high ambient temperature. Eject the disc and allow the player to cool down.

If "NO DATA DISC" appears on the display, it indicates that a disc with no MP3 or WMA data has been inserted. Remove the disc from the player and insert a MP3 or WMA data disc.

If the malfunction is not rectified, take your vehicle to your Toyota dealer.

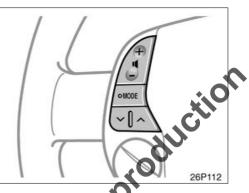

The switches are installed on the left side of the steering pad.

"**MODE**" switch: Use this switch to change the mode. If a compact disc is not inserted, the "CD" mode is skipped. When you push the switch with the audio system turned, off, the audio system turns on.

" switches: Use the switches to adjust the volume. Push "+" to increase the volume and "-" to decrease the volume. The volume continues to increase or decrease while the switch is being pressed.

#### (a) When the radio mode is selected

" $\Lambda$ " or " $\vee$ " switch: Push this switch for seek tuning or to select a station.

- To select a preset station, push the switch briefly. Do this again to select the next preset station.
- To seek a station, push and hold the switch until you hear a beep. Do this again to find the next station. If you push the switch on either side ("∨" or "∧") during the seek mode, seeking will be canceled.
- To step up or down the frequency, push and hold the switch even after you hear a beep. When you release from the switch, the radio will begin seeking up or down for a station. Do this again to find the next station.

#### (b) When the "CD" mode is selected

" $\Lambda$ " or " $\vee$ " switch: Use this switch to select a desired track or disc.

- Push this switch briefly to select a desired track.
- To select a desired disc, push and hold this switch until the desired number of the disc appears and you hear a beep.

#### (c) When the "MP3/WMA" mode is selected

" $\wedge$ " or " $\vee$ " switch: Use this switch to select a desired file or folder.

- Push this switch briefly to select a desired file.
- To select a desired folder, push and hold this switch until the desired folder appears and you hear a beep.

#### 

Operate the switches with due care while you are driving to avoid accidents.

#### Audio system operating hints

NOTICE

To ensure correct audio system operations:

- ◆ Be careful not to spill beverages over the audio system.
- The use of a cellular phone inside or near the vehicle may cause a noise from the speakers of the audio system which you are listening to. However, this does not indicate a malfunction.

#### RADIO RECEPTION

Usually, a problem with radio reception does not mean there is a problem with your radio it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or telephone wires can interfere with AM signals. And of course, radio signals have a limited range. The farther you are from a station, the weaker its signal will be. In addition, reception conditions change constantly as your vehicle moves. Here are some common reception problems that probably do not indicate a problem with your radio:

FM

Fading and drifting stations—Generally, the effective range of FM is about 40 km (25 miles). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

Multi-path—FM signals are reflective, making it possible for two signals to reach your antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

Static and fluttering—These occur when signals are blocked by buildings, trees, or other large objects. Increasing the bass level may reduce static and fluttering.

Station swapping—If the FM signal you are listening to is interrupted or weakened, and there is another strong station nearby on the FM band, your radio may tune in the second station until the original signal can be picked up again.

#### AM

Fading—AM broadcasts are reflected by the upper atmosphere—especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

Station interference—When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

Static—AM is easily affected by external sources of electrical noise, such as high tension power lines, lightening, or electrical motors. This results in static.

## CARING FOR YOUR COMPACT DISC PLAYER AND DISCS

- The player is intended for use with 12 cm (4.7 in.) discs only.
- Extremely high temperatures can keep your compact disc player from working. On hot days, use the air conditioning to cool the vehicle interior before you listen to a disc.
- Bumpy roads or other vibrations may make your compact disc player skip.
- If moisture gets into your compact disc player, you may not hear any sound even though your compact disc player appears to be working. Remove the disc from the player and wait until it dries.


#### 


Compact disc players use an invisible laser beam which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the player correctly.




• Use only compact discs marked as shown above. The following products may not be playable on your compact disc player.

Copy-protected CD CD-R (CD-Recordable) CD-RW (CD-Re-writable) CD-ROM

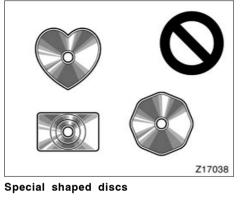

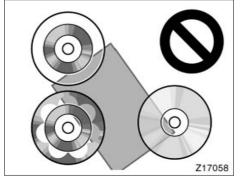

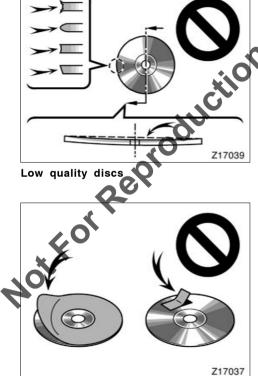


#### NOTICE

- Do not use special shaped, transparent/translucent, low quality or labeled discs such as those shown in the illustrations. The use of such discs may damage the player or changer, or it may be impossible to eject the disc.
- This system is not designed for use of Dual Disc. Do not use Dual Disc because it may cause damage to the player or changer.

Transparent/translucent discs

Labeled discs

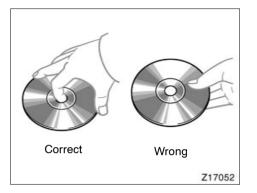

- Handle compact discs carefully, especially when you are inserting them. Hold them on the edge and do not bend them. Avoid getting fingerprints on them, particularly on the shiny side.
- Dirt, scratches, warping, pin holes, or other disc damage could cause the player to skip or to repeat a section of a track. (To see a pin hole, hold the disc up to the light.)
- Remove discs from the compact disc player when you are not listening to them. Store them in their plastic cases away from moisture, heat, and direct sunlight.



To clean a compact disc: Wipe it with a soft, lint-free cloth that has been dampened with water. Wipe in a straight line from the center to the edge of the disc (not in clicles). Dry it with another soft, lint-free cloth. Do not use a conventional record cleaner or anti-static device.

#### MP3 WMA FILES

- MP3 (MPEG Audio Layer 3) and WMA (Windows Media Audio) are audio compression standards.
- The MP3/WMA player can play MP3 and WMA files on CD-ROM, CD-R and CD-RW discs.

The unit can play disc recordings compatible with ISO 9660 level 1 and level 2 and with the Romeo and Joliet file system.

- When naming an MP3 or WMA file, add the appropriate file extension (.mp3 or .wma)
- The MP3/WMA player plays back files with .mp3 or .wma file extensions as MP3 or WMA files. To prevent noise and playback errors, use the appropriate file extensions.
- Multi-session compatible CDs can also be played.
- MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2, and Ver. 2.3 formats. The unit cannot display disc title, track title and artist name in other formats.

- WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title, artist name.
- The emphasis function is available only when playing MP3/WMA files recorded at 32, 44.1 and 48 kHz. (The system can play MP3 files with sampling frequencies of 16, 22.05, and 24 kHz. However, the emphasis function is not available for files recorded at these frequencies.)
- The sound quality of MP3/WMA files generally improves with higher bit rates. In order to achieve a reasonable level of sound quality, discs recorded with a bit rate of at least 128 kbps are recommended.

#### Playable bit rates

MP3 files:


MPEG1 LAYER3—64 to 320 kbps MPEG2 LSF LAYER3—64 to 160 kbps WMA files:

Ver. 7, 8 CBR—48 to 192 kbps Ver. 9 CBR—48 to 320 kbps


- The MP3/WMA player does not play back MP3/WMA files from discs recorded using packet write data transfer (UDF format). Discs should be recorded using "per-mastering" software rather than packet-write software.
- M3u playlists are not compatible with the audio player.
- MP3i (MP3 interactive) and MP3PRO formats are not compatible with the audio player.
- The MP3 player is compatible with VBR (Variable Bit Rate).
- When playing back files recorded as VBR (Variable Bit Rate) files, the play time will not be correctly displayed if fast-forward or reverse operations are used.

• It is not possible to check folders that do not include MP3/WMA files.

- MP3/WMA files in folders up to 8 levels deep can be played. However, the start of playback may be delayed when using discs containing numerous levels of folders. For this reason, we recommend creating discs with no more than two levels of folders.
- It is possible to play up to 192 folders or 255 files on one disc.

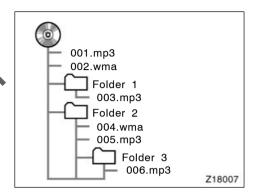


 The play order of the compact disc with the structure shown above is as follows:

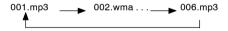

#### CD-R and CD-RW discs

- CD-R/CD-RW discs that have not been subject to the "finalizing process" (a proc ess that allows discs to be played on a conventional CD player) cannot be played.
- It may not be possible to play CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of the unit.
- It may not be possible to play discs recorded on a personal computer depending on the application settings and the environment. Record with the correct format. (For details, contact the appropriate application manufacturers of the applications.)
- CD-R/CD-RW discs may be damaged by direct exposure to sunlight, high temperatures or other storage conditions. The unit may be unable to play some damaged discs.
- If you insert a CD-RW disc into the MP3/WMA player, playback will begin more slowly than with a conventional CD or CD-R disc.

• Recordings on CD-R/CD-RW cannot be played using the DDCD (Double Density CD) system.

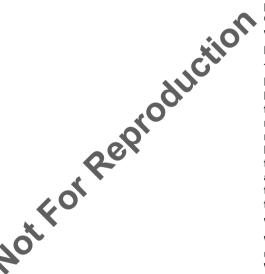

#### TERMS Packet write—

This is a general term that describes the process of writing data on-demand to CD-R, etc., in the same way that data is written to floppy or hard discs.

#### ID3 Tag—

This is a method of embedding track-related information in an MP3 file. This embedded information can include the track title, the artist's name, the album title, the music genre, the year of production, comments and other data. The contents can be freely edited using software with ID3 tag editing functions. Although the tags are restricted to the number of characters, the information can be viewed when the track is played back.

#### WMA Tag—

WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title, artist name.

#### ISO 9660 format-

This is the international standard for the formatting of CD-ROM folders and files. For the ISO 9660 format, there are two levels of regulations.

Level 1:

The file name is in 8.3 format (8 character file names, with a 3 character file extension. File names must be composed of one-byte capital letters and numbers. The "\_" symbol may also be included).

#### Level 2:

The file name can have up to 31 characters (including the separation mark "." and file extension). Each folder must contain fewer than 8 hierarchies.

#### m3u—

Playlists created using "WINAMP" software have a playlist file extension (.m3u).

#### МР3—

MP3 is an audio compression standard determined by a working group (MPEG) of the ISO (International Standard Organization). MP3 compresses audio data to about 1/10 the size of that on conventional discs.

#### WMA—

WMA (Windows Media Audio) is an audio compression format developed by Microsoft. It compresses files into a size smaller than that of MP3 files. The decoding vot for Reproduction formats for WMA files are Ver. 7. 8. and

NotForReproduction

# SECTION 2-9


# OPERATION OF INSTRUMENTS AND CONTROLS

#### Air conditioning system

	Controls	
	Climate remote control	
Notfo	Reproduc	


#### Controls

#### ►Type 1

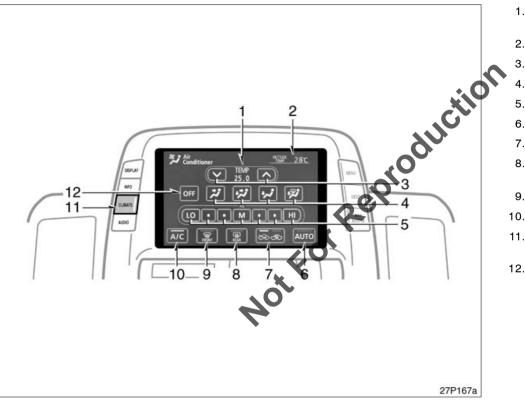


- 1. Passenger compartment temperature display
- 2. Outside temperature display
- 3. Temperature control switches
- 4. Air flow control switches
- 5. Fan speed control switches
- 6. Automatic control switch
- 7. Air intake control switch
- 8. Rear window defogger switch (See page 101 for details.)
- 9. Windshield air flow switch
- 10. Air conditioning on-off switch
- 11. Air conditioning operation screen display button
- 12. OFF switch



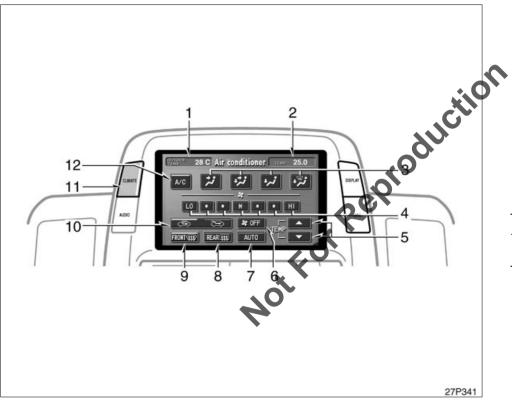

- 1. Outside temperature display
- 2. Passenger compartment temperature display
- 3. Air flow control switches
- 4. Fan speed control switches
- 5. Temperature control switches
- 6. OFF switch
- 7. Automatic control switch
- 8. Rear window defogger switch (See page 101 for details.)
- 9. Windshield air flow switch
- 10. Air intake control switch
- 11. Air conditioning operation screen display button
- 12. Air conditioning on-off switch

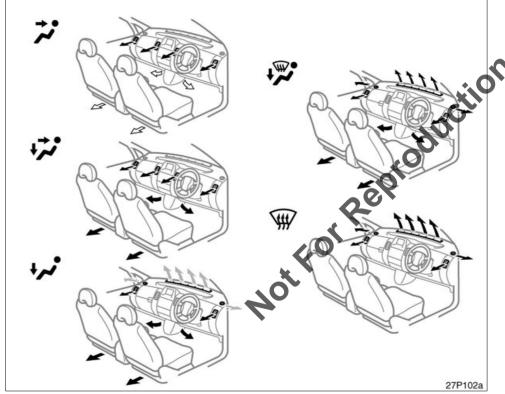

#### The automatic air conditioning automatically maintains the set temperature.

This air conditioning features automatic fan speed and air flow control which automatically selects the most suitable fan speed and air flow to control the temperature. The hybrid system must be in the "IG-ON" mode.

**CLIMATE:** Push this button to display switches for automatic air conditioning controls.


#### NOTICE

To prevent the battery from being discharged, do not leave the air conditioning on longer than necessary when the hybrid system is not operating.


## ➡ Automatic air flow mode only □> : In the beginning of the automatic air flow mode, air might be delivered.

#### (a) Climate control

#### SETTING OPERATION—automatic control

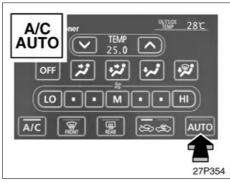

#### Type 1

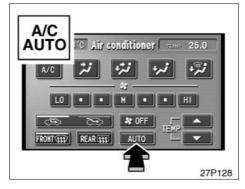

#### 1. Touch the "AUTO" switch.

The indicator located in the instrument cluster will come on.


Air conditioning is turned on if not operated.

Air flow quantity, switching of the diffusers, and switching of the air interestiveen RECIRCULATED AIR and OUTSIDE AIR are automatically adjusted. The operation status is shown by each indicator.


However, if the RECIPCOLATED AIR mode is selected manually, automatic control of air intake cannot be activated.

When one of the manual control buttons is depressed while operating in automatic mode, the mode relevant to the depressed button is set. Other conditions continue to be adjusted automatically. However, operating the air flow outlets or fan speed will turn off the automatic control.

Touch the "OFF" switch to turn the air conditioning off.

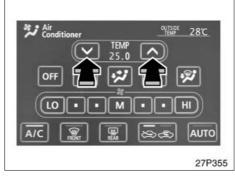



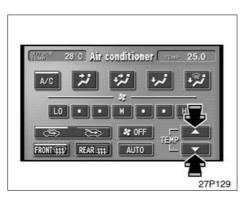

## 2. Use the "TEMP" switch to set the desired temperature.


The temperature of air delivered to the passenger compartment will be controlled automatically according to the setting.

SETTING OPERATION—manual control


When one of the manual control switches is touched while operating in automatic mode, the mode relevant to the touched switch is set. Other conditions continue to be adjusted automatic cally.

cally.	ALC .
	AUC
	*00
	Reproductio
•	<u> </u>
¢0	
·	
4	

#### If manual air flow selection is desired-

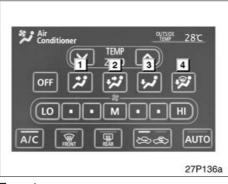

Type 1

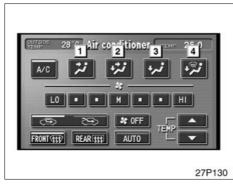


The outlets from which air is delivered can be selected manually by touching the switch. The function of each mode is as follows:

- **1. Panel**—Air flows mainly from the instrument panel vents.
- Bi-level—Air flows from both the floor vents and the instrument panel vents.
- **3. Floor**—Air flows mainly from the floor vents.
- **4. Floor/Windshield**—Air flows mainly from the floor vents and windshield vents.

The selected mode is highlighted in green.

If quick heating or cooling is desired-

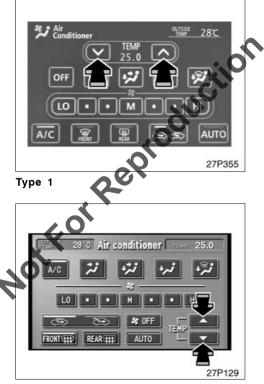

Touch the "TEMP" switch and hold it until the maximum figure or minimum figure appears.

Type 2

#### If manual fan speed control is desired-




#### Type 1

#### 1. Fan speed at low 2. Fan speed at high


The fan speed can be set to your desired speed by touching the appropriate air flow control switch. The higher the fan speed is, the more air is delivered. Touching the "OFF" switch turns off the fan.

To remove exterior windshield frost, use the high speed setting.


The selected mode is highlighted in green.

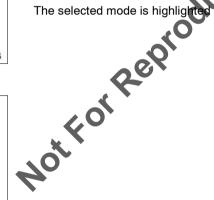

#### If manual switching of air intake is desired—

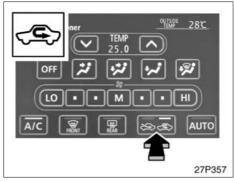

Type 1

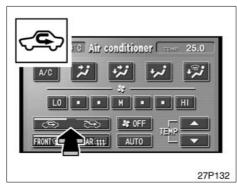







The air intake control switch is used to switch the air intake between the OUT-SIDE AIR mode and RECIRCULATED AIR mode.

With the switch in the OUTSIDE AIR mode, the system will take fresh outside air into the vehicle.

If quick circulation of cooled air is desired, touch the air intake control switch for RECIRCULATED AIR.

The indicator will come on in the instrument cluster while the RECIRCULATED AIR mode is selected.


If recirculated air is used during heating, the windows will fog up more easily.

If the hybrid system is turned off in the OUTSIDE AIR mode, the automatic control of the air intake is activated when the hybrid system is turned on again.

#### 2-way air intake control

To improve fuel economy, OUTSIDE AIR mode control changes when the air intake selector is set in OUTSIDE AIR on the following conditions:

- When the maximum heating is needed with the air flow in "Floor" or "Floor/ Windshield", fresh air flows in the upper compartment, while air is recirculated in the lower compartment.
- When cooling is needed, both fresh and recirculate modes turns on.

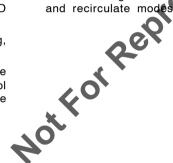


### If manual on-off of the air conditioning is desired—


Touch the "A/C" switch to turn the air conditioning on and touch it again to turn the air conditioning off.

If the system is used for ventilation, heating in dry weather or removing frost or exterior fog on the windshield, turn the air conditioning off once it is no longer required. This will improve fuel economy. The air conditioning can be used for yearround automatic temperature control including cooling and dehumidifying operation.

## (b) Windshield defogging and defrosting

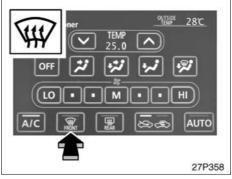

Type 1

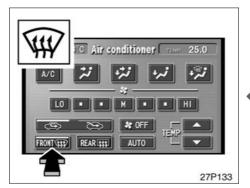

## To remove interior fog on the wind-shield—

Touch the windshield air flow switch.

## To remove frost or exterior fog on the windshield—

- 1. Touch the upper side of the temperature control switch until maximum figure appears on the temperature display.
- 2. Touch the windshield air flow switch.
- 3. Push the "HI" of the ar flow control switch to obtain a maximum air flow.
- 4. Leave the air conditioning on-off button off.

When the windshield air flow switch is touched, the air conditioning is set to operate and the OUTSIDE AIR mode is set if the outside air temperature is low.

Touch the "A/C" switch for dehumidified heating or cooling. This setting clears the front view more quickly.


If you touch the windshield air flow switch once again while in the windshield air flow mode, the mode then returns to the last mode used. The indicator will come on in the instrument cluster while the windshield air flow mode is on.



Do not use the windshield air flow switch during cooled air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield could cause the outer surface of the windshield to fog up blocking your vision.

Type 2

#### (c) Operating tips

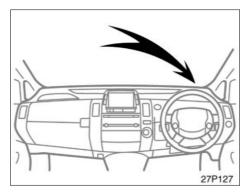

- The light sensor is located on the driver's side edge of the instrument panel. If you put anything on this area or cover the area, the sensor function may be adversely affected.
- To cool off your Toyota after it has been parked in the hot sun, drive with the windows open for a few minutes. This vents the hot air, allowing the air conditioning to cool the interior more quickly.
- Make sure the air intake grilles in front of the windshield are not blocked (by leaves or snow, for example).

- Keep the area under the front seats clear to allow air to circulate throughout the vehicle.
- On cold days, set the fan speed to high for a minute to help clear the intake ducts of snow or moisture. This can reduce the amount of fogging on the windows.
- When driving on dusty roads, close all windows. If dust thrown up by the vehicle is still drawn into the vehicle after closing the windows, it is recommended that the air intake selector be set to OUTSIDE AIR and the fan speed selector to any setting except "OFF".
- If following another vehicle on a dusty road, or driving in windy and dusty conditions, it is recommended that the air intake selector be temporarily set to DECIRCULATE, which will close off the cutside passage and prevent outside air and dust from entering the vehicle interior.


A CAUTION

To prevent the windshield from fogging up, do not use the windshield air flow button during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

#### NOTICE

To prevent battery discharge, do not leave the air conditioning system on longer than necessary when the hybrid system is stopped.

## Climate remote control (steering switches)

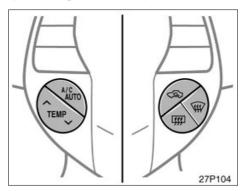


The switches are installed on both sides of the steering pad.

"A/C AUTO" switch: Use this switch to turn on the automatic mode. (For details, see page 187.) Pressing this switch in the automatic control turns the blower off.


"**∧TEMP∨**" **switch:** Use this switch to set the desired temperature. (For details, see page 188.)

"(1) **switch:** Use this switch to change the air intake mode. (For details, see page 190.)

"" switch: Use this switch to remove interior fog on the windshield. (For details, see page 192.) "[fifth]" switch: Use this switch to turn on or off the rear window and outside rear view mirror defoggers. (For details, see page 101.)

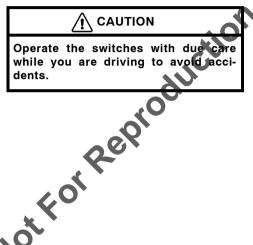


#### Instrument panel vents

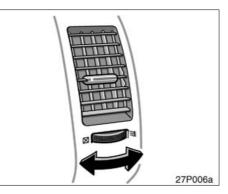


If air flow control is not satisfactory, check the instrument panel vents. The instrument panel vents may be opened or closed as shown.

#### Air conditioning filter—

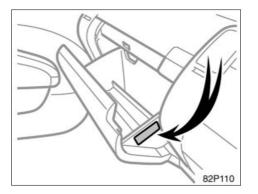

The air conditioning filter information label is placed on the right side of the glove box as shown and indicates that a filter has been installed.

The air conditioning filter prevents dust from entering the vehicle through the air conditioning vent.

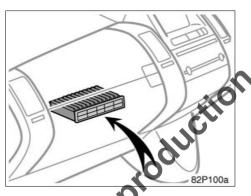


The air conditioning filter is set behind the glove box.


## -Checking and replacing the air conditioning filter

The air conditioning filter may clog after long use. The filter may need to be replaced if the air flow of the air conditioning and heater experiences extreme reductions in operating efficiency, or if the windows begin to fog up easily.


To maintain the air conditioning efficiency, inspect and replace the air conditioning filter according to the maintenance schedule. (For scheduled maintenance information, please refer to the "Warranty and Service Booklet".)

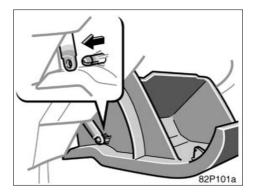


1. Open the glove box, and slide off the damper as shown.

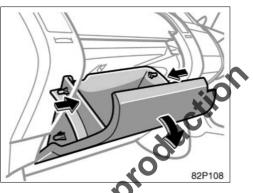

2. Push in each side of the glove box to disconnect the claws.

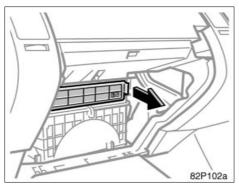

3. Pull the filter case toward you to take it out.

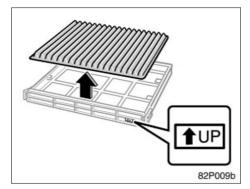

4. Remove the filter from the filter case and replace it with a new one.

## 5. Install the filter and filter case in the reverse order of removal.

When setting the filter to the filter case, ensure that the flat side of the filter is down and the ribbed side is up.

Position the filter case so that the "•UP" mark is pointing up and install it in the vehicle.

#### INFORMATION

The air filter should be installed properly in position. The use of air conditioning with the air filter removed may cause deteriorated dustproof performance and then affect air conditioning performance. NotForReproduction


# SECTION 2-10

# OPERATION OF INSTRUMENTS AND CONTROLS

#### Other equipment

	Clock	200
	Rear view monitor system	200
	Power outlet	203
	AUX adapter 2	204
	Rear console box	204
	Glove boxes	
	Auxiliary boxes	205
	Cup holders	206
	Bottle holders	207
	Tie-down hooks	208
	Luggage storage box	208
	Luggage cover	209
20	Floor mat	210
2		

#### Clock

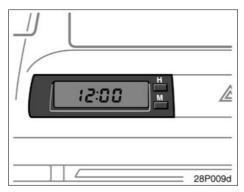

To set the hour: Push the "H" button. To set the minutes: Push the "M" button.

The hybrid system must be in "ACC" or "IG-ON".

If the electrical power source has been disconnected from the clock, the time display will automatically be set to 1:00.

When the instrument panel lights are turned on, the brightness of the time indicator will be reduced.

#### Rear view monitor system

The rear view monitor system assists the driver by displaying an image of the rear of the vehicle while backing up. The displayed image on the screen is a horizontally reversed mirror image of the inside rear view mirror.

To display the rear view image on the screen, place the shift lever in the \*R" position when the "IG-ON" models enabled.

If you move the shift lever our of the "R" position, the screen returns to the previous screen. Operating another function of the navigation system will display another screen

The rear view monitor system is a supplement device intended to assist back up. When backing up, be sure to check behind and all around the vehicle visually.

#### 


• Never depend on the rear view monitor system entirely when backing up. Always make sure your intended path is clear.


Use caution just as you would when backing up any vehicle.

- Never back up while looking only at the screen. The image on the screen is different from actual conditions. Depicted distances between objects and flat surfaces will differ from actual distances. If you back up while looking only at the screen, you may hit a vehicle, a person or an object. When backing up, be sure to check behind and all around the vehicle visually and with mirrors before proceeding.
- Do not use the system when the back door is not completely closed.

- If the back of the vehicle is hit, the position and mounting angle of the camera may change. Be sure to have the camera's position and mounting angle checked at your Toyota dealer.
- If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
- If the camera lens becomes dirty, it cannot transmit a clear image. If water droplets, snow, or mud adheres to the lens, rinse with water and wipe with a soft cloth. If the lens is extremely dirty, wash it with a mild cleanser and rinse.
- Use your own eyes to confirm the vehicle's surroundings, as the displayed image may become faint or dark, and moving images will be distorted, or not entirely visible when the outside temperature is low. When backing up, be sure to check behind and all around the vehicle visually and with mirror before proceeding.

When replacing the tires, please consult your Toyota dealer. If you replace the tires, the area displayed on the screen may change.

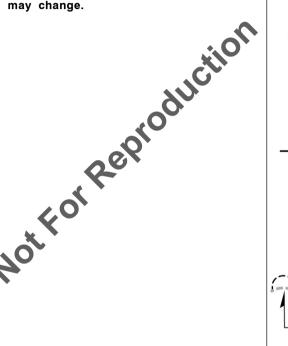


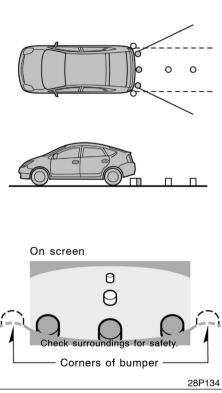

#### AREA DISPLAYED ON SCREEN

Image is displayed approximately level on screen.

- The area detected by the camera is limited. Objects which are close to either corner of the bumper or under the bumper cannot be seen on the screen.
- The area displayed on the screen may vary according to vehicle orientation or road conditions.

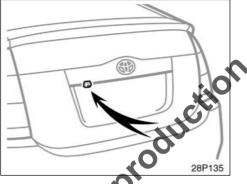

## THE REAR VIEW MONITOR SYSTEM

The rear view monitor system camera is located on the back door as shown in the illustration. The camera uses a special lens. The distance of the image that appears on the screen differs from the actua distance.

difficult to see the images on the screen, even when the system is functioning.

- In the dark (for example, at night)
- When the temperature near the lens is extremely high or low

- When water droplets are adhering to the camera, or when humidity is high (for example, when it rains)
- When foreign matter (for example, snow or mud) adheres to the camera lens
- When the sun or the beam of headlights is shining directly into the camera lens


# Check surroundings for safety.

y19112

If a bright light (for example, sunlight reflected off the vehicle body) is picked up by the camera, the smear effect\* peculiar to the camera may occur.

\*: Smear effect—A phenomenon that occurs when a bright light (for example, sunlight reflected off the vehicle body) is picked up by the camera; when transmitted by the camera, the light source <sup>4</sup> appears to have a vertical streak above and below it.

#### Power outlet

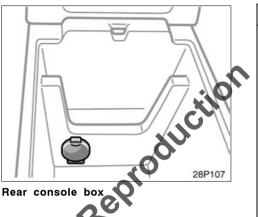


The power outlet is designed for power supply for car accessories.

The hybrid system must be in "ACC" or "IG-ON" for the power outlet to be used.

#### NOTICE

- ◆ To prevent the fuse from being blown, do not use the electricity over the total vehicle capacity of 12V/120W.
- To prevent the battery from being discharged, do not use the power outlet longer than necessary when the hybrid system is not operating.
- Close the power outlet lid when the power outlet is not in use. Inserting anything other than an appropriate plug that fits the outlet, or allowing any liquid to get into the outlet may cause electrical failure or short circuits.

#### **AUX** adapter

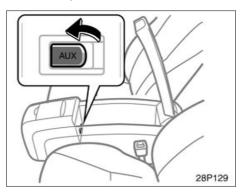


An AUX adapter is installed in the rear console box.


By inserting a mini plug into the AUX adapter, you can listen to music from a portable audio device through the vehicle's speaker system.

To use the AUX adapter, switch to the AUX mode (external device mode) by pressing "DISC·AUX" button. When the AUX adapter is in use, "AUX" will appear on the display. To adjust the volume, turn the "PWR·VOL" knob.

When using a portable audio device connected to the power outlet or cigarette lighter, noise may occur during playback. If this happens, use the power source of the portable audio device. If you install an audio system other than a genuine audio system, you will not be able to use the AUX adapter.

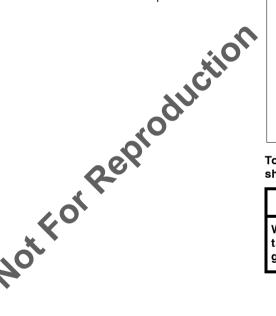

#### Rear console box

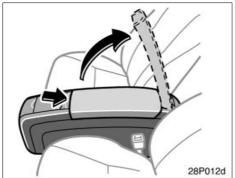


To use the rear console box, open as shown in the illustration.




When opening the rear console box, take due care not to catch your fingers.

#### **Glove boxes**

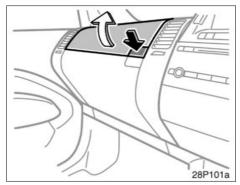

Upper glove box

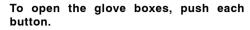

The inside of the upper glove box is separated by the partition. When storing a longer object, remove the partition.

With the instrument panel lights on, the lower glove box light will come on when the lower glove box is open.

#### CAUTION 🍃

To reduce the chance of injury in case of an accident on a sudden stop, always keep the grove box doors closed while griving.

#### Auxiliary boxes


To use the box, open the lid as shown in the following illustrations.



- To reduce the chance of injury in case of an accident or a sudden stop, always keep the auxiliary box closed while driving.
- Auxiliary box on the ceiling— As this box is designed for holding a light object such as an eyeglass, do not place any heavy objects in it. Heavy objects may cause the holder to open and contents to fly out resulting in injuries.


#### NOTICE

Auxiliary box on the ceiling— In hot weather, inside of the vehicle ceiling becomes very hot. Do not leave anything flammable or deformable such as a lighter, the glasses, etc. inside.

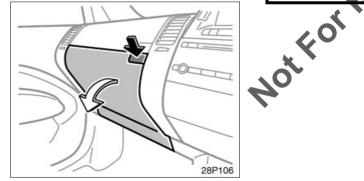

Lower glove box

# 28P117 28P118 28P005b On the instrument parel Front ceiling For front seats 28P011c 28P111a 28P006b Left side of the luggage compartment

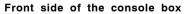

For rear seats

Cup holders

# The cup holder is designed for holding cups or drink-cans securely.

To use the cup holder, open the lid.

# 

- Do not place anything else other than cups or drink-cans on the cup holder, as such items may be thrown about in the compartment and possibly injure people in the vehicle during sudden braking or in an accident. If possible, cover hot drinks to prevent burns.
- To reduce the chance of injury in case of an accident or a sudden stop while driving, keep the cup holder closed when not in use.
- Take due care not to catch your fingers when the cup holder is opened.


### **Bottle holders**



### NOTICE

Do not put a cup or open bottle in the bottle holder because the contents may spill when the door opens or closes.

### Tie-down hooks

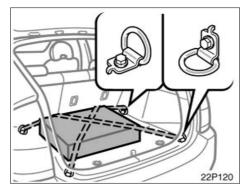


To secure your luggage, use the tiedown hooks as shown above.

See "Luggage stowage precautions" on page 222 for precautions in loading luggage.


### 

To avoid personal injury, keep the tiedown hooks retracted when not in use.

### Luggage storage box

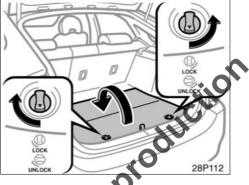

1. To open the luggage storage box, turn the knob to the UNLOCK" position and open the lid

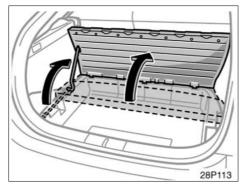


2. Hold the lid open by inserting the support rod into the slot.



To reduce the chance of injury in case of an accident or a sudden stop, keep the luggage storage box closed and locked while driving.

### Luggage cover

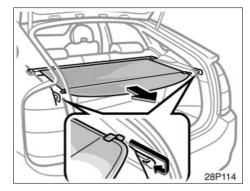

To use the luggage cover, pull it out of the retractor and hook it on the anchors.



### 


Do not place anything on the luggage cover. Such items may be thrown away and possibly injure people in the vehicle during sudden braking or a collision.

luggage storage box in the luggage compartment as shown in the illustration. At that time, adjust the cover so that "TOP" is facing up. After removing the luggage cover, stow it

You can stow the luggage cover in the


in the luggage storage box or place it somewhere other than the passenger compartment. This will prevent passengers from being injured in the event of a sudden stop or accident.

28P116

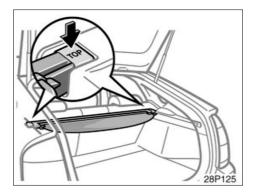

To replace the luggage cover, adjust the cover so that "TOP" is facing upwards.

### Floor mat

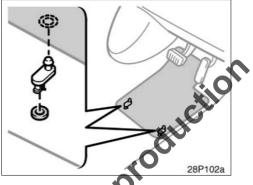

Use a floor mat of the correct size. If the vehicle carpet and floor mat have 2 holes, then they are designed for use with locking clips. Attach the floor mat to the vehicle carpet using the clips. Lock the clips into the holes in the vehicle carpet.



#### 

Observe the following precautions. Failure to do so may result in the floor mat slipping and interfering with the movement of the pedals during driving, resulting in an accident.

- Make sure the floor mat is properly placed on the floor carpet and the correct side faces upward.
- Do not place floor mats on top of existing mats.

# SECTION 3

# INFORMATION BEFORE DRIVING YOUR TOYOTA

Break-in	period	
Fuel	· · · · · · · · · · · · · · · · · · ·	
Fuel pum	o shut–off system	
Operation	in foreign countries	
Three-wa	y catalytic converters	
Engine ex	haust cautions	
Facts abo	ut engine oil consumption .	
Brake sys	tem	
Brake pad	wear limit indicators	
Luggage	stowage precautions	
<b>CO</b> Suspensio	on and chassis	
20		

### Break-in period

### Drive gently and avoid high speeds.

Your vehicle does not need an elaborate break-in. But following a few simple tips for the first 2000 km (1200 miles) can add to the future economy and long life of your vehicle:

- Avoid full-throttle acceleration when starting and driving.
- Avoid racing the hybrid engine.
- Try to avoid hard stops during the first 300 km (200 miles).

### Fuel

Selecting the proper fuel is essential for satisfactory engine performance.

Engine damage caused by use of improper fuels is not covered under Toyota's new vehicle warranty.

### FUEL TYPE

### Use only unleaded gasoline.

To help prevent gas station mix-ups, your vehicle has a smaller fuel tank opening. The special nozzle on pumps with unleaded fuel will fit it, but the larger standard nozzle on pumps with leaded gas will not.

# NOTICE

Do not use leaded gasoline. Use of leaded gasoline will cause the threeway catalytic converter to lose its effectiveness and the emission control system to function improperly. Also, this can increase maintenance costs.

### OCTANE NUMBER

Select Research Octane Number 91 or higher. For improved vehicle performance, the use of premium unleaded gasoline with a Research Octane Number of 95 or higher is recommended.

Use of fuel with an octane number lower than stated will cause persistent heavy knocking. If severe, this will lead to engine damage.

### If your engine knocks...

If you detect heavy knocking even when using the recommended fuel, or if you hear steady knocking while holding a steady speed on level roads, consult your Toyota dealer.

However, now and then, you may notice light knocking for a short time while accelerating or driving up hills. This is no need of concern.

### FUEL TANK CAPACITY

45 L (11.9 gal., 9.9 lmp.gal.)

### Fuel pump shut-off system

The fuel pump shut off system stops supplying fuel to the engine to minimize the risk of fuel leakage when the engine stalls or an airbag inflates upon collision. To restart the hybrid system after the fuel pump shut-off system activates, press the "POWER" switch to the "OEE" mode and start it.

### 


Inspect the around under the vehicle before restarting the hybrid system. If you find that fuel has leaked onto the ground, the fuel system has been damaged and is in need of repair. In this case, do not restart the hybrid system.

### Operation in foreign countries


If you plan to drive your Toyota in another country...

First, comply with the vehicle registration laws.

Second, confirm the availability of the cor

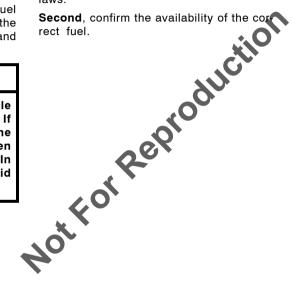

### Three-way catalytic converters

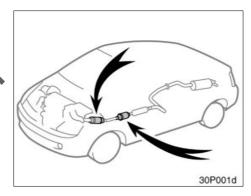

#### The three-way catalytic converters are emission control devices installed in the exhaust system.

The purpose is to reduce pollutants in the exhaust gas.



- Keep people and combustible materials away from the exhaust pipe while the engine is running. The exhaust gas is very hot.
- Do not drive, idle or park your vehicle over anything that might burn easily such as grass, leaves, paper or rags.

### NOTICE

A large amount of unburned gases flowing into the three-way catalytic converter may cause it to overheat and create a fire hazard. To prevent this and other damage, observe the following precautions:

- ♦ Use only unleaded gasoline.
- Do not drive with an extremely low fuel level; running out of fuel could cause the engine to misfire, creating an excessive load on the threeway catalytic converter.
- Do not turn off the ignition while the vehicle is moving.
- Keep your engine in good running order. Malfunctions in the engine electrical system, electronic ignition system/distributor ignition system or fuel system could cause an extremely high temperature.
- If the engine becomes difficult to start or stalls frequently, take your vehicle in for a check-up as soon as possible. Remember, your Toyota dealer knows your vehicle and its three-way catalytic converter system best.

◆ To ensure that the three-way catalytic converter and the entire emission control system operate properly, your vehicle must receive the periodic inspections required by the Toyota Maintenance Schedule. For scheduled maintenance information, refer to the "Warranty and Service Booklet".

otForReproc

### Engine exhaust cautions

### 

- Exhaust gases include harmful carbon monoxide (CO) that is colorless and odorless. Inhaling exhaust gases may lead to death or a serious health hazard.
- The exhaust should be checked occasionally. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by your Toyota dealer. Failure to do so may allow exhaust gases to enter the vehicle, resulting in death or a serious health hazard.
- If the vehicle is in a poorly ventilated area, turn the engine off. In a closed area, such as a garage, exhaust gases may collect and enter the vehicle. This may lead to death or a serious health hazard.

- Do not remain for a long time in a parked vehicle with the hybrid system running. If it is unavoidable, however, do so only in an unconfined area and adjust the heating or cooling system to force outside air into the vehicle.
- Keep the back door closed while driving. An open or unsealed back door may cause exhaust gases to be drawn into the vehicle.
- To allow proper operation of your vehicle's ventilation system, keep the inlet grilles in front of the windshield clear of snow, leaves, or other obstructions.
- If the smell of exhaust is noticed inside the vehicle, open the windows. Large amounts of exhaust in the vehicle can cause driver drowsiness and an accident, resulting in death or a serious health hazard. Have the vehicle inspected by your Toyota dealer immediately.

• Do not leave the engine running in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the engine is running, exhaust gases may collect and enter the hicle. This may lead to death or a serious health hazard.

• When taking a nap in the vehicle, always turn the engine off. Otherwise, you may accidentally move the shift lever or depress the accelerator pedal, which could cause an accident or fire due to engine overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

# Facts about engine oil consumption

### FUNCTIONS OF ENGINE OIL

Engine oil has the primary functions of lubricating and cooling the inside of the engine, and plays a major role in maintaining the engine in proper working order.

### ENGINE OIL CONSUMPTION

It is normal that an engine should consume some engine oil during normal engine operation. The causes of oil consumption in a normal engine are as follows.

- Oil is used to lubricate pistons, piston rings and cylinders. A thin film of oil is left on the cylinder wall when a piston moves downwards in the cylinder. High negative pressure generated when the vehicle is decelerating sucks some of this oil into the combustion chamber. This oil as well as some part of the oil film left on the cylinder wall is burned by the high temperature combustion gases during the combustion process.
- Oil is also used to lubricate the stems of the intake valves. Some of this oil is sucked into the combustion chamber together with the intake air and is burned along with the fuel. High temperature exhaust gases also burn the oil used to lubricate the exhaust valve stems.

The amount of engine oil consumed depends on the viscosity of the oil, the quality of the oil and the conditions the vehicle is driven under.

More oil is consumed by high-speed driving and frequent acceleration and deceleration.

A new engine consumes more oil, since its pistons, piston rings and cylinder walls have not become conditioned.

Oil consumption: Max. 1.0 L per 1000 km (1.1 qt./600 miles, 0.9 Imp.qt./600 miles)

When judging the amount of oil consumption, note that the oil may become diluted and make it difficult to judge the true level accurately.

As an example, if a vehicle is used for repeated short trips, and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km (600 miles) or more. This is because the oil is gradually becoming diluted with fuel or moisture, making it appear that the oil level has not changed. The diluting ingredients evaporate out when the vehicle is then driven at high speeds, as on an expressway, making it appear that oil is excessively consumed after driving at high speeds.

# IMPORTANCE OF ENGINE OIL LEVEL


One of the most important points in proper vehicle maintenance is to keep the engine oil at the optimum level so that oil function will not be impaired therefore, it is essential that the oil level be checked regularly. Toyota recommends that the oil level be checked every time you refuel the vehicle.

### NOTICE

Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

For detailed information on oil level check, see "Checking the engine oil level" on page 272.

### Iridium-tipped spark plugs

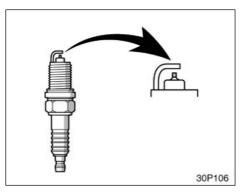

Your engine is fitted with iridium-tipped spark plugs.

#### NOTICE

Use only iridium-tipped spark plugs. Do not adjust gaps for engine performance or smooth driveability.

### Brake system

### REGENERATIVE BRAKE

When the brake is applied, the electric motor used as a generator converts kinetic energy into electric energy.

The regenerative brake works in the following operations.

- 1. When the accelerator pedal is released, the reduced speed equal to engine braking in a gasoline-fueled vehicle is obtained in accordance with the running mode position of the shift lever.
- 2. When the brake pedal is depressed with the shift lever in "D" or "B", the regenerative brake works.

#### HYDRAULIC BRAKE

This brake system has 3 independent hydraulic circuits. If either circuit should fail, the other will still work. However, the pedal will be harder to press, and your stopping distance will increase. Also, the brake system warning light may come or.



### BRAKE ACTUATOR

The brake actuator uses brake fluid pressurized by the pump to power-assist the brakes. If the brake actuator fails during driving, the brake system warning light comes on and buzzer sounds continuously on this case, the brakes may not work properly. If they do not work well, depress the brake pedal firmly. If the brake system warning light comes on, immediately stop your vehicle and contact your Toyota dealer. The yellow brake system warning light may stay on for about 60 seconds after the "IG-ON" mode is enabled. It is normal if the light turns off after a while.

Depressing the brake pedal repeatedly may turn on the red brake system warning light and buzzer. It is normal if the light turns off and the buzzer stops sounding after a few seconds.

You may hear a small sound in the engine compartment after the hybrid system is started or the brake pedal is depressed repeatedly. This is a pump pulsating sound of the brake system, and it is not a malfunction.

In the following conditions, you may hear a motor sound in the engine compartment.

- The brake pedal is depressed when the hybrid system is turned off.
- The driver's door is opened.
- For a few seconds after the hybrid system is "OFF" and about 90 seconds have passed.

The brake pedal stroke may be short when you press the "POWER" switch with the brake pedal depressed.

### 

- Do not pump the brake pedal if the hybrid system is not operating. Each push on the pedal uses up your reserved brake fluid pressure.
- Even if the power assist is completely lost, the brakes will still work. But you will have to push the pedal hard, much harder than normal. And your braking distance will increase.

### ANTI-LOCK BRAKE SYSTEM

The anti-lock brake system is designed to automatically help prevent lock-up of the wheels during a sudden braking or braking on slippery road surfaces. This assists in providing directional stability and steering performance of the vehicle under these circumstances.

Effective way to press the ABS brake pedal: When the anti-lock brake system function is in action, the Sip indicator in the instrument cluster flashes and you will hear a noise. In this situation, to let the anti-lock brake system work for you, just hold the brake pedal down more firmly. Do not pump the brake in a panic stop. This will result in reduced braking performance.

The anti-lock brake system becomes opeative after the vehicle has accelerated to a speed in excess of approximately 10 km/h (6 mph). It stops operating when the vehicle decelerates to a speed below approximately 5 km/h (3 mph). Depressing the brake pedal on slippery road surfaces such as on a manhole cover, a steel plate at a construction site, joints in a bridge, etc. on a rainy day tends to activate the anti-lock brake system.

When the anti-lock brake system is activated, the following condition may occur. They do not indicate a malfunction of the system:

• You may hear the anti-lock brake system operating and the vibrations of the vehicle body and steering wheel. You may also hear the motor sound in the engine compartment even after the vehicle is stopped.


### 

Do not overestimate the anti-lock brake system: Although the anti-lock brake system assists in providing vehicle control, it is still important to drive with all due care and maintain a moderate speed and safe distance from the vehicle in front of you, because there are limits to the vehicle stability and effectiveness of steering wheel operation even with the antilock brake system on.

If tire grip performance exceeds its capability, or if hydroplaning occurs during high speed driving in the rain, the anti-lock brake system does not provide vehicle control. Anti-lock brake system is not designed to shorten the stopping distance: Always drive at a moderate speed and maintain a safe distance from the vehicle in front of you. Compared with vehicles without an anti-lock brake system, your vehicle may require a longer stopping distance in the following cases:

- Driving on rough, gravel or snowcovered roads.
- Driving with tire chains installed.
- Driving over the steps such as the joints on the road.
- Driving on roads where the road surface is pitted or has other differences in surface height.

Instal all 4 tires of specified size at appropriate pressure: The anti-lock brake system detects vehicle speeds using the speed sensors for respective wheels' turning speeds. The use of tires other than specified may fail to detect the accurate turning speed, resulting in a longer stopping distance.

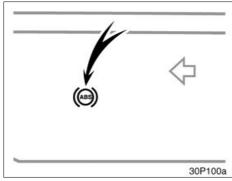

### "ABS" warning light

The light comes on when the "IG-ON" mode is enabled. If the anti-lock brake system works properly, the light turns off after the "READY" light comes on. Thereafter, if the system malfunctions, the light comes on again.

When the "ABS" warning light is on (and the brake system warning light is on), the anti-lock brake system does not operate, but the brake system still operates conventionally. If any of the following conditions occurs, this indicates a malfunction somewhere in the components monitored by the warning light system. Contact your Toyota dealer as soon as possible to service the vehicle.

- The light does not come on when the "IG-ON" mode is enabled, or the "READY" light remains on.
- The light comes on while you are driving.

A warning light turning on briefly during operation does not indicate a problem.

If the "ABS" warning light remains on together with the red brake system warning light, immediately stop your vehicle at a safe place and contact your Toyota dealer.

In this case, not only the articlock brake system function and brake assist function will fail but also the vehicle will become extremely unstable during braking.

Any of the following conditions may occur, but does not indicate a malfunction:

• The light may stay on for about 60 seconds after the "IG-ON" mode is enabled. It is normal if it turns off after a while.

Depressing the brake pedal repeatedly may turn on the light. It is normal if it turns off after a few seconds.

# DRUM-IN-DISC TYPE PARKING BRAKE SYSTEM

Your vehicle has a drum-in-disc type parking brake system. This type of brake system needs bedding-down of the brake shoes periodically or whenever the parking brake shoes and/or drums are replaced.

Have your Toyota dealer, perform the bedding down.

### BRAKE ASSIST SYSTEM

When you slam the brakes on, the brake assist system judges as an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

When you slam the brakes on, more powerful braking will be applied. At this time, you may hear a sound in the engine compartment. This does not indicate a malfunction.

The brake assist system becomes operative after the vehicle has accelerated to a speed in excess of approximately 10 km/h (6 mph). It stops operating when the vehicle decelerates to a speed below approximately 5 km/h (3 mph).

For an explanation of this system's warning light, see "Service reminder indicators and warning buzzers" on page 107.

# Electric power steering system

The electric power steering system, using an electric motor, assists the turning of the steering wheel.

In the following cases, you may feel the steering becomes heavy. However, the electric power steering system warning light does not come on. (Because it is not a malfunction.)

• When maneuvering the steering frequently or keeping the steering wheel turned fully while the vehicle is stopped or moving very slowly

The power steering effect will be reduced to prevent the system from overheating. Avoid turning the steering wheel, or stop the vehicle. When you leave the vehicle in the "IG-ON" mode for a while, the system will become cool.

#### NOTICE

If you repeat the operation which will turn on the overheating prevention function, the electric power steering system may be damaged.


- When the 12 volt battery is discharged Check the 12 volt battery's condition. If necessary, recharge or replace the battery. For details, see "Checking 12 volt battery condition" on page 284.
- When the steering wheel is operated with the hybrid system not to be turned on (with the "READY" light off)

The 12 volt battery capacity is decreased temporarily. The system returns to normal some time after the hybrid system is turned on.

If there is a problem somewhere in the electric power steering system, the warning light comes on in the multi-information display. For details, see "Multi-information display" on page 114.

When you move the steering wheel, an electrical motor noise may be heard. This is power steering motor noise, and is not a malfunction.

### Brake pad wear indicators

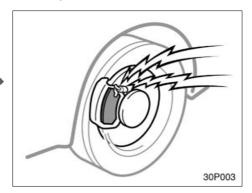

The brake pad wear indicators on your disc brakes give a warning noise when the brake pads are worn to where replacement is required.

If you hear a squealing or scraping noise while driving, have the brake pads checked and replaced by your nearest Toyota dealer as soon as possible.

Avoid continuous driving with the warning noise.

Continuous driving without replacing the brake pads will cause expensive rotor damage and increasing brake pedal effort to get the same stopping distance.

### Your Toyota's identification— —Vehicle identification number

### Luggage stowage precautions

When stowing cargo or luggage in the vehicle, observe the following:

- Put cargo or luggage in the luggage compartment when at all possible. Be sure all items are secured in place.
- Be careful to keep the vehicle balanced. Locating the weight as far forward as possible helps maintain balance.
- For better fuel economy, do not carry unneeded weight.


### 

- To prevent cargo and luggage from sliding forward during braking, do not stack anything in the luggage compartment. Keep cargo and luggage low, as close to the floor as possible.
- Never allow anyone to ride in the luggage compartment. It is not designed for passengers. They should ride in their seats with their seat belts properly fastened. Otherwise, they are much more likely to cause death or serious bodily injury, in the event of sudden braking or a collision.

• Do not place anything on the luggage cover. Such items may be thrown about and possibly injure people in the vehicle during sudden braking or an accident. Secure all items in a safe place.


• Do not drive with objects left on top of the instrument panel. They may interfere with the driver's field of view. Or they may move during sharp vehicle acceleration or turning, and impair the driver's control of the vehicle. In an accident they may injure the vehicle occupants.

otfor

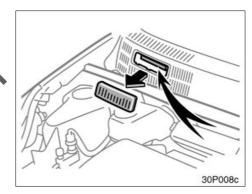

The vehicle identification number (VIN) is the legal identifier for your vehicle. This number is stamped in the engine compartment as shown.

This is the primary identification number for your Toyota. It is used in registering the ownership of your vehicle.

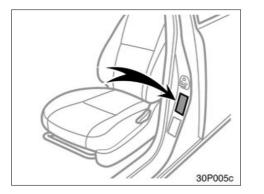

The vehicle identification number (VIN) is also on the manufacturer's plate.

# Engine number Motor number

30P006b

-Engine and motor number

# ) is The engine and motor number plates are installed on the engine and transaxle case as shown.

### Suspension and chassis

### 

Do not modify the suspension/chassis with lift kits, spacers, springs, etc. It can cause dangerous handling characteristics, resulting in loss of control. NotforReproduction

# SECTION 4

# STARTING AND DRIVING

	Before starting the hybrid system	226
	How to start the hybrid system	226
	Pre-trip safety check	228
	Tips for driving in various conditions	230
	Driving in the rain	231
	Winter driving tips	232
	Trailer towing	
	How to save fuel and make your vehicle last longer, too	
Notfo	Reprov	

# Before starting the hybrid system

- 1. Check the area around the vehicle before entering it.
- 2. Adjust seat position, seatback angle, head restraint height and steering wheel angle.
- 3. Adjust the inside and outside rear view mirrors.
- 4. Lock all doors.
- 5. Fasten seat belts.

When you get in the vehicle, check whether the "READY" light is on or not.

# 

Your vehicle does not produce any noise or vibration when the vehicle is ready to be driven with the "READY" light on. Move your foot carefully from the brake pedal to the acceleration pedal when driving.

### How to start the hybrid system— (a) Before starting the hybrid system

- 1. Apply the parking brake firmly.
- 2. Turn off unnecessary lights and accessories.
- d it to 3. Depress the brake pedal and hold it to

(b) Turning on the hybrid system (Using the smart function—on some models)



Before starting the hybrid system, be sure to follow the instructions in "(a) Before starting the hybrid system".

### Normal starting procedure

Carry the key and press the "POWER" switch briefly and firmly with the brake pedal depressed. The "READY" light starts blinking. After a few seconds, the blinking "READY" light remains on and two beeps sound. (If the ambient temperature is low, such as during winter driving conditions, it may take time until the "READY" light is on.)

The engine may not start even with the "READY" light on.

You may hear a motor sound in the engine compartment when the brake pedal is depressed with the hybrid system off.

When the hybrid system is started or stopped, you may hear a sound coming from the hybrid battery in the luggage compartment. However, this does not indicate any trouble.

If there is a problem somewhere in the hybrid system, the hybrid system malfunction warning light will come on in place of the "READY" light. If this happens, contact your Toyota dealer.

### 

Never start the hybrid system from outside the vehicle, or an accident may occur. Be sure to sit on the driver seat, then start the system when driving.

### NOTICE

- The hybrid system cannot be started when the shift position is "N". Be sure to put it in "P" and then start the system.
- If any warning light comes on (See page 107 for details.) or the 12 volt battery is disconnected, the hybrid system may not start by pushing the "POWER" switch. In that case, push it once again. If the "READY" light does not come on, contact your Toyota dealer.
- When you start the hybrid system at a lowered outside temperature, it may take longer before the blinking "READY" light changes to stay on.

(b) Turning on the hybrid system (Using the key)



Before starting the hybrid system, be sure to follow the instructions in "(a) Before starting the hybrid system".

#### Normal starting procedure

Insert the key and press the "POWER" switch briefly and firmly with the brake pedal depressed. The "READY" light starts blinking. After a few seconds, the blinking "READY" light remains on and two beeps sound. (If the ambient temperature is low, such as during winter driving conditions, it may take time until the "READY" light is on.)

The engine may not start even with the "READY" light on.

You may hear a motor sound in the engine compartment when the brake pedal is depressed with the hybrid system off.

When the hybrid system is started or stopped, you may hear a sound coming from the hybrid battery in the luggage compartment. However, this does not indicate any trouble.

If there is a problem somewhere in the hybrid system, the hybrid system malfunction warning light will come on in place of the "READY" light. If this happens, contact your Toyota dealer.

### 

Never start the hybrid system from outside the vehicle, or an accident may occur. Be sure to sit on the driver seat, then start the system when driving.

### NOTICE

- The hybrid system cannot be started when the shift position is "N". Be sure to put it in "P" and then start the system.
- If any warning light comes on (See page 107 for details.) or the 12 volt battery is disconnected, the hybrid system may not start by pushing the "POWER" switch. In that case, push it once again. If the "READY" light does not come on, contact your Toyota dealer.
- When you start the hybrid system at a lowered outside temperature, it may take longer before the blinking "READY" light changes to stay on.

### Pre-trip safety check

It is a good idea to do a safety check before starting out on a trip. A few minutes of checking can help ensure safe and pleasant driving. Just a basic familiarity with your vehicle is required and a careful eye! Or, if you would like, your Toyota dealer will be pleased to make this check for you at a nominal cost.

# 

If you make this check in an enclosed garage, make sure there is adequate ventilation. Engine exhaust is poisonous.

#### BEFORE STARTING THE HYBRID SYS-TEM

#### Outside the vehicle

**Tires.** Check the pressure with a gauge and look carefully for cuts, damage, or excessive wear.

Wheel nuts. Make sure no nuts are missing or loose.

Fluid leaks. After the vehicle has been parked for a while, check underneath for leaking fuel, oil, water, or fluid. (Water dripping from the air conditioning after use is normal.)

**Lights.** Make sure the headlights, stop lights, tail lights, turn signals and other lights are all working. Check the headlight aim.

Inside the vehicle

**Spare tire, jack and wheel nut wrench.** Check the tire pressure and make sure you have your jack and wheel nut wrench.

Seat belts. Check that the buckles lock securely. Make sure the belts are not worn or frayed.

**Instruments and controls.** Especially make sure the service reminder indicators, instrument lights, and defroster are working.

**Brakes.** Make sure the pedal has enough clearance.

**12 volt battery and cables.** Look for corroded or loose terminals and a cracked case. Check the cables for good condition and connections.

### In the engine compartment

**Spare fuses.** Make sure you have spare fuses. They should cover all the amperage ratings designated on the fuse box lid.

**Coolant level.** Make sure the coolant level is correct. (See page 274 for instructions.)

Wiring. Look for damaged, loose, or disconnected wires.

Fuel lines. Check the lines for leaks or loose connections.

### AFTER STARTING THE HYBRID SYSTEM

**Exhaust system.** Listen for any leakage. Have any leaks fixed immediately. (See "Engine exhaust cautions" on page 214.)

**Engine oil level.** Stop the hybrid system and check the dipstick with the vehicle parked on level spot. (See page 272 for instructions.)

### WHILE DRIVING

**Instruments.** Make sure the speedometer and gauges are working.

**Brakes.** In a safe place, check that the brakes do not pull to one side when applied.

Anything unusual? Look for loose parts and leaks. Listen for abnormal noises.

If everything looks O.K., set your mind at ease and enjoy your trip!

# Tips for driving in various conditions

- Always slow down in gusty crosswinds. This will allow you much better control.
- Drive slowly onto curbs and, if possible, at a right angle. Avoid driving onto high, sharp-edged objects and other road hazards. Failure to do so can lead to severe tire damage such as a tire burst.

Drive slowly when passing over bumps or travelling on a bumpy road. Otherwise, the impact could cause severe damage to the tires and/or wheels.

- When parking on a hill, turn the front wheels until they touch the curb so that the vehicle will not roll. Apply the parking brake, and push the "P" position switch. If necessary, block the wheels.
- Washing your vehicle or driving through deep water may get the brakes wet. To see whether they are wet, check that there is no traffic near you, and then press the pedal lightly. If you do not feel a normal braking force, the brakes are probably wet. To dry them, drive the vehicle cautiously while lightly pressing the brake pedal with the parking brake applied. If they still do not work safely, pull to the side of the road and call a Toyota dealer for assistance.

### 

- Before driving off, make sure the parking brake is fully released and the parking brake reminder light is off.
- Do not leave your vehicle unattended with the "READY" light on.
- Do not rest your foot on the brake pedal while driving. It can cause dangerous overheating, needless wear, and poor fuel economy.
- To drive down a long or steep hill, reduce your speed and downshift. Remember, if you ride the brakes excessively, they may overheat and not work properly.
- Be careful when accelerating or braking on a slippery surface. Sudden acceleration or engine braking, could cause the vehicle to skid or spin.

• Do not continue normal driving when the brakes are wet. If they are wet, your vehicle will require a longer stopping distance, and it may pull to one side when the brakes are applied. Also, the parking brake will not hold the vehicle securely.

### Driving in the rain

### Driving on a slippery road surface

Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.

- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

### 

- Sudden braking, acceleration and steering when driving on a slippery road surface may cause tire slippage and reduce your ability to control the vehicle, resulting in an accident.
- Sudden changes in engine speed, such as sudden engine braking, may cause the vehicle to skid, resulting in an accident.
- After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected, resulting in an accident.

### When encountering flooded roads

Do not drive on a road that has flooded after heavy rain etc. Doing so may cause serious damage to the vehicle.

### NOTICE

Driving on a flooded road may cause the engine to stall as well as cause serious vehicle malfunctions such as shorts in electrical components and engine damage from water immersion. In the event that you drive on a flooded road and the vehicle is flooded, be sure to have your Toyota dealer check brake function, changes in quantity and quality of engine oil, transaxle fluid for the hybrid system, etc. and lubricant condition for the bearings and suspension joints (where possible) and the function of all joints and bearings.

### Winter driving tips

# Make sure you have a proper freeze protection for engine coolant.

Only use "Toyota Super Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology. (Coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids.)

See "Checking the coolant level" on page 274 for details of coolant type selection.

"Toyota Super Long Life Coolant" is a mixture of 50% coolant and 50% deionized water. This coolant provides protection down to about  $-35^{\circ}C$  ( $-31^{\circ}F$ ).

### NOTICE

Do not use plain water alone.

### Check the condition of the 12 volt battery and cables.

Cold temperatures reduce the capacity of any 12 volt battery, so it must be in top shape to provide enough power for winter starting. Section 8–3 tells you how to visually inspect the 12 volt battery. Your Toyota dealer will be pleased to check the level of charge.

# Make sure the engine oil viscosity is suitable for the cold weather.

See page 273 for recommended viscosity. Leaving a heavy summer oil in your vehicle during winter months may cause harder starting. If you are not sure about which oil to use, call your Toyota deale.

### Keep the door locks from freezing.

Squirt lock de-icer or glycerine into the locks to keep them from freezing.

#### Use a washer fluid containing an antifreeze solution.

This product is available at your Toyota dealer and most auto parts stores. Follow the manufacturer's directions for how much to mix with water.

NOTICE

Do not use engine antifreeze or any other substitute because it may damage your vehicle's paint.

#### Do not use your parking brake when there is a possibility it could freeze.

When parking, push the "P" position switch and block the rear wheels. Do not use the parking brake, for snow or water accumulated in and around the parking brake mechanism may freeze, making it hard to release.


# Keep ice and snow from accumulating under the fenders.

Ice and snow built up under your fenders can make steering difficult. During extreme winter driving, stop and check under the fenders occasionally.

### Depending on where you are driving, we recommend you carry some emergency equipment.

Some of the things you might put in the vehicle are tire chains, window scraper, bag of sand or salt, flares, small shovel, jumper cables, etc.

### **Trailer towing**

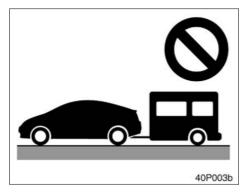

Toyota does not recommend towing a trailer with your Toyota. It is not designed for trailer towing.

# How to save fuel and make your vehicle last longer, too

Improving fuel economy is easy-just take it easy. It will help make your vehicle last longer, too. Here are some specific tips on how to save money on both fuel and repairs:

- Keep your tires inflated at the correct pressure. Underinflation causes tire wear and wastes fuel. See page 276 for instructions.
- Do not carry unneeded weight in your vehicle. Excess weight puts a heavier load on the engine, causing greater fuel consumption.
- Accelerate slowly and smoothly. Avoid jackrabbit starts.
- Avoid continuous speeding up and slowing down. Stop-and-go driving wastes power.
- Avoid unnecessary stopping and braking. Maintain a steady pace. Try to time the traffic signals so you only need to stop as little as possible or take advantage of through streets to avoid traffic lights. Keep a proper distance from other vehicles to avoid sudden braking. This will also reduce wear on your brakes.
- Avoid heavy traffic or traffic jams whenever possible.

- Do not rest your foot on the brake pedal. This causes premature wear, overheating and poor fuel economy.
- Maintain a moderate speed on highways. The faster you drive, the greater the fuel consumption. By reducing your speed, you will cut down on fuel consumption.
- Keep the front wheels in proper alignment. Avoid hitting the curb and slow down on rough roads. Improper alignment not only causes faster tire wear but also puts an extra load on the engine, which, in turn, wastes fuel.
- Keep the bottom of your vehicle free from mud, etc. This not only lessens weight but also helps prevent corrosion.
- Keep your vehicle tuned-up and in top shape. A dirty air cleaner, improper valve clearance, dirty plugs, dirty oil and grease, brakes not adjusted, etc. all lower engine performance and contribute to poor fuel economy. For longer life of all parts and lower operating costs, keep all maintenance work on schedule, and if you often drive under severe conditions, see that your vehicle receives more frequent maintenance. (See page 261.)

Never turn off the hybrid system to coast down hills. Your power steering and brake booster will not function without the hybrid system running. Also, the emission control system operates properly only when the hybrid system is running.

NotforReproduction

# SECTION 5

# IN CASE OF AN EMERGENCY

	If your vehicle will not start	236
	If your hybrid system stalls while driving	
	If your vehicle overheats	
	If you have a flat tire	
	If your vehicle needs to be towed	
	If you lose your keys	
Notfo	Reproduction opener	

### If your vehicle will not start— (a) Simple checks

Before making these checks, make sure you have followed the correct starting procedure given in "How to start the hybrid system" on page 226 and that you have sufficient fuel. Also check whether the other keys will start the hybrid system. If they work, your key may be broken. Have the key checked at your Toyota dealer. If none of your keys work, there may be a malfunction in the hybrid vehicle immobilizer system. Call your Toyota dealer. (See "Keys" on page 18.)


If the instrument cluster dims or the instrument cluster display turns off with the hybrid system on—

- 1. Check that the 12 volt battery terminals are tight and clean.
- If the 12 volt battery terminals are O.K., the 12 volt battery is discharged. You may try jump starting. See "(b) Jump starting" for further instructions.

#### NOTICE

Hybrid vehicles cannot be pushstarted. If the instrument cluster is shown in appropriate brightness when the hybrid system is in the "IG-ON" mode—

The hybrid vehicle system is suspected to be faulty. Contact your Toyota dealer.

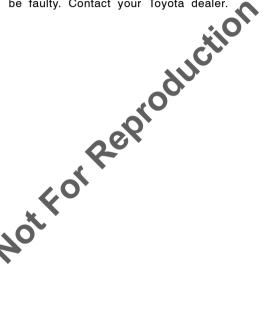

### (b) Jump starting

If the 12 volt battery is discharged, the hybrid system can be started by jump starting. Depending on the the vehicle condition, the engine may not start.

To avoid serious personal injury and damage to your vehicle which might result from battery explosion, acid burns, electrical burns, or damaged electronic components, these instructions must be followed precisely.

If the 12 volt battery is discharged, you cannot access to the 12 volt battery in the luggage compartment because the back door cannot be opened. Use the exclusive jump starting terminal in the engine compartment. For details, see "JUMP STARTING PROCEDURE" on page 237.

### NOTICE


If the 12 volt battery is discharged with the transaxle in "P", your vehicle cannot be moved unless the front wheels are raised. This is because the front wheels are locked by means of the parking lock mechanism. If you are unsure about how to follow this procedure, we strongly recommend that you seek the help of a competent mechanic or towing service.

### 

- Booster battery contains sulfuric acid which is poisonous and corrosive. Wear protective safety glasses when jump starting, and avoid spilling acid on your skin, clothing, or vehicle.
- If you should accidentally get acid on yourself or in your eyes, remove any contaminated clothing and flush the affected area with water immediately. Then get immediate medical attention. If possible, continue to apply water with a sponge or cloth while en route to the medical office.
- The gas normally produced by a battery will explode if a flame or spark is brought near. Use only standardized jumper cables and do not smoke or light a match while jump starting.


### NOTICE

- The battery used for boosting must be 12 V. Do not jump start unless you are sure that the booster battery is correct.
- ♦ After jump starting procedure, the hybrid system may not start by pushing the "POWER" switch. In that case, push it once again. If the "READY" light does not come on, contact your Toyota dealer.
- The exclusive jump starting terminal is to be used when charging the 12 volt battery from another vehicle in an emergency. It cannot be used to jump start another vehicle.

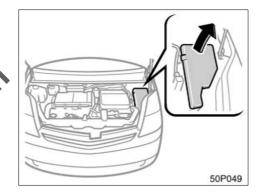

### JUMP STARTING PROCEDURE


- 1. Apply the parking brake and turn off the headlight switch and interior light.
- 2. Turn off the hybrid system and remove the key if inserted.
- 3. Open the hood and fuse block cover shown in the above illustration.

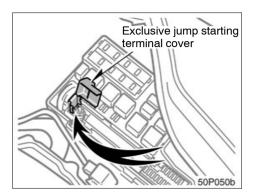


- 4. Open the exclusive jump starting terminal cover.
- If the booster battery is installed in another vehicle, make sure the vehicles are not touching. Turn off all unnecessary lights and accessories.

When boosting, use the battery of matching or higher quality. Any other battery may be difficult to jump start with. If jump starting is difficult, charge the battery for several minutes.

- If required, remove all the vent plugs from the booster batteries. Lay a cloth over the open vents on the batteries. (This helps reduce the explosion hazard, personal injuries and burns.)
- 7. If the engine in the vehicle with the booster battery is not running, start it and let it run for a few minutes. During jump starting, run the engine at about ot for Reproduction 2000 rpm with the accelerator pedal

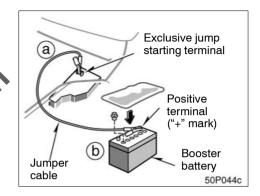


- 8. Connect the jumper cables in the order a, b, c, d.
  - a. Connect the clamp of the positive (red) jumper cable to the exclusive jump starting terminal.
  - b. Connect the clamp at the other end of the positive (red) jumper cable to the positive (+) terminal on the booster battery.

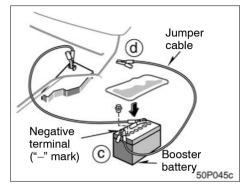

- c. Connect the clamp of the negative (black) jumper cable to the negative (-) terminal on the booster battery.
- d. Connect the clamp at the other end of the negative (black) jumper cable to a solid, stationary, unpainted, metallic point of the vehicle with the discharged battery.

The recommended connecting point is shown in the following illustration:

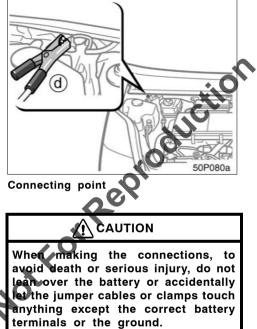

 Charge the discharged battery with the jumper cables connected for approximately 5 minutes. At this time, run the engine in the vehicle with the booster battery at about 2000 rpm with the accelerator pedal lightly depressed.

- Start the hybrid system. Make sure the "READY" light is on. If the hybrid battery warning light comes on in the multi-information display, the hybrid battery is also discharged. Contact your Toyota dealer.
- 11. Carefully disconnect the cables in the exact reverse order: the negative cable and then the positive cable.
- 12. Carefully dispose of the battery cover cloths—they may now contain sulfuric acid.
- 13. If removed, replace all the battery vent plugs.

If the cause of your 12 volt battery discharging is not apparent (for example, lights left on), you should have it checked at your Toyota dealer.

If the first start attempt is not successful...

Check that the clamp on the jumper cables are tight. Recharge the discharged battery with the jumper cables connected for several minutes and restart your hybrid system in the normal way.

If the another attempt is not successful, the battery may be depleted. Have it checked at your Toyota dealer.

# If your hybrid system stalls while driving

If your hybrid system stalls while driving ...

- 1. Reduce your speed gradually, keeping a straight line. Move cautiously off the road to a safe place.
- 2. Turn on your emergency flashers.
- 3. Try starting the hybrid system again.

If the hybrid system will not start, see "If your vehicle will not start" on page 236.

### 

If the hybrid system is not operating, the power assist for the brakes and steering will not work so steering and braking will be much harder than usual.

### If your vehicle overheats

If your high coolant temperature warning light comes on, if you experience a loss of power, or if you hear a loud knocking or pinging noise, the hybrid system has probably overheated. You should follow this procedure...

- 1. Pull safely off the road, stop the vehicle and turn on your emergency flashers. Push the "P" position switch and apply the parking brake. Turn off the air conditioning if it is being used.
- 2. If coolant or steam is boling out of the radiator or reserved, stop the hybrid system. Wait until the steam subsides before opening the hood. If there is no coolant boling over or steam, leave the hybrid system running and make sure the electric cooling fan is operating. If it is not, turn the hybrid system off.

## 

To help avoid personal injury, keep the hood closed until there is no steam. Escaping steam or coolant is a sign of very high pressure. 3. Look for obvious coolant leaks from the radiator, hoses, and under the vehicle. However, note that water draining from the air conditioning is normal if it has been used.

### 

When the hybrid system is running, keep hands and clothing away from the moving fan and engine drive belts.

- 4. If the coolant is leaking, stop the hybrid system immediately. Call a Toyota dealer for assistance.
- 5. If there are no obvious leaks, check the coolant reservoir. If it is dry, add coolant to the reservoir while the hybrid system is running. Fill it about half full.



Do not attempt to remove the radiator cap when the hybrid system and radiator are hot. Serious injury could result from scalding hot fluid and steam blown out under pressure. 6. After the coolant temperature has cooled to normal, again check the coolant level in the reservoir. If necessary, bring it up to half full again. Serious coolant loss indicates a leak in the system. You should have it checked as soon as possible at your Toyota dealer.

### If you have a flat tire-

- Reduce your speed gradually, keeping a straight line. Move cautiously off the road to a safe place well away from the traffic. Avoid stopping on the center divider of a highway. Park on a level spot with firm ground.
- 2. Stop the hybrid system and turn or your emergency flashers.
- 3. Firmly set the parking brake
- 4. Have everyone get out of the vehicle on the side away from raffic.
- 5. Read the following instructions thoroughly.

### CAUTION

When jacking, be sure to observe the following to reduce the possibility of death or serious injury:


• Follow jacking instructions.

- Do not put any part of your body under the vehicle supported by a jack. Otherwise, personal injury may occur.
- Do not start or run the hybrid system while your vehicle is supported by the jack.

- Stop the vehicle at a level firm ground, firmly set the parking brake. Block the wheel diagonally opposite to the one being changed if necessary.
- Make sure to set the jack properly in the jack point. Raising the vehicle with jack improperly positioned will damage the vehicle or may allow the vehicle to fall off the jack and cause personal injury.
- Never get under the vehicle when the vehicle is supported by the jack alone; use vehicle support stands.
- Use the jack only for lifting your vehicle during wheel changing.
- Do not raise the vehicle with someone in the vehicle.
- When raising the vehicle, do not place any objects on top of or underneath the jack.
- Raise the vehicle only high enough to remove and change the tire.

### NOTICE

Do not continue driving with a deflated tire. Driving even a short distance can damage a tire and wheel beyond repair.

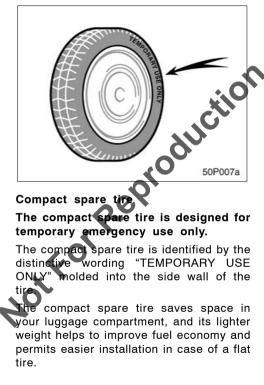

The compact spare tire can be used many times, if necessary. It has tread life of up to 4800 km (3000 miles) depending on road conditions and your driving habits. When treadwear indicators appear on the tire, replace the tire.

See also the tire information on page 277 for details on the treadwear indicators and other service information.


## 

- The compact spare tire was designed especially for your Toyota. Do not use it on any other vehicle.
- Do not use more than one compact spare tire at the same time.
- Do not exceed 80 km/h (50 mph) when driving with the compact spare tire.
- Replace the compact spare tire with the standard tire as soon as possible.
- Avoid sudden acceleration, sudden deceleration and sharp turns with the compact spare tire.

# —Required tools and spare tire

### NOTICE


- Your ground clearance is reduced when the compact spare tire is installed so avoid driving over obstacles and drive slowly on rough, unpaved roads and speed bumps. Also, do not attempt to go through an automatic car wash as the vehicle may get caught, resulting in damage.
- Temporary spare tyres fitted to this vehicle must have a maximum load rating of not less than 710 kg or a load index of 96 and a speed category symbol of not less than M (130 km/h). See page 299 for tire size.

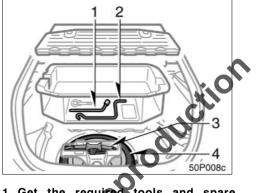

- 1. Get the required tools and spare tire.
  - Wheel nut wrench
  - 2 Jack handle
    - Jack
  - Spare tire

To open the luggage storage box, see "Luggage storage box" on page 208.

To prepare yourself for an emergency, you should familiarize yourself with the use of the jack, each of the tools and their storage locations.

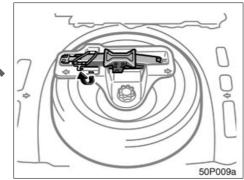

To remove the jack, unlock the tightening strap.

To store the jack, make sure it is securely held by the tightening strap.


# 1 2 3 50P010e

- To remove the spare tire:
- 1. Remove the luggage storage box.
- 2. Loosen the bolt and remove it.
- 3. Remove the jack box.

Then take the spare tire out of the vehicle.

When storing the spare tire, put it in place with the inner side of the wheel facing up. Then secure the tire by repeating the above removal steps in reverse order to prevent it from flying forward during a collision or sudden braking.


When installing the jack box, align the arrows on the jack box with the ones on the body.

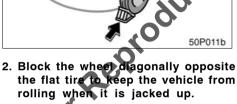

-Blocking the wheel

When chocking the wheel, place a wheel block in front of one of the front wheels or behind one of the rear wheels.

### -Loosening wheel nuts

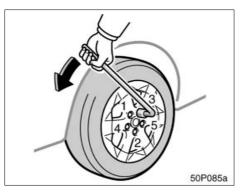

### 3. Loosen all the wheel nuts.


Always loosen the wheel nuts before raising the vehicle.

Turn the wheel nuts counterclockwise to loosen them. To get maximum leverage, fit the wrench to the nut so that the handle is on the right side, as shown above. Grab the wrench near the end of the handle and pull up on the handle. Be careful that the wrench does not slip off the nut.

Do not remove the nuts yet—just unscrew them about one-half turn in the order shown.

## —Positioning the jack

## -Raising your vehicle

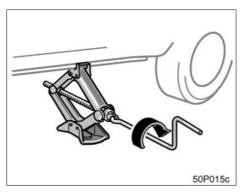


5. After making sure no one is in the vehicle, raise it high enough so that the spare tire can be installed.

Remember you will need more ground clearance when putting on the spare tire than when removing the flat tire.

To raise the vehicle, insert the jack handle into the jack (it is a loose fit) and turn it clockwise. As the jack touches the vehicle and begins to lift, double-check that it is properly positioned.

# 

Never use oil or grease on the bolts or nuts. The nuts may loosen and the wheels may fall off, which could cause a serious accident.

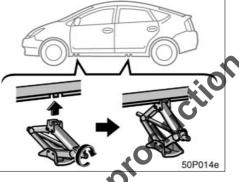


4. Position the jack at the jack points as shown.


Make sure the jack is positioned on a level and on jace.

### -Changing wheels



Never get under the vehicle when the vehicle is supported by the jack alone; use vehicle support stands.

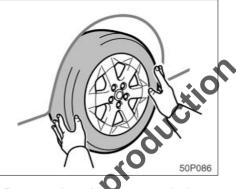

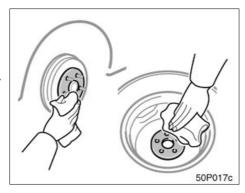


# 6. Remove the wheel nuts and change tires.

Lift the flat tire straight off and put it aside.

Roll the spare wheel into position and align the holes in the wheel with the bolts. Then lift up the wheel and get at least the top bolt started through its hole. Wiggle the tire and press it back over the other bolts. Before putting on wheels, remove any corrosion on the mounting surfaces with a wire brush or such. Installation of wheels without good metal-to-metal contact at the mounting surface can cause wheel nuts to loosen and eventually cause a wheel to come off while driving. Therefore after the first 1600 km (1000 miles), check to see that the wheel nuts are tight.

### -Reinstalling wheel nuts

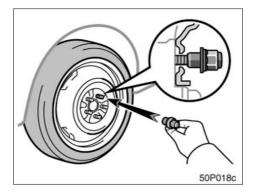


7. Reinstall all the wheel nuts finger tight.

Reinstall the wheel nuts (tapered end inward) and tighten them as much as you can by hand. Press back on the tire and see if you can tighten them more.

Never use oil or grease on the bolts or nuts. Doing so may lead to overtightening the nuts and damaging the bolts. The nuts may loosen and the wheels may fall off, which could cause a serious accident. If there is oil or grease on any bolt or nut, clean it.

### -Lowering your vehicle

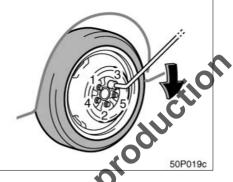

# 8. Lower the vehicle completely and tighten the wheel nuts.

Turn the jack handle counterclockwise to lower the vehicle.

Use only the wheel nut wrench to tighten the nuts. Do not use other tools or any additional leverage other than your hands, such as a hammer, pipe or your foot. Make sure the wrench is securely engaged over the nut.

Tighten each nut a little at a time in the order shown. Repeat the process until all the nuts are tight.

## 

- When lowering the vehicle, make sure all portions of your body and all other persons around will not be injured as the vehicle is lowered to the ground.
- Have the wheel nuts tightened with torque wrench to 103 N·m (10.5 kgf·m, 76ft·lbf), as soon as possible after changing wheels. Otherwise, the nuts may loosen and the wheels may fall off, which could cause a serious accident.
- Do not attach a heavily damaged plastic wheel ornament. It may fly off the wheel and cause accidents while the vehicle is moving.

## —After changing wheels

### 9. Check the air pressure of the replaced tire.

Adjust the air pressure to the specification designated on page 299. If the pressure is lower than specified, drive slowly to the nearest Toyota dealer and fill to the correct pressure.

Do not forget to reinstall the tire inflation valve cap as dirt and moisture could get into the valve core and possibly cause air leakage. If the cap is missing, have a new one put on as soon as possible.

10. Restow all the tools, jack and flat tire securely.


As soon as possible after changing wheels, tighten the wheel nuts to the torque specified on page 299 with a torque wrench. Have a technician repair the flat tire and replace the spare tire with it.

## 

Before driving, make sure all the tools, jack and flat tire are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.

# If your vehicle needs to be towed—

(a) Towing with wheel lift type truck— —From front

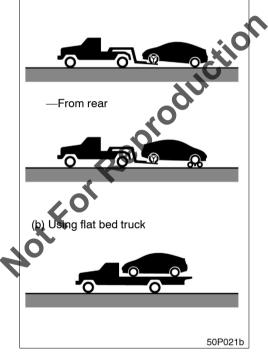

If towing is necessary, we recommend you to have it done by your Toyota dealer or a commercial tow truck service. In consultation with them, have your vehicle towed using either (a) or (b).

Only when you cannot receive a towing service from a Toyota dealer or commercial tow truck service, tow your vehicle carefully in accordance with the instructions given in "—Emergency towing" on page 249.

Proper equipment will help ensure that your vehicle is not damaged while being towed. Commercial operators are generally aware of the state/provincial and local laws pertaining to towing.

Your vehicle can be damaged if it is towed incorrectly. Although most operators know the correct procedure, it is possible to make a mistake. To avoid damage to your vehicle, make sure the following precautions are observed. If necessary, show this page to the tow truck driver.

### **TOWING PRECAUTIONS:**

Use a safety chain system for all towing, and abide by the state/provincial and local laws. The wheels and axle on the ground must be in good condition. If they are damaged, use a towing dolly.

(a) Towing with wheel lift type truck From front—Release the parking brake.

### NOTICE


When lifting wheels, take care to ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Otherwise, the underbody of the towed vehicle will be damaged during towing.

From rear—Use a towing dolly under the front wheels.


### NOTICE

Never tow a vehicle from the rear with the front wheels on the ground, as this may cause serious damage to the transmission.

(b) Using flat bed truck

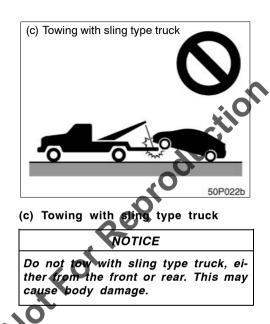

## —Emergency towing

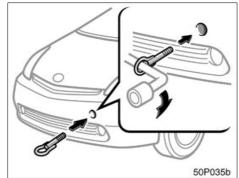

If towing is necessary, we recommend you to have it done by your Toyota dealer or a commercial tow truck service.

If towing service is not available in an emergency, your vehicle may be temporarily towed by a cable or chain secured to emergency towing eyelet inside of front bumper. Use extreme caution when towing vehicles.

## —Installing towing eyelet

### NOTICE

- Only use specified towing eyelet; otherwise your vehicle may be damaged.
- Never tow a vehicle from the rear with four wheels on the ground. This may cause serious damage to the transaxle.

A driver must be in the vehicle to steer it and operate the brakes.

Towing in this manner may be done only on hard-surfaced roads for a short distance and below 30 km/h (18 mph). Also, the wheels, axles, drive train, steering and brakes must all be in good condition.

# 

Use extreme caution when towing vehicles. Avoid sudden starts or erratic driving maneuvers which would place excessive stress on the emergency towing eyelet and towing cable or chain. The eyelet and towing cable or chain may break and cause serious injury or damage.

### NOTICE

Use only a cable or chain specifically intended for use in towing vehicles. Securely fasten the cable or chain to the towing eyelet provided.


Before towing, release the parking brake and put the hybrid transaxle in N. The hybrid system must be in the "IG-ON" mode.

In the following cases, as the front wheels might be locked by means of the parking lock mechanism, your vehicle cannot be towed by another vehicle using a rope. Have your vehicle carried with the front wheels or all the wheels raised.

- If the parking mechanism fails.
- If the 12 volt battery is discharged.


## 

If the hybrid system is not running, the power assist for the brakes and steering will not work so steering and braking will be much harder than usual.

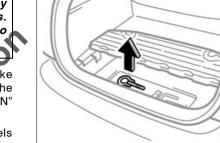


1. Remove the towing eyelet as shown in the illustration.

50P046a

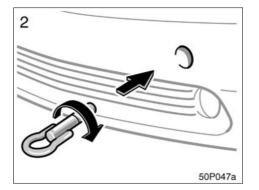

2. Secure the towing eyelet to the hole on the bumper by turning it clockwise.

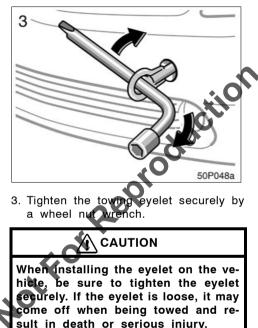

### If you lose your keys


### You can purchase a new key at your Toyota dealer if you can give them the key number and master key.

Even if you lose only one key, contact your Toyota dealer to make a new key. If you lose all your master keys, you cannot make new keys; the whole hybrid vehicle immobilizer system must be replaced.

See the suggestion given in "Keys" on page 18.

If your keys are locked in the vehicle and you cannot get a duplicate, many Toyota dealers can still open the door for you, using their special tools. If you must break a window to get in, we suggest breaking the smallest side window because it is the least expensive to replace. Be extremely cautious to avoid cuts from the glass.


# If you cannot operate back door opener

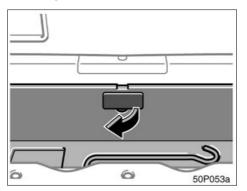

If the back door opener does not operate, you can open the back door from the inside.

To open the back door from inside, perform the following procedure.

1. Open the luggage storage box (See "Luggage storage box" on page 208.) and remove the cover.

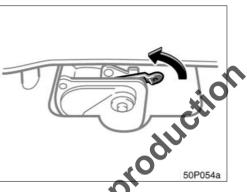

2. Pull the lever with the back door motor, open the back door.

Be sure to have the back door opener checked/repaired by your Toyota dealer.

X

# SECTION 6

# **CORROSION PREVENTION AND APPEARANCE CARE**

Protecting your Toyota from corrosion	54
Washing and waxing your Toyota	55
Cleaning the interior	57

# Protecting your Toyota from corrosion

Toyota, through the diligent research, design and use of the most advanced technology available, helps prevent corrosion and provides you with the finest quality vehicle construction. Now, it is up to you. Proper care of your Toyota can help ensure long-term corrosion prevention.

# The most common causes of corrosion to your vehicle are:

- The accumulation of road salt, dirt and moisture in hard-to-reach areas under the vehicle.
- Chipping of paint, or undercoating caused by minor accidents or by stones and gravel.

Care is especially important if you live in particular areas or operate your vehicle under certain environmental conditions:

- Road salt or dust control chemicals will accelerate corrosion, as will the presence of salt in the air near the seacoast or in areas of industrial pollution.
- High humidity accelerates corrosion especially when temperatures range just above the freezing point.

- Wetness or dampness to certain parts of your vehicle for an extended period of time, may cause corrosion even though other parts of the vehicle may be dry.
- High ambient temperatures can cause corrosion to those components of the vehicle which do not dry quickly due to lack of proper ventilation.

The above signifies the necessity to keep your vehicle, particularly the underside, as clean as possible and to repair any damage to paint or protective coatings as soon as possible.

To help prevent corrosion on your Toyota, follow these guidelines:

Wash your vehicle frequently. It is, of course, necessary to keep your vehicle clean by regular washing, but to prevent corrosion, the following points should be observed:

If you drive on salted roads in the winter or if you live near the ocean, you should hose off the undercarriage at least once a month to minimize corrosion.

- Pay particular attention to the vehicle's underside and wheel housings as it is difficult to see all the mud and dirt. It will do more harm than good to simply wet the mud and debris without removing. The lower edge of doors, rocker panels and frame members have drain holes which should not be allowed to clog with dirt as trapped water in these areas can cause corrosion.
- Wash the underside of the vehicle thoroughly when winter is over.

See "Washing and waxing your Toyota" for more tips.

Check the condition of your vehicle's paint and trim. If you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through the bare metal, have a qualified body shop make the repair.

**Check the interior of your vehicle.** Water and dirt can accumulate under the floor mats and could cause corrosion. Occasionally check under the mats to make sure the area is dry. Be particularly careful when transporting chemicals, cleansers, fertilizers, salt, etc.; these should be transported in proper containers. If a spill or leak should occur, immediately clean and dry the area.

Keep your vehicle in a well ventilated garage or a roofed place. Do not park your vehicle in a damp, poorly ventilated garage. If you wash your vehicle in the garage, or if you drive it covered with water or snow, your garage may be so damp as to cause corrosion. Even if your garage is heated, a wet vehicle can corrode if the ventilation is poor.

# Washing and waxing your Toyota

Your Toyota is a hybrid vehicle. Pay particular attention when washing your Toyota.

### NOTICE

Before washing your Toyota, be sure to observe the following in order to avoid the risk of damage to your vehicle.

Do not splash water on the electric components in the engine compartment. This may cause the malfunction of the electric components.

## Washing your Toyota

Keep your vehicle clean by regular washing.

- The following cases may cause weakness to the paint or corrosion to the body and parts. Wash your vehicle as soon as possible.
- When driving in a coastal area
- When driving on a road sprinkled with antifreeze
- When exposed to coal tar, tree sap, bird droppings and carcass of an insect

- When driving in areas where there is a lot of smoke, soot, dust, iron dust or chemical substances
- When the vehicle becomes remarkably dirty with dust and mud

### Hand–washing your Toyota

Work in the shade and wait until the vehicle body is not warm to the touch.

## 

- When cleaning under floor or chassis, be careful not to injure your hands.
- Exhaust gasses cause the exhaust pipe to become quite hot. When washing the vehicle, be careful not to touch the pipe until it has cooled sufficiently, as touching a hot exhaust pipe can cause burns.
- 1. Rinse off loose dirt with a hose. Remove any mud or road salt from the underside of the vehicle or the wheel wells.

 Wash with a mild car-wash soap, mixed according to the manufacturer's instructions. Use a soft cotton mitt and keep it wet by dipping it frequently into the wash water. Do not rub hard—let the soap and water remove the dirt.

**Plastic wheel ornaments:** The plastic wheel ornaments are damaged easily by organic substances. If any organic substances splash an ornament, be sure to wash them off with water and check if the ornament is damaged.

Aluminum wheels: Use only a mild soap or neutral detergent.

### NOTICE

- Do not use corrosive chemicalbased cleaners on your wheels. (Example: hydrofluoric acid)
- Do not use steam cleaners or the chemicals therein to clean your wheels.
- Do not use scouring pads, wire brushes, or coarse abrasives to clean your wheels.
- Do not use alcohol, solvents, gasoline, or other non-neutral detergents, because they may alter the wheel's appearance and resistance to corrosion.

**Plastic bumpers:** Wash carefully. Do not scrub with abrasive cleaners. The bumper faces are soft.

**Exterior lights:** Wash carefully. Do not use organic substances or scrub them with a hard brush. This may damage the surfaces of the lights.

**Road tar:** Remove with turpentine or cleaners that are marked safe for painted surfaces.

- 3. Rinse thoroughly—dried soap can cause streaking. In hor weather you may need to rinse each section right after you wash it
- 4. To prevent water spots, dry the vehicle using a clean soft cotton towel. Do not rub or press hard—you might scratch the paint.

### NOTICE

- Do not use organic substances (gasoline kerosene, benzine or strong solvents) which may be toxic or cause damage.
- Do not scrub any part of the vehicle with a hard brush, which may cause damage.

### Automatic car wash

Your vehicle may be washed in an automatic car wash, but remember that the paint can be scratched by some types of brushes, unfiltered washing water, or the washing process itself. Scratching reduces paint durability and gloss, especially on darker colors. The manager of the car wash should be able to advise you whether the process is safe for the paint on your vehicle.

### NOTICE

To prevent damage to the antenna, make sure to remove it before driving your Toyota through an automatic car wash.

### Waxing your Toyota

### Polishing and waxing is recommended to maintain the original beauty of your Toyota's finish.

Apply wax once a month or if the vehicle surface does not repel water well.

- Always wash and dry the vehicle before you begin waxing, even if you are using a combined cleaner and wax.
- 2. Use a good quality polish and wax. If the finish has become extremely weathered, use a car-cleaning polish, followed by a separate wax. Carefully follow the manufacturer's instructions and precautions. Be sure to polish and wax the chrome trim as well as the paint.

### NOTICE

If a nozzle becomes blocked, do not try to clear it with a pin or other object. The nozzle will be damaged.

**Exterior lights:** Do not apply wax on the surfaces of the lights. Wax may cause damage to the lenses. If you accidentally put wax on the light surfaces, wipe or wash it off.

3. Wax the vehicle again when water does not bead but remains on the surface in large patches.

### Touch-up paint

# Touch-up paint may be used to cover small chips or scratches.

Apply the paint soon after the damage occurs or corrosion may set in. It do a good job, use a small artist's brush and stir the paint well. Make sure the area is clean and dry. To apply the touch-up paint so it is hardly noticeable, the trick is to apply it only to the bare spots. Apply only the smallest amount possible and do not paint the surface around the scratch or chip.

### Cleaning the interior

## 

- Do not splash or spill liquid in the vehicle, such as on the floor, in the hybrid battery (traction battery) air vents, or in the luggage compartment. Doing so may cause the hybrid battery, electrical components etc. to malfunction or catch fire.
- Vehicles with side airbags: Be careful not to splash water or spill liquid on the floor. This may prevent the side airbags from activating correctly, resulting in death or serious injury.

### NOTICE

Do not wash the vehicle floor with water, or allow water to get onto the floor when cleaning the vehicle interior or exterior. Water may get into audio components or other electrical components above or under the vehicle carpet (or floor mat) and cause fire or malfunction; and it may cause body corrosion.

#### Vinyl interior

# The vinyl upholstery may be easily cleaned with a mild soap or detergent and water.

First vacuum over the upholstery to remove loose dirt. Then, using a sponge or soft cloth, apply the soap solution to the vinyl. After allowing it to soak in for a few minutes to loosen the dirt, remove the dirt and wipe off the soap with a clean damp cloth. If all the dirt do not come off, repeat the procedure. Commercial foamingtype vinyl cleaners are also available which work well. Follow the manufacturer's instructions.

### NOTICE

Do not use solvent, thinner, gasoline or window cleaner on the interior.

### Carpets

# Use a good foam-type shampoo to clean the carpets.

Begin by vacuuming thoroughly to remove as much dirt as possible. Several types of foam cleaners are available; some are in aerosol cans and others are powers or liquids which you mix with water to produce a foam. To shampoo the carpets, use a sponge or brush to apply the foam. Rub in overlapping circles.

Do not apply water—the best results are obtained by keeping the carpet as dry as possible. Read the shampoo instructions and follow them closely.

### Seat belts

The seat pelts may be cleaned with mild soap and water or with lukewarm water.

Use a cloth or sponge. As you are cleaning, check the belts for excessive wear, fraying, or cuts.

### NOTICE

- Do not use dye or bleach on the belts-it may weaken them.
- Do not use the belts until they become dry.

Windows

### NOTICE

- Do not use glass cleaner to clean the inside of the rear window, as this may cause damage to the rear window defogger heater wires. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires.
- When cleaning the inside of the rear window, be careful not to scratch or damage the heater wires.

Air conditioning control panel, audio, instrument panel, console panel, and switches

#### Use a soft damp cloth for cleaning.

Soak a clean soft cloth in water or lukewarm water then lightly wipe off dirt.

### NOTICE

- Do not use organic substances (solvents, kerosene, alcohol, gasoline, etc.) or alkaline or acidic solutions. These chemicals can cause discoloring, staining or peeling of the surface.
- If you use cleaners or polishing agents, make sure their ingredients do not include the substances mentioned above.
- If you use a liquid car freshener, do not apply the liquid onto the vehicle's interior surfaces. It may contain the ingredients mentioned above. Immediately clean any spill using the method mentioned above.

#### Leather interior

# The leather upholstery may be cleaned with neutral detergent for wool.

Remove dirt using a soft cloth dampened with 5% solution of neutral detergent for wool. Then thoroughly wipe off all traces of detergent with a clean damp cloth.

After cleaning or whenever any part of the leather gets wet, dry with a soft clean cloth. Allow the leather to dry in a ventilated shaded area.

## NOTICE

- If a stain should fail to come out with a neutral detergent, apply a cleaner that does not contain an organic solvent.
- Never use organic substances such as benzine, alcohol or gasoline, or alkaline or acid solutions for cleaning the leather as these could cause discoloring.
- Use of a nylon brush or synthetic fiber cloth, etc. may scratch the fine grained surface of the leather.

- Mildew may develop on soiled leather upholstery. Be especially careful to avoid oil spots. Try to keep your upholstery always clean.
- Long exposure to direct sunlight may cause the leather surface to harden and shrink. Keep your vehicle in a shaded area, especially in the summer.
- The interior of your vehicle is apt to heat up on hot summer days, so avoid placing on the upholstery items made of vinyl or plastic or containing wax as these tend to stick to leather when warm.
- Improper cleaning of the leather upholstery could result in discoloration or staining.

If you have any questions about the cleaning of your Toyota, your local Toyota dealer will be pleased to answer them. NotforReproduction




# **MAINTENANCE REQUIREMENTS**

Maintenance facts	262
Does your vehicle need repairing?	263

drep.

### Maintenance facts

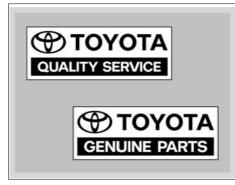

### Regular maintenance is essential.

We urge you to protect your new vehicle by having your Toyota serviced according to the maintenance schedule given on the following pages. Regular maintenance will aid:

- Good fuel economy
- Long vehicle life
- Driving enjoyment
- Safety
- Reliability
- Warranty coverage
- Compliance with government regulations

Your Toyota has been designed for economical driving and economical maintenance. Many formerly required maintenance items are no longer required or are not required as often. To make sure your vehicle runs at peak efficiency, follow the maintenance schedule.

For full details of your maintenance schedule, read the separate "Warranty and Service Booklet".

### Where to go for service?

It makes good sense to take your vehicle to your local Toyota dealer for service.

Toyota technicians are well-trained specialists. And they are receiving the latest service information through technical bulletins, service tips, and in-dealership training programs. They learn to work on Toyotas before they work on your vehicle, rather than while they are working on it. Doesn't that seem like the best way?

Your Toyota dealer has invested a lot of money in special Toyota tools and service equipment. It helps do the job better and at less cost.

Your Toyota dealer's service department will perform all of the scheduled maintenance on your vehicle—reliably and economically.

### What about do-it-yourself maintenance?

Many of the maintenance items are easy to do yourself if you have a little mechanical ability and a few basic automotive tools. Simple instructions for how to perform them are presented in Section 8.

Note, however, that some maintenance tasks require special tools and skills. These are best performed by qualified technicians. Even if you are an experienced do-it-yourself mechanic, we recommend that repairs and maintenance be conducted by your Toyota dealer who will keep a record of maintenance on your Toyota. This record could be helpful should you ever require Warranty Service.

The service interval for scheduled maintenance is determined by the odometer reading or time interval, whichever comes first, shown in the schedule.

Rubber hoses (for cooling and heater system, brake system and fuel system) should be inspected by a qualified technician in accordance with the Toyota maintenance schedule. They are particularly important maintenance items. Have any deteriorated or damaged hoses replaced immediately. Note that rubber hoses will deteriorate with age, resulting in swelling, chafing or cracks.

# Does your vehicle need repairing?

Be on the alert for changes in performance, sounds, and visual tip-offs that indicate service is needed. Some important clues are as follows:

- Engine missing, stumbling, or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning after use is normal)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tire; excessive tire squeal when cornering; uneven tire wear
- Vehicle pulls to one side when driving straight on a level road

Strange noises related to suspension movement

- Loss of brake effectiveness; spongy feeling brake pedal; pedal almost touches floor; vehicle pulls to one side when braking
- Coolant temperature continually higher than normal

If you notice any of these clues, take your vehicle to your Toyota dealer as soon as possible. It probably needs adjustment or repair.



Do not continue driving with the vehicle unchecked. It could result in serious vehicle damage and possibly personal injury. NotforReproduction


# <u>SECTION 8-1</u>

# **DO-IT-YOURSELF MAINTENANCE**

## Introduction

En	gine compartment overview	/	
Fu	se locations		
Do	se locations -it-yourself service precau	tions	
Po	sitioning the jack		
otforP	duct		
*			
0~			

### Engine compartment overview

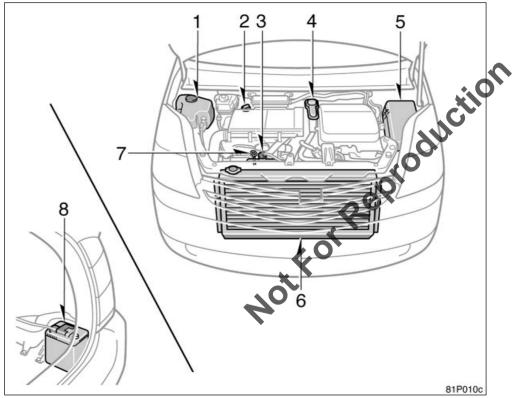


- 1. Windshield washer fluid tank
- 2. Engine oil filler cap
- 3. Engine coolant reservoir
- 4. Inverter coolant reservoir

5. Fuse block

- 6. Radiator and condenser
- 7. Engine oil level dipstick
- 8. 12 volt battery (in luggage compartment)

## **Fuse locations**

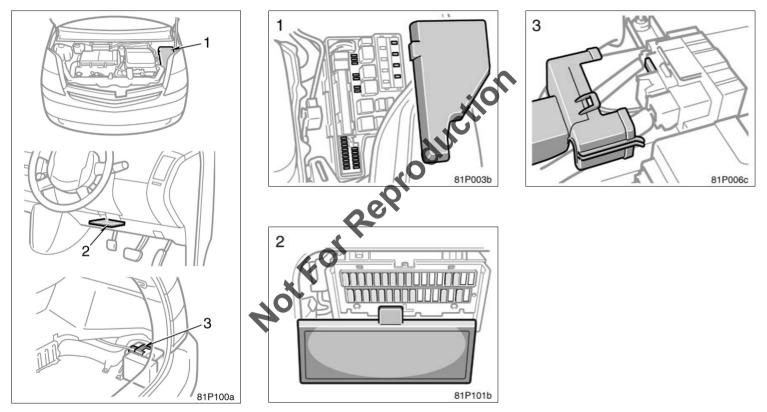

# Do-it-yourself service precautions

### If you perform maintenance by yourself, be sure to follow the correct procedure given in this Section.

You should be aware that improper or incomplete servicing may result in operating problems.

This Section gives instructions only for those items that are relatively easy for an owner to perform. As explained in Section 7, there are still a number of items that must be done by a qualified technician with special tools.

Utmost care should be taken when working on your vehicle to prevent accidental injury. Here are a few precautions that you should be especially careful to observe:

## 

- When the hybrid system is on, keep hands, clothing, and tools away from the moving fan and engine drive belts. (Removing rings watches, and ties is advisable)
- Right after driving, the engine compartment—the engine, radiator, exhaust manifold and spark plug boots, etc.—will be hot so be careful not to touch them. Oil, fluids and spark plugs may also be hot.
- If the hybrid system is hot, do not remove the radiator cap or loosen the drain plugs to prevent burning yourself
- Do not leave anything that may burn easily, such as paper or rags, in the engine compartment.
- Do not smoke, cause sparks or allow open flames around fuel or the batteries. Their fumes are flammable.
- Be extremely cautious when working on the batteries. It contains poisonous and corrosive sulfuric acid or strong alkali.

- When the hybrid system is operating with the "READY" light on, the engine is automatically started in some case. When you inspect the engine compartment, be sure to press the "POWER" switch to the "OFF" mode.
- Do not get under your vehicle with just the body jack supporting it. Always use automotive jack stands or other solid supports.
- Be sure that the hybrid system is off if you work near the electric cooling fans or radiator grille. With the ignition on, the electric cooling fans will automatically start to run if the engine coolant temperature is high and/or the air conditioning is on.
- Use eye protection whenever you work on or under your vehicle where you may be exposed to flying or falling material, fluid spray, etc.

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation or skin cancer, so care should be taken to avoid prolonged and repeated contact with it. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Do not leave used oil within the reach of children.
- Dispose of used oil and filter only in a safe and acceptable manner. Do not dispose of used oil and filter in household trash, in sewers or onto the ground. Call your dealer for information concerning recycling or disposal.
- Take care when filling the brake fluid reservoir because brake fluid can harm your hands or eyes. If fluid gets on your hands or in your eyes, flush affected area with clean water immediately. If you still feel uncomfortable with your hands or eyes, go to the doctor.

• When servicing the vehicle with the smart entry and start system, be sure to keep the smart key away from the vehicle. If the key is left in the vehicle, the hybrid system may start by pressing the "POWER" switch with the brake pedal depressed.


 Remember that batteries and ignition cable carry high currents or voltages. Be careful of accidentally causing a short circuit.

- Add only "Toyota Super Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology to fill the radiator. And if you spill some of the coolant, be sure to wash it off with water to prevent it from damaging the parts or paint.
- Do not allow dirt or anything else to fall through the spark plug holes.


- Do not pry the outer electrode of spark plug against the center electrode.
- Use only spark plugs of the specified type. Using other types will cause engine damage, loss of performance or radio noise.
- If you spill the fluid, be sure to wash it off with water to prevent it from damaging the parts or paint.
- Do not drive with the air cleaner filter removed, or excessive engine wear could result. Also backfiring could cause a fire in the engine compartment.
- Be careful not to scratch the glass surface with the wiper frame.
- When closing the hood, check to see that you have not forgotten any tools, rags, etc.

NOTICE

## Positioning the jack

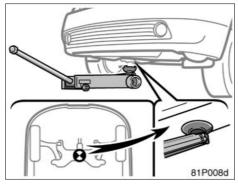

Front

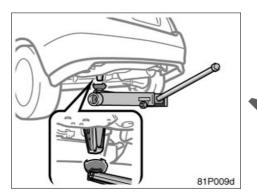

When jacking up your vehicle with the jack, position the jack correctly as shown in the illustrations.

# 

When jacking, be sure to observe the following to reduce the possibility of death or serious injury:

- Follow jacking instructions.
- Do not put any part of your body under the vehicle supported by the jack. Personal injury may occur.
- Do not start or out the engine while your vehicle is supported by the jack.
- Stop the vehicle on a level firm ground, firmly set the parking brake and put the transaxle in "P".
- The pack of the set the set properly the set of the set of the set of the set of the set tioned will damage the vehicle or may allow the vehicle to fall off the jack and cause personal injury.
- Never get under the vehicle when the vehicle is supported by the jack alone; use vehicle support stands.

- Do not raise the vehicle with someone in the vehicle.
- When raising the vehicle, do not place any objects on top of or underneath the jack.

### NOTICE

Make sure to place the jack correctly, or your vehicle may be damaged.

Rear


# SECTION **8**-2

# **DO-IT-YOURSELF MAINTENANCE**

## **Engine and Chassis**

	Checking the engine oil level	272
	Checking the coolant level	274
	Checking the radiator and condenser	275
	Checking tire inflation pressure	276
	Checking and replacing tires	277
	Rotating tires	278
	Installing snow tires and chains	279
	Replacing wheels	280
	Aluminum wheel precautions	281
	Rep	
	<b>O</b> <sup>*</sup>	
Notf		


### Checking the engine oil level

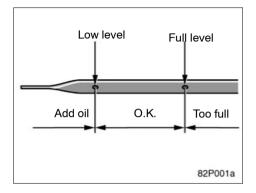

With the hybrid system at operating temperature and turned off, check the oil level on the dipstick.

- 1. To get a correct reading, the vehicle should be on level ground. After turning off the hybrid system, wait more than five minutes for the oil to drain back into the bottom of the engine.
- 2. Pull the dipstick out, hold the rag under the end and wipe it clean.
- Reinsert the dipstick—push it in as far as it will go, or the reading will not be correct.

4. Pull the dipstick out and look at the oil level while holding a rag under the end.

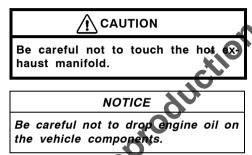

If the oil level is below or only slightly above the low level, add engine oil of the same type as already in the engine.

Remove the oil filler cap and add engine oil in small quantities at a time, checking the dipstick. We recommend that you use a funnel when adding oil.

The approximate quantity of oil needed to raise the level between low and full on the dipstick is indicated as follows:

1.5 L (1.6 qt., 1.3 Imp.qt.)

For the engine oil capacity, see "Service specifications" on page 297.

When the level reaches within the correct range, install the filler cap hand-tight.

### NOTICE

- Be careful not to spill engine oil on the vehicle components.
- Avoid overfilling, or the hybrid system could be damaged.
- Check the oil level on the dipstick once again after adding the oil.

### ENGINE OIL SELECTION


"Toyota Genuine Motor Oil" is used in your Toyota vehicle. Use Toyota approved "Toyota Genuine Motor Oil" or equivalent to satisfy the following grade and viscosity.

Oil grade:

20W-50 and 15W-40— API grade SL or SM multigrade engine oil


10W-30 and 5W-30— API grade SL "Energy-Conserving", SM "Energy-Conserving" or ILSAC multigrade engine oil.

Recommended viscosity (SAE):

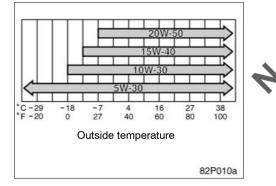

SAE 5W-30 is the best choice for your vehicle, for good fuel economy, and good starting in cold weather.

If you use SAE 10W-30 or a higher viscosity engine oil in extremely low temperatures, the engine may become Not For Reproducti difficult to start, so SAE 5W-30 engine

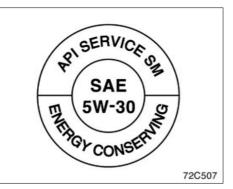

API service symbol



**ILSAC** certification mark

### Oil identification marks

### Either or both API registered marks are added to some oil containers to help you select the oil you should use.

The API Service Symbol is located anywhere on the outside of the container.

The top portion of the label shows the oil quality by API (American Petroleum Institute) designations such as SM. The center portion of the label shows the SAE viscosity grade such as SAE 5W-30. "Energy-Conserving" shown in the lower portion, indicates that the oil has fuel-saving capabilities.

The ILSAC (International Lubricant Standardization and Approval Committee) Certification Mark is displayed on the front of the container.



To ensure best possible lubrication performance for your engine, "Toyota Genuine Motor Oil" is available, which has been specifically tested and approved for all Toyota engines.

Please contact your Toyota dealer for further details about "Toyota Genuine Motor

### Checking the coolant level

Look at the see-through coolant reservoir when the hybrid system is cold. The coolant level is satisfactory if it is between the "FULL" and "LOW" lines on the reservoir. If the level is low, add the coolant. (For the coolant type, see "Coolant type selection" described below.)

The coolant level in the reservoir will vary with hybrid system temperature. However, if the level is on or below the "LOW" line, add coolant. Bring the level up to the "FULL" line.

If the coolant level drops within a short time after replenishing, there may be a leak in the system. Visually check the radiator, hoses, radiator cap and drain cock and water pump.

If you can find no leak, have your Toyota dealer test the cap pressure and check for leaks in the cooling system.



To prevent burning yourself, do not remove the radiator cap when the engine is hot.

### Coolant type selection

Use of improper coolants may damage your cooling system.

Only use "Toyota Super Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology. (Coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids.)

"Toyota Super Long Life Coolant" is a mixture of 50% coolant and 50% deionized water. This coolant provides protection down to about  $-35^{\circ}C$  ( $-31^{\circ}F$ ).

NOTICE

Do not use plain water alone.



Toyota recomments toyota Super Long Life Coolant", which has been tested to ensure that it will not cause corrosion nor result in malfunction of your coolant system with proper usage. "Toyota Super Long Life Coolant" is formulated with long-life hybrid organic acid technology and has been specifically designed to avoid cooling system malfunction on Toyota vehicles.

Please contact your Toyota dealer for further details.

# Checking the radiator and condenser

If either of the above parts is extremely dirty or you are not sure of their condition, take your vehicle to a Toyota dealer.



To prevent burning yourself, be careful not to touch the radiator or condenser when the engine is hot.

### NOTICE

To prevent damage to the radiator and condenser, do not perform the work by yourself.

# Checking tire inflation pressure

Keep your tire inflation pressures at the proper level.

The recommended cold tire inflation pressures and tire size are given on page 299.

You should check the tire inflation pressures every two weeks, or at least once a month. And do not forget the spare!

Incorrect tire inflation pressure may waste fuel, reduce the comfort of driving, reduce tire life and make your vehicle less safe to drive.

If a tire frequently needs refilling, have it checked by your Toyota dealer.

The following instructions for checking tire inflation pressure should be observed:

- The pressure should be checked only when the tires are cold. If your vehicle has been parked for at least 3 hours and has not been driven for more than 1.5 km or 1 mile since, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge. The appearance of a tire can be misleading. Besides, tire inflation pressures that are even just a few pounds off can degrade ride and handling.

- Take special care when adding air to the compact spare tire. The smaller tire size can gain pressure very quickly. Add compressed air in small quantities and check the pressure often until it reaches the specified pressure.
- Do not bleed or reduce tire inflation pressure after driving. It is normal for the tire inflation pressure to be higher after driving.
- Be sure to reinstall the tire valve caps. Without the valve caps, dirt or moisture could get into the valve core and cause air leakage. If the caps have been lost, have new ones put on as soon as possible.



Keep your tires properly inflated. Otherwise, the following conditions may occur and cause an accident resulting in death or serious injuries. Low tire pressure (underinflation)—


Excessive wear

- Uneven wear
- Poor handling
- Possibility of blowouts from an overheated tire
- Poor sealing of the tire bead
- Wheel deformation and/or tire separation
- A greater possibility of tire damage from road hazards

High tire pressure (overinflation)-

- Poor handling
- Excessive wear
- Uneven wear
- A greater possibility of tire damage from road hazards

### Checking and replacing tires

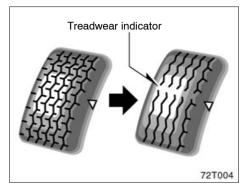

### CHECKING YOUR TIRES

Check the tire's tread for treadwear indicators. If the indicators show, replace the tires. The location of treadwear indicators is shown by the "TWI" or " $\Delta$ " marks, etc., molded on the side wall of each tire.

The tires on your Toyota have built-in treadwear indicators to help you know when the tires need replacement. When the tread depth wears to 1.6 mm (0.06 in.) or less, the indicators will appear. If you can see the indicators in two or more adjacent grooves, the tire should be replaced. The lower the tread, the higher the risk of skidding.

The effectiveness of snow tires is lost if the tread wears down below 4 mm (0.16 in.).

If you have tire damage such as cuts, splits, cracks deep enough to expose the fabric, or bulges indicating internadamage, the tire should be replaced

If a tire often goes flat or cannot be properly repaired due to the size or location of a cut or other damage, it should be replaced. If you are not sure, consult with your Toyota dealer.

If air loss occurs while driving, do not continue driving. Driving even a short distance can damage a tire beyond repair.

Any tires which are over 6 years old must be checked by a qualified technician even if damage is not obvious.

Tires deteriorate with age even if they have never or seldom been used.

This applies also to the spare tire and tires stored for future use.

### **REPLACING YOUR TIRES**

When replacing a tire, use only the same size and construction as originally installed and with the same or greater load capacity.


Using any other size or type of tire may seriously affect handling, ride, speedometer/odometer calibration, ground clearance, and clearance between the body and tires or snow chains.



Observe the following instructions. Otherwise, an accident may occur resulting in death or serious injuries.

- Do not mix radial, bias belted, or bias-ply tires on your vehicle. It can cause dangerous handling characteristics, resulting in loss of control.
- Do not use tires other than the manufacturer's recommended size, as this may cause dangerous handling characteristics resulting in loss of control.
- Do not mix tires of different makes, models or tread patterns, and do not mix tires of remarkably different treadwear. This may cause dangerous handling characteristics resulting in loss of control.

# Rotating tires

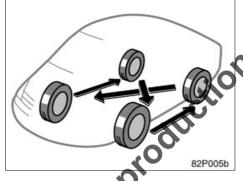

To equalize tire wear and help extend tire life, Toyota recommends that you rotate your thes approximately every 10000 km (6000 miles). However, the most appropriate timing for tire rotation may vary according to your driving habits and road surface conditions.

The wheel assemblies must be rotated as illustration above.

When rotating tires, check for uneven wear and damage. Abnormal wear is usually caused by incorrect tire pressure, improper wheel alignment, out-of-balance wheels, or severe braking.

# 

Do not include a compact spare tire when rotating the tires. It is designed for temporary use only.

Never use second-hand tires on your Toyota.

Using tires whose previous history is unknown is a risk.

#### Toyota recommends all four tires, or at least both front or rear tires be replaced at a time as a set.

See "If you have a flat tire" on page 241 for tire change procedure.

When a tire is replaced, the wheel should always be balanced.

An unbalanced wheel may affect vehicle handling and tire life. Wheels can get out of balance with regular use and should therefore be balanced occasionally.

When replacing a tubeless tire, the air valve should also be replaced with a new one.

# Installing snow tires and chains

WHEN TO USE SNOW TIRES OR CHAINS

# Snow tires or chains are recommended when driving on snow or ice.

On wet or dry roads, conventional tires provide better traction than snow tires.

#### SNOW TIRE SELECTION

#### If you need snow tires, select tires of the same size, construction and load capacity as the originally installed tires.

Do not use tires other than those mentioned above. Do not install studded tires without first checking local regulations for possible restrictions.

# 

Do not use snow tires other than the manufacturer's recommended size, as this may cause dangerous handling characteristics resulting in loss of control. Otherwise, an accident may occur resulting in death or serious injuries.

#### SNOW TIRE INSTALLATION

Snow tires should be installed on all wheels.

Installing snow tires on the front wheels only can lead to an excessive difference in road grip capability between the front and rear tires which could cause loss of vehicle control.

When storing removed tires, you should store them in a cool dry place.

Mark the direction of rotation and be sure to install them in the same direction when replacing.

# CAUTION

 Do not drive with the snow tires incorrectly inflated.

• Observe permissible maximum speed for your snow tires and the legal speed limit.

#### TIRE CHAIN SELECTION

Use the tire chains of correct size.

Regulations regarding the use of tire chains vary according to location or type of road, so always check local regulations before installing chains.

### NOTICE

If the wrong combination of tire and chain is used, the chains could damage the vehicle body.

#### CHAIN INSTALLATION

Install the chains on the front tires as tightly as possible. Do not use tire chains on the rear tires. Retighten chains after driving 0.5 - 1.0 km (1/4 - 1/2 mile).

When installing chains on your tires, carefully follow the instructions of the chain manufacturer.

If wheel covers are used, they will be scratched by the chain band, so remove the covers before putting on the chains.

# 

- Do not exceed 50 km/h (30 mph) or the chain manufacturer's recommended speed limit, whichever is lower.
- Drive carefully avoiding bumps, holes, and sharp turns, which may cause the vehicle to bounce.
- Avoid sharp turns or locked-wheel braking, as use of chains may adversely affect vehicle handling.
- When driving with chains installed, be sure to drive carefully. Slow down before entering curves to avoid losing control of the vehicle. Otherwise an accident may occur.

#### NOTICE

Do not attempt to use a tire chain on the compact spare tire, as it may result in damage to the vehicle as well as the tire.

# **Replacing wheels**

WHEN TO REPLACE YOUR WHEELS

If you have wheel damage such as bending, cracks or heavy corrosion, the wheel should be replaced.

If you fail to replace a damaged wheel the tire may slip off the wheel or cause loss of handling control.

#### WHEEL SELECTION


When replacing wheels, care should be taken to ensure that the wheels are replaced by ones with the same load capacity, diameter, rim width, and offset.

Correct replacement wheels are available at your Toyota dealer.

A wheel of a different size or type may adversely affect handling, wheel and bearing life, blake cooling, speedometer/odometer calibration, stopping ability, headlight aim, bumper height, vehicle ground clearance, and tire or snow chain clearance to the body and chassis. Replacement with used wheels is not recommended as they may have been subjected to rough treatment or high mileage and could fail without warning. Also, bent wheels which have been straightened may have structural damage and therefore should not be used. Never use an inner tube in a leaking wheel which is designed for a tubeless tire.

## Aluminum wheel precautions

- When installing aluminum wheels, check that the wheel nuts are tight after driving your vehicle the first 1600 km (1000 miles).
- If you have rotated, repaired, or changed your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- When using tire chains, be careful not to damage the aluminum wheels.
- Use only Toyota wheel nuts and wrench designed for your aluminum wheels.
- When balancing your wheels, use only Toyota balance weights or equivalent and a plastic or rubber hammer.
- As with any wheel, periodically check your aluminum wheels for damage. If damaged, replace immediately.

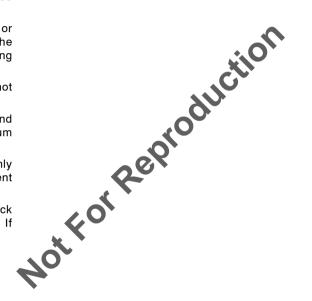

NotforReproduction

# SECTION **8**-3

# **DO-IT-YOURSELF MAINTENANCE**

# **Electrical components**

	Checking 12 volt battery condition28412 volt battery recharging precautions286Checking and replacing fuses286Adding washer fluid287Replacing light bulbs288
	r Reproc
Notto	·

# Checking 12 volt battery condition—

# -Precautions

# 

#### **12 VOLT BATTERY PRECAUTIONS**

When the 12 volt battery must be replaced, use the Prius designated battery.

The 12 volt battery produces flammable and explosive hydrogen gas.

- Do not cause a spark from the battery with tools.
- Do not smoke or light a match near the battery.

The electrolyte contains poisonous and corrosive sulfuric acid.


- Avoid contact with eyes, skin or clothes.
- Never ingest electrolyte.
- Wear protective safety glasses when working near the battery.
- Keep children away from the battery.

#### EMERGENCY MEASURES

- If electrolyte gets in your eyes, flush your eyes with clean water and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while en route to the medical office.
- If electrolyte gets on your skin, thoroughly wash the contact area. If you feel pain or burn, get medical attention immediately.
- If electrolyte gets on your clothes, there is a possibility of its soaking through to your skin, so immediately take off the exposed clothing and follow the procedure above, if necessary.


• If you accidentally swallow electrotyte, drink a large quantity of water or milk. Follow with milk of magnesia, beaten raw egg or vegetable oil. Then go immediately for emergency help.

# -Checking 12 volt battery exterior

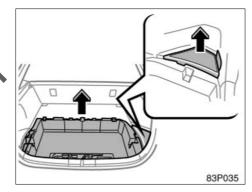

Open the back door. Remove the luggage storage box and 12 volt battery cover.

If the back door does not open, see "If you cannot operate back door opener" on page 252.

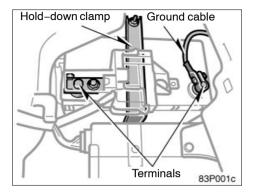

Check the battery for corroded or loose terminal connections, cracks, or loose hold-down clamp.

- a. If the battery is corroded, wash it off with a solution of warm water and baking soda. Coat the outside of the terminals with grease to prevent further corrosion.
- b. If the terminal connections are loose, tighten their clamp nuts—but do not overtighten.
- c. Tighten the hold-down clamp only enough to keep the battery firmly in place. Overtightening may damage the battery case.

#### NOTICE

- Be sure the hybrid system and all accessories are off before performing maintenance.
- When checking the battery, remove the ground cable from the negative terminal ("–" mark) first and reinstall it last.
- Be careful not to cause a short circuit with tools.
- Take care no solution gets into the battery when washing it.

If the 12 volt battery is disconnected or run down, the power window and back door may not operate automatically and the jam protection function will not function correctly and does not open the back door after you reconnect, replace or recharge the battery. In any of these cases, you should normalize each system. To normalize them, see "Power windows" on page 38 and "Back door" on page 37.

Before you disconnect the 12 volt battery, confirm the shift position is "P" and apply the parking brake completely. After you reconnect the 12 volt battery, shift the shift lever to "N" and confirm the shift position is "N" when the "IG-ON" mode is enabled.

After connecting the cables, the hybrid system may not start by pushing the "POWER" switch. In that case, push it once again.

# 12 volt battery recharging precautions

#### During recharging, the battery is producing hydrogen gas.

Therefore, before recharging:


- 1. If recharging with the battery installed on the vehicle, be sure to disconnect the ground cable.
- 2. Make sure the power switch on the recharger is off when connecting the charger cables to the battery and when disconnecting them.


# 


- Always charge the battery in an unconfined area. Do not charge the battery in a garage or closed room where there is not sufficient ventilation.
- Only do a slow charge (3.5 A or less). Charging at a quicker rate is dangerous. The battery may explode, causing personal injuries.

#### NOTICE

Never recharge the battery with the hybrid system on. Also, be sure all accessories are turned off.

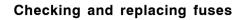

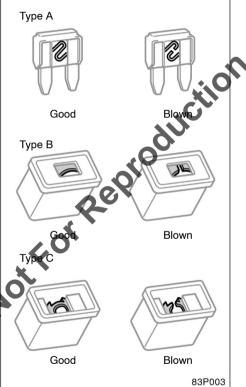

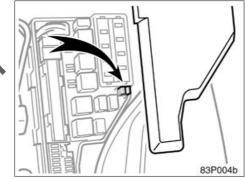

If the headlights or other electrical components do not work, check the fuses. If any of the fuses are blown, they must be replaced.

See "Fuse locations" on page 267 for locations of the fuses.

#### Turn the hybrid system and inoperative component off. Pull the suspected fuse straight out and check it.

Determine which fuse may be causing the problem. The lid of the fuse box shows the name of the circuit for each fuse. See page 300 for the functions controlled by each circuit.

Type A fuses can be pulled out by the pull-out tool. The location of the pull-out tool is shown in the illustration.

If you are not sure whether the fuse has blown, try replacing the suspected fuse with one that you know is good.


# If the fuse has blown, push a new fuse into the clip.

Only install a fuse with the amperage rating designated on the fuse box lid.

If you do not have a spare fuse, in an emergency you can pull out the "DOME" or "OBDII" fuse, which may be dispensable for normal driving, and use it if its amperage rating is the same.

If you cannot use one of the same amperage, use one that is lower, but as close to the rating as possible. If the amperage is lower than that specified, the fuse might blow out again. but this does not indicate anything wrong. Be sure to get the correct fuse as soon as possible and return the substitute to its original clip.

It is a good idea to purchase a set of spare fuses and keep them in your vehicle for emergencies. If the new fuse immediately blows out, there is a problem with the electrical system. Have your Toyota dealer correct it as soon as possible.

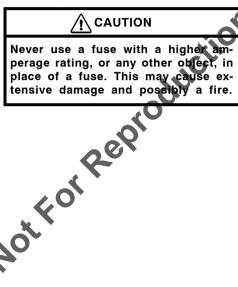

## Adding washer fluid

#### If any washer does not work, the washer tank may be empty. Add washer fluid.

You may use plain water as washer fluid. However, in cold areas where temperatures range below the freezing point, use washer fluid containing antifreeze. This product is available at your Toyota dealer and most auto parts stores. Follow the manufacturer's directions for how much to mix with water.

#### NOTICE

Do not use engine antifreeze or any other substitute because it may damage your vehicle's paint.

# Replacing light bulbs—

The following illustrations show how to gain access to the bulbs. When replacing a bulb, make sure the hybrid system and light switch are off. Use bulbs with the wattage ratings given in the table.

The stop lights and high mounted stoplight consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to your Toyota dealer to have the light replaced.

# 

- To prevent burning yourself, do not replace the light bulbs while they are hot.
- Halogen bulbs have pressurized gas inside and require special handling. They can burst or shatter if scratched or dropped. Hold a bulb only by its plastic or metal case. Do not touch the glass part of a bulb with bare hands.

#### NOTICE

Only use a bulb of the listed type.


The inside of the lens of exterior lights such as headlights may temporarily fog up when the lense becomes wet in the rain or in a car wash. This is not a problem because the fogging is caused by the temperature difference between the outside and inside of the lense, just like the windshield fogs up in the rain. However, if there is a large drop of water on the inside of the lense, or if there is water pooled inside the light, contact your ot For Repro

Light bulbs	w	Туре
Headlights	60/55	А
Front fog lights	51	В
Parking lights	5	С
Front turn signal lights	21	В
Side turn signal lights	5	С
Rear turn signal lights	21	С
Tail lights	5	С
Stop lights	4.4	Е
High mounted stoplight	2.8	Е
Back-up lights	21	С
License plate lights	5	С
Interior lights	8	D
Personal lights	8	В
Door courtesy lights	5	С
Vanity lights	5	D
Luggage compartment light	5	D

A: H4 Halogen bulbs


- B: HB4 Halogen bulbs
- C: Wedge base bulbs
- D: Double end bulbs
- E: LEDs (Light-emitting Diodes)

# —Headlights

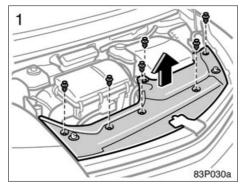


1. Open the hood. Remove the clips and take out the cover.

Remove and install the clips as shown in the following illustrations.

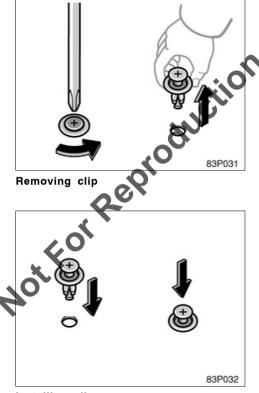




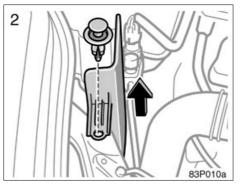



#### 2. RIGHT-HAND HEADLIGHT ONLY: Remove the clip and take out the air cleaner inlet.

Remove and install the clip as shown in the following illustrations.

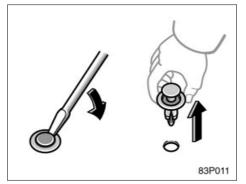


Removing clip

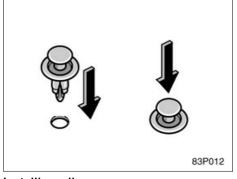

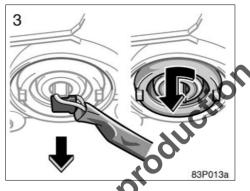


- 3. Unplug the connector. Turn the bulb cover counter-clockwise and remove it.
- If the connector is tight, wiggle it.

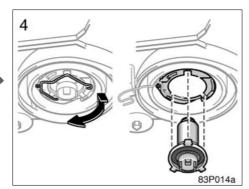

4. Release the bulb retaining spring and remove the bulb along with the socket. Install a new bulb into the socket and return the bulb retaining spring to its original position.

To install a bulb, align the tabs of the bulb with the cutout of the mounting hole.



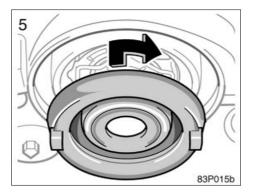


5. Install the bulb cover and turn it clockwise. Plug in the connector.


Aiming is not necessary after replacing the bulb. When aiming adjustment is necessary, contact your Toyota dealer.


# —Front fog lights


If either the left or right front fog lights burns out, contact your Toyota dealer.

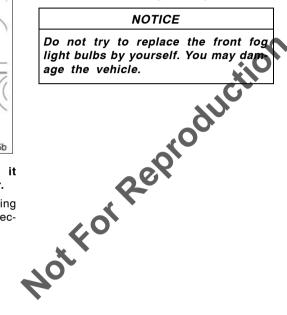

### —Parking lights

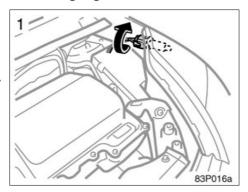

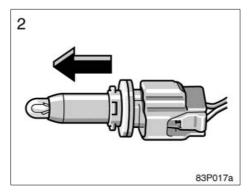


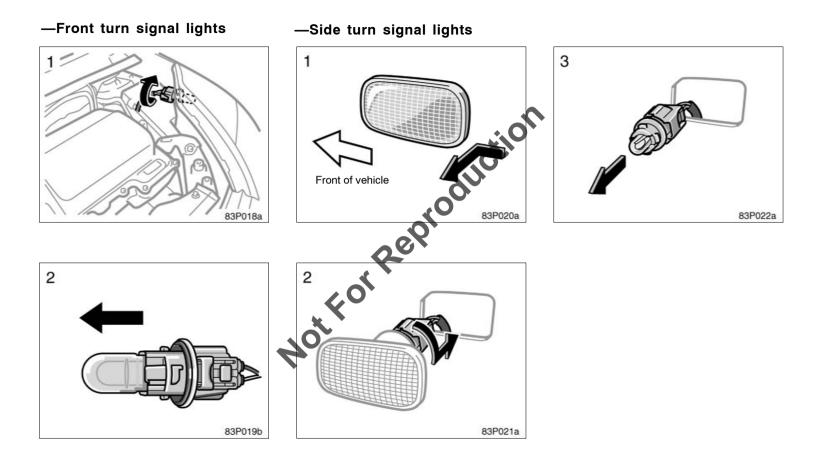


### 

—Rear turn signal, tail and back-up lights

-License plate lights

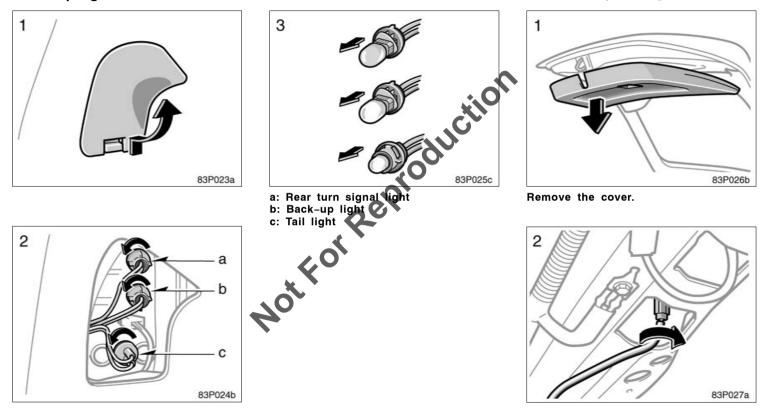

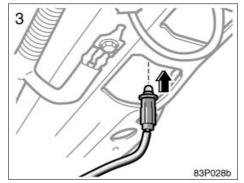

NotforReproduction



# **SPECIFICATIONS**

	Dimensions	
	Electric motor	
	Engine	
	Fuel	
	Hybrid vehicle assembly	
	Service specifications	
	Tires	
	Fuses	
.04	Reproc	
Notfo		

# Dimensions

Overall length	mm (in.)	4445	(175.0)
Overall width	mm (in.)	1725	(67.9)
Overall height	mm (in.)	1490	(58.7)
Wheelbase	mm (in.)	2700	(106.3)
Front tread	mm (in.)	1510	(59.4)
Rear tread	mm (in.)	1480	(58.3)

## **Electric motor**

- Type: Permanent magnet synchronous motor (water cooling)
- Maximum output: 50 kW
- aximum torque: 400 N·m (40.8 kgf·m, 259 ft·lbf) Reproductive Reproductive

# Engine

Model: 1NZ-FXE Type: 4-cylinder in line, 4 cycle, gasoline Bore and stroke, mm (in.): 75.0 x 84.7 (2.95 x 3.33) Displacement, cm<sup>3</sup> (cu. in.): 1497 (91.4)

# Fuel

Fuel type:

Unleaded gasoline, Research Octane Number 91 or higher. For improved vehicle performance, the use of premium unleaded gasoline with a Research Octane Number of 95 or higher is recommended.

Fuel tank capacity, L (gal., Imp.gal.): 45 (11.9 , 9.9)

# Hybrid battery

Type: Nickel-Metal hydride battery Voltage: 7.2 V Capacity: 6.5 Ah (3HR) Not For Reproduction Quantity: 28

# Service specifications

### ENGINE

Valve clearance (engine cold), mm (in.): Intake 0.17 - 0.23 (0.007 - 0.009) Exhaust 0.27 - 0.33 (0.011 - 0.013)

Spark plug type: DENSO SK16R11 NGK IFR5A11 Spark plug gap, mm (in.): 1.1 (0.043)

#### ENGINE LUBRICATION

Oil capacity (drain and refill), L (qt, lmp.qt.):

With filter	3.7 (3.9, 3.3)
Without filter	3.4 (3.6, 3.0)

"Toyota Genuine Motor Oil" is used in your Toyota vehicle. Use Toyota approved "Toyota Genuine Motor Oil" or equivalent to satisfy the following grade and viscosity.

Oil grade:

```
20W-50 and 15W-40—
API grade SL or SM multigrade engine
oil
```

10W-30 and 5W-30-

```
API grade SL "Energy-Conserving", SM "Energy-Conserving" or ILSAC multi-
grade engine oil.
```

Please contact your Toyota dealer for further details.

20W-50 10W-30 5W-30 C-29 -18 -7 F -20 27 0 40 Outside temperatur Not For Rept 82P010a

Recommended oil viscosity (SAE):

#### COOLING SYSTEM

Total capacity, L (qt., Imp.qt.): For gasoline engine 5.3 (5.6, 4.7) For electric motor and inverter and converter 2.7 (2.9, 2.4)

#### Coolant type:

"Toyota Super Long Life Coolant" is used in your Toyota vehicle at factory fill. In order to avoid technical problems, only use "Toyota Super Long Life Coolant" or similar high quality ethylene glycol based non-silicate, nonamine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology. (Coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids.)

Do not use plain water alone.

Please contact your Toyota dealer for further details.

#### **12 VOLT BATTERY**

Open voltage at 20°C (68°F): 12.6 – 12.8 V Fully charged 12.2 – 12.4 V Half charged 11.5 – 11.9 V Discharged [Voltage that is checked 20 minutes after the key is removed with all the lights turned off]

Charging rates: 3.5 A max.

#### HYBRID TRANSAXLE

Fluid capacity (drain and refill), L (qt., Imp.qt.): 3.6 (3.8, 3.2)

Fluid type:

"Toyota Genuine ATF WS" or equivalent

Please contact your Toyota dealer for further details.

#### BRAKES

Minimum pedal clearance when depressed with the force of 196 N (20 kgf, 44 lbf) with the traction motor running, mm (in.): 103.7 (4.08) Pedal free play, mm (in.): 1 - 6 (0.04 - 0.24)Parking brake adjustment when de with the force of 294 N (30 kot 66 lbf): 6 - 9 clicks Fluid type: SAE J1703 or FMV No. 116 DOT 3 STEERING Wheel free play Less than 30 mm (1.2 in.) Jotfol

# Tires

Tire size Standard tire 195/60R15 88V

Tire inflation pressure, kPa (kgf/cm<sup>2</sup> or bar, psi) For driving over 140 km/h (87 mph)

Front 270 (2.7, 39) Rear 260 (2.6, 38) For driving 140 km/h (87 mph) or under Front 240 (2.4, 35) Rear 230 (2.3, 33)

#### Spare tire:

Compact spare tire T125/70D16 96M Tire inflation pressure, kPa (kgf/cm<sup>2</sup> or bar, psi) 420 (4.2, 60)


#### Wheel size:

Standard tire15 x 6JJCompact spare tire16 x 4T


Wheel nut torque, N·m (kgf·m, ft·lbf): 103 (10.5, 76)

NOTE: For complete information on tires (e.g. replacing tires or replacing wheels), see "Checking tire inflation pressure" through "Aluminum wheel precautions", page 276 through 281.

### Fuses

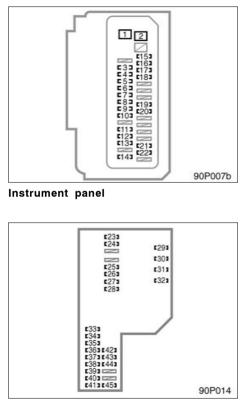

**Engine compartment** 

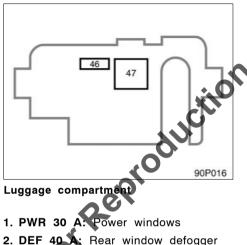

- 3. M/HTR 15 A: Outside rear view mirror heater
  - WIP 30 A: Windshield wiper

RR WIP 15 A: Rear wiper

- 6. WSH 20 A: Washer
- 7. ECU-IG 7.5 A: Smart entry and start system, power windows, multi-information display, electric power steering

- 8. GAUGE 10 A: Gauge and meter, backup lights, emergency flasher, power windows
- 9. OBD 7.5 A: On-board diagnosis system
- 10. STOP 7.5 A: Stop lights
- 11. DOOR 25 A: Power door lock system
- 12. ACC-B 25 A: "POWER OUTLET", "ACC" fuses
- 13. ECU-B 15 A: Multi-information display, power windows, air conditioning system
- 14. AM1 7.5 A: Hybrid system
- 15. TAIL 10 A: Tail lights, license plates light, parking lights
- PANEL 7.5 A: Multi-information display, clock, audio system, instrument panel lights
- 17. A/C (HTR) 10 A: Air conditioning system
- 18. FR DOOR 20 A: Power windows
- 19. PWR OUTLET 15 A: Power outlet
- 20. ACC 7.5 A: Audio system, multi-information display, clock
- 21. PWR OUTLET FR 15 A: Power outlet
- 22. IGN 7.5 A: Hybrid system, SRS airbags

- 23. SPARE 30 A: Spare
- 24. SPARE 15 A: Spare
- 25. H-LP LO RH 10 A: Right-hand headlight (low beam)
- 26. H-LP LO LH 10 A: Left-hand headlight (low beam)
- 27. H-LP HI RH 10 A: Right-hand headlight (high beam)
- 28. H-LP HI LH 10 A: Left-hand headlight (high beam)
- 29. EFI 15 A: Multiport fuel injection system/sequential multiport fuel injection system
- 30. AM2 15 A: "IGN" fuse, ignition system
- 31. HORN 10 A: Horn
- 32. HEV 20 A: Hybrid system
- 33. P CON MAIN 7.5 A: Parking control system
- 34. ABS-1 25 A: Anti-lock brake system
- **35. ETCS 10 A:** Electronic throttle control system
- 36. BATT FAN 10 A: Battery cooling fan
- **37. HAZ 10 A:** Turn signal lights, emergency flasher

- **38. DOME 15 A:** Audio system, interior lights, smart entry and start system, gauge and meter, turn signal lights, luggage room light, clock
- 39. ABS MAIN3 15 A: Anti-lock brake system
- 40. ABS MAIN2 10 A: Anti-lock brake system
- 41. ABS MAIN1 10 A: Anti-lock brake system
- 42. FR FOG 15 A: Fog Igh
- 43. RR FOG LP 10 A: No circuit

44. AMP 30 A: Audio system

- 45. CDS FAN 30 A: Electric cooling fan
- 46. DC/DC-S 5 A: Inverter and converter
- 47. MAIN 120 A: Hybrid system

NotforReproduction

# SECTION 10

INDEX

NotforReproduction

	4	
-		

Adding washer fluid 287
Adjustment
Front seat 48
Seat belt 54
Air conditioning filter 195
Air conditioning system 184
Airbags 59
Aluminum wheel precautions
Anti-glare inside rear view mirror 92
Anti-lock brake system
warning light 107
Anti-theft steering column lock 120
Appearance care
Cleaning the interior
Protecting your Toyota
from corrosion
Washing and waxing
Armrest 52
Audio system 150
AUX adapter 204
Auxiliary box 205
Auxiliary catch, Engine hood 40

# В

Back door Battery	. 37
Checking 12 volt battery condition	284
Gas caution	284
Handling safety	284
Hybrid battery assembly	297
Recharging precautions	286
Winter driving tips	232
Before starting the hybrid system	226
Bottle holder	207
Brake pad wear limit indicators	221
Brake system	
Brake system warning light 107,	109
Brakes	
Pad wear indicators	221
Parking	
Break-in tips	212
C	
- A	

Carbon monoxide caution	214
Charging system warning light .	
Checking and replacing fuses .	286
Checking the engine oil level	272
Checking the radiator	
and condenser	275

### Child restraint

Child restraint system 74
Installation 76, 84
Precautions73
Type of child restraint system
Child restraint anchor fittings
Cleaning the interior 257
Clock 200
Cold weather, Operation 232
Condenser,
Checking the condenser 275
Controls, Instrument panel 2, 4
Cooling system
Coolant level 274
Overheating 240
Radiator and reservoir
Winter driving tips 232
Corrosion prevention 254
Cruise control 132
Cup holder 206

# D

Defogger, Rear window	101
Dimmer switch, Headlight	. 96
Directional signals	. 96
Do-it-yourself maintenance,	
Service precautions	268
Does your vehicle need repairing?	263

Driving
Driving tips 226
Hybrid transaxle 126
Driving in the rain
Driving tips
Driving tips in various conditions 230
Driving with a hybrid transaxle 126
Economical driving 233
Pre-trip safety check
Winter driving tips 232
During, Break-in

# Е

Economical driving, Saving money on both fuel and repairs
Electric power steering system 221
Electrical system
Battery
Fuse locations
Fuses
Emergency flasher switch 97

Emergency, In case of	
Blown fuse	286
Emergency flasher switch	97
Flat tire	241
If you cannot operate	
back door opener	252
If you lose your keys	251
If your hybrid system stalls	• 0
while driving	240
If your vehicle needs to be towed 🥐	248
If your vehicle will not start	236
Jump starting	236
	240
Towing	248
,	142
Engine	
Checking the coolant level	
Emission control device	
Engine compartment	
Exhaust gas caution	
Hood release	40
Oil consumption	
Oil level	
Overheating	240
Radiator cap	
Starting procedure	226
Three-way catalytic converters	213
Engine coolant, Winter driving tips .	
Engine oil, Winter driving tips	
EV drive mode switch	8
Exhaust gas caution	214

# F

Facts about engine oil consumption 215
Flasher, Headlight
Flat tire
After changing wheels
Changing tire
If you have a flat tire
Jack point
Jacking precautions
Jacking up
Loosening wheel nuts
Lowering vehicle
Wheel block
Wheel nuts 247
Floor mat
Fluid level, Washer fluid
Fold-down rear seat
Foreign countries, Operation in 213
Front seat
Front seats
Fuel
Filler door opener
Fuel economy
Gauge
Operation in foreign countries 213
Tank cap         42
Fuel consumption
Fuel information
Fuel pump shut-off system
Fuse, Fuse box
1 400, 1 400 000

Fuse locations	 . 267	L
i use loculions	 . 201	

# G

Gauge, Fuel 10	)4
Glove box 20	)5

# Η

Hazard switch 97
Head restraints 51
Headlight switch 96
High coolant temperature
warning light 116
High speed operation,
During break-in 212
Hood release, Engine 40
How to start the hybrid system 226
Hybrid battery warning light 117
Hybrid system
For efficient use of your vehicle 12
Operating condition 9
Precautions for use 13
Starting 12
Toyota hybrid system 8
Hybrid transaxle
Driving with a hybrid transaxle 126
Shift pattern
Hybrid vehicle immobiliser system 20

Identification
Engine and motor 223
Vehicle 222
Indicator symbols 5
Instrument cluster and multi–information
display overview
Instrument panel
Fuel gauge
Indicator symbols
Odometer 105
Trip meter 105
Instrument panel light control button 106
Instrument panel overview
Interior light
J
Jack
Jack point
Location 243
Jump starting

# Key reminder buzzer 107 Key slot 120 Keys 18, 251

κ

### L

Light bulbs
Back-up lights
Front turn signal lights
Headlights 289
License plate lights 293
Parking lights 291
Rear turn signal lights 293
Side turn signal lights 292
Stop and tail lights
Light bulbs, Replacing 288
Light reminder buzzer 107
Light, interior
Interior light 98
Key slot light 100
Personal light 99
Lock
Driver's door 35
Steering column 120
Low engine oil pressure
warning light 116
Low fuel level warning light 107, 112
Low oil pressure warning light 107
Luggage compartment light
Luggage cover 209
Luggage storage box 208
Luggage stowage precautions

# М

Maintenance262, 263Do-it-yourself maintenance268Does your vehicle need repairing?263Maintenance requirements262Where to go for service262Malfunction indicator lamp107, 111Mirror262
Anti-glare inside rear view
Vanity mirror
Mirrors
Folding rear view
Outside rear view 90
Power rear view
Multi-display
Adjustment
Before operation 138
Functions 139
Information141
Switch operation
Multi-information display,
Screen transition

# Ν

New vehicle break-in ...... 212

# 0

Odometer 105
Oil
Consumption 215
Viscosity and grade 272
Oil consumption 214
Open door warning light 107, 112
Operating in foreign countries
Operating tips, air conditioning system
Overheating, Hybrid system 240

### Ρ

• <b>O</b> *
Parking brake
Operation
Reminder light 132
Personal light
Polishing
Power outlet
Power rear view mirror control 91
"POWER" switch 121
Power window switches
Pre-trip safety check 228
Preloaders (seat belt pretensioners) 57
Pretensioners
(seat belt pretensioners) 57
Protecting your Toyota
from corrosion 254
Push button start system 120

# R

	Radiator
	Checking the radiator
	Coolant, Engine 274
	Radio 150
•	Rear console box 204
	Rear seat, Fold-down 50
	Rear view mirror, Anti-glare inside 92
	Rear view mirror, Folding 92
	Rear view mirrors, Outside 90
	Rear view mirrors, Power 91
	Rear view monitor system 200
	Rear window defogger switch 101

# S

Safety check, Pre-trip 228
Seat adjustment precautions
Front seat 48
Front seats 47
Seat belt reminder buzzer 107
Seat belts 86
Child restraint anchor fittings 86
Cleaning 257
Fastening 52
Seat belt precautions 52
Seat belt pretensioners 57
Seats
Service and maintenance
Side door locks 35

Spare fuse         286           Spare tire         243
Spark plugs, Iridium-tipped spark plugs
Specifications 296
SRS driver and front passenger
airbags 59
SRS side airbags 65
SRS warning light 107, 112
Starting
Cold weather 226
Hybrid system 226
Jump starting
Steering, Tilt steering wheel
Steering column, Column lock 120
Steering switches 174
Suspension and chassis
Switch
Emergency flashers
Headlight, dimmer and turn signal 96
Rear window defogger
Windshield wiper and washer 100

# Т

Three-way catalytic converters 213
Tie-down hooks
Tilt steering wheel

Changing Flat tire	
Rotation	278
Spare	243
Trailer Trailer towing Trip information	243 249 248 233 233 142
Trip meter	105
Turn signals	. 96
V Vanitymirrer Vehicle identification number (VIN)	222
Warning buzzer	
Washer fluid, Adding washer fluid	
Washing and waxing Wheels, Aluminum wheel Windshield wiper and washer	
switch	100
Winter driving tips	232

Tires

# $\Omega - 6$

#### Quick index

Gas station information	~~~
Complete index	303
Pre-trip safety check	248 212 226 228
• How to start the hybrid system	226
• Tips for driving during break-in period	212
• If your vehicle needs to be towed	248
• If you have a flat tire	241
• If your vehicle overheats	240
• If your vehicle will not start	236
• If a service reminder indicator or warning buzzer comes on	107

#### Gas station information

#### Fuel type:

UNLEADED gasoline, Research Octane Number 91 or higher. For improved vehicle performance, the use of premium unleaded gasoline with a Research Octane Number of 95 or higher is recommended.

0

See page 212 for detailed information.

#### Fuel tank capacity:

45 L (11.9 gal., 9.9 Imp.gal.)

See page 212 for detailed information

#### Engine oil:

20W-50 and 15W-40-API grade SL or SM multigrade engine oil

10W-30 and 5W-30-API grade SL "Energy-Conserving", SM

"Energy-Conserving" or ILSAC multigrade engine oil

See page 273 for detailed information.

Tire information: See pages 276 through 281.

Tire inflation pressure: See page 299.

Publication No. OM47574E Part No. 01999-47574 Printed in Japan 07-0808-06 C プリウス(豪州E)