



Warranty and Service

LAND CRUISER
PRADO



Pre-delivery Service Maintenance Record

To ensure that your new Toyota is delivered to you in top condition, and that you are familiar with your new vehicle and matters relating to it, the following factory approved pre-delivery service has been performed.

- | | |
|---|---|
| <input type="checkbox"/> Inspect vehicle exterior | <input type="checkbox"/> Complete vehicle documentation, including 'New Vehicle Information Statement' on the inside front cover of this book |
| <input type="checkbox"/> Inspect vehicle interior | |
| <input type="checkbox"/> Inspect under hood | <input type="checkbox"/> Review vehicle owner's manuals |
| <input type="checkbox"/> Inspect luggage compartment | <input type="checkbox"/> Explain vehicle service requirement |
| <input type="checkbox"/> Inspect under vehicle (on hoist) | <input type="checkbox"/> Demonstrate features and accessories |
| <input type="checkbox"/> Road test | <input type="checkbox"/> Explain operation of Dealership Service and Parts Departments, including contact names, business hours, etc. |
| <input type="checkbox"/> Final inspection | |
| <input type="checkbox"/> Supply fuel | |

Yours sincerely,

.....
Dealer Principal / General Manager

.....
Sales Manager

.....
Service Manager

Toyota Advantage Service Plan

Why you should insist on Toyota Genuine Parts and Service

With Toyota Genuine Service you have Toyota Trained technicians using the most advanced diagnostic equipment working on your vehicle. Their model by model expertise, plus the fact that they only use Toyota Genuine Parts with a 12 month warranty* ensures every Toyota - at any Toyota Dealership in Australia - receives a Genuinely Better service.

Call 1800 Toyota (869 682) for your nearest Toyota Dealer.

Visit Toyota's website: www.toyota.com.au

* Conditions apply. All warranties are additional to implied warranties under the Trade Practices Act 1974.



Toyota Service Advantage makes owning a new Prado even more economical with low cost scheduled servicing. Toyota Service Advantage standard scheduled servicing costs are capped at one low price for up to the first six services over the first 3 years or 60,000 km, whichever occurs first*.

Simply visit advantage.toyota.com.au to confirm your vehicle's eligibility under Toyota Service Advantage and to determine Service pricing and number of services covered for your vehicle.

* Toyota Service Advantage pricing represents the maximum amount payable for standard scheduled servicing performed by a Toyota Dealer which is as per 'maintenance for normal operating conditions' outlined in the Warranty and Service Handbook's service schedule. Service Advantage eligibility excludes Government and Rental vehicles and certain other exclusions may apply. Contact your Toyota Dealer or visit advantage.toyota.com.au for further details.

INSULTATION

COMPLIMENTARY VEHICLE INSPECTION

In keeping with Toyota's commitment to Customer Care, your Toyota Dealer will be pleased to offer you a Complimentary Vehicle Inspection within one (1) month of the delivery date of your new vehicle.

As well as carrying out a general inspection of your vehicle, your dealer will be pleased to respond to any queries you may have. This additional inspection opportunity is provided to make sure you are comfortable and familiar with your new Toyota.

This Complimentary Inspection offer expires one (1) month after the delivery date of your new vehicle.

BOOK NOW AT YOUR LOCAL TOYOTA SERVICE CENTRE



TOYOTA GENUINE

PARTS, SERVICE & ACCESSORIES

Note: Engine Oil and Oil Filter replacement is not required at this inspection.

COMPLIMENTARY VEHICLE INSPECTION

OWNER DETAILS

Name
Address
Suburb
State Postcode

VEHICLE DETAILS

Model Name
Model Code
Registration Number

Customers Signature

Selling Dealer's Stamp

Inspecting Dealer's Stamp

General Inspection

Check for normal operation of the engine and drivetrain, condition of exhaust system, brake pipes, hoses, steering and suspension linkages, drive shaft boots and couplings, door lock adjustment and body exterior.
Inspect brake pedal free-play and park brake adjustment.

Engine Compartment

Inspect brake fluid level
Inspect engine oil level
Inspect drive belt tension
Inspect coolant level and hose clamps

Fuel System

Inspect condition of fuel lines

Note: Engine Oil and Oil Filter replacement is not required at this inspection.

Section 1

1

Toyota and Privacy	1-2	Helpful Questions and Answers	1-10
Congratulations!.....	1-3	Toyota Extra Care	1-14
Your Toyota Service Centre ...	1-4	Extended Warranty	1-14
Toyota Genuine Parts & Accessories	1-5	roadside Assist	1-14
Toyota New Vehicle Warranty.....	1-5	Toyota Insurance	1-15
Your Responsibilities.....	1-6		
Warranty Period - 3 years or 100,000 kilometres, whichever occurs first.....	1-6		
Corrosion Performance Warranty	1-6		
Accessory Warranty	1-6		
What is Covered by Your Toyota New Vehicle Warranty	1-7		
Paint Defect and Surface Rust..	1-8		
What is Not Covered by Your Toyota New Vehicle Warranty	1-8		

Foreword

Toyota and Privacy

Toyota is committed to protecting your privacy and is required to comply with the National Privacy Principles in the Privacy Act 1988 (Cth) when it collects and handles your personal information. This includes providing you with the right to access and correct your personal information (subject to some exceptions allowed by law).

For further information about Toyota and privacy, please see the Toyota Privacy Policy, available at www.toyota.com.au. You can also contact us by calling 1800 Toyota (869 682), or by sending your query to:

Toyota Privacy Contact
P.O. Box 187
Caringbah, NSW 1495

©2011 Toyota Motor Corporation Australia Limited
ABN 64 009 686 097

All information in this book is current at the time of printing. However, because of Toyota's policy of continual improvement, we reserve the right to make changes at any time without notice. All rights reserved. This material may not be reproduced or copied, in part or whole, without the written permission of Toyota Motor Corporation Australia Limited.

Disclaimer

This book explains the warranty and service of all factory installed equipment and options. Due to specification differences among models, you may find that some information may not be applicable to your vehicle. If you have any questions or concerns, please contact your Toyota Service Centre, they'll be glad to help you.



Congratulations on purchasing your new Toyota.

No matter whether this is your first Toyota or you have previously owned a Toyota, you're sure to appreciate the safety, economy and superb engineering of your new vehicle.

In this Warranty and Service Book you'll find all the information you need to ensure your vehicle is maintained in the best possible condition. You'll also find an explanation of everything covered by your comprehensive 3 year/100,000 kilometre Toyota New Vehicle Warranty*.

This Warranty and Service Book is also your vehicle's service record.

Nothing helps the resale value of your vehicle like a complete service history from your Authorised Toyota Service Centre. It demonstrates to any potential buyer that you've taken care of the vehicle, making it an invaluable asset for negotiating the best possible resale price. We suggest you keep this book in the glove compartment of your vehicle so your Toyota Service Centre can easily stamp it at every service.

Please take the time to read this Warranty and Service Book and, if you have any questions, contact your Toyota Service Centre. Happy motoring and thank you for choosing Toyota.

* Conditions apply. All warranties are additional to implied warranties under the Trade Practices Act 1974.

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

Your Toyota Service Centre

Always at Your Service, Your Toyota Service Centre

Your Toyota Service Centre will play an integral part in the enjoyment of your new vehicle. They'll ensure it remains in excellent condition and that you enjoy years of trouble-free motoring. Along with servicing they can also help you with repairs, Toyota Genuine Accessories and additional products such as tyres, Toyota Genuine Lubricants, Fluids and Batteries. If you have any questions or concerns about your new vehicle please don't hesitate to contact them.

It's not just the dealer you bought your Toyota from who can help. You now have the entire national network of Toyota Service Centres at your service. So no matter where you are in Australia, you can rest easy knowing that you're never far away from expert assistance.

Always In The Know, Your Toyota Service Centre

Nobody knows a Toyota like a Toyota Trained Technician. They have the skills and specialised diagnostic equipment to maintain your Toyota to the highest possible standards. Ongoing training programs and connectivity to Toyota ensure they stay abreast of the latest information, developments and technology.

Your Toyota Service Centre uses only Toyota Genuine Parts that are manufactured to Toyota's exacting standards and come with a 12 month warranty*.

Always There If You Need Them; Toyota Customer Experience Centre

Should you ever need further assistance, simply call the Toyota Customer Experience Centre. Our Customer Experience Advisors can help you with information on our products, Toyota Service Centres, maintenance of your vehicle and any other questions you may have.

Freecall 1800 Toyota (869 682)

If you'd prefer to write, our address is:

Toyota Customer Experience Centre

P.O. Box 187

Caringbah, NSW 1495

or

www.toyota.com.au

Please include your vehicle's details, which you'll find inside the front cover of this book.

* Conditions apply. All warranties are additional to implied warranties under the Trade Practices Act 1974.

Toyota Genuine Parts and Accessories

Why Toyota Genuine Parts and Accessories are Genuinely Better

Toyota Genuine Parts and Accessories are Genuinely Better because they're manufactured to exacting standards to fit and perform perfectly, keeping your Toyota 100% genuine. To ensure super fast delivery, your Toyota Service Centre is electronically linked to every parts distribution centre around Australia.

IMPORTANT WARRANTY PROTECTION NOTICE

Non-Genuine Parts are not covered by your Toyota new vehicle warranty.

It's worth keeping in mind that if a non-genuine part is fitted to your vehicle, and that item causes any damage, the damage will not be covered by your Toyota New Vehicle Warranty.

Have your Toyota maintained at a Toyota Service Centre and you can rest easy knowing that your vehicle will be serviced by experts, and will always be fitted with Toyota Genuine Parts. That way you keep your Toyota, and your warranty, in the very best condition.

Toyota Genuine Accessories

You can add even more personality and help protect your new vehicle with Toyota Genuine Accessories*. They're designed, tested and manufactured to strict Toyota standards so they offer the best possible performance and real peace of mind.

* All Toyota Genuine Accessories purchased from and installed by an authorised Toyota Dealer are warranted for the remainder of the New Vehicle Warranty or 12 months, whichever is greater. Toyota Genuine Accessories purchased from an authorised Toyota Dealer are warranted from the date of purchase for 12 months**.

** Conditions apply. All warranties are additional to implied warranties under the Trade Practices Act 1974.



Toyota New Vehicle Warranty

Your Responsibilities

You must operate, maintain and care for your Toyota properly, in accordance with the instructions in this book and your vehicle's Owner's Manual. The best way to maintain your vehicle is through a Toyota Service Centre.

When you change your name and/or address, please complete the Owner Information Change Form and return it to Toyota. New owners should also complete this form. Forms are located at the back of this book.

If for some reason the odometer is changed, please have your Toyota Service Centre verify the date of the change and kilometres travelled on the form located at the back of this book.

Warranty Period - 3 years or 100,000 kilometres*, whichever occurs first

The Toyota New Vehicle Warranty applies to all new Toyota vehicles sold in Australia. The Warranty Period is 3 years or 100,000 kilometres, whichever occurs first. The actual commencement date of the warranty is shown on the New Vehicle Information Statement on the inside front cover of this book. This will be the date the vehicle is either (A) delivered to its first owner, or (B) put into service by Toyota or a Toyota Dealer as a company or demonstrator vehicle.

Within the Warranty Period Toyota will repair or replace, at its discretion, any original equipment Toyota components found to be defective under normal use and operation in Australia.

Corrosion Perforation Warranty*

You have peace of mind that your new Toyota is constructed to resist rust and corrosion. Any corrosion perforation (rust through) of any original body panel, will be repaired or replaced within the Corrosion Perforation Warranty period of 5 years, except in those instances listed under What Is Not Covered By Your Toyota New Vehicle Warranty in this Section.

For information on how to protect your Toyota from corrosion, see Corrosion Prevention and Appearance Care in the Owner's Manual.

Accessory Warranty

All Toyota Genuine Accessories purchased from and installed by an authorised Toyota Dealer are warranted for the remainder of the New Vehicle Warranty or 12 months, whichever is greater. Toyota Genuine Accessories purchased from an authorised Toyota Dealer are warranted from the date of purchase for 12 months*.

* Conditions apply. All warranties are additional to implied warranties under the Trade Practices Act 1974.

Toyota New Vehicle Warranty

What is Covered by Your Toyota New Vehicle Warranty

The Difference Between a Warranty Repair and a Maintenance Service

A Warranty Repair is a repair performed during the Warranty Period to rectify any problem caused by faulty materials and/or workmanship at the time of new vehicle manufacture. It is normally free of charge.

Maintenance Services are the all-important regular inspections, adjustments and tune-ups. A service includes inspections, checks, changes of oils and fluids, and the replacement of normal wearing parts due to accumulated time or distance. These are competitively priced by your Toyota Service Centre.

Towing the Vehicle

If during the Warranty Period a warranted part fails, and your vehicle has broken down or is unsafe to drive, towing of your vehicle to the nearest Toyota Service Centre is covered under the warranty. For further information, see Helpful Questions and Answers in this Section.

Battery

A defective original equipment battery will be replaced free of charge during the first 12 months of service, regardless of kilometres travelled. If the battery is found to be defective during the second 12 months of service, 50% of the replacement cost will be covered by the warranty.

LPG (Liquefied Petroleum Gas) - Where Fitted to Petrol Engine Models Only

Note that LPG only applies to petrol engine models only. Diesel engine vehicles cannot be converted to LPG.

Not all Toyota engines are certified for conversion to LPG, please contact your Service Advisor at your Toyota Service Centre for more information on LPG conversion.

If your vehicle is fitted with the Toyota Approved LPG System on an LPG Compatible Engine at the time of new vehicle purchase then the LPG system is provided with the full 3 years or 100,000 kilometre warranty* - the same as the vehicle. If the system is fitted after purchase, the warranty applies for the remainder of the new vehicle warranty or for 12 months, whichever is longer. Where a Toyota Approved LPG System is fitted on an LPG Compatible Engine, the engine is fully covered by your Toyota New Vehicle Warranty.

Where a Toyota Approved LPG System is fitted on an engine not certified by Toyota as LPG Compatible, damage caused to the vehicle by the LPG system is not covered by your Toyota New Vehicle Warranty.

Your Toyota New Vehicle Warranty may be affected where a non-Toyota Approved LPG System is fitted. Speak to the Service Advisor at your Toyota Service Centre for advice on the best system to suit your vehicle.

*Conditions apply. All warranties are additional to implied warranties under the Trade Practices Act 1974.

Toyota New Vehicle Warranty

Paint Defect and Surface Rust

Any surface rust or paint defects appearing under normal use will also be covered by the Warranty Period.

For information on how to protect your Toyota from corrosion, see Corrosion Prevention and Appearance Care in the Owner's Manual.

What is Not Covered by Your Toyota New Vehicle Warranty

- Tyres are not covered by the Toyota New Vehicle Warranty but by the tyre manufacturer's warranty. This does not mean you are deprived of any statutory rights in respect of these items. Your Toyota Service Centre will be able to help you if you have any questions on tyre warranty.
- Repairs and service adjustments required due to vehicle misuse or negligence are not covered.
Misuse and negligence includes the following:
 - Formal or informal competitive events, such as racing.
 - Off-road use where the vehicle is not designed or marketed for that purpose.
 - Water ingress from floods or deep water fording.
 - Overloading - permissible loads are covered in the vehicle owner's manual.
 - Improper adjustment, repair, tampering or modifications by a non-Toyota repairer.
 - Accident damage.
 - Lack of proper care or attention as defined in the vehicle manuals and instructions.
- Defects caused by the fitment of non-Toyota-approved parts, accessories, add-on parts, improper or lack of maintenance are not covered.
- Scratches or surface rust caused by normal wear and tear, such as stone, or other chips, in the paint are not covered.
- Damage or breakage of the windscreen or glass caused by normal wear and tear, such as stone impacts are not covered.
- Environmental damage, such as hailstones, windstorms, flooding, fire, lightning or airborne fallout (chemicals, tree sap, bird and insect droppings, etc.) are not covered.
- Incidentals such as phone calls, car rental charges, hotel bills, inconvenience or commercial loss are not covered.

Toyota New Vehicle Warranty

- Damage caused by improper or lack of maintenance, or the use of fuels, oils, lubricants, coolants or fluids other than those specified in the Owner's Manual are not covered.
- Engine tune-ups, lubrication, replacement of expendable parts such as filters, coolant, spark plugs, fuses, brake pads, wiper blades are normal wear and tear parts, and are not considered warranty items.
- Normal noise, vibration, wear and tear, and deterioration such as discolouration, flaking, deformation or blur are not covered.
- Fitment of an LPG system could affect your Toyota New Vehicle Warranty. Please refer to What Is Covered By Your Toyota New Vehicle Warranty in this Section. For more information on LPG conversions speak to the Service Advisor at your Toyota Service Centre for advice on the best system to suit your vehicle.
- Petrol engines: Damage caused by the use of fuels with an Ethanol content greater than 10% (E10).
- Diesel engines: Damage caused by the use of biodiesel fuels greater than 5% (B5) and not conforming to the national diesel fuel standard EN590.

Additional note:

Toyota recommends that you only use high-quality fuels from commercially available sources whether diesel, biodiesel or petrol. Fuel manufacturers take great care to deliver products that meet the required fuel standards. Vehicle damage that results from using substandard, non approved or privately blended fuels is not covered.

Not For Reproduction

Helpful Questions and Answers

Helpful Questions and Answers

What should I do if there are any concerns with my new Toyota following delivery?

Because your vehicle is rigorously checked before it is delivered to you, it is highly unlikely you will find any problems with your new Toyota. However, should you have any concerns or questions regarding your new vehicle, bring it into any Toyota Service Centre for a Complimentary Inspection, the coupon is located in the front of this book.

Does my new Toyota need an oil change during the break-in period?

Your new Toyota is manufactured to precision tolerances and is rigorously checked and filled with high quality lubricants at the factory; as such the oil and filter will be changed at the first scheduled maintenance service, refer to the Maintenance Schedule in Section 2.

When do I get my Toyota serviced, and how do I arrange it?

Your Toyota should be serviced according to the Maintenance Schedule in Section 2 of this book. Additional Service Requirements apply for vehicles driven in harsh conditions or often used for towing heavy loads. The additional requirements are also described in Section 2 of this book. The Service Advisor at your Toyota Service Centre, can best advise you on the maintenance requirements to suit your driving conditions.

Why is time just as important as kilometres for servicing?

If you only drive short distances then you should service your vehicle according to time intervals rather than kilometres travelled. In other words, don't wait months to get your car serviced just because you haven't travelled the required kilometres, waiting can cause all sorts of problems. Harsh driving conditions such as driving on dusty roads, towing or repeated short journeys such as going to the shops, dropping the kids at school, and quick work trips are some of the hardest forms of work an engine can endure, so regular servicing is vital. For more details see the Maintenance Schedule in Section 2.

Who should service my Toyota?

Each Toyota Service Centre offers specialist Toyota Trained technicians, and nobody knows your Toyota like they do. They work on Toyota's day in and day out and understand what makes your Toyota 'tick', delivering quick and accurate diagnosis of your vehicle's health. They have access to Toyota special service tools, diagnostic equipment and the latest information from Toyota allowing Toyota Technicians to maintain your Toyota to the highest possible standards.

Also, because your Toyota Service Centre only uses Toyota Genuine Parts that come with a 12 month warranty* you keep your Toyota, and your warranty, in Genuinely Better condition. A full service history from a Toyota Service Centre can also enhance the resale value of your vehicle.

* Conditions apply. All warranties are additional to implied warranties under the Trade Practices Act 1974.

Helpful Questions and Answers

Who is the best person to talk to at the Toyota Service Centre?

Talk to your Service Advisor or Customer Relations Manager at your Toyota Service Centre. If they're unable to assist, ask to speak with the Service Manager.

Isn't Toyota Service Centre servicing more expensive?

This is one of the great myths of modern motoring. For starters, your Toyota may be entitled to the capped, low price servicing of Toyota Service Advantage* for the first 3 years or 60,000 km - whichever occurs first. After the Service Advantage period concludes, you'll still enjoy competitive service pricing delivering outstanding value for money at any Toyota Service Centre in Australia.

If I have any problems with my Toyota during the Warranty Period, what is the best way of getting my Toyota repaired?

Your Toyota New Vehicle Warranty provides comprehensive security against any unlikely faults in your new Toyota. However, if you need repairs, don't hesitate to call your Toyota Service Centre. Every Toyota Service Centre is committed to providing any Warranty Repairs you may need.

Does towing a caravan or trailer impact on my Toyota New Vehicle Warranty?

Your Toyota is engineered to deliver excellent towing performance.

So, naturally towing a caravan or trailer is covered by the Toyota New Vehicle Warranty as long as you follow some 'common sense' procedures and don't overload your vehicle. The safest way to tow anything is to have your Toyota Service Centre fit Toyota Genuine towing equipment, and be a cautious, considerate driver. Remember, towing a caravan or trailer can have an adverse effect on the stability, safety, durability and operating economy of your vehicle.

If my vehicle is off the road being repaired, are out of pocket expenses such as accommodation, travel or commercial loss included in the Toyota New Vehicle Warranty?

The Toyota New Vehicle Warranty covers repairs or replacement of parts that are defective in materials or workmanship at the Toyota Service Centre premises. It does not cover claims for compensation.

What costs are not covered by the Toyota New Vehicle Warranty?

The costs of regular maintenance servicing are not part of the Warranty. Please see What Is Not Covered By Your Toyota New Vehicle Warranty in this Section.

*Toyota Service Advantage pricing represents the maximum amount payable for standard scheduled servicing performed by a Toyota Dealer which is as per 'maintenance for normal operating conditions' outlined in the Warranty and Service Handbook's service schedule. Service Advantage eligibility excludes Government and rental vehicles and certain other exclusions may apply. Contact your Toyota Dealer or visit advantage.toyota.com.au for further details.

Helpful Questions and Answers

What happens to the Toyota New Vehicle Warranty if I modify my vehicle?

The Toyota New Vehicle Warranty will continue to apply to original components of the vehicle providing they have not been altered or adjusted in any way. Also, the Toyota New Vehicle Warranty will continue to apply if your vehicle is fitted with Toyota Genuine Parts and Accessories approved for your model. Any modifications or damage resulting from the modifications to your vehicle, are not covered by your Toyota new vehicle warranty. For further information refer to What Is Covered By Your Toyota New Vehicle Warranty in this Section.

Are tyres covered by the Toyota New Vehicle Warranty?

Tyres are covered by the tyre manufacturer's warranty. See What Is Not Covered By Your Toyota New Vehicle Warranty in this Section.

I've just taken ownership of a used Toyota. What do I do?

Firstly, take your vehicle to a Toyota Service Centre to give it a comprehensive safety check. That way any potential problems can be rectified immediately. Then simply keep your vehicle serviced according to the Maintenance Schedule in this book.

Please ensure that your Service Centre provides updated information to Toyota Motor Corporation Australia via the 'Owner Information Change Form', at the back of this book.

Where do I go for service after the Warranty Period expires?

If you've had your Toyota serviced by your Toyota Service Centre for the length of its warranty you'll no doubt find that it is in excellent condition. So, why would you risk going elsewhere now?

If I don't drive many kilometres, why should I service my vehicle by time?

Regular maintenance is vital in maintaining the high level of performance and reliability that you expect from your vehicle. Over time the fluids and oils in your vehicle lose their ability to protect your vehicle components from failure.

Therefore your service intervals are for a given time or distance, whichever occurs first.

If I leave a long time between services, will this impact my Toyota New Vehicle Warranty?

You must service your vehicle according to the Maintenance Schedule in Section 2 of this book. Your Toyota New Vehicle Warranty does not cover damage caused by inadequate maintenance.

If I have an accident, is my vehicle covered by the Toyota New Vehicle Warranty?

Unless the accident is caused by the failure of a warranted part, your vehicle is not covered.

Helpful Questions and Answers

What if I'm travelling and need a service or repair?

Whether it's a scheduled service or an unexpected repair, every Toyota Service Centre in Australia is authorised to service your Toyota. So you're free to use any one of them you choose. Many of our Service Centres also offer a range of One-Stop-Shop products and services, such as Tyres, Batteries, Lubricants and Fluids and Genuine Accessories, making your local Toyota Service Centre even more convenient.

What about using fuel containing Ethanol?

Toyota approves the use of petrol with an Ethanol content up to the limit of 10%. Toyota warranty will not cover failures or faults due to operation on fuels with an Ethanol content greater than 10%.

What about using biodiesel fuels?

Toyota will endorse biodiesel fuel blends using FAME (Fatty Acid Methyl Esters that comply with either EN14214 or ASTM D6751 standards) of up to 5% volume concentration when mixed with conventional diesel fuel. The final product B5 (5% Biodiesel blend) at the pump must conform to the national Diesel Fuel Standard which is based on EN590.

Toyota warranty will not cover failures or faults due to operation on biodiesel fuels greater than a 5% (B5) blend.

Can my Toyota be converted to run on LPG? (Petrol Engine Models Only)

Refer to What Is Covered By Your Toyota New Vehicle Warranty in this Section for more information on LPG conversions.

Should I use fluid additives like coolants and fuel enhancers?

Your Toyota is engineered to perform at its best with Toyota Genuine Lubricants and Fluids. Further additives are not necessary.

If I have an accident can my insurance company insist on the repairer I use?

In the event that you are involved in an accident and your Toyota needs repairs, we recommend that you contact your insurer and insist that your vehicle is repaired to Toyota specifications using only Toyota Genuine Parts and Panels that are engineered to perfectly fit and perform in the same manner as your new vehicle was originally designed to. Your Toyota Dealer can advise you on the location and availability of an authorised Toyota Body and Paint repairer who can conduct repairs according to Toyota's exacting specifications.

Toyota Extra Care

Toyota Extra Care provides a range of Warranty and Roadside Assist solutions to provide a worry free motoring experience.

You can select from a range of flexible plans to suit your particular circumstances.

Extended Warranty†*

Whether your Toyota is new or used, Toyota Extra Care Extended Warranty can help protect you from big repair bills and rising costs for years to come.

- Offers new Toyota vehicle owners the opportunity to extend the original Toyota warranty
- Includes additional items such as towing, car hire and accommodation
- Choice of 1, 2 or 3 year extended warranty plans available
- No excess to pay

If you have not purchased Extended Warranty at time of vehicle purchase, we can offer you Toyota Approved Warranty Extension which offer the same features and benefits. Toyota Approved Warranty Extension must be purchased prior to the expiry of your new vehicle warranty.

† Depending on how the vehicle is to be used, not all customers will be eligible to purchase Extended Warranty, eg. taxis, rental and courier vehicles. For details, please see your Toyota Dealer.

* Insured by Aioi Insurance Co. Ltd., (Aioi), a member of the Toyota Group of Companies. Toyota Insurance is a division of Aioi. A Product Disclosure Statement (PDS) is available from Toyota Insurance. You should consider the PDS before making a decision about this product.

Roadside Assist

Toyota Extra Care Roadside Assist provides you with access to roadside assistance 24 hours a day, 7 days a week, 365 days a year, giving you total peace of mind. The range of benefits includes:

- Non-mechanical assistance with items such as changing tyres/flat battery, running out of fuel or help when you keys are lost or locked in your vehicle
- Transportation assistance including taxi fare in the event of a breakdown and your vehicle is immobilised
- Accident co-ordination services
- Access to vital medical and legal advice
- Personalised holiday planner
- Transferable to new owner, should you decide to sell your vehicle prior to the expiry of the plan

Most importantly your car is covered no matter which family member is driving, 24 hours a day, every day of the year.

Choose between the 'Basic' plan or 'Plus' plan for additional benefits. Refer to the terms and conditions for details.

Toyota Insurance is here for you, providing reliable and cost-effective protection for the things that are important in your life – such as your motor vehicle.

Motor Vehicle Insurance*

We understand that your vehicle is a critical part of your life. That's why Toyota Insurance's Comprehensive Motor Vehicle Policy is tailored specifically for Toyota customers. Benefits include:

- Replacement of your Toyota if it is a total loss (for Toyota vehicles up to 3 years old/100,000 kms)
- Toyota Genuine parts guarantee and a lifetime workmanship guarantee on all repairs for Toyota vehicles (when repaired at a Toyota Approved Repairer for as long as you own the vehicle)
- 24 hours, 7 days a week access to claims customer service

At Toyota Insurance we can also provide you with Finance Gap Insurance and Payment Protection Insurance.

* Insured by Aioi Insurance Co. Ltd., (Aioi), a member of the Toyota Group of Companies. Toyota Insurance is a division of Aioi. A Product Disclosure Statement (PDS) is available from Toyota Insurance. You should consider the PDS before making a decision about this product.

To contact us for more information on Toyota Insurance or Extra Care range of products:

- Ask your Toyota Dealer (see Nationwide Toyota Service Centres in Section 3.)
- Call on 137 200
- Visit our website www.toyotafinance.com.au
- Email us at toyotainsurance@toyota.com.au or tecadmin@toyota.com.au

Not For Reproduction

Section 2

2

Maintenance of Your Toyota ..	2-2
Things You Can Do When You Refuel ..	2-2
Regular Toyota Service Centre Checks ..	2-2
How to Calculate the Correct Service Intervals ..	2-3
Important Notices ..	2-4
Maintenance Schedule ..	2-5
Maintenance Service Times ..	2-8
Additional Service Requirements ..	2-49
Additional Maintenance Service Schedule ..	2-50
Additional Maintenance Service Times ..	2-51
Additional Service Record ..	2-52

Not For Reproduction

Maintenance of your Toyota

Maintenance of Your Toyota

Things You Can Do When You Refuel

The best way to ensure years of trouble-free motoring is to develop a habit of regularly checking under the bonnet and around your Toyota. It only takes a few minutes when you're getting petrol, and early detection could save you a lot of money. If you're unsure how to carry out these checks, see your Owner's Manual or ask a Service Advisor at your Toyota Service Centre for a demonstration at your next service.

- Check engine oil, (ensure engine is hot, wait 5 minutes for an accurate reading)
- Check engine coolant, brake, clutch and windscreen washer fluid levels
- Check tyre pressure including spare (when cold)
- You should walk around your vehicle checking that all the lights, indicators and horn are operating correctly.
- Operate the air conditioner for at least 5 minutes per week to keep the system in optimum condition.

IMPORTANT NOTICE

To maintain the protection and efficiency of the cooling system, the Toyota Super Long Life Coolant must not be mixed with any other coolant or additive.

Use premixed genuine Toyota Super Long Life Coolant to fill the cooling system. Do not use alcohol type antifreeze or plain water alone.

Regular Toyota Service Centre Checks

In addition to the maintenance items listed for each service, your Toyota Service Centre will regularly check the operation of key systems. To ensure the continued efficiency and reliability of your vehicle to suit your particular driving conditions, your Toyota Service Centre may recommend additional maintenance such as:

- Replacement of worn wiper blades
- Brake system inspections
- Headlight realignments
- Valve clearance adjustments
- Testing and re-gassing air conditioning.

Maintenance of your Toyota

How to Calculate the Correct Service Intervals

You'll notice this handbook lists both time and kilometres travelled as recommended service intervals. This is because the service intervals of your vehicle are dependent on your driving habits. Regular vehicle maintenance is vital to maintain optimal performance, safety, longevity and resale value. If you drive average distances (approximately 20,000 km or more per year) you should be servicing your Toyota in accordance with the kilometres travelled recommendations. However, if you consistently travel low kilometres, then servicing must be based on the recommended time intervals.

Talk to your Toyota Service Advisor for further information about the type of service schedule best suited to your day to day driving, and you'll know you're keeping your Toyota operating at peak performance.

Wheel Alignment

Abnormal or uneven tyre wear may be noted by your Toyota Service Centre during your regular maintenance service. This may be caused by your operating environment. Your Toyota Service Centre will suggest a wheel alignment check (and correction if necessary) to prevent further deterioration to your vehicle's tyres. This will be a chargeable service.

Additional Service Requirements

How and where you drive your Toyota determines the service requirements as much as the time or distance travelled. For example, if you are regularly towing heavy loads or driving in rough conditions, then more frequent maintenance is necessary, refer to Additional Service Requirements in this Section. The Service Advisor at your Toyota Service Centre can best advise you on the maintenance requirements, to suit your driving conditions.

Break-in Period Oil Change

Your new Toyota is manufactured to precision tolerances and rigorously checked and filled with high quality lubricants at the factory; as such the oil and filter does not need to be changed until the first scheduled service.

Oil Thickening

Oil thickening is a phenomenon which occurs when particles of unburnt fuel and combustion by-products cause a build-up of carbon (soot) in the engine oil forming a jelly type substance. It can cause serious engine damage through oil starvation. It is essential that the engine oil is changed according to the Maintenance Schedule in this Section, at either the time or distance specified.

UNDERSTANDING YOUR TOYOTA MAINTENANCE SCHEDULE

Here is a guide to the codes defining what type of maintenance needs to be performed at each scheduled service. You'll find these marked on Maintenance Schedule pages.

C = Clean

I = Inspect, correct, adjust or
replace as necessary

L = Lubricate

R = Replace

T = Tighten

Important Notices

Driving Through Deep Water, Mud or Sand

Items such as those following, require daily service when you drive through deep water, mud or sand:

- Brake lines and hoses
- Brake linings/drums and brake pads/discs
- Engine air cleaner filter
- Front and rear differential oil
- Steering linkage
- Transfer oil
- Transmission fluid or oil
- Wheel bearings
- Propeller shafts and drive shafts.

Driving Through Water

Avoid driving through water that may enter the engine compartment. Water entering the engine compartment may enter the engine air intake and other components causing serious damage and or the engine to stop and not restart.

Should you need to drive through deep water, first ascertain that the depth of the water is not above the bottom of the front bumper bar and that the surface of the ground under the water is firm and even with no deep holes, then you can proceed slowly in low gear.

If the water level is deeper than above, it is advisable to wait until the water level has dropped or to find another crossing.

Water Flood

If your Toyota is caught in a flood and is submerged over the engine, do not start it or have it towed in a manner that may cause damage or unsafe operation. Water may have entered the engine, transmission, differential and other assemblies. Before your Toyota can be started and driven again, each assembly must be checked and serviced, otherwise, serious damage may occur.

For additional information on driving and towing your Toyota, see the vehicle's 'Owner's Manual'.

Toyota Maintenance Schedule

MAINTENANCE SCHEDULE

	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	
months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	
km x 1,000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Engine																					
Timing Belt (diesel models)															R						
Valve clearance (petrol models) ¹							I									I					
Valve clearance (diesel models) ²							I				I										
Drive belts	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Engine oil (petrol models) ³	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
Engine oil (diesel models) ⁴	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
Engine oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
Cooling and heater system ⁵							I			I		I		I		I		I		I	
Engine coolant (Toyota Genuine Super LLC (Pink)) ⁶								I			I				R						
Exhaust pipes and mountings							I			I		I		I		I		I		I	
Electrical System																					
Spark plugs (petrol models)										R											
Battery	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	

¹ Inspect tappet noise and engine vibration at idle and adjust clearances if necessary (adjustment requires additional time).

² Check valve clearance using a thickness gauge and adjust clearances if necessary (adjustment requires additional time).

³ Use engine oil grade API: SL, SM or ILSAC.

⁴ Use engine oil grade API: CF-4, CF, G-DL1D-1 or ACEA B1 (API: CE or CD).

⁵ Check that the radiator and condenser are not blocked with leaves, dirt, or insects, and the hose connections for installation condition and corrosion.

⁶ Replace the engine coolant initially at 96 months or 160,000 km (whichever occurs first), then every 48 months or 80,000 km (whichever occurs first). Use Genuine Toyota Super Long Life Coolant (SLLC) or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

(Coolant with long-life hybrid organic acid technology consists of the combination of low phosphates and organic acids.)

Toyota Maintenance Schedule

MAINTENANCE SCHEDULE

	months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	
	km x 1,000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Fuel System																						
Fuel filter (petrol models)								R									R					
Fuel transfer system filter (diesel models) ⁷		R		R		R		R		R		R		R		R		R		R		
Fuel transfer pump (diesel models)																						
Water sediment accumulator (diesel models)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Engine air cleaner filter (petrol models)				R		R		R		R		R		R		R		R		R		R
Engine air cleaner filter (diesel models)		I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I
Air flow meter (diesel models)		Blow air to the sensor intermittently for about 30 seconds every 72 months or 60,000 km																				
Diesel smoke																						
Fuel tank cap, fuel lines, connections and fuel vapor control valve (petrol models)																						
Charcoal canister (petrol models)																						
Fuel tank cap, fuel lines and connections (diesel models)																						
Chassis and Body																						
Brake pedal and parking brake		I		I		I		I		I		I		I		I		I		I		I
Brake linings and drums (include parking brake linings and drums)																						
Brake pads and discs		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake fluid (SAE J1703 or FMVSS No. 116 DOT3)		I	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R	I	R
Clutch fluid (SAE J1703 or FMVSS No. 116 DOT3)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake pipes and hoses		I		I		I		I		I		I		I		I		I		I		I
Vacuum pump for brake booster (diesel models) ⁸																						

⁷ For vehicles with dual fuel tank only

⁸ Replace the blade with a new one and never reuse the blade.

Toyota Maintenance Schedule

MAINTENANCE SCHEDULE

	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	
months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	
(Months or odometer reading, whichever occurs first)	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200	
Chassis and Body continued																					
Power steering fluid (A/T fluid DEXRON® II or III)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Steering wheel, linkage and steering gear box	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Propeller shaft grease (NLGI No.2)	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	
Tightening propeller shaft bolts	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	
Drive shaft boots	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Suspension ball joint and dust covers	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Automatic transmission fluid (Toyota Genuine ATF WS)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Manual transmission oil (Gear oil API: GL-4 or GL-5)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Transfer oil (Toyota Genuine TF Gear oil LF 75W)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Front differential oil (Gear oil API: GL-5)	I	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
Rear differential oil (Gear oil API: GL-5)	I	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
Front and rear suspensions (include KDSS)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Bolts and nuts on chassis and body ⁹	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	
Tyres and inflation pressures	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Rotate wheels	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Balance front wheels	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Lights, horn, wipers and washers	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Seatbelt, webbing condition, buckle and retractor mechanism operation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Air conditioner filter	C	C	R	C	C	R	C	C	R	C	C	R	C	C	R	C	C	R	C	C	
Refrigerant amount of air conditioner	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Road Test																					
Road Test Vehicle	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	

⁹ For seat mounting bolts, front and rear suspension retaining bolts.

Toyota Maintenance Times

MAINTENANCE SERVICE TIMES

(Months or odometer reading, whichever occurs first)

Maintenance Service Times for Normal Conditions

months km x 1,000	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120
GRJ150 models with M/T	1.2	1.6	1.2	2.2	1.2	1.6	1.2	3.8	1.2	2.2	1.2	2.2	1.2	1.5	1.2	3.9	1.2	1.5	1.2	2.8
GRJ150 models with A/T	1.2	1.6	1.2	2.2	1.2	1.6	1.2	3.8	1.2	2.2	1.2	2.2	1.2	1.5	1.2	3.9	1.2	1.5	1.2	2.8
KDJ150 models with M/T	1.1	1.6	1.1	4.8	1.1	1.6	1.1	4.8	1.1	1.7	1.1	4.8	1.1	1.6	4.4	5.1	1.1	1.6	1.1	4.9
KDJ150 models with A/T	1.1	1.6	1.1	4.8	1.1	1.6	1.1	4.8	1.1	1.7	1.1	4.8	1.1	1.6	4.4	5.1	1.1	1.6	1.1	4.9
KDJ155 models with M/T	1.1	1.4	1.1	4.6	1.1	1.4	1.1	4.6	1.1	1.5	1.1	4.6	1.1	1.4	2.6	4.9	1.1	1.4	1.1	4.7
KDJ155 models with A/T	1.1	1.4	1.1	4.6	1.1	1.4	1.1	4.6	1.1	1.5	1.1	4.6	1.1	1.4	2.6	4.9	1.1	1.4	1.1	4.7

The times above give the recommended time in hours to perform a normal service. Additional time may be required to correct items or replace parts as identified during the maintenance operation. Time for valve clearance inspection is included at the appropriate services, however additional time will be required if adjustment is needed.

Ask your Service Advisor for the time to perform any additional maintenance.

6 month or 10,000 km Service
(whichever occurs first)

<p>6 month or 10,000 km Maintenance Record (whichever occurs first)</p> <p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date: Km:</p>	<p>Toyota Service Centre Verification</p> <p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>
--	--

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Clean air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle

Inspect the following:

- | | |
|---|--|
| <input type="checkbox"/> Drive belts | <input type="checkbox"/> Power steering fluid |
| <input type="checkbox"/> Battery | <input type="checkbox"/> Drive shaft boots |
| <input type="checkbox"/> Water sediment accumulator (diesel models) | <input type="checkbox"/> Tyres and inflation pressures |
| <input type="checkbox"/> Engine air cleaner filter (diesel models) | <input type="checkbox"/> Lights, horns, wipers and washers |
| <input type="checkbox"/> Brake pads and discs | <input type="checkbox"/> Seatbelt, webbing condition, buckle and retractor mechanism operation |
| <input type="checkbox"/> Brake fluid | |
| <input type="checkbox"/> Clutch fluid | |

Not For Reproduction



 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction



12 month or 20,000 km Service
(whichever occurs first)

<p>12 month or 20,000 km Maintenance Record (whichever occurs first)</p> <p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date: Km:</p>	<p>Toyota Service Centre Verification</p> <p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>
---	--

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Replace fuel transfer system filter (diesel models - dual fuel tank)
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Clean air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle

Inspect the following:

- | | |
|---|--|
| <ul style="list-style-type: none"> <input type="checkbox"/> Drive belts <input type="checkbox"/> Exhaust pipes and mountings <input type="checkbox"/> Battery <input type="checkbox"/> Water sediment accumulator (diesel models) <input type="checkbox"/> Engine air cleaner filter (all models) <input type="checkbox"/> Brake pedal, parking brake <input type="checkbox"/> Brake pads and discs <input type="checkbox"/> Brake fluid <input type="checkbox"/> Clutch fluid <input type="checkbox"/> Brake pipes and hoses <input type="checkbox"/> Power steering fluid <input type="checkbox"/> Steering wheel and linkage | <ul style="list-style-type: none"> <input type="checkbox"/> Drive shaft boots <input type="checkbox"/> Suspension ball joints and dust covers <input type="checkbox"/> Front and rear differential oil <input type="checkbox"/> Front and rear suspensions (include KDSS) <input type="checkbox"/> Tyres and inflation pressures <input type="checkbox"/> Lights, horns, wipers and washers <input type="checkbox"/> Seatbelt, webbing condition, buckle and retractor mechanism operation <input type="checkbox"/> Air conditioner, including refrigerant level |
|---|--|

Not For Reproduction



 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

18 month or 30,000 km Service
(whichever occurs first)

<p>18 month or 30,000 km Maintenance Record (whichever occurs first)</p> <p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date:</p> <p>Km:</p>	<p>Toyota Service Centre Verification</p> <p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>
--	--

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Replace engine air cleaner filter (diesel models)
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Replace air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle

Inspect the following:

- | | |
|---|--|
| <input type="checkbox"/> Drive belts | <input type="checkbox"/> Drive shaft boots |
| <input type="checkbox"/> Battery | <input type="checkbox"/> Tyres and inflation pressures |
| <input type="checkbox"/> Water sediment accumulator (diesel models) | <input type="checkbox"/> Lights, horns, wipers and washers |
| <input type="checkbox"/> Brake pads and discs | <input type="checkbox"/> Seatbelt, webbing condition, buckle and retractor mechanism operation |
| <input type="checkbox"/> Brake fluid | |
| <input type="checkbox"/> Clutch fluid | |
| <input type="checkbox"/> Power steering fluid | |

Not For Reproduction



 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

24 month or 40,000 km Service
(whichever occurs first)

Toyota Service Centre Verification

By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.

24 month or 40,000 km Maintenance Record (whichever occurs first)

This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.

Date: Km:

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Replace fuel transfer system filter (diesel models - dual fuel tank)
- Replace engine air cleaner filter (petrol models)
- Replace brake fluid
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Replace front and rear differential oil
- Clean air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle
- Inspect the following:**
- Check valve clearance (diesel models)
- Drive belts
- Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects and the hose connections for installation condition and corrosion
- Engine coolant
- Exhaust pipes and mountings
- Battery
- Water sediment accumulator (diesel models)
- Engine air cleaner filter (diesel models)
- Diesel smoke (diesel models)
- Fuel tank cap, fuel lines, connections, vapour control valve (petrol models)
- Charcoal canister (petrol models)
- Fuel tank cap, fuel lines and connections (diesel models)
- Brake pedal, parking brake
- Brake linings/drums, including parking brake
- Brake pads and discs
- Clutch fluid
- Brake pipes and hoses
- Power steering fluid
- Steering wheel and linkage
- Drive shaft boots
- Suspension ball joints and dust covers
- Automatic transmission fluid
- Manual transmission oil
- Transfer oil
- Front and rear suspensions (include KDSS)
- Tyres and inflation pressures
- Lights, horns, wipers and washers
- Seatbelt, webbing condition, buckle and retractor mechanism operation
- Air conditioner, including refrigerant level

Not for Reproduction



 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

30 month or 50,000 km Service
(whichever occurs first)

<p>30 month or 50,000 km Maintenance Record (whichever occurs first)</p> <p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date:</p> <p>Km:</p>	<p>Toyota Service Centre Verification</p> <p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>
--	--

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Clean air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle

Inspect the following:

- | | |
|---|---|
| <ul style="list-style-type: none"> <input type="checkbox"/> Drive belts <input type="checkbox"/> Battery <input type="checkbox"/> Water sediment accumulator (diesel models) <input type="checkbox"/> Engine air cleaner filter (diesel models) <input type="checkbox"/> Brake pads and discs <input type="checkbox"/> Brake fluid <input type="checkbox"/> Clutch fluid | <ul style="list-style-type: none"> <input type="checkbox"/> Power steering fluid <input type="checkbox"/> Drive shaft boots <input type="checkbox"/> Tyres and inflation pressures <input type="checkbox"/> Lights, horns, wipers and washers <input type="checkbox"/> Seatbelt, webbing condition, buckle and retractor mechanism operation |
|---|---|

Not For Reproduction



 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

36 month or 60,000 km Service
(whichever occurs first)

<p>36 month or 60,000 km Maintenance Record (whichever occurs first)</p> <p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date: Km:</p>	<p>Toyota Service Centre Verification</p> <p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>
---	--

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Replace fuel transfer system filter (diesel models - dual fuel tank)
- Replace engine air cleaner filter (diesel models)
- Clean air flow meter
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Replace air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle

Inspect the following:

- Drive belts
- Exhaust pipes and mountings
- Battery
- Water sediment accumulator (diesel models)
- Engine air cleaner filter (petrol models)
- Brake pedal, parking brake
- Brake pads and discs
- Brake fluid
- Clutch fluid
- Brake pipes and hoses
- Power steering fluid
- Steering wheel and linkage
- Drive shaft boots
- Suspension ball joints and dust covers
- Front and rear differential oil
- Front and rear suspensions (include KDSS)
- Tyres and inflation pressures
- Lights, horns, wipers and washers
- Seatbelt, webbing condition, buckle and retractor mechanism operation
- Air conditioner, including refrigerant level

Not For Reproduction



 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

42 month or 70,000 km Service
(whichever occurs first)

<p>42 month or 70,000 km Maintenance Record (whichever occurs first)</p> <p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date: Km:</p>	<p>Toyota Service Centre Verification</p> <p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>
---	--

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Clean air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle

Inspect the following:

- Drive belts
- Battery
- Water sediment accumulator (diesel models)
- Engine air cleaner filter (diesel models)
- Brake pads and discs
- Brake fluid
- Clutch fluid
- Power steering fluid
- Drive shaft boots
- Tyres and inflation pressures
- Lights, horns, wipers and washers
- Seatbelt, webbing condition, buckle and retractor mechanism operation

Not For Reproduction

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

48 month or 80,000 km Service

(whichever occurs first)

Toyota Service Centre Verification

By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.

48 month or 80,000 km Maintenance Record (whichever occurs first)

This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.

Date: Km:

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Replace fuel filter (petrol models)
- Replace fuel transfer system filter (diesel models - dual fuel tank)
- Replace engine air cleaner filter (petrol models)
- Replace brake fluid
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Replace front and rear differential oil
- Clean air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle
- Inspect the following:**
- Check valve clearances (all models)
- Drive belts
- Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects, and the hose connections for installation condition and corrosion
- Engine coolant
- Exhaust pipes and mountings
- Battery
- Water sediment accumulator (diesel models)
- Engine air cleaner filter (diesel models)
- Diesel smoke (diesel models)
- Fuel tank cap, fuel lines, connections and vapour control valve (petrol models)
- Charcoal canister (petrol models)
- Fuel tank cap, fuel lines and connections (diesel models)
- Brake pedal, parking brake
- Brake linings/drums, including parking brake
- Brake pads and discs
- Clutch fluid
- Brake pipes and hoses
- Power steering fluid
- Steering wheel and linkage
- Drive shaft boots
- Suspension ball joints and dust covers
- Automatic transmission fluid
- Manual transmission oil
- Transfer oil
- Front and rear suspensions (include KDSS)
- Tyres and inflation pressures
- Lights, horns, wipers and washers
- Seatbelt, webbing condition, buckle and retractor mechanism operation
- Air conditioner, including refrigerant level

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

54 month or 90,000 km Service
(whichever occurs first)

<p>54 month or 90,000 km Maintenance Record (whichever occurs first)</p> <p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date:</p> <p>Km:</p>	<p>Toyota Service Centre Verification</p> <p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>
--	--

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Replace engine air cleaner filter (diesel models)
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Replace air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle

Inspect the following:

- | | |
|---|--|
| <input type="checkbox"/> Drive belts | <input type="checkbox"/> Drive shaft boots |
| <input type="checkbox"/> Battery | <input type="checkbox"/> Tyres and inflation pressures |
| <input type="checkbox"/> Water sediment accumulator (diesel models) | <input type="checkbox"/> Lights, horns, wipers and washers |
| <input type="checkbox"/> Brake pads and discs | <input type="checkbox"/> Seatbelt, webbing condition, buckle and retractor mechanism operation |
| <input type="checkbox"/> Brake fluid | |
| <input type="checkbox"/> Clutch fluid | |
| <input type="checkbox"/> Power steering fluid | |

Not For Reproduction

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

60 month or 100,000 km Service
(whichever occurs first)

<p>60 month or 100,000 km Maintenance Record (whichever occurs first)</p> <p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date: Km:</p>	<p>Toyota Service Centre Verification</p> <p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>
--	--

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
 - Replace spark plugs (petrol models)
 - Replace fuel transfer system filter (diesel models - dual fuel tank)
 - Lubricate propeller shaft
 - Tighten propeller shaft bolts
 - Tighten bolts and nuts on chassis and body
 - Clean air conditioner filter
 - Rotate wheels
 - Balance front wheels
 - Road test vehicle
- Inspect the following:**
- Drive belts
 - Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects, and the hose connections for installation condition and corrosion
 - Exhaust pipes and mountings
 - Battery
 - Water sediment accumulator (diesel models)
 - Engine air cleaner filter (all models)
 - Fuel tank cap, fuel lines, connections and vapour control valve (petrol models)
 - Fuel tank cap, fuel lines and connections (diesel models)
 - Brake pedal, parking brake
 - Brake pads and discs
 - Brake fluid
 - Clutch fluid
 - Brake pipes and hoses
 - Power steering fluid
 - Steering wheel and linkage
 - Drive shaft boots
 - Suspension ball joints and dust covers
 - Front and rear differential oil
 - Front and rear suspensions (include KDSS)
 - Tyres and inflation pressures
 - Lights, horns, wipers and washers
 - Seatbelt, webbing condition, buckle and retractor mechanism operation
 - Air conditioner, including refrigerant level

Not for Reproduction

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

66 month or 110,000 km Service
(whichever occurs first)

<p>66 month or 110,000 km Maintenance Record (whichever occurs first)</p> <p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date:</p> <p>Km:</p>	<p>Toyota Service Centre Verification</p> <p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>
---	--

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Clean air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle

Inspect the following:

- Drive belts
- Battery
- Water sediment accumulator (diesel models)
- Engine air cleaner filter (diesel models)
- Brake pads and discs
- Brake fluid
- Clutch fluid
- Power steering fluid
- Drive shaft boots
- Tyres and inflation pressures
- Lights, horns, wipers and washers
- Seatbelt, webbing condition, buckle and retractor mechanism operation

Not For Reproduction

21/07/10 - Prado

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

72 month or 120,000 km Service

(whichever occurs first)

72 month or 120,000 km Maintenance Record (whichever occurs first)	Toyota Service Centre Verification
<p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date:</p> <p style="text-align: right;">Km:</p>	<p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
 - Replace fuel transfer system filter (diesel models - dual fuel tank)
 - Replace engine air cleaner filter (all models)
 - Replace brake fluid
 - Lubricate propeller shaft
 - Tighten propeller shaft bolts
 - Replace front and rear differential oil
 - Replace air conditioner filter
 - Rotate wheels
 - Balance front wheels
 - Road test vehicle
- Inspect the following:**
- Check valve clearances (diesel models)
 - Drive belts
 - Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects, and the hose connections for installation condition and corrosion
 - Engine coolant
 - Exhaust pipes and mountings
 - Battery
 - Water sediment accumulator (diesel models)
 - Diesel smoke (diesel models)
 - Fuel tank cap, fuel lines, connections, vapour control valve (petrol models)
 - Charcoal canister (petrol models)
 - Fuel tank cap, fuel lines and connections (diesel models)
 - Brake pedal, parking brake
 - Brake linings/drums, including parking brake
 - Brake pads and discs
 - Clutch fluid
 - Brake pipes and hoses
 - Power steering fluid
 - Steering wheel and linkage
 - Drive shaft boots
 - Suspension ball joints and dust covers
 - Automatic transmission fluid
 - Manual transmission oil
 - Transfer oil
 - Front and rear suspensions (include KDSS)
 - Tyres and inflation pressures
 - Lights, horns, wipers and washers
 - Seatbelt, webbing condition, buckle and retractor mechanism operation
 - Air conditioner, including refrigerant level

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

78 month or 130,000 km Service
(whichever occurs first)

<p>78 month or 130,000 km Maintenance Record (whichever occurs first)</p> <p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date:</p> <p>Km:</p>	<p>Toyota Service Centre Verification</p> <p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>
---	--

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Clean air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle

Inspect the following:

- Drive belts
- Battery
- Water sediment accumulator (diesel models)
- Engine air cleaner filter (diesel models)
- Brake pads and discs
- Brake fluid
- Clutch fluid
- Power steering fluid
- Drive shaft boots
- Tyres and inflation pressures
- Lights, horns, wipers and washers
- Seatbelt, webbing condition, buckle and retractor mechanism operation

Not For Reproduction

2.1/07/10 - Prado

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

84 month or 140,000 km Service

(whichever occurs first)

<p>84 month or 140,000 km Maintenance Record (whichever occurs first)</p> <p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date:</p> <p>Km:</p>	<p>Toyota Service Centre Verification</p> <p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>
---	--

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Replace fuel transfer system filter (diesel models - dual fuel tank)
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Clean air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle

Inspect the following:

- | | |
|--|--|
| <input type="checkbox"/> Drive belts | <input type="checkbox"/> Brake fluid |
| <input type="checkbox"/> Cooling and heater system, check that the radiator and condenser are not blocked with leaves, dirt, or insects, and the hose connections for installation condition and corrosion | <input type="checkbox"/> Clutch fluid |
| <input type="checkbox"/> Exhaust pipes and mountings | <input type="checkbox"/> Brake pipes and hoses |
| <input type="checkbox"/> Battery | <input type="checkbox"/> Power steering fluid |
| <input type="checkbox"/> Water sediment accumulator (diesel models) | <input type="checkbox"/> Steering wheel and linkage |
| <input type="checkbox"/> Engine air cleaner filter (all models) | <input type="checkbox"/> Drive shaft boots |
| <input type="checkbox"/> Fuel tank cap, fuel lines, connections, vapour control valve (petrol models) | <input type="checkbox"/> Suspension ball joints and dust covers |
| <input type="checkbox"/> Fuel tank cap, fuel lines and connections (diesel models) | <input type="checkbox"/> Front and rear differential oil |
| <input type="checkbox"/> Brake pedal, parking brake | <input type="checkbox"/> Front and rear suspensions (include KDSS) |
| <input type="checkbox"/> Brake pads and discs | <input type="checkbox"/> Tyres and inflation pressures |
| | <input type="checkbox"/> Lights, horns, wipers and washers |
| | <input type="checkbox"/> Seatbelt, webbing condition, buckle and retractor mechanism operation |
| | <input type="checkbox"/> Air conditioner, including refrigerant level |

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

90 month or 150,000 km Service
(whichever occurs first)

<p>90 month or 150,000 km Maintenance Record (whichever occurs first)</p> <p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date:</p> <p>Km:</p>	<p>Toyota Service Centre Verification</p> <p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>
---	--

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace timing belt (diesel models)
- Replace engine oil and filter
- Replace fuel transfer pump (diesel models)
- Replace engine air cleaner filter (diesel models)
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Replace air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle

Inspect the following:

- | | |
|--|--|
| <ul style="list-style-type: none"> <input type="checkbox"/> Drive belts <input type="checkbox"/> Battery <input type="checkbox"/> Water sediment accumulator (diesel models) <input type="checkbox"/> Brake pads and discs <input type="checkbox"/> Brake fluid <input type="checkbox"/> Clutch fluid <input type="checkbox"/> Power steering fluid | <ul style="list-style-type: none"> <input type="checkbox"/> Drive shaft boots <input type="checkbox"/> Tyres and inflation pressures <input type="checkbox"/> Lights, horns, wipers and washers <input type="checkbox"/> Seatbelt, webbing condition, buckle and retractor mechanism operation |
|--|--|

NOT FOR REPRODUCTION

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

Toyota Service Centre Verification

By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.

96 month or 160,000 km Maintenance Record (whichever occurs first)


This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.

Date: Km:

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Replace engine coolant
- Replace fuel filter (petrol models)
- Replace fuel transfer system filter (diesel models - dual fuel tank)
- Replace engine air cleaner filter (petrol models)
- Replace brake fluid
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Replace front and rear differential oil
- Clean air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle
- Inspect the following:**
 - Check valve clearances (all models)
 - Drive belts
 - Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects, and the hose connections for installation condition and corrosion
 - Exhaust pipes and mountings
 - Battery
 - Water sediment accumulator (diesel models)
 - Engine air cleaner filter (diesel models)
 - Diesel smoke (diesel models)
 - Fuel tank cap, fuel lines, connections, vapour control valve (petrol models)
 - Charcoal canister (petrol models)
 - Fuel tank cap, fuel lines and connections (diesel models)
 - Brake pedal, parking brake
 - Brake linings/drums, including parking brake
 - Brake pads and discs
 - Clutch fluid
 - Brake pipes and hoses
 - Power steering fluid
 - Steering wheel and linkage
 - Drive shaft boots
 - Suspension ball joints and dust covers
 - Automatic transmission fluid
 - Manual transmission oil
 - Transfer oil
 - Front and rear suspensions (include KDSS)
 - Tyres and inflation pressures
 - Lights, horns, wipers and washers
 - Seatbelt, webbing condition, buckle and retractor mechanism operation
 - Air conditioner, including refrigerant level

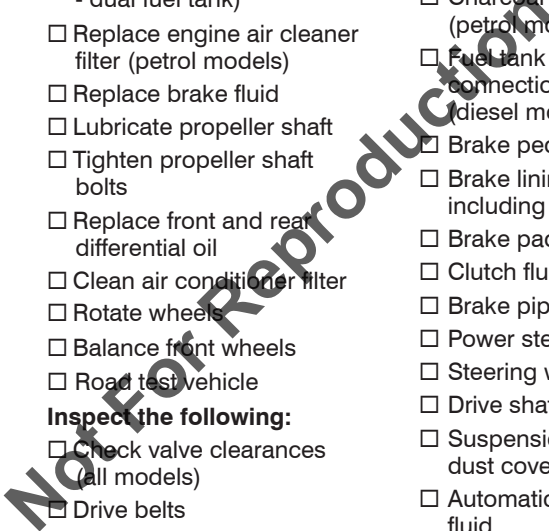

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

102 month or 170,000 km Service
(whichever occurs first)

<p>102 month or 170,000 km Maintenance Record (whichever occurs first)</p> <p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date: Km:</p>	<p>Toyota Service Centre Verification</p> <p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>
---	--

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Clean air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle

Inspect the following:

- Drive belts
- Battery
- Water sediment accumulator (diesel models)
- Engine air cleaner filter (diesel models)
- Brake pads and discs
- Brake fluid
- Clutch fluid
- Power steering fluid
- Drive shaft boots
- Tyres and inflation pressures
- Lights, horns, wipers and washers
- Seatbelt, webbing condition, buckle and retractor mechanism operation

Not For Reproduction

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

108 month or 180,000 km Service

(whichever occurs first)

Toyota Service Centre Verification

By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.

108 month or 180,000 km Maintenance Record (whichever occurs first)

This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.

Date: Km:

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Replace fuel transfer system filter (diesel models - dual fuel tank)
- Replace engine air cleaner filter (diesel models)
- Clean air flow meter
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Replace air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle

Inspect the following:

- Drive belts
- Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects, and the hose connections for installation condition and corrosion
- Exhaust pipes and mountings
- Battery
- Water sediment accumulator (diesel models)
- Engine air cleaner filter (petrol models)
- Fuel tank cap, fuel lines, connections and vapour control valve (petrol models)
- Fuel tank cap, fuel lines and connections (diesel models)
- Brake pedal, parking brake
- Brake pads and discs
- Brake fluid
- Clutch fluid
- Brake pipes and hoses
- Power steering fluid
- Steering wheel and linkage
- Drive shaft boots
- Suspension ball joints and dust covers
- Front and rear differential oil
- Front and rear suspensions (include KDSS)
- Tyres and inflation pressures
- Lights, horns, wipers and washers
- Seatbelt, webbing condition, buckle and retractor mechanism operation
- Air conditioner, including refrigerant level

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

114 month or 190,000 km Service
(whichever occurs first)

<p>114 month or 190,000 km Maintenance Record (whichever occurs first)</p> <p>This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.</p> <p>Date:</p> <p>Km:</p>	<p>Toyota Service Centre Verification</p> <p><i>By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.</i></p>
--	--

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Clean air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle

Inspect the following:

- Drive belts
- Battery
- Water sediment accumulator (diesel models)
- Engine air cleaner filter (diesel models)
- Brake pads and discs
- Brake fluid
- Clutch fluid
- Power steering fluid
- Drive shaft boots
- Tyres and inflation pressures
- Lights, horns, wipers and washers
- Seatbelt, webbing condition, buckle and retractor mechanism operation

Not For Reproduction

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

120 month or 200,000 km Service

(whichever occurs first)

Toyota Service Centre Verification

By stamping this form you confirm that you are an Authorised Toyota Service Centre and that all aspects of the Toyota Service using Toyota Genuine Parts have been completed.

120 month or 200,000 km Maintenance Record (whichever occurs first)

This service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts. The vehicle has been checked for any outstanding manufacturer service campaigns.

Date: Km:

Maintenance for Normal Operating Conditions

IMPORTANT: Check the Toyota on-line system for any outstanding manufacturer service campaigns.

- Replace engine oil and filter
- Replace spark plugs (petrol models)
- Replace fuel transfer system filter (diesel models - dual fuel tank)
- Replace engine air cleaner filter (petrol models)
- Replace brake fluid
- Lubricate propeller shaft
- Tighten propeller shaft bolts
- Replace front and rear differential oil
- Tighten bolts and nuts on chassis and body
- Clean air conditioner filter
- Rotate wheels
- Balance front wheels
- Road test vehicle
- Inspect the following:**
- Check valve clearances (diesel models)
- Drive belts
- Cooling and heater system; check that the radiator and condenser are not blocked with leaves, dirt, or insects, and the hose connections for installation condition and corrosion
- Engine coolant
- Exhaust pipes and mountings
- Battery
- Water sediment accumulator (diesel models)
- Engine air cleaner filter (diesel models)
- Diesel smoke (diesel models)
- Fuel tank cap, fuel lines, connections, vapour control valve (petrol models)
- Charcoal canister (petrol models)
- Fuel tank cap, fuel lines and connections (diesel models)
- Brake pedal, parking brake
- Brake linings/drums, including parking brake
- Brake pads and discs
- Clutch fluid
- Brake pipes and hoses
- Vacuum pump for brake booster (diesel models)
- Power steering fluid
- Steering wheel and linkage
- Drive shaft boots
- Suspension ball joints and dust covers
- Automatic transmission fluid
- Manual transmission oil
- Transfer oil
- Front and rear suspensions (include KDSS)
- Tyres and inflation pressures
- Lights, horns, wipers and washers
- Seatbelt, webbing condition, buckle and retractor mechanism operation
- Air conditioner, including refrigerant level

 **TOYOTA GENUINE**
PARTS, SERVICE & ACCESSORIES

Not For Reproduction

Additional Service Requirements

Additional Service Requirements

How and where you drive your Toyota determines the service requirements as much as the time or distance travelled. For example, if you are regularly towing heavy loads, driving in rough conditions or simply performing lots of stop-start city driving, then more regular maintenance is necessary. Discuss the typical sort of driving you'll be doing with your Toyota Service Advisor, they will advise how best to maintain your vehicle to keep it performing at its best.

If you consistently put your vehicle through extreme conditions or drive in harsh environments, then your vehicle will require the extra maintenance as described in Additional Service Schedule.

These conditions could include any or all of the following:

- Driving on rough, muddy or snow-melted roads
- Driving on dusty roads
- Towing trailers, caravans or boats, or using a car top carrier
- Repeated short trips, less than 8 kilometres, in freezing conditions.
- Extensive idling and or low speed driving for long distance, such as taxis, couriers, etc.
- Stop-start city or suburban driving
- Continuous high speed driving (at speeds greater than 140 km/h) for over 2 hours.

Additional Maintenance Service Schedule

ADDITIONAL MAINTENANCE SCHEDULE

	3	6	9	12	15	18	21	24	27	30	33	36	39	42	45	48	51	54	57	60	
	months	months	months	months	months	months	months	months	months	months	months	months	months	months	months	months	months	months	months	months	
	km x 1,000																				
	whichever occurs first																				
Engine																					
Timing belt and timing belt pulley (diesel models) ⁹						I						I								I	
Timing belt cover (diesel models) ¹⁰						C						C								C	
Engine oil	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
Engine oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
Fuel System																					
Engine air cleaner filter (petrol models)						I				I										I	
Engine air cleaner filter (diesel models)	Inspect every 1.5 months or 2,500 km, Replace every 18 months or 30,000 km																				
Chassis and Body																					
Brake linings and drums (Include parking brake linings and drums)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Brake pads and discs	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Clutch fluid							R													R	
Brake pipes and hoses	I																			I	
Steering wheel, linkage and steering gear box	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Propeller shaft grease (NLGI No.2)	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	
Tightening bolts for propeller shaft	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	
Drive shaft boots	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Suspension ball joint and dust cover	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Automatic transmission fluid																				R	
Manual transmission oil (Gear oil API: GL-4 or GL-5)							R													R	
Transfer oil																					
(Toyota Genuine TF Gear oil LF 75W)							R													R	
Front differential oil (Gear oil API: GL-5)																				R	
Rear differential oil (Gear oil API: GL-5)																				R	

¹⁰ For diesel engine vehicles repeatedly operating in extremely dusty conditions, especially off-road operations such as mining, construction or exploration.

Additional Maintenance Service Times

ADDITIONAL MAINTENANCE SCHEDULE

	months																			
	3	6	9	12	15	18	21	24	27	30	33	36	39	42	45	48	51	54	57	60
<i>(Months or odometer reading, whichever occurs first)</i>	km x 1,000																			
Chassis and Body continued																				
Front and rear suspension	I					I				I				I				I		
Bolts and nuts on chassis and body ⁹									T											
Tyres and inflation pressures	I		I		I		I		I		I		I		I		I		I	
Lights, horn, wipers and washers	I		I		I		I		I		I		I		I		I		I	
Air conditioner filter	R		C		C		R		C		C		C		R		C		C	
Road Test																				
Road Test Vehicle	I		I		I		I		I		I		I		I		I		I	

⁹ For seat mounting bolts, front and rear suspension retaining bolts.

ADDITIONAL MAINTENANCE SERVICE TIMES

	months																			
	3	6	9	12	15	18	21	24	27	30	33	36	39	42	45	48	51	54	57	60
<i>(Months or odometer reading, whichever occurs first)</i>	km x 1,000																			
	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100

Maintenance Service Times for Severe Conditions

GRJ150 model with M/T	0.9	0.4	0.9	0.3	0.9	0.4	0.9	0.4	0.9	0.4	0.9	0.7	0.9	0.4	0.9	0.3	0.9	0.4	0.9	0.3
GRJ150 model with A/T	0.9	0.4	0.9	0.3	0.9	0.4	0.9	0.4	0.9	0.4	0.9	0.7	0.9	0.4	0.9	0.3	0.9	0.4	0.9	0.3
KDJ150 models with M/T	0.8	0.4	0.8	0.3	0.8	0.4 ¹¹	0.8	0.4 ¹¹	0.8	0.4 ¹¹	0.8	0.7 ¹¹	0.8	0.4	0.8	0.3	0.8	0.4 ¹¹	0.8	0.3
KDJ150 models with A/T	0.8	0.4	0.8	0.3	0.8	0.4 ¹¹	0.8	0	0.8	0.4	0.8	0.7 ¹¹	0.8	0.4	0.8	0.3	0.8	0.4 ¹¹	0.8	0.3
KDJ155 models with M/T	0.8	0.4	0.8	0.4	0.8	0.4 ¹¹	0.8	0.4	0.8	0.4	0.8	0.7 ¹¹	0.8	0.4	0.8	0.3	0.8	0.4 ¹¹	0.8	0.3
KDJ155 models with A/T	0.8	0.4	0.8	0.4	0.8	0.4 ¹¹	0.8	0	0.8	0.4	0.8	0.7 ¹¹	0.8	0.4	0.8	0.3	0.8	0.4 ¹¹	0.8	0.3

The times above give the recommended time in hours to perform each service over and above a normal service. Additional time maybe required to correct items or replace parts as identified during the maintenance operation. Time for valve clearance inspection is included at the appropriate services, however additional time will be required if adjustment is needed.

Ask your Service Advisor for the time to perform any additional maintenance.

Diesel Engines

For Dusty conditions, inspect the engine air cleaner filter every 1.5 months or 2 500 km. Time allowance 0.2hrs.

¹¹ For diesel engines, add 0.6 hours for inspection of the timing belt and timing belt pulley and to clean the timing belt cover (for vehicles repeatedly operating in extremely dusty conditions, especially off-road operations such as mining, construction or exploration).

Additional Service Record

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

Not For Reproduction

Additional Service Record

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

Not For Reproduction

Additional Service Record

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

Not For Reproduction

Additional Service Record

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:.....

Km:.....

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:.....

Km:.....

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:.....

Km:.....

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:.....

Km:.....

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:.....

Km:.....

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:.....

Km:.....

Toyota Service Centre Verification

Not For Reproduction

Additional Service Record

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

This additional service has been completed by an Authorised Toyota Service Centre using Toyota Genuine Parts:

Date:

Km:

Toyota Service Centre Verification

Not For Reproduction

Section 3

3

New South Wales	3-2
Metropolitan Dealers	3-2
Rural Dealers	3-4
Australian Capital Territory	3-6
Victoria	3-7
Metropolitan Dealers	3-7
Rural Dealers	3-8
Queensland	3-9
Metropolitan Dealers	3-9
Rural Dealers	3-10
Northern Territory	3-12
Western Australia	3-13
State Distributor	3-13
Metropolitan Dealers	3-13
Rural Dealers	3-14
South Australia	3-15
Metropolitan Dealers	3-15
Rural Dealers	3-15
Tasmania	3-16

Not For Reproduction

Nationwide Toyota Service Centres

New South Wales

Metropolitan Dealers

ALBION PARK

Illawarra Toyota, Corner Princes Highway and Miall Way (02) 4256 3022
Service Centre: 3 Rivulet Crescent (02) 4257 1977

ARTARMON

Chatswood Toyota,
Service Centre: 12 Marden Street (02) 9206 6966

BELMORE

Canterbury Toyota, 744 Canterbury Road (02) 9750 0011

BLACKTOWN

Lander Toyota, 161 Main Street (02) 9622 6333
Service Centre: 7 Jane Street (02) 8822 4487

BROOKVALE

Bill Buckle Toyota, 790 Pittwater Road (02) 9939 7766
Service Centre: 196 Harbord Road (02) 9905 3977
Satellite Service Centre: 47 Bassett Street, Mona Vale (02) 9997 7300

CAMDEN

Clintons Toyota,
Service Centre: 15 Cawdor Road (02) 4654 7299

CAMPBELLTOWN

Clintons Toyota, 3-17 Queen Street (02) 4631 8888

CARDIFF

Cardiff Toyota, 54 Macquarie Road (02) 4904 6777

CASTLE HILL

Castle Hill Toyota, 2 Victoria Avenue (02) 8831 8888

CHATSWOOD

Chatswood Toyota, 728 Pacific Highway (02) 9201 4444
Service Centre: 12 Marden Street, Artarmon (02) 9206 6966

CHULLORA

Noble Toyota, 135 Hume Highway (02) 9735 2888

CROYDON

Truscotts Toyota,
Service Centre: 644 Parramatta Road (02) 9582 9477
Parts Centre: 644 Parramatta Road (02) 9582 9499

FIVE DOCK

Truscotts Toyota, 147-153 Parramatta Road (02) 9715 9888
Service Centre: 644 Parramatta Road, Croydon (02) 8799 7577
Parts Centre: 644 Parramatta Road, Croydon (02) 8799 7599

GATESHEAD

Charlestown Toyota, Corner Pacific Highway and Oakdale Road (02) 4943 7777

GLEBE

Sydney City Toyota, Corner Ross Street and Parramatta Road (02) 9550 2233

GRANVILLE

Terry Shields Toyota,
Service Centre: 233-239 Parramatta Road (02) 9204 6500

GUILDFORD

Western Toyota, 662 Woodville Road (02) 9681 8100

HURSTVILLE

Fergusons Toyota, 109 Forrest Road (02) 9579 5077

Nationwide Toyota Service Centres

KINGSWOOD

Penrith Toyota, 87-101 Great Western Highway (02) 4736 4888

LIDCOMBE

Phil Gilbert Toyota, 66-76 Parramatta Road (02) 9735 8400

LIVERPOOL

Warren Toyota,
Service Centre: 26 Elizabeth Drive (02) 9828 8777

MONA VALE

Bill Buckle Toyota,
Satellite Service Centre: 47 Bassett Street (02) 9997 7300

MOSMAN

Mosman Toyota, 501 Military Road (02) 9969 2555

NARELLAN

Clintons Toyota, 10 Yarmouth Place (02) 4645 5888

NEWCASTLE

Newcastle Toyota, 65 Tudor Street, Hamilton (02) 4969 1311

PARRAMATTA

Terry Shields Toyota, Corner Church and Raymond Streets
Service Centre: 233-239 Parramatta Road, Granville (02) 9204 6444
(02) 9204 6444

PENNANT HILLS

Pennant Hills Toyota, 330 Pennant Hills Road (02) 9875 0222

ROCKDALE

Stewart Toyota, 591-597 Princes Highway (02) 9599 4000

RYDE WEST

Ryde Toyota, 1046 Victoria Road (02) 9858 1788

SUTHERLAND

Stewart Toyota, 489-497 Princes Highway (02) 9521 7111

SYDNEY (WATERLOO)

Sydney City Toyota, 824 Bourke Street, Waterloo (02) 9690 9999

WAITARA

Phil McCarroll Toyota, 46 Pacific Highway (02) 9488 2188

WARWICK FARM

Warren Toyota, Todman Avenue (02) 9828 8777
Service Centre: 26 Elizabeth Drive, Liverpool (02) 9828 8877

WATERLOO

Sydney City Toyota, 824 Bourke Street (02) 9690 9999

WINDSOR

Windsor Toyota, 98 Macquarie Street (02) 4587 7677

WOLLONGONG

Illawarra Toyota, Corner Station and Flinders Streets (02) 4229 8333

WOY WOY

Brian Hilton Toyota,
Satellite Service Centre: 1 Charlton Street (02) 4344 1455

WYONG

Brian Hilton Toyota, 170 Pacific Highway (02) 4353 1122

WYOMING

Brian Hilton Toyota, Brooks Avenue (02) 4328 2888
Satellite Service Centre: 1 Charlton Street, Woy Woy (02) 4344 1455

Nationwide Toyota Service Centres

New South Wales

Rural Dealers

ARMIDALE

New England Toyota, 210 Rusden Street (02) 6771 5044

BALLINA WEST

Ballina Toyota, Corner Pacific Highway and Sunset Avenue (02) 6686 3322

BATHURST

Bathurst Toyota, 8 Corporation Avenue (02) 6334 2224

BEGA

Bega Toyota, 137-141 Auckland Street (02) 6492 2277

BOMBALA

Cottrell Toyota, 152 Maybe Street (02) 6458 3341

BROKEN HILL

Broken Hill Toyota, 320-328 Beryl Street (08) 8088 2444

CESSNOCK

Cessnock Toyota, 250 Maitland Road (02) 4990 2722

COBAR

Cobar Toyota
Satellite Service Centre: 6 Campbell Street (02) 6836 4007

COFFS HARBOUR

Coffs Harbour Toyota, 192-196 Orlando Street (02) 6652 1933

COOMA

Cooma Toyota, 66-70 Sharp Street (02) 6452 1077

COONABARABRAN

Mack Toyota, 24 Charles Street (02) 6842 1499

COOTAMUNDRA

Cootamundra Toyota, 91 Parker Street (02) 6942 1888

COWRA

Oliver Toyota, 191-193 Kendal Street (02) 6342 1988

DENILIQUIN

Deniliquin Toyota, 47-57 Davidson Street (03) 5881 2933

DUBBO

Dubbo City Toyota, 6-10 Bourke Street (02) 6882 1511

EDEN

Fraser Motors, 137-145 Imlay Street (02) 6496 1529

FORBES

Jeffery Toyota, 34 Dowling Street (02) 6851 1644

GILGANDRA

Gilgandra Toyota, 18-26 Warren Road (02) 6847 2106

GOULBURN

Goulburn Toyota, 104 Clinton Street (02) 4823 0800

GRAFTON

Black Toyota, Corner Bent and Ryan Streets (02) 6642 2644

GRIFFITH

Owen Toyota, 96 Mackay Avenue (02) 6962 8888

GUNNEDAH

Gunnedah Toyota, 72 Barber Street (02) 6742 3322

HAY

Lugsdin Toyota, 6 Nailor Street (02) 6993 1661

Nationwide Toyota Service Centres

HILLSTON	
Harveys Service Centre, 120 High Street	(02) 6967 2143
INVERELL	
New England Toyota, 29-31 Evans Street	(02) 6722 1088
KEMPSEY	
Kempsey Toyota, 132 Belgrave Street	(02) 6562 6466
LEETON	
Leeton Toyota, 2 Pine Avenue	(02) 6953 3533
LISMORE	
City Toyota, 29-33 Ballina Street	(02) 6626 4400
Service Centre: 259 Keen Street	(02) 6626 4455
LITHGOW	
Lean and Bennett Toyota, 255 Main Street	(02) 6352 2211
MAITLAND	
Maitland Toyota, 104-124 Newcastle Road	(02) 4933 8383
MOREE	
Tait Toyota, 434 Frome Street	(02) 6752 2988
MORUYA	
Eurobodalla Toyota, Corner Princes Highway and Vulcan Street	(02) 4474 2000
MOSS VALE	
Southern Highland Toyota, 208 Argyle Street	(02) 4868 1477
MUDGEE	
Mudgee Toyota, 30 Burrundulla Avenue	(02) 6372 1799
MUSWELLBROOK	
Muswellbrook Toyota, 113 Maitland Road	(02) 6543 3066
MURWILLUMBAH	
Hayes Toyota, 34 Prospero Street	(02) 6672 1666
NARRABRI	
Max Orman Toyota, 160 Maitland Street	(02) 6792 2788
NOWRA	
Nowra Toyota, 104 Princes Highway	(02) 4421 4777
NYNGAN	
Nyngan Toyota, 10 Mitchell Highway	(02) 6832 1477
ORANGE WEST	
West Orange Toyota, 32 Forbes Road	(02) 6362 2988
PARKES	
Parks Toyota, 131 Clarinda Street	(02) 6862 4911
PORT MACQUARIE	
Warren Plowright Toyota, 10 Hastings River Drive	(02) 6583 3122
QUIRINDI	
Gowings Toyota, 80 Pryor Street	(02) 6746 1066
SCONE	
Satellite Service Centre: 232 New England Highway	(02) 6545 1188
SINGLETON	
Singleton Toyota, 31-45 John Street	(02) 6572 3755
TAMWORTH	
Tamworth City Toyota, 311-315 Marius Street	(02) 6766 5008
TAREE	
Taree Motorama, 46-54 Victoria Street	(02) 6552 1200

Nationwide Toyota Service Centres

TAYLORS BEACH

Port Stephens Toyota, 70 Port Stephens Drive (02) 4916 3333

TUMUT

Tumut Toyota, 145 Wynyard Street (02) 6947 1744

TUNCURRY

Twin Towns Toyota, 144 Manning Street (02) 6555 6588

TWEED HEADS

Surf Toyota, 66-70 Pacific Highway (07) 5569 5000
Service Centre: Machinery Drive (07) 5569 6999

ULLADULLA

Ulladulla Toyota, 171 Princes Highway (02) 4455 3777

WAGGA WAGGA

Thomas Brothers Toyota, 67 Dobney Avenue (02) 6926 0530

WARREN

Macquarie Toyota, Corner Dubbo and Hale Streets (02) 6847 4266

WEE WAA

Max Orman Pty. Ltd, Boolcarrol Road (02) 6795 4541

WELLINGTON

Ron Stubberfield Toyota, 54 Lee Street (02) 6845 2522

WOLLONGONG

Wollongong Toyota, Corner Station and Flinders Streets (02) 4229 8333

WYALONG WEST

Armstrong Toyota, 208-210 Main Street (02) 6972 2400

YASS

Luff Motors Pty. Ltd., 280 Comur Street (02) 6226 1122

YOUNG

Watson Toyota, 225 Boorowa Street (02) 6382 1266

Australian Capital Territory

BELCONNEN

Canberra Toyota, 1 Josephson Street (02) 6222 1700

FYSHWICK

Canberra Toyota, 44-50 Wollongong Street (02) 6222 1900

MITCHELL

Canberra Toyota, 30 Vicars Street (02) 6221 3513

PHILLIP

Canberra Toyota, 160-164 Melrose Drive (02) 6222 1800

Nationwide Toyota Service Centres

Victoria

Metropolitan Dealers

BERWICK

Harris Freer Toyota, 751 Princes Highway
Service Centre: 3 Kangan Drive

(03) 9707 4455

(03) 9709 2555

CAMBERWELL

Cannon Toyota, 610 Camberwell Road

(03) 9809 2466

COBURG

Anthony Smith Toyota, 1067 Sydney Road

(03) 9350 3488

CRANBOURNE

Cranbourne Toyota, 284 South Gippsland Highway

(03) 5955 1111

CROYDON

Yarra Valley Toyota, 35 Hewish Road

(03) 9725 5555

DANDENONG

Patterson Cheney Toyota, 200 Cheltenham Road

(03) 9215 2222

DEER PARK

Le Mans Toyota, 770 Ballarat Road

(03) 8363 3000

ESSENDON FIELDS

Airport Toyota, 355 Wirraway Road

(03) 9379 8888

ELSTERNWICK

Brighton Toyota, 77 Nepean Highway

(03) 9524 2000

FERNTREE GULLY

Ferntree Gully Toyota, 1101 Burwood Highway

(03) 9758 8222

FOOTSCRAY

Le Mans Toyota, 4 Hopkins Street

(03) 9689 2944

FRANKSTON

Frankston Toyota, 1 Wells Road

(03) 9783 8877

GEELONG

Blood Toyota, 68-72 Pyans Street

(03) 5222 3000

GLEN WAVERLEY

Lane Toyota, Corner Springvale and Waverley Roads

(03) 8544 2288

Service Centre: 9 Dunlop Road

(03) 8544 2200

Spare parts

(03) 8544 2222

HEIDELBERG

Cannon Toyota, 473 Lower Heidelberg Road

(03) 9459 3277

LILYDALE

Yarra Valley Toyota, 454 Maroondah Highway

(03) 9735 5555

MELBOURNE

Melbourne City Toyota, 621 Elizabeth Street

(03) 9282 8888

MELTON

Melton Toyota, 143-147 High Street

(03) 9743 3233

MILL PARK

South Morang Toyota, 783 Plenty Road

(03) 9407 8000

MORNINGTON

Motor Court Toyota, 911-915 Nepean Highway

(03) 5975 4177

NUNAWADING

Nunawading Toyota, 275 Whitehorse Road

(03) 9877 3133

Service Centre: 88 Station Street

(03) 8872 8888

Satellite Service Centre: 26 Firth Street, Doncaster

(03) 9848 8322

OAKLEIGH

Chadstone Toyota, 1547 Dandenong Road

(03) 9568 0933

Nationwide Toyota Service Centres

PAKENHAM

Pakenham Toyota, 33 Commercial Drive, South East Business Park (03) 5924 2000

PRESTON

Gary McMillan Toyota, 687 High Street (03) 9478 1788

ROSEBUD

Motor Court Toyota, 1343-1353 Point Nepean Road (03) 5986 5000

SOUTH MELBOURNE

South Melbourne Toyota, 215-217 Normanby Road (03) 8645 6333

WERRIBEE

Peter Davey Toyota, 8 Werribee Street (03) 9741 3344

Service Centre: 86-100 Lock Avenue (03) 9974 0200

Victoria

Rural Dealers

BAIRNSDALE

Dwyers Toyota, 449 Princes Highway (03) 5152 9797

BALLARAT

Ballarat Toyota, 19 Creswick Road (03) 5331 2666

BENALLA

Benalla Toyota, Cnr Sydney Road & Yellow Brick Road (03) 5762 2022

BENDIGO

Bendigo Toyota, 51-59 Midland Highway, Epsom (03) 5448 4844

CASTLEMAINE

Castlemaine Toyota, 371 Barker Street (03) 5470 5255

COBRAM

Cobram Toyota, 79 Broadway Street (03) 5872 1088

COLAC

Colac Toyota, 191 Murray Street (03) 5231 5222

ECHUCA

Echuca Toyota, 101 Northern Highway (03) 5482 3377

HAMILTON

D. S. Taylor Motors, 46-50 Lonsdale Street (03) 5572 4244

HEALESVILLE

Healesville Toyota, 110-112 Maroondah Highway (03) 5962 4333

HORSHAM

Howden Toyota, 81 Stawell Road (03) 5381 6111

KANIVA

Robot Motors, 71 Commercial Street (03) 5392 2335

KERANG

Kerang Toyota, 1 Victoria Street (03) 5450 4233

KYABRAM

Albion Motors Pty. Ltd., 33-39 Albion Street (03) 5852 1977

KYNETON

Kyneton Toyota, 167-181 Mollison Street (03) 5421 0200

LEONGATHA

Knights Toyota, 15-19 Hughes Street (03) 5662 2302

MANSFIELD

Mansfield Toyota, 102-108 High Street (03) 5775 1777

MARYBOROUGH

Maryborough Toyota, 64 High Street (03) 5461 1666

Nationwide Toyota Service Centres

MILDURA

Sunraysia Toyota, Corner Seventh Street and Etiwanda Avenue (03) 5021 2999

SALE

Turnbull Toyota, 303 York Street (03) 5144 9898

SEYMOUR

Seymour Toyota, 21 Emily Street (03) 5792 2266

SHEPPARTON

Shepparton Toyota, 8000 Melbourne Road (03) 5823 1301

STAWELL

Howden Toyota, 72-76 Longfield Street (03) 5358 1555

SWAN HILL

Swan Hill Toyota,
Corner Murray Valley Highway and Pental Island Road (03) 5033 2800

TRARALGON WEST

Wights Toyota, Princes Highway (03) 5174 8200

WANGARATTA

Wangaratta Toyota, 53-61 Tone Road (03) 5722 2000

WARRACKNABEAL

B. Schilling and Sons, 38 Scott Street (03) 5394 1237

WARRAGUL

Ted Neills Motors Pty. Ltd., 1 Endeavour Street (03) 5623 1331

WARRNAMBOOL

Warrnambool Toyota, 1075 Princes Highway (03) 5559 0077

WODONGA

Jacob Toyota, 175 Melbourne Road (02) 6022 9494

WONTHAGGI

Wonthaggi Toyota, 346 Bass Highway (03) 5672 1722

YARRAM

Turnbull Toyota, 278 Commercial Road (03) 5182 5722

Queensland

Metropolitan Dealers

ALBION

Sci-Fleet Toyota, 167 Sandgate Road (07) 3862 0999

BRENDALE

Torque Toyota, 55 Southpine Road (07) 3000 8000

CABOOLTURE

Martin Jonkers Motors, 174 Morayfield Road (07) 5495 1844

CLEVELAND

Oldmac Toyota, 58 Shore Street West (07) 3479 9968

HILLCREST

Motorama Toyota, 74 Anzac Avenue (07) 3802 6500

IPSWICH

Llewellyn Toyota, 246 Brisbane Road (07) 3282 2922

KEDRON

Sci-Fleet Toyota, 59 Kitchener Road (07) 3361 0077

MANGO HILL

Torque Toyota, 1658 Anzac Avenue (07) 3000 9000

MOOROOKA

Motorama Toyota, 1160 Ipswich Road (07) 3426 7222

Nationwide Toyota Service Centres

MORNINGSIDE

Downtown Toyota, 753 Wynnum Road (07) 3399 6733

SALISBURY

Motorama Toyota, 711 Beaudesert Road (07) 3717 2777

SPRINGWOOD

Oldmac Toyota, 14 Dennis Road (07) 3440 7769

TARINGA

Sci-Fleet Toyota, 118 Moggill Road (07) 3720 7000

UPPER MT GRAVATT

Southside Toyota, 1922 Logan Road (07) 3349 5888

WOOLLOONGABBA

Southside Toyota, 42 Ipswich Road (07) 3391 8022

Service Centre: 59 Logan Road (07) 3008 6477

WYNNUM

Downtown Toyota, 306 Tingal Road (07) 3396 6655

Queensland

Rural Dealers

ATHERTON

John Cole Toyota, 28 Tolga Road (07) 4091 2222

AYR

Don West Toyota, 282 Queen Street (07) 4783 1600

BEAUDESERT

Huebner Toyota, 189 Brisbane Street (07) 5541 1666

BILOELA

Linemac Toyota, 7-9 Dawson Highway (07) 4992 1033

BOWEN

Filby's Motors, 49 Powell Street (07) 4786 4555

BRINSMEAD

Pacific Toyota,
Satellite Service Centre: Brinsmead Road (07) 4034 3933

BUNDABERG

Bundaberg Toyota, 4 Takalvan Street (07) 4152 9911

CAIRNS

Pacific Toyota, 235-245 Mulgrave Road (07) 4030 7444

Satellite Service Centres:

- 590 Bruce Highway, Woree (07) 4033 7321

- Shop G.D.B. 1 Smithfield Shopping Centre,
Captain Cook Highway, Smithfield (07) 4038 2344

- Brinsmead Road, Brinsmead (07) 4034 3933

CALOUNDRA

Sunshine Toyota, 689 Nicklin Way (07) 5493 3900

CANNONVALE

Filby's Motors, 2 McIntosh Drive (07) 4946 3200

CHANCELLOR PARK

Sunshine Toyota, 30 Chancellor Park Boulevard (07) 5430 2000

CHARTERS TOWERS

Charters Towers Toyota, 96 Mosman Street (07) 4754 5600

CHINCILLA

Black Toyota, Warrego Highway (07) 4668 9011

Nationwide Toyota Service Centres

DALBY Black Toyota, 43 Drayton Street	(07) 4669 9600
EMERALD Central Highlands Toyota, 31 Hospital Road	(07) 4983 9400
GATTON John O'Brien Toyota, 88 Railway Street	(07) 5462 0500
GLADSTONE Bill Robertson Toyota, 80-84 Hanson Road	(07) 4972 2766
GOONDIWINDI Tait Toyota, 54 Russell Street	(07) 4671 7300
GYMPIE John Madiill Toyota, 15 Station Road	(07) 5480 5555
HARBOURTOWN Grand Motors Toyota, Satellite Service Centre: 11 Gateway Drive	(07) 5583 6888
HERVEY BAY Widebay Toyota, 82 Torquay Road, Pialba	(07) 4125 9500
INGHAM Ingham Toyota, 8-10 Halifax Street	(07) 4776 8500
INNISFAIL John Cole Toyota, 25 - 29 Palmerston Drive	(07) 4061 2166
KINGAROY Ken Mills Toyota, Corner River Road and Bunya Highway	(07) 4162 2300
LONGREACH Black Toyota, 17 Swan Street	(07) 4658 1800
MACKAY Mackay Toyota, Corner Nebo Road and Shakespeare Street	(07) 4967 2540
MAROOCHYDORE Ken Mills Toyota, 62 Sugar Road	(07) 5443 6277
MARYBOROUGH Widebay Toyota, 105 Lennox Street	(07) 4190 5400
MAREEBA Mareeba Toyota, 279-283 Byrne Street	(07) 4092 9600
MT ISA Bell and Moir Toyota, 86 Camooweal Street	(07) 4743 3066
MUNDUBBERA Ken Mills Toyota, Strathdee Street	(07) 4165 3400
NAMBOUR Ken Mills Toyota, 107 Coronation Avenue	(07) 5441 1544
NOOSAVILLE John Madiill Toyota, Corner Eumundi Road and Lionel Donovan Drive	(07) 5470 0750
OAKEY Black Toyota, 177 Bridge Street	(07) 4691 1033
PROSERPINE Filby's Motors, 62 Main Street	(07) 4945 1644
ROBINA Hinterland Toyota, 19-25 Brabham Circuit	(07) 5583 6999
ROCKHAMPTON Ian Weigh Toyota, 127 Denison Street	(07) 4927 3244

Nationwide Toyota Service Centres

ROMA

Black Toyota, 73-75 Charles Street (07) 4622 1455

SMITHFIELD

Pacific Toyota,
Satellite Service Centre: Shop G.D.B.1 Smithfield Shopping Centre,
Captain Cook Highway (07) 4038 2344

SOUTHPORT

Grand Motors Toyota, 265 Ferry Road (07) 5583 6888
Satellite Service Centre: 11 Gateway Drive, Harbourn town (07) 5583 6888
Parts Centre: 17 Industrial Avenue, Molendinar (07) 5583 6800

SPRINGSURE

Emerald Toyota,
Satellite Service Centre: 72 Eclipse Street (07) 4984 1177

ST GEORGE

O'Brien Toyota, 36-40 Victoria Street (07) 4625 3677

THARGOMINDAH

Thargo Motors, Dowling Street (07) 4655 3225

TOOGOLAWAH

Seymours Pty. Ltd., 25 Fulham Street (07) 5423 1355

TOOWOOMBA

Butlers Toyota, 597 Ruthven Street (07) 4631 8300
Service Centre: 5 Telford Street (07) 4631 8350
Parts Centre: 8a Mann Street (07) 4631 8300

TOWNSVILLE

Mike Carney Toyota, 154 Duckworth Street, Garbutt (07) 4759 4200

TULLY

Bartrac Pty. Ltd., 89 Butler Street (07) 4068 1566

WARWICK

Black Toyota, 9-11 Betta Place (07) 4661 2799

WEST BURLEIGH

Hinterland Toyota, 82-84 Kortum Drive (07) 5569 7888

WOREE

Pacific Toyota,
Satellite Service Centre: 590 Bruce Highway (07) 4033 7321

YEPPON

Ian Weigh Toyota, 97 John Street (07) 4939 3922

Northern Territory

ALICE SPRINGS

Peter Kittle Toyota, 46 Stuart Highway (08) 8952 5500

DARWIN

Bridge Toyota, 9 Stuart Highway (08) 8946 0000

KATHERINE

Katherine Toyota, 441 Victoria Road (08) 8972 1788

KUNUNURRA

Argyle Toyota, 231 Bloodwood Drive (08) 9168 2236

NHULUNBUY

Gove Toyota, Arnhem Road (08) 8987 1917

PALMERSTON

Bridge Toyota, 72 Chung Wa Terrace (08) 8935 1000

TENNANT CREEK

Peter Kittle Toyota, 1041 Paterson Street (08) 8962 2251

Nationwide Toyota Service Centres

Western Australia

State Distributor

Toyota W.A. Distributor, 63 Adelaide Terrace, Perth (08) 9268 8844
 Service Office: 12 Miles Rd, Kewdale (08) 9365 9333

Metropolitan Dealers

BALCATT

Big Rock Toyota, 445 Wanneroo Road (08) 9344 0111

CANNINGVALE

Prosser Toyota, 209 Bannister Road (08) 9256 8088

CLARKSON

Grand Toyota, 1902 Marmion Avenue (08) 9407 1900

GOSNELLS

Prosser Toyota, 2085 Albany Highway (08) 9492 1388

KALAMUNDA

Kalamunda Toyota, 43 Canning Road (08) 9257 9151

MANDURAH

Mandurah Toyota, 161 Pinjarra Road (08) 9583 1333

MELVILLE

Melville Toyota, 5 Carr Place (08) 9317 2333
 Service Centre: 53 McCoy Street, Myaree (08) 9317 2333

MIDLAND

Midland Toyota, 163 Great Eastern Highway (08) 9464 1000
 Service Centre: 8 Stanhope Gardens, Midvale (08) 9464 1088

MIDVALE

Midland Toyota, (08) 9464 1088
 Service Centre: 8 Stanhope Gardens (08) 9464 1088

MORLEY

Galleria Toyota, 70-84 Collier Road (08) 9262 8888

MYAREE

Melville Toyota, (08) 9317 2333
 Service Centre: 53 McCoy Street (08) 9317 2333

NEDLANDS

City Toyota, 199 Stirling Highway (08) 9386 8844

OSBORNE PARK

Scarboro Toyota, 293 Scarborough Beach Road (08) 9273 1000

PERTH

City Toyota, 63 Adelaide Terrace (08) 9221 0888
 Service Centre: 165 Aberdeen Street, Northbridge (08) 9228 0888

ROCKINGHAM

Toyotaways, 75 Dixon Road (08) 9527 5755

WANGARA

Grand Toyota, Corner Wanneroo and Lancaster Roads (08) 9403 9000

WELSHPOOL

New Town Toyota, 10 Forward Street (08) 9472 2698

Nationwide Toyota Service Centres

Western Australia

Rural Dealers

ALBANY

Albany Toyota, 352-358 Albany Highway (08) 9842 1772

BROOME

Broome Toyota, 4 McPherson Street (08) 9192 1277

BUNBURY

Bunbury Toyota, 34 Spencer Street (08) 9721 3644

BUSSELTON

Busselton Toyota, 78 West Street (08) 9752 1333

CARNARVON

Carnarvon Toyota, 198-199 Robinson Street (08) 9941 1029

COLLIE

Collie Toyota, 2 Forest Street (08) 9734 2102

DALWALLINU

Boekeman Toyota, 547 Great Northern Highway (08) 9661 1002

ESPERANCE

Esperance Toyota, Norseman Road (08) 9071 0134

GERALDTON

Midwest Toyota, 339 Marine Terrace (08) 9964 0000

HALL'S CREEK

Halls Creek Toyota, 137 Duncan Road (08) 9168 6150

KALGOORLIE

Goldfields Toyota, 58 Boulder Road (08) 9021 4711

KARRATHA

Pilbara Toyota, 1923 Coolawanyah Road (08) 9185 2700

KATANNING

Great Southern Toyota, 155-157 Clive Street (08) 9821 7100

KUNUNURRA

Argyle Toyota, 231 Bloodwood Drive (08) 9168 2236

MANJIMUP

Manjimup Toyota, 19 Chopping Street (08) 9771 1033

MERREDIN

Merredin Toyota, 112 Barrack Street (08) 9041 1444

MOORA

Moora Toyota, 92 Gardiner Street (08) 9651 1408

NARROGIN

Narrogin Toyota, 162 Federal Street (08) 9881 2044

NORTHAM

Northam Toyota, Corner Peel Terrace and Fitzgerald Street (08) 9622 5622

PORT HEDLAND

Pilbara Toyota, 38 Anderson Street (08) 9173 1622

Service Centre: 26 Anderson Street (08) 9173 2355

WONGAN HILLS

Boekeman Toyota, Man-Manning Road (08) 9671 1211

Nationwide Toyota Service Centres

South Australia

Metropolitan Dealers

ADELAIDE

C.M. I. Toyota, 152 West Terrace (08) 8238 5555
 Satellite Service Centre: 24 Nelson Street, Stepney (08) 8362 2844

CHELTENHAM

C.M.I. Toyota, 869 Port Road (08) 8268 0888

CHRISTIERS BEACH

C.M.I. Toyota, 150-158 Beach Road, Noarlunga Centre (08) 8382 9000

CLOVELLY PARK

Jarvis Toyota, 1278 South Road 1300 137 766

HAWTHORN

Cornes Toyota, 46 Belair Road (08) 8272 1488

PARA HILLS WEST

Peter Kittle Toyota, 1459 Main North Road (08) 8258 7777

PROSPECT

Northpoint Toyota, 170 Main North Road (08) 8344 7771

STEPNEY

C. M. I. Toyota, Satellite Service Centre: 24 Nelson Street (08) 8362 2844

South Australia

Rural Dealers

BERRI

Big River Toyota, Old Sturt Highway (08) 8582 2277

CEDUNA

Ceduna Machinery, 48 McKenzie Road (08) 8625 2999

CLARE

Clare Valley Toyota, 380 Main North Road (08) 8842 2566

JAMESTOWN

Kelly Toyota, 8 Cumnock Street (08) 8664 1253

KADINA

Peninsula Toyota, 2-4 Taylor Street (08) 8821 1022

KINGSCOTE

Kingscote Toyota, 16 Telegraph Road (08) 8553 2213

MAITLAND

Peninsula Toyota, 43 Robert Street (08) 8832 2725

MILLICENT

Millicent Toyota, 79 Mt. Gambier Road (08) 8733 3111

MT BARKER

Adelaide Hills Toyota, 57 Adelaide Road (08) 8398 2226

MT GAMBIER

Noel Barr Toyota, 35 Bay Road (08) 8725 8155

MURRAY BRIDGE

Murray Bridge Toyota, 169 Adelaide Road (08) 8531 0044

NARACOORTE

Naracoorte Toyota, Lot 85, Deviation Road (08) 8762 0455

PORT AUGUSTA

Northpoint Toyota, 18 Young Street (08) 8642 3433

Nationwide Toyota Service Centres

PORT LINCOLN

Peter Kittle Toyota, 62-72 Liverpool Street (08) 8682 2599

TANUNDA

Barossa Valley Toyota, 175 Murray Street (08) 8563 2188

VICTOR HARBOR

Victor Harbor Toyota, 5 Victoria Street (08) 8552 1255

WAIKERIE

Errol Matschoss Motors Pty. Ltd, 10 Ian Oliver Drive (08) 8541 2055

WHYALLA

Peter Kittle Toyota, 33-39 Forsyth Street (08) 8644 2800

Tasmania

BURNIE

Gowans Toyota, 181 Bass Highway (03) 6431 5677

DEVONPORT

Gowans Toyota, 41 Best Street (03) 6424 5177

HOBART

Co-Op Toyota, 267 Argyle Street (03) 6280 1901

LAUNCESTON

Bruce Stevenson Toyota, 80 Hobart Road (03) 6344 4000

Not For Reproduction

Nationwide Toyota Service Centres



PARTS, SERVICE & ACCESSORIES

Not For Reproduction

Odometer Change Record

ODOMETER CHANGE RECORD

If for some reason you need a new odometer installed, please have your Toyota Dealer verify the date of change and the kilometres travelled in this panel below. Ensure he adds the Dealer stamp too!

Odometer changed at:

km:

Date:

ODOMETER CHANGE RECORD

If for some reason you need a new odometer installed, please have your Toyota Dealer verify the date of change and the kilometres travelled in this panel below. Ensure he adds the Dealer stamp too!

Odometer changed at:

km:

Date:

Not For Reproduction

Owner Information Change Form

If your name or address has changed or you are the new owner of this Toyota, please complete the other side of this form and mail it in a stamped envelope to the following address:

Toyota Motor Corporation Australia Limited
Technical Service Operations
GPO Box 2006S
Melbourne 3001
Victoria

This will allow Toyota to make a record of your ownership of the vehicle, and to contact you with any important product or safety updates concerning your vehicle. Your information may also be used to send you material about Toyota products or services. If you do not wish to receive this information, please tick the box below. Toyota may provide your details to a mailing house for the purposes set out above. Please see the Privacy Statement at the front of this book for further information about Toyota and privacy.

Please tick this box if you do not wish to receive marketing material about our products and services.

Owner Information Change Form

If your name or address has changed or you are the new owner of this Toyota, please complete the other side of this form and mail it in a stamped envelope to the following address:

Toyota Motor Corporation Australia Limited
Technical Service Operations
GPO Box 2006S
Melbourne 3001
Victoria

This will allow Toyota to make a record of your ownership of the vehicle, and to contact you with any important product or safety updates concerning your vehicle. Your information may also be used to send you material about Toyota products or services. If you do not wish to receive this information, please tick the box below. Toyota may provide your details to a mailing house for the purposes set out above. Please see the Privacy Statement at the front of this book for further information about Toyota and privacy.

Please tick this box if you do not wish to receive marketing material about our products and services.

Owner Information Change Form

Please tick the appropriate square.

- Name and or address change
- New owner

Please complete the following in BLOCK letters:

Vehicle Identification Number (VIN)*

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Engine Number*

Registration Number

Owner's Name

Address

..... **Post Code**

E-mail

Mobile Phone Number

* Refer to 'Your Toyota's Identification' in the Owner's Manual for location of VIN and engine number.

Not For Reproduction

Owner Information Change Form

Please tick the appropriate square.

- Name and or address change
- New owner

Please complete the following in BLOCK letters:

Vehicle Identification Number (VIN)*

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Engine Number*

Registration Number

Owner's Name

Address

..... **Post Code**

E-mail

Mobile Phone Number

* Refer to 'Your Toyota's Identification' in the Owner's Manual for location of VIN and engine number.

Toyota Genuine Parts and Service

Why you should insist on Toyota Genuine Parts and Service

With Toyota Genuine Service you have Toyota Trained technicians using the most advanced diagnostic equipment working on your vehicle. Their model by model expertise, plus the fact that they only use Toyota Genuine Parts with a 12 month warranty* ensures every Toyota - at any Toyota Dealership in Australia - receives a Genuinely Better service.

Call 1800 Toyota (869 682) for your nearest Toyota Dealer.

Visit Toyota's website: www.toyota.com.au

* Conditions apply. All warranties are additional to implied warranties under the Trade Practices Act 1974.

Not For Reproduction



TOYOTA GENUINE
PARTS, SERVICE & ACCESSORIES



Not For Reproduction

This Warranty and Service book covers Land Cruiser Prado models:
GRJ150 with 1GR-FE petrol engine, KDJ150 and KDJ155 with 1KD-FTV diesel engine.

Part Number: TSO0931
Issue: 1105-02