

Owner's Manual

For your safety and comfort, read carefully and keep in the vehicle.

COROLLA

HATCHBACK HYBRID





Pictorial index

Search by illustration

	For safety and security	Make sure to read through them (Main topics: Child seat, theft deterrent system)	1
	Vehicle status information and indicators	Reading driving-related information (Main topics: Meters, multi-information display)	2
	Before driving	Opening and closing the doors and windows, adjustment before driving (Main topics: Keys, doors, seats, power windows)	3
	Driving	Operations and advice which are necessary for driving (Main topics: Starting hybrid system, refueling)	4
	Interior features	Usage of the interior features (Main topics: Air conditioner, storage features)	5
	Maintenance and care	Caring for your vehicle and maintenance procedures (Main topics: Interior and exterior, light bulbs)	6
	When trouble arises	What to do in case of malfunction and emergency (Main topics: 12-volt battery discharge, flat tire)	7
ĺ	Vehicle specifications	Vehicle specifications, customizable features (Main topics: Fuel, oil, tire inflation pressure)	8

٠				
ı	n	a	ex	

Search by symptom	
Search alphabetically	

For your information			Multi-information display (12.3-inch display)
1	For safety and security		screen98
1-1.	For safe use	3	Before driving
	Before driving22	2 1	Key information
	For safe driving23	J-1.	Keys104
	Seat belts25	3-2	Opening, closing and locking
	SRS airbags29	U- <u>L</u> .	the doors
	Exhaust gas precautions 36		Side doors107
1-2.	Child safety		Back door111
	Riding with children38		Smart entry & start system
	Child restraint systems 38		114
1-3.	Emergency assistance	3-3.	Adjusting the seats
	Toyota Connected Services 53		Front seats119
1-4.	Hybrid system		Rear seats120
	Hybrid system features56		Head restraints122
	Hybrid system precautions 59	3-4.	Adjusting the steering wheel
1-5.	Theft deterrent system		and mirrors
	Immobilizer system 64		Steering wheel
	Alarm65		Inside rear view mirror125 Outside rear view mirrors126
	Vehicle status information	2 5	
	and indicators	3-3.	Opening and closing the windows
2-1.	Instrument cluster		Power windows128
	Warning lights and indicators	3-6.	Favorite settings
	68		My Settings131
	Gauges and meters (7-inch display)72	4	Driving
	Gauges and meters (12.3-inch		
	display) 76	4-1.	Before driving
	Multi-information display (7-inch		Driving the vehicle134
	display)81		Cargo and luggage140
			Trailer towing141

5

6

vehicle interior283

4-2.	Driving procedures	PKSB (Parking Support Brake)
	Power (ignition) switch142	227
	EV drive mode146	Parking Support Brake function
	Hybrid transmission148	(static objects)233
	Turn signal lever150	Parking Support Brake function
	Parking brake151	(rear-crossing vehicles)236
	Brake Hold 154	Safe Exit Assist238
4-3.		Driving mode select switch
∓ -5.	ers	242
	Headlight switch156	Driving assist systems243
	AHB (Automatic High Beam)	4-6. Driving tips
	158	Hybrid vehicle driving tips248
	Fog light switch161	Winter driving tips250
	Windshield wipers and washer	
	162	5 Interior features
	Rear window wiper and washer	
	165	5-1. Using the air conditioning
4-4.	Refueling	system and defogger
	Opening the fuel tank cap167	Automatic air conditioning sys-
4-5.	Using the driving support sys-	tem254
	tems	Seat heaters261
	Toyota Safety Sense169	5-2. Using the interior lights
	PCS (Pre-Collision System)	Interior lights list262
	175	5-3. Using the storage features
	LTA (Lane Tracing Assist) 185	List of storage features264
	LDA (Lane Departure Alert)	Luggage compartment features
	190	267
	Dynamic radar cruise control	5-4. Other interior features
	195	Other interior features269
	Cruise control204	
	Emergency Driving Stop System206	6 Maintenance and care
	RSA (Road Sign Assist)209	6-1. Maintenance and care
	BSM (Blind Spot Monitor)211	Cleaning and protecting the
	Toyota parking assist-sensor	vehicle exterior280
	215	Cleaning and protecting the

RCTA (Rear Cross Traffic Alert)

function221

6-2.	Maintenance	If a warning message is dis-
	Maintenance requirements	played 331
	286	If you have a flat tire (vehicles
6-3.	Do-it-yourself maintenance	without spare tire)335
	Do-it-yourself service precau-	If you have a flat tire (vehicles
	tions288	with a spare tire)346
	Hood290	If the hybrid system will not start
	Positioning a floor jack291	354
	Engine compartment292	If you lose your keys355
	Tires298	If the electronic key does not
	Tire inflation pressure300	operate properly356
	Wheels301	If the 12-volt battery is dis-
		charged358
	Air conditioning filter303	If your vehicle overheats362
	Cleaning the hybrid battery (trac-	If the vehicle becomes stuck
	tion battery) air intake vents304	365
	Electronic key battery307	8 Vehicle specifications
	Checking and replacing fuses	
		8-1. Specifications
	Light bulbs312	Maintenance data (fuel, oil level,
7	When trouble arises	etc.) 368
1	wileli tiouble alises	Fuel information375
		8-2. Customization
7-1.	Essential information	Customizable features376
	Emergency flashers316	8-3. Initialization
	If your vehicle has to be stopped	
	in an emergency316	Items to initialize385
	If the vehicle is submerged or	Index
	water on the road is rising	Index
	317	
7-2.	Steps to take in an emergency	What to do if (Troubleshooting)
	If your vehicle needs to be towed	388
	319	Alphabetical Index391
	If you think something is wrong	
	322	
	If a warning light turns on or a	
	warning buzzer sounds324	

For your information

Main Owner's Manual

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Toyota policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of equipment.

Accessories, spare parts and modification of your Toyota

A wide variety of non-genuine spare parts and accessories for Toyota vehicles are currently available in the market. Using these spare parts and accessories which are not genuine Toyota products may adversely affect the safety of your vehicle, even though these parts may be approved by certain authorities in your country. Toyota Motor Corporation therefore cannot accept any liability or guarantee spare parts and accessories which

are not genuine Toyota products, nor for replacement or installation involving such parts.

This vehicle should not be modified with non-genuine Toyota products. Modification with non-genuine Toyota products could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from the modification may not be covered under warranty.

Also, remodeling like this will have an effect on advanced safety equipment such as Toyota Safety Sense and there is a danger that it will not work properly or the danger that it may work in situations where it should not be working.

Cyber Attack Risk

Installing electronic devices and radios increases the risk of cyber attacks through the installed parts, which may lead to unexpected accidents and leakage of personal information. Toyota does not make any guarantees for problems caused by installing non-genuine Toyota products.

Installation of an RF-transmitter system

The installation of an RF-transmitter system in your vehicle could affect electronic systems such as:

- Multiport fuel injection system/sequential multiport fuel injection system
- Toyota Safety Sense
- Anti-lock brake system
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with your Toyota dealer for precautionary measures or special instructions regarding installation of an RF-transmitter system.

Further information regarding frequency bands, power levels, antenna positions and installation provisions for the installation of RF-transmitters, is available on request at your Toyota dealer.

High voltage parts and cables on the hybrid vehicles emit approximately the same amount of electromagnetic waves as the conventional gasoline powered vehicles or home electronic appliances despite of their electromagnetic shielding.

Unwanted noise may occur in the reception of the radio frequency transmitter (RF-transmitter).

Vehicle data recording

This vehicle is equipped with sophisticated computers that record certain data regarding vehicle controls and operations.

Data recorded by the computers

Certain data, such as the following, is recorded depending on the operation timing and status of each function.

- Engine speed/Electric motor speed (traction motor speed)
- · Accelerator status
- · Brake status
- · Vehicle speed
- Operation status of the driving assist systems
- · Images from the cameras

Your vehicle is equipped with cameras. Contact your Toyota dealer for the location of recording cameras.

The recorded data varies according to the vehicle grade level and options with which it is equipped.

These computers do not record conversations or sounds, and only record images outside of the vehicle in certain situations

Data usage

Toyota may use the data recorded in this computer to diagnose malfunctions, conduct research and development, and improve quality.

Toyota will not disclose the recorded data to a third party except:

- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- · For use by Toyota in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner

Image information recorded by the vehicle can be erased by your Toyota dealer.

The image recording function can be disabled. However, if the function is disabled, data from when systems operate will not be available.

If you wish to stop the collection of Toyota Safety Sense data by the Toyota servers for the purpose of research and development and provision to individual services, contact your Toyota dealer.

Usage of data collected through Toyota Connected Services

If your Toyota has Toyota Connected Services and if you have subscribed to those services, please refer to the Toyota Connected Services usage contract for information on data collected and its usage.

For more information, visit https://www.toyota.com.au/privacy.

Event data recorder

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an airbag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. However, data may not be recorded depending on the severity and type of a

crash

The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and.
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur.

NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

Disclosure of the EDR data
 Toyota will not disclose the data

recorded in an EDR to a third party except when:

- An agreement from the vehicle's. owner (or the lessee for a leased vehicle) is obtained
- In response to an official request by the police, a court of law or a government agency
- · For use by Toyota in a lawsuit However, if necessary, Toyota may:
- · Use the data for research on vehicle safety performance
- Disclose the data to a third party for research purposes without disclosing information about the specific vehicle or vehicle owner

Scrapping of your Toyota

The SRS airbag and seat belt pretensioner devices in your Toyota contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by your Toyota dealer before you scrap your vehicle.

"QR Code"

The word "QR Code" is registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.



WARNING

General precautions while driv-

Driving under the influence: Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

Defensive driving: Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents

Driver distraction: Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to vou, vour occupants or others.

■ General precaution regarding children's safety


Never leave children unattended in the vehicle, and never allow children to have or use the kev.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children



WARNING

■ General precaution regarding a coin battery and button battery

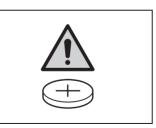

This product contains a coin battery or button battery. Observe the following precautions. Failure to do so may result in death or serious injury.

- Keep away new and removed batteries from children
- Do not swallow the battery. Doing so may cause chemical burns.
- If a battery is swallowed, it may cause severe chemical burns in as little as 2 hours and may result in death or serious injury.
- If you accidentally swallow a battery or put a battery into a part of your body, get emergency medical attention immediately.


Reading this manual

Explains symbols used in this manual.


Symbols in this manual

Symbols	Meanings
A	WARNING: Explains something that, if not obeyed, could cause death or serious injury to peo- ple.
<u>^</u>	NOTICE: Explains something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equip- ment.
¹ 2 3	Indicates operating or working procedures. Follow the steps in numerical order.

Symbols in illustrations

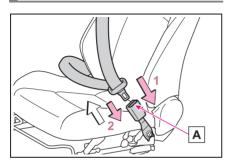


Symbols	Meanings
	Indicates the action (pushing, turning, etc.) used to operate switches and other devices.
\Box	Indicates the outcome of an operation (e.g. a lid opens).

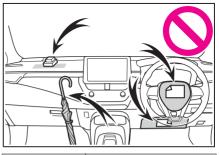


Symbols	Meanings
>	Indicates the component or position being explained.
0	Means Do not , Do not do this , or Do not let this happen .

How to search

- Searching by name
- Alphabetical index: →P.391

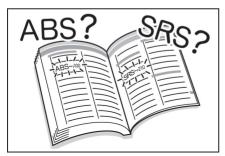


- Searching by installation position
- Pictorial index: →P.12

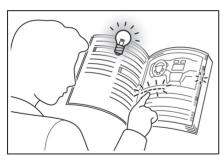

- Searching by symptom or sound
- What to do if... (Troubleshooting): →P.388




- Searching by title
- Table of contents: →P.2

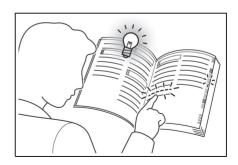

Pictorial index


■Exterior

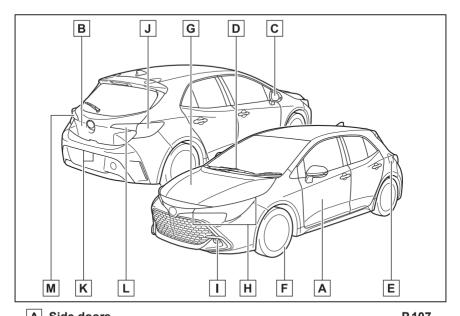

Α	Side doors	P.107
	Locking/unlocking	P.107
	Opening/closing the side windows	P.128
	Locking/unlocking by using the mechanical key	P.356
	Warning messages	P.110
В	Back door	P.111
	Locking/unlocking	P.112
	Warning messages	P.113
С	Outside rear view mirrors	P.126
С	Outside rear view mirrors	
С		P.126
С	Adjusting the mirror angle	P.126
C	Adjusting the mirror angle	P.126 P.127 P.257
	Adjusting the mirror angle Folding the mirrors Defogging the mirrors	P.126P.127P.257
	Adjusting the mirror angle Folding the mirrors Defogging the mirrors Windshield wipers	P.126

Fuel type/fuel tank capacityP.36	39
F Tires	8
Tire size/inflation pressure	73
Winter tires/tire chains	50
Checking/rotation	98
Coping with flat tiresP.335, 34	16
G Hood	90
OpeningP.29	90
Engine oilP.36	39
Coping with overheatingP.36	32
Light bulbs of the exterior lights for driving (Replacing method: P.312, Watts: P.374)	
H Headlights/front position lights/daytime running lights/ turn signal lights	56
Front fog lights*P.16	31
Stop lights/tail lights/turn signal lightsP.15	56
K License plate lightsP.15	56
L Tail lightP.15 Rear fog lightP.16	
M Tail lightP.15 Back-up light	56
Shifting the shift position to RP.14	18
*: If equipped	

■Instrument panel

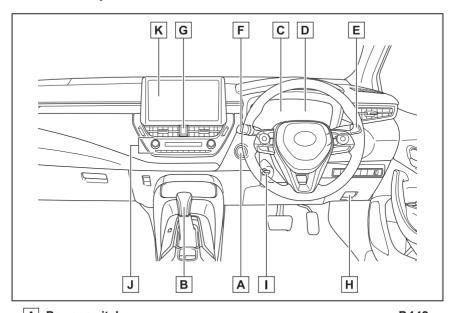


Α	Power switch	P.142
	Starting the hybrid system/changing the modes	P.142
	Emergency stop of the hybrid system	P.316
	When the hybrid system will not start	P.354
	Warning messages	P.331
В	Shift lever	P.148
	Changing the shift position	P.148
	Precautions for towing	P.319
	When the shift lever does not move	P.149
С	Meters	P.72, 76
	Reading the meters/adjusting the instrument panel light	P.72, 76
	Warning lights/indicator lights	P.68
	When a warning light turns on	P.324
D	Multi-information display	P.81, 87
	Display	P.81, 87
	Energy monitor	P.98

	When a warning message is displayed	P.331
Ε	Turn signal lever Headlight switch	
	Headlights/front position lights/tail lights/daytime running light	tsP.156
	Front fog lights ^{*1} /rear fog light	P.161
F	Windshield wiper and washer switch Rear window wiper and washer switch	
	Usage	P.162, 165
	Adding washer fluid	P.297
G	Emergency flasher switch	P.316
Н	Hood lock release lever	P.290
	Tilt and telescopic steering lock release lever	P.124
J	Air conditioning system	P.254
	Usage	P.254
	Rear window defogger	P.257
K	Audio system*2	

^{*1:} If equipped


^{*2:} Refer to "Multimedia Owner's Manual".

■Switches

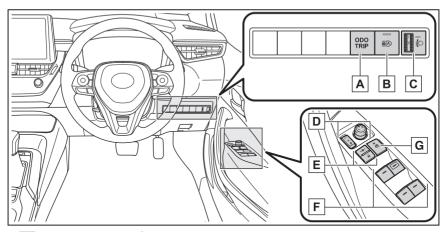


A ODO TRIP switch*	P.80
B Automatic High Beam switch	P.158
C Headlight leveling dial	P.157
D Outside rear view mirror switches	P.126
E Door lock switches	P.110
F Power window switches	P.128
G Window lock switch	D 130

*: If equipped

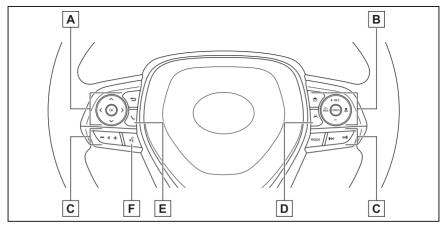

A Meter control switchesP.82, 88


B Cruise control switches	
Dynamic radar cruise control	P.195
Cruise control	P.204
C Audio remote control switches*	
D LTA (Lane Tracing Assist) switch	P.185
E Phone switch*	
F Talk switch*	
*: Refer to "Multimedia Owner's Manual".	

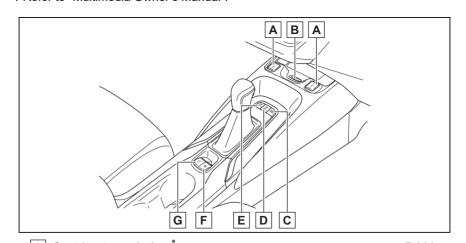

P.261
P.270
P.242
P.244
P.146
P.151
P.151
P.251
P.324, 331
P.154


*: If equipped

■Interior

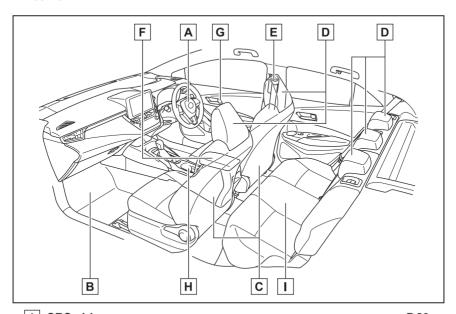

SRS airbags	P.29
Floor mats	P.22
Front seats	P.119
Head restraints	P.122
Seat belts	P.25
Console box	P.266
Inside lock buttons	P.110
Cup holders	P.265
Rear seats	P.120
	Floor mats Front seats Head restraints Seat belts Console box Inside lock buttons Cup holders

■Ceiling

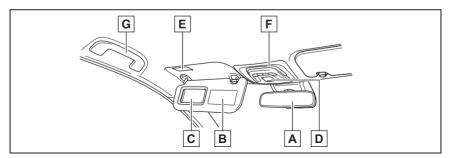

A Inside rear view mirror	P.125
B Sun visors*1	P.277
C Vanity mirrors	
D "SOS" button*2	P.53
E Vanity lights	P.277
F Interior lights/personal lights	P.262
G Assist grips	P.278

*1: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P.40)



^{*2:} If equipped

For safety and security

1-1.	For safe use
	Before driving22
	For safe driving23
	Seat belts25
	SRS airbags29
	Exhaust gas precautions 36
1-2.	Child safety
	Riding with children38
	Child restraint systems 38
1-3.	Emergency assistance
	Toyota Connected Services 53
1-4.	Hybrid system
	Hybrid system features56
	Hybrid system precautions
	59
1-5.	Theft deterrent system
	Immobilizer system64
	Alarm65


Before driving

Observe the following before starting off in the vehicle to ensure safety of driving.


Floor mat

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

Insert the retaining hooks (clips) into the floor mat eyelets.

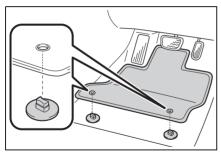

2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

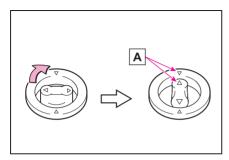

Always align the \triangle marks $\boxed{\mathbf{A}}$.

The shape of the retaining hooks (clips)

may differ from that shown in the illustration

A


WARNING

Observe the following precautions. Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle. This could lead to an accident, resulting in death or serious injury.

- When installing the driver's floor
- Do not use floor mats designed for other models or different model year vehicles, even if they are Toyota Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) provided.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottom-side up or upside-down.

■ Before driving

 Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.

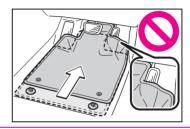




WARNING

With the hybrid system stopped and the shift lever in P. fully depress each pedal to the floor to make sure it does not interfere with the floor mat

For safe driving

For safe driving, adjust the seat and mirror to an appropriate position before driving.

Correct driving posture

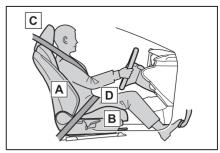

- A Adjust the angle of the seatback so that you are sitting straight up and so that you do not have to lean forward to steer. (\rightarrow P.119)
- **B** Adjust the seat so that you can depress the pedals fully and so that your arms bend slightly at the elbow when gripping the steering wheel. (→P.119)
- C Lock the head restraint in place with the center of the head restraint closest to the top of your ears. $(\rightarrow P.119)$
- **D** Wear the seat belt correctly. (→P.25)



WARNING

For safe driving

Observe the following precautions. Failure to do so may result in death or serious injury.

WARNING

- Do not adjust the position of the driver's seat while driving. Doing so could cause the driver to lose control of the vehicle
- Do not place a cushion between the driver or passenger and the seatback. A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat

helt and head restraint

- Do not place anything under the front seats. Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident and the adjustment mechanism may also be damaged.
- Always observe the legal speed limit when driving on public roads.
- When driving over long distances. take regular breaks before you start to feel tired. Also, if you feel tired or sleepy while driving, do not force yourself to continue driving and take a break immediately.

ward clearly by adjusting the inside and outside rear view mirrors properlv. (→P.125, 126)

Correct use of the seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle. $(\rightarrow P.25)$ Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt. $(\rightarrow P.38)$

Adjusting the mirrors

Make sure that you can see back-

Seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle.

A

WARNING


Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident

Failure to do so may cause death or serious injury.

■ Wearing a seat belt

- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Toyota recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.

Pregnant women

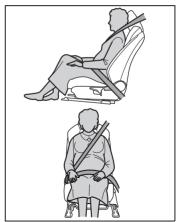

Obtain medical advice and wear the seat belt in the proper way. $(\rightarrow P.26)$

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants, extending the shoulder belt completely over the shoulder and avoiding belt contact with the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

■ People suffering illness

Obtain medical advice and wear the seat belt in the proper way. $(\rightarrow P.26)$

- When children are in the vehicle
 →P 50
- Seat belt damage and wear
- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.

WARNING

- Inspect the seat belt system periodically. Check for cuts, fraving, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious iniurv.
- Ensure that the belt and plate are locked and the belt is not twisted If the seat helt does not function correctly, immediately contact your Tovota dealer.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident. even if there is no obvious damage.
- Do not attempt to install, remove. modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by your Toyota dealer. Inappropriate handling may lead to incorrect operation.

Correct use of the seat belts



- Extend the shoulder belt so that it comes fully over the shoulder. but does not come into contact with the neck or slide off the shoulder
- Position the lap belt as low as possible over the hips.
- Adjust the position of the

- seatback. Sit up straight and well hack in the seat
- Do not twist the seat belt

■ Child seat belt usage


The seat belts of your vehicle were principally designed for persons of adult size.

- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. $(\rightarrow P.38)$
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions. regarding seat belt usage. (\rightarrow P.25)

■ Seat belt regulations

If seat belt regulations exist in the country where you reside, please contact vour Toyota dealer for seat belt replacement or installation

Fastening and releasing the seat belt

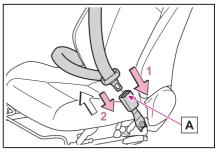


- 1 To fasten the seat belt, push the plate into the buckle until a click sound is heard.
- 2 To release the seat belt, press the release button A.

■ Emergency locking retractor (ELR)


The retractor will lock the belt during a sudden stop or on impact. It may also

lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

After using the rear center seat belt Stow seat belt buckle in the pocket.

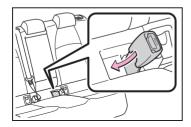

Adjusting the seat belt shoulder anchor height (front seats)

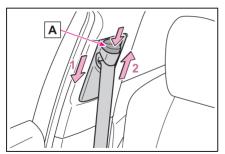

- Push the seat belt shoulder anchor down while pressing the release button A.
- 2 Push the seat belt shoulder anchor up while pressing the release button A.

Move the height adjuster up and down as needed until you hear a click.




WARNING

Adjustable shoulder anchor

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident.

Seat belt pretensioners (front and outboard rear seats)

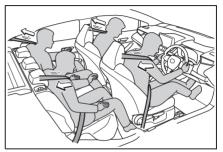

The pretensioners help the seat belts to quickly restrain the occupants by retracting the seat belts when the vehicle is subjected to certain types of severe frontal or side collision

The pretensioners do not activate in the event of a minor frontal impact, a minor side impact, a rear impact or a vehicle rollover.

Replacing the belt after the pretensioner has been activated

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

■ PCS-linked seat belt pretensioner control

If the PCS (Pre-Collision System) determines that the possibility of a collision with a vehicle is high, the seat belt pretensioners will be prepared to operate.



WARNING

■ Seat belt pretensioners

If a pretensioner has operated, the SRS warning light will illuminate. In this situation, the seat belt cannot be used and must be replaced by your Toyota dealer.


Failure to do so may result in death or serious injury.

SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

SRS airbag system

■ Location of the SRS airbags

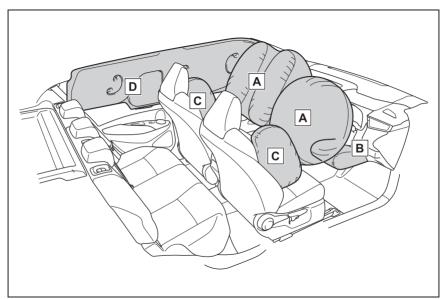

▶ SRS front airbags

A SRS driver airbag/front passenger airbag

Can help protect the head and chest of the driver and front passenger from impact with interior components

B SRS knee airbag

Can help provide driver protection


- SRS side and curtain shield airbags
- **C** SRS front side airbags

Can help protect the torso of the front seat occupants

D SRS curtain shield airbags

Can help protect primarily the head of occupants in the outer seats

■ SRS airbag system components

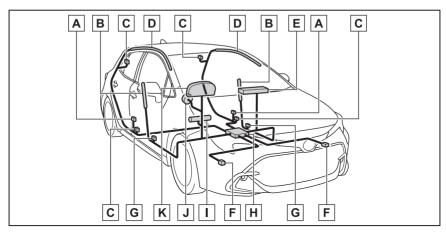

- A Side impact sensors (front)
- **B** Side airbags
- C Seat belt pretensioners and force limiters
- D Curtain shield airbags
- E Front passenger airbag
- F Front impact sensors
- **G** Side impact sensors (front door)
- H Airbag sensor assembly
- I Driver's knee airbag
- J Driver airbag
- K SRS warning light

The main SRS airbag system components are shown above. The SRS airbag system is controlled by the airbag sensor assembly. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

■ If the SRS airbags deploy (inflate)

- Slight abrasions, burns, bruising etc., may be sustained from SRS airbags, due to the extremely high speed deployment (inflation) by hot gases.
- A loud noise and white powder will be emitted.
- Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the front seats, parts of the front and rear pillars, and roof side

rails, may be hot for several minutes. The airbag itself may also be hot.

- The windshield may crack.
- The hybrid system will be stopped and fuel supply to the engine will be stopped. (→P.62)
- The brakes and stop lights will be controlled automatically. (→P.244)
- The interior lights will turn on automatically. (→P.262)
- The emergency flashers will turn on automatically. (→P.316)
- For Toyota Connected Services, if any of the following situations occur, the system is designed to send an emergency call to the response center, notifying them of the vehicle's location (without needing to push the "SOS" button) and an agent will attempt to speak with the occupants to ascertain the level of emergency and assistance required. If the occupants are unable to communicate, the agent automatically treats the call as an emergency and helps to dispatch the necessary emergency services. (→P.53)
- · An SRS airbag is deployed.
- · A seat belt pretensioner is activated.
- The vehicle is involved in a severe rear-end collision.

■ SRS airbag deployment conditions (SRS front airbags)

The SRS front airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to an approximately 20 - 30 km/h [12 - 18 mph] frontal collision with a fixed wall that does not move or deform).

However, this threshold velocity will be considerably higher in the following situations:


- If the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact
- If the vehicle is involved in an underride collision, such as a collision in which the front of the vehicle "underrides", or goes under, the bed

of a truck

- Depending on the type of collision, it is possible that only the seat belt pretensioners will activate.
- SRS airbag deployment conditions (SRS side and curtain shield airbags)
- The SRS side and curtain shield airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to the impact force produced by an approximately 1500 kg [3300 lb.] vehicle colliding with the vehicle cabin from a direction perpendicular to the vehicle orientation at an approximate speed of 20 30 km/h [12 18 mph]).
- Both SRS curtain shield airbags will deploy in the event of a side collision on either side.
- Both SRS curtain shield airbags will deploy in the event of a severe frontal collision.
- Conditions under which the SRS airbags may deploy (inflate), other than a collision

The SRS front airbags and SRS side and curtain shield airbags may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.


- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or falling

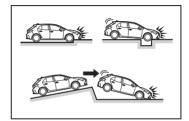

■ Types of collisions that may not deploy the SRS airbags (SRS front airbags)

The SRS front airbags do not generally inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.


- Collision from the side
- Collision from the rear
- Vehicle rollover

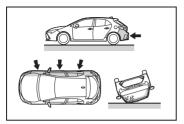

■ Types of collisions that may not deploy the SRS airbags (SRS side and curtain shield airbags)


The SRS side and curtain shield airbags may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.

- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

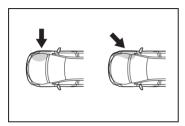


The SRS side airbags do not generally inflate if the vehicle is involved in a frontal or rear collision, if it rolls over, or if it is involved in a low-speed side collision.

- Collision from the front
- Collision from the rear
- Vehicle rollover

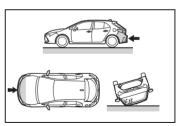

The SRS curtain shield airbags do not generally inflate if the vehicle is involved in a rear collision, if it rolls over, or if it is involved in a low-speed side or low-speed frontal collision.


- Collision from the rear
- Vehicle rollover

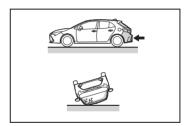

■ When to contact your Toyota dealer


In the following cases, the vehicle will require inspection and/or repair. Contact your Toyota dealer as soon as possible.

- Any of the SRS airbags have been inflated.
- The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS front airbags to inflate.

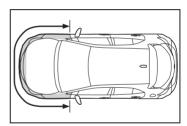


A portion of a door or its surrounding

area is damaged, deformed or has had a hole made in it or the vehicle was involved in an accident that was not severe enough to cause the SRS side and curtain shield airbags to inflate

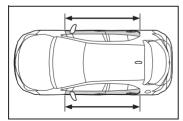


The pad section of the steering wheel. dashboard near the front passenger airbag or lower portion of the instrument panel is scratched, cracked, or otherwise damaged.

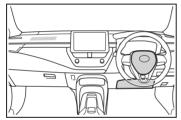

The surface of the seats with the SRS side airbag is scratched, cracked, or otherwise damaged.



The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the SRS curtain shield airbags inside is scratched. cracked, or otherwise damaged.

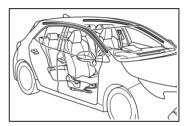

₩ WARNING

SRS airbag precautions

Observe the following precautions regarding the SRS airbags. Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts properly.
 - The SRS airbags are supplemental devices to be used with the seat helts
- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag.

Since the risk zone for the driver's airbag is the first 50 - 75 mm (2 - 3 in.) of inflation, placing yourself 250 mm (10 in.) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 250 mm (10 in.) away now, you can change your driving position in several ways:

· Move your seat to the rear as far as you can while still reaching the pedals comfortably.

WARNING

- Slightly recline the back of the seat. Although vehicle designs vary. many drivers can achieve the 250 mm (10 in.) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise vourself by using a firm. non-slippery cushion, or raise the seat if your vehicle has that feature.
- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of vour head and neck.

The seat should be adjusted as recommended above, while still maintaining control of the foot pedals. steering wheel, and your view of the instrument panel controls.

- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Toyota strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (\rightarrow P.38)

Do not sit on the edge of the seat or lean against the dashboard.



Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.



- Do not allow the front seat occupants to hold items on their knees.
- Do not lean against the door, the roof side rail or the front, side and rear pillars.




Do not allow anyone to kneel on the passenger seat toward the door or but their head or hands outside the . vehicle



Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad and lower portion of the instrument panel

These items can become projectiles when the SRS driver, front passenger and knee airbags deploy.

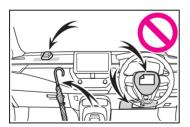

Do not attach anything to areas such as a door, windshield, side windows, front or rear pillar, roof side rail and assist grip. (Except for the speed limit label \rightarrow P.337)



- Do not hang coat hangers or other hard objects on the coat hooks. All of these items could become proiectiles and may cause death or serious injury, should the SRS curtain shield airbags deploy.
- If a vinvl cover is put on the area where the SRS driver's knee airbag will deploy, be sure to remove it.
- Do not use seat accessories which. cover the parts where the SRS side airbags inflate as they may interfere with inflation of the SRS airbags. Such accessories may prevent the side airbags from activating correctly, disable the system or cause the side airbags to inflate accidentally, resulting in death or serious iniurv.
- Do not strike or apply significant levels of force to the area of the SRS airbag components or the front doors Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.
- If breathing becomes difficult after the SRS airbags have deployed. open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.
- If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes, are damaged or cracked, have them replaced by your Toyota dealer.

Modification and disposal of SRS airbag system components

Do not dispose of your vehicle or perform any of the following modifications without consulting your Toyota dealer. The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Repairs, modifications, removal or replacement of the steering wheel. instrument panel, dashboard, seats or seat upholstery, front, side and rear pillars, roof side rails, front door panels, front door trims or front door speakers
- Modifications to the front door panel (such as making a hole in it)
- Repairs or modifications of the front fender, front bumper, or side of the occupant compartment
- Installation of a grille guard (bull bars, kangaroo bar, etc.), snow plows, winches
- Modifications to the vehicle's suspension system
- Installation of electronic devices. such as mobile two-way radios (RF-transmitter) and CD players

Exhaust gas precautions

Harmful substance to the human body is included in exhaust gases if inhaled.



WARNING

Exhaust gases include harmful carbon monoxide (CO), which is colorless and odorless. Observe the following precautions.

Failure to do so may cause exhaust gases enter the vehicle and may lead to an accident caused by light-headedness, or may lead to death or a serious health hazard

Important points while driving

- Keep the back door closed.
- If you smell exhaust gases in the vehicle even when the back door is closed, open the windows and have the vehicle inspected at your Toyota dealer as soon as possible.

When parking

- If the vehicle is in a poorly ventilated area or a closed area, such as a garage, stop the hybrid system.
- Do not leave the vehicle with the hybrid system on for a long time. If such a situation cannot be avoided, park the vehicle in an open space and ensure that exhaust fumes do not enter the vehicle interior.
- Do not leave the hybrid system operating in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the hybrid system is operating, exhaust gases may collect and enter the vehicle



Exhaust pipe

The exhaust system needs to be checked periodically. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by your Toyota dealer.

Riding with children

Observe the following precautions when children are in the vehicle

Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt.

- It is recommended that children sit in the rear seats to avoid accidental contact with the shift lever, wiper switch, etc.
- Use the rear door child-protector lock or the window lock switch to avoid children opening the door while driving or operating the power window accidentally. (

 P.110, 130)
- Do not let small children operate equipment which may catch or pinch body parts, such as the power window, hood, back door, seats, etc.

WARNING

When children are in the vehicle

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Child restraint systems

Before installing a child restraint system in the vehicle, there are precautions that need to be observed, different types of child restraint systems, as well as installation methods, etc., written in this manual.

Use a child restraint system when riding with a small child that cannot properly use a seat belt. For the child's safety, install the child restraint system to a rear seat. Be sure to follow the installation method that is in the operation manual enclosed with the restraint system.

Table of contents

Points to remember: P38

When using a child restraint sys-

tem: P.40

Child restraint system compatibility for each seating position: P.42

Child restraint system installation method: P47

· Fixed with a seat belt: P.48

 Fixed with an ISOFIX rigid anchor: P.50

 Using a child restraint anchor fitting: P.51

Points to remember

 Prioritize and observe the warnings, as well as the laws and reg-

- ulations for child restraint systems.
- Use a child restraint system until the child becomes large enough to properly wear the vehicle's seat helt
- Choose a child restraint system appropriate to the age and size of the child
- Note that not all child restraint systems can fit in all vehicles.
 Before using or purchasing a child restraint system, check the compatibility of the child restraint system with seat positions.
 (→P.42)

A

WARNING

When a child is riding

Observe the following precautions. Failure to do so may result in death or serious injury.

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system which is correctly installed. For installation details, refer to the operation manual enclosed with the child restraint system. General installation instruction is provided in this manual.
- Toyota strongly urges the use of a proper child restraint system that conforms to the weight and size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.

- Holding a child in your or someone else's arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield or between the holder and the interior of the vehicle
- Handling the child restraint system

If the child restraint system is not properly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving, or an accident

- If the vehicle were to receive a strong impact from an accident, etc., it is possible that the child restraint system has damage that is not readily visible. In such cases, do not reuse the restraint system.
- Depending on the child restraint system, installation may be difficult or impossible. In those cases, check whether the child restraint system is suitable for installment in the vehicle. (→P.42) Be sure to install and observe the usage rules after carefully reading the child restraint system fixing method in this manual, as well as the operation manual enclosed with the child restraint system.
- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the luggage compartment.

When using a child restraint system

■ When installing a child restraint system to a front passenger seat


For the safety of a child, install child restraint systems to a rear seats. When installing child restraint system to a front passenger seat is unavoidable, adjust the seat as follows and install the child restraint system:

- Move the front seat fully rearward
- Adjust the seat height to the upper most position.
- Adjust the seatback angle to the most upright position.

If there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

 If the head restraint interferes with your child restraint system. and the head restraint can be removed, remove the head restraint

Otherwise, put the head restraint in the upper most position.

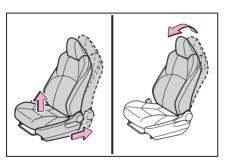




WARNING

When using a child restraint sys-

Observe the following precautions. Failure to do so may result in death or serious iniury.

Never use a rear-facing child restraint system on the front passenger seat.


The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.

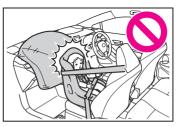

Extreme Hazard! Do not use a rearward facing child restraint on a seat protected by an airbag in front of it! This is because the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child.

There is a label(s) on the passenger side sun visor, indicating it is forbidden to attach a rear-facing child restraint system to the front passenger seat.

Details of the label(s) are shown in the illustration below

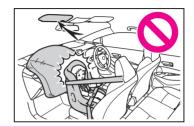





WARNING

Only put a forward-facing child restraint system on the front seat when unavoidable. When installing a forward-facing child restraint on the front passenger seat, move the seat as far back as possible. Failing to do so may result in death or serious injury if the airbags deploy (inflate).



Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front or rear pillars, or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.



When a junior seat (booster seat) is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.

A

WARNING

- Use child restraint system suitable to the age and size of the child and install it to the rear seat.
- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the left-hand rear seat.



 Adjust the front passenger seat so that it does not interfere with the child restraint system.

Child restraint system compatibility for each seating position


Child restraint system compatibility for each seating position

Compatibility of each seating position with child restraint systems (\rightarrow P.43) displays the type of child restraint systems that can be used and possible seating positions for installation using symbols.

Check the selected child restraint system together with the following [Before confirming the compatibility of each seating position with child restraint systems].

- Before confirming the compatibility of each seating position with child restraint systems
- Checking the child restraint system standards.
 Use a child restraint system that conforms to UN(ECE) R44^{*1} or UN(ECE) R129^{*1, 2}.


The following approval mark is displayed on child restraint systems which are conformed. Check for an approval mark attached to the child restraint system.

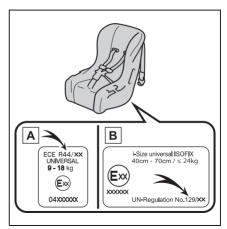

Example of the displayed regulation Number


- A UN(ECE) R44 approval mark^{*3}
 The weight range of the child
 who is applicable for an
 UN(ECE) R44 approval mark is
 indicated.
- B UN(ECE) R129 approval mark*3
 The height range of the child
 who is applicable as well as
 available weights for an

- UN(ECE) R129 approval mark is indicated
- 2 Checking the category of the child restraint system. Check the approval mark of the child restraint system for which of the following categories the child restraint system is suitable. Also, if there are any uncertainties, check the user's guide included with the child restraint system or contact the retailer of the child restraint system.
- "universal"
- "semi-universal"
- "restricted"
- · "vehicle specific"

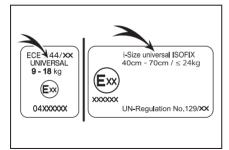

- *1: UN(ECE) R44 and UN(ECE) R129 are U.N. regulations for child restraint systems.
- *2: The child restraint systems mentioned in the table may not be available outside of the EU area.
- *3: The displayed mark may differ depending on the product.

 Compatibility of each seating position with child restraint systems

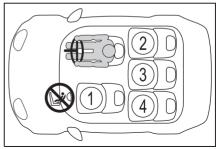





Suitable for fixed with vehicle seat belt "universal" category child restraint system.



Suitable for i-Size and ISOFIX child restraint system.




Includes a top tether anchorage point.



Never use a rear-facing child restraint system on the front passenger seat.

- *1: Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.
- *2: Adjust the seatback angle to the most upright position. When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved

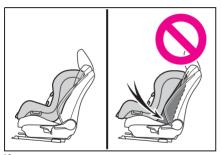


- *3: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.
- *4: Use only a front-facing child restraint system.

■ Detail information for CRS installation

Seating position				
Seat position number	1	2	3	4
Seating position suitable for universal belted (yes/no)	yes	yes	yes	yes
i-Size seating position (yes/no)	no	yes	no	yes
Seating position suitable for lateral fixture (L1/L2/no)	no	no	no	no
Suitable rearward facing fix- ture (R1/R2X/R2/R3/no)	no	R1 ^{*1} , R2X ^{*1} , R2 ^{*1}	no	R1 ^{*2} , R2X ^{*3} , R2 ^{*3}
Suitable forward facing fix- ture (F2X/F2/F3/no)	no	F2X, F2, F3	no	F2X, F2, F3
Suitable junior seat fixture (B2/B3/no)	no	B2, B3	no	B2, B3

^{*1:} Adjust the driver's seat to the highest portion. (\rightarrow P.119)


^{*2:} Before installing a child restraint system to this seat, adjust the position of the front passenger's seat to between the 1st lock position and 11th lock position (15th lock position from the rear).

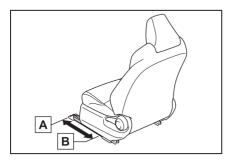

A 1st lock position

B 11th lock position

^{*3:} Before installing a child restraint system to this seat, adjust the position of the front passenger's seat to between the 1st lock position and 8th lock position (18th lock position from the rear).

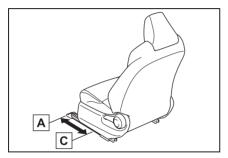

A 1st lock position

© 8th lock position

ISOFIX child restraint systems are divided into different "fixture". The child restraint system can be used in the seating positions for "fixture" mentioned in the table above. For kind of "fixture", confirm the following table. If your child restraint system has no kind of "fixture" (or if you cannot find information in the table below), please refer to the child restraint system "vehicle list" for compatibility information or ask the retailer of your child seat.

Fixture	Description
F3	Full-height, forward-facing child restraint systems
F2	Reduced-height forward-facing child restraint systems
F2X	Reduced-height forward-facing child restraint systems
R3	Full-size, rearward-facing child restraint systems
R2	Reduced-size, rearward-facing child restraint systems
R2X	Reduced-size, rearward-facing child restraint systems
R1	Rearward-facing infant seat
L1	Left lateral-facing (carrycot) infant seat
L2	Right lateral-facing (carrycot) infant seat
B2	Junior seat
В3	Junior seat


When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering

with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint,

move to a different position. Failure to do so may result in death or serious injury.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.
- When installing a child seat with support base, if the child seat interferes with the seatback when latching it into the support base, adjust the seatback rearward until there is no interference
- If the seat belt shoulder anchor is ahead of the child seat belt quide, move the seat cushion

forward.

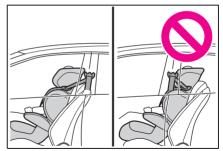

 When installing a junior seat, if the child in your child restraint system is in a very upright position, adjust the seatback angle to the most comfortable position.
 And if the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

Child restraint system installation method

Confirm with the operation manual enclosed with the child restraint system about the installation of the child restraint system.

In	Page	
Seat belt attachment		P.48
ISOFIX rigid anchor attachment		P.50
Child restraint anchor fit- ting attachment		P.51

Child restraint system fixed with a seat belt


Installing child restraint system using a seat belt

Install the child restraint system in


accordance to the operation manual enclosed with the child restraint system.

If the child restraint system on hand is not within the "universal" category (or the necessary information is not in the table), refer to the "Vehicle List" provided by the child restraint system maker for various possible installation positions, or check the compatibility after asking the retailer of the child seat. (\rightarrow P.42, 43)

- 1 If installing the child restraint system to the front passenger seat is unavoidable, refer to P.40for the front passenger seat adjustment.
- If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.
 - Otherwise, put the head restraint in the upper most position. (\rightarrow P.122)
- 3 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted. Securely fix the seat belt to the child restraint system in accordance to the directions enclosed with the child restraint system.

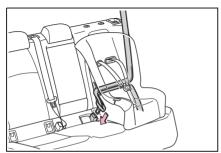

4 If your child restraint system is not equipped with a lock-off (a seat belt locking feature), secure the child restraint system using a locking clip.

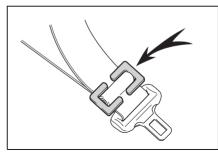

- 5 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P.50)
- Removing a child restraint system installed with a seat belt

Press the buckle release button and fully retract the seat belt.

When releasing the buckle, the child restraint system may spring up due to the rebound of the seat cushion.
Release the buckle while holding down the child restraint system.

Since the seat belt automatically reels itself, slowly return it to the stowing position.

■ When installing a child restraint system

You may need a locking clip to install the child restraint system. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from your Toyota dealer: Locking clip for child restraint system (Part No. 73119-22010)

A

WARNING

■ When installing a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.


- Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death. If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt
- Ensure that the belt and plate are securely locked and the seat belt is not twisted
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.
- When a junior seat (booster seat) is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.
- Follow all installation instructions provided by the child restraint system manufacturer.

Child restraint system fixed with an ISOFIX rigid anchor

■ ISOFIX rigid anchors (ISOFIX child restraint system)

Lower anchors are provided for the outboard rear seats. (Marks displaying the location of the anchors

are attached to the seats.)

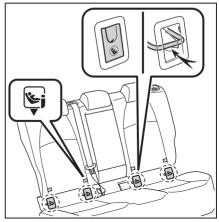

■ Installation with ISOFIX rigid anchor (ISOFIX child restraint system)

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.


If the child restraint system on hand is not within the "universal" category (or the necessary information is not in the table), refer to the "Vehicle List" provided by the child restraint system maker for various possible installation positions, or check the compatibility after asking the retailer of the child seat. $(\rightarrow P.42, 43)$

1 If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.

Otherwise, put the head restraint in the upper most position. (→P.122)

2 Remove the anchor covers, and install the child restraint system to the seat.

The bars are installed behind the anchor covers.

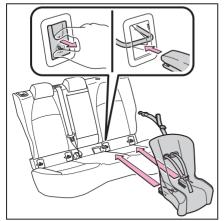

3 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P.50)

A

WARNING

■ When installing a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.

- When using the lower anchors, be sure that there are no foreign objects around the anchors and that the seat belt is not caught behind the child restraint system.
- Follow all installation instructions provided by the child restraint system manufacturer

Using child restraint anchorages


WARNING: child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seatbelts, harnesses, or for attaching other items or equipment to the vehicle

Using a child restraint anchor fitting

■ Child restraint anchor fitting

Anchor fittings are provided for each rear seat.

Use anchor fitting when fixing the strap.

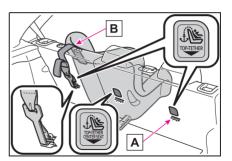

- A Anchor fittings
- **B** Upper anchorage strap
- Fixing the strap to the anchor fitting


Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

1 Adjust the head restraint to the upmost position.

If the head restraint interferes with the child restraint system or upper anchorage strap installation and the head restraint can be removed, remove the head restraint. (→P.122)

2 Latch the attaching clip onto the anchor fitting and tighten the upper anchorage strap.

Make sure the upper anchorage strap is securely latched. (→P.50) When installing the child restraint system with the head restraint being raised, be sure to have the upper anchorage strap pass underneath the head restraint

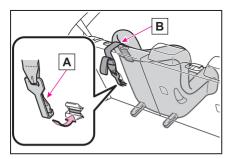

- A Attaching clip
- **B** Upper anchorage strap

\mathbf{A}

WARNING

■ When installing a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.

- Firmly attach the upper anchorage strap and make sure that the belt is not twisted.
- Do not attach the upper anchorage strap to anything other than the anchor fitting.
- After securing a child restraint system, never adjust the seat.
- Follow all installation instructions provided by the child restraint system manufacturer.

• When installing the child restraint system with the head restraint being raised, after the head restraint has been raised and then the anchor fitting has been fixed, do not lower the head restraint

Using child restraint anchorages

WARNING: child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seatbelts, harnesses, or for attaching other items or equipment to the vehicle

Toyota Connected Services*1, 2


- *1: If equipped
- *2: Operates within the Toyota Connected Services coverage.

Toyota Connected Services are telematics services that use Global Positioning System (GPS) data and embedded cellular technology to enable the following emergency calls to be made: ACN (Automatic Collision Notification) and SOS Emergency Call (Manual emergency service notification) (by pressing the "SOS" button).

For more information about Toyota Connected Services, please visit:

https://www.toyota.com.au/connected

System components

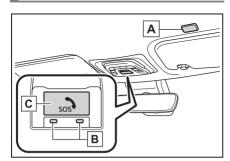

- A Microphone (driver's side)
- **B** Indicator lights
- C "SOS" button*
- *: This button is intended for communi-

cation with the Emergency Call Centre. Other SOS buttons available in other systems of a motor vehicle do not relate to the device and are not intended for communication with the Emergency Call Centre.

Toyota Connected Services

■ ACN (Automatic Collision Notification)


If any airbag deploys, the system is designed to automatically call the Emergency Call Centre.* The Call Centre Agent will determine your vehicle's location, the time of the incident and the vehicle VIN, and attempt to speak with the vehicle occupants to assess the situation. If the occupants are unable to communicate, the Call Centre Agent automatically treats the call as an emergency and contacts emergency services to describe the situation and request that assistance be sent to the location

- *: In some cases, the call cannot be made. (→P.54)
- SOS Emergency Call (Manual emergency service notification)

In the event of an emergency, press the "SOS" button to call the Emergency Call Centre.* The Call Centre Agent will determine your vehicle's location, assess the situation, and dispatch the necessary assistance required.

Make sure to open the cover before

pressing the "SOS" button.

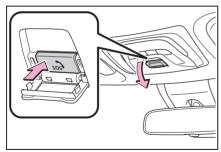

If you accidentally press the "SOS" button, tell the Call Centre Agent that you are not experiencing an emergency.

*: In some cases, the call cannot be made. (→P.54)

Indicator lights

When the power switch is turned to ON, the red/green indicator lights will blink intermittently, then the green indicator light will remain ON, indicating that the system is enabled. The indicator lights indicate the following:

- If the green indicator light illuminates and stays on, the system is enabled.
- If the green indicator light flashes twice per second, the ACN/SOS service is being made.
- If the red indicator light illuminates at any time other than immediately after the power switch is turned to ON, the system may be malfunctioning or the backup battery may be depleted. Contact your Toyota dealer.

■ Free/Open Source Software Information

This product contains Free/Open Source Software (FOSS).

The license information and/or the source code of such FOSS can be found at the following URL.

http://www.opensourceautomotive.com/dcm/19MC/



WARNING

- When the ACN/SOS may not be made
- It may not be possible to make ACN/SOS in any of the following situations. In such cases, report to emergency services provider (000 system etc.) by other means such as nearby public phones.
- Even when the vehicle is in the cellular phone service area, it may be difficult to connect to the Emergency Call Centre if the reception is poor or the line is busy. In such cases, you may not be able to connect the Emergency Call Centre.
- When the vehicle is out of the cellular phone service area, the ACN/SOS cannot be made
- When any related equipment (such as the "SOS" button panel, indicator lights, microphone, DCM, antenna, or any wires connecting the equipment) is malfunctioning, damaged or broken, the ACN/SOS cannot be made.

- · During an ACN/SOS service, the system makes repeated attempts to connect to the Emergency Call Centre. However, if it cannot connect to the Emergency Call Centre due to poor radio wave reception. the system may not be able to connect to the cellular network and the call may finish without connecting. A voice prompt notification will play from the vehicle speaker to indicate call disconnection
- If the 12-volt battery's voltage decreases or there is a disconnection, the system may not be able to connect to the Emergency Call Centre.
- The ACN/SOS system might not work outside of Australia region. depending on the available infrastructure in the country.
- When the ACN/SOS system is replaced with a new one

The ACN/SOS system should be reqistered. Contact your Toyota dealer.

For your safety

- Please drive safely. The function of this system is to assist you in contacting the appropriate emergency services in case of accidents such as traffic accidents or sudden medical emergencies, and it does not protect the driver or passengers in any way. Please drive safely and fasten your seatbelts at all times for your safety.
- In case of an emergency, ensure preservation of life is prioritised first
- If you smell anything burning or other unusual smells, leave the vehicle and evacuate to a safe area immediately.

- If the airbags deploy when the system is operating normally, the system makes emergency call. The system also makes emergency call when the vehicle is struck from the rear or rolls over, even if the airbags do not deploy.
- For safety, do not press the "SOS" button while driving. Making calls during driving may cause mishandling of the steering wheel, which may lead to unexpected accidents. Stop the vehicle and confirm the safety of your surroundings before pressing the "SOS" button
- When changing fuses, please use the specified fuses. Using other fuses may cause ignition or smoke in the circuit and lead to a fire.
- Using the system while there is smoke or an unusual smell may cause a fire. Stop using the system immediately and consult your Toyota dealer.



NOTICE

■ To prevent damage

Do not pour any liquids onto the "SOS" button panel, etc. and do not impact it.

■ If the "SOS" button panel, speaker or microphone malfunctions during an ACN/SOS service

It may not be possible to make ACN/SOS, confirm the system status, or communicate with the Call Centre Agent. If any of the above equipment is damaged, please consult your Toyota dealer.


Hybrid system features

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate it with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

System components

■ System components

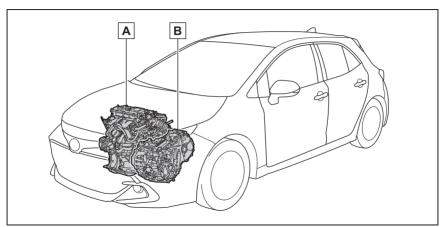

The illustration is an example for explanation and may differ from the actual item.

- A Gasoline engine
- B Electric motor (traction motor)

■ When stopped/during start off

The gasoline engine stops* when the vehicle is stopped. During start off, the electric motor (traction motor) drives the vehicle. At slow speeds or when traveling down a gentle slope, the engine is stopped* and the electric motor (traction motor) is used.

When the shift lever is in N, the hybrid battery (traction battery) is not being charged.

*: When the hybrid battery (traction battery) requires charging or the engine is warming up, etc., the gasoline engine will not automatically stop. (→P.57)

■ During normal driving

The gasoline engine is predominantly used. The electric motor (traction motor) charges the hybrid battery (traction battery) as necessary.

■ When accelerating sharply

When the accelerator pedal is depressed heavily, the power of the hybrid battery (traction battery) is added to that of the gasoline engine via the electric motor (traction motor).

■ When braking (regenerative braking)

The wheels operate the electric motor (traction motor) as a power generator, and the hybrid battery (traction battery) is charged.


■ Regenerative braking

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- The accelerator pedal is released while driving with the shift lever in D or B.
- The brake pedal is depressed while driving with the shift lever in D or B.

■ EV indicator

The EV indicator comes on when the vehicle is driven using only the electric motor (traction motor) or the gasoline engine is stopped.

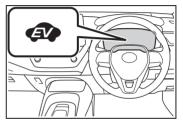

■ Conditions in which the gasoline engine may not stop

The gasoline engine starts and stops automatically. However, it may not stop automatically in the following conditions:

- During gasoline engine warm-up
- During hybrid battery (traction battery) charging
- When the temperature of the hybrid battery (traction battery) is high or low
- When the heater is switched on

Depending on the circumstances, the gasoline engine may also not stop automatically in other situations.

■ Charging the hybrid battery (traction battery)

As the gasoline engine charges the hybrid battery (traction battery), the battery does not need to be charged from an outside source. However, if the vehicle is left parked for a long time the hybrid battery (traction battery) will slowly discharge. For this reason, be sure to drive the vehicle at least once every few months for at least 30 minutes or 16 km (10 miles). If the hybrid battery (traction battery) becomes fully discharged and you are unable to start the hybrid system, contact your Toyota dealer

■ Charging the 12-volt battery

→P.360

■ After the 12-volt battery has discharged or when the terminal has been removed and installed during exchange, etc.

The gasoline engine may not stop even if the vehicle is being driven by the hybrid battery (traction battery). If this

continues for a few days, contact your Toyota dealer.

Sounds and vibrations specific to a hybrid vehicle

There may be no engine sound or vibration even though the vehicle is able to move with the "READY" indicator is illuminated. For safety, apply the parking brake and make sure to shift the shift lever to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) under the rear seats when the hybrid system starts or stops.
- Relay operating sounds such as a snap or soft clank will be emitted from the hybrid battery (traction battery), under the rear seats, when the hybrid system is started or stopped.
- Sounds from the hybrid system may be heard when the back door is open.
- Sounds may be heard from the transmission when the gasoline engine starts or stops, when driving at low speeds, or during idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed or as the accelerator pedal is released.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vent on the side of the lower part of the rear left seat.

■ Maintenance, repair, recycling, and disposal

Contact your Toyota dealer regarding maintenance, repair, recycling and disposal. Do not dispose of the vehicle yourself.


■ Customization

Some functions can be customized. $(\rightarrow P.376)$

Hybrid system precautions

Take care when handling the hybrid system, as it is a high voltage system (about 600 V at maximum) as well as contains parts that become extremely hot when the hybrid system is operating. Obey the warning labels attached to the vehicle.

System components

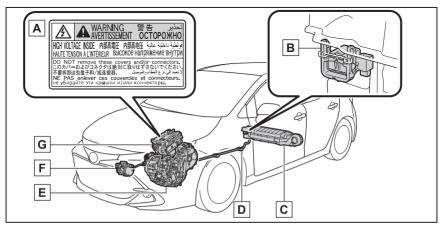

The illustration is an example for explanation and may differ from the actual item.

- A Warning label
- **B** Service plug
- C Hybrid battery (traction battery)
- **D** High voltage cables (orange)
- E Electric motor (traction motor)
- F Air conditioning compressor
- **G** Power control unit

■ Running out of fuel

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light (→P.327) go off. If there is only a small amount of fuel, the hybrid sys-

tem may not be able to start. (The standard amount of fuel is about 7.6 L [2.0 gal., 1.7 Imp. gal.] when the vehicle is on a level surface. This value may vary when the vehicle is on a slope. Add extra fuel when the vehicle is inclined.)

■ Electromagnetic waves

- High voltage parts and cables on hybrid vehicles incorporate electromagnetic shielding, and therefore emit approximately the same amount of electromagnetic waves as conventional gasoline powered vehicles or home electronic appliances.
- Your vehicle may cause sound interference in some third party-produced radio parts.

■ Hybrid battery (traction battery)

The hybrid battery (traction battery) has a limited service life. The lifespan of the hybrid battery (traction battery) can change in accordance with driving style and driving conditions.

A


WARNING

■ High voltage precautions

This vehicle has high voltage DC and AC systems as well as a 12-volt system. DC and AC high voltage is very dangerous and can cause severe burns and electric shock that may result in death or serious injury.

- Never touch, disassemble, remove or replace the high voltage parts, cables or their connectors.
- The hybrid system will become hot after starting as the system uses high voltage. Be careful of both the high voltage and the high temperature, and always obey the warning labels attached to the vehicle.

 Never try to open the service plug access hole located under the right side of the rear seat. The service plug is used only when the vehicle is serviced and is subject to high voltage.

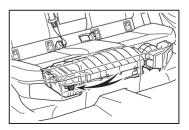

■ Road accident cautions

Observe the following precautions to reduce the risk of death or serious injury:

- Pull your vehicle off the road, apply the parking brake, shift the shift lever to P, and turn the hybrid system off.
- Do not touch the high voltage parts, cables and connectors.
- If electric wires are exposed inside or outside your vehicle, an electric shock may occur. Never touch exposed electric wires.
- If a fire occurs in the hybrid vehicle, leave the vehicle as soon as possible. Never use a fire extinguisher that is not meant for electric fires. Using even a small amount of water may be dangerous.
- If your vehicle needs to be towed, do so with the front wheels raised. If the wheels connected to the electric motor (traction motor) are on the ground when towing, the motor may continue to generate electricity. This may cause a fire. (→P.319)

- Carefully inspect the ground under the vehicle. If you find that liquid has leaked onto the ground, the fuel system may have been damaged. I eave the vehicle as soon as possi-
- Do not touch the battery if liquid is leaking from or adhering to it. If electrolyte (carbonic-based organic electrolyte) from the hybrid battery (traction battery) comes into contact with the eyes or skin, it could cause blindness or skin wounds. In the unlikely event that it comes into contact with the eves or skin, wash it off immediately with a large amount of water, and seek immediate medical attention
- If electrolyte is leaking from the hybrid battery (traction battery), do not approach the vehicle. Even in the unlikely event that the hybrid battery (traction battery) is damaged, the internal construction of the battery will prevent a large amount of electrolyte from leaking out. However, any electrolyte that does leak out will give off a vapor. This vapor is an irritant to skin and eves and could cause acute poisoning if inhaled.
- Do not bring burning or high-temperature items close to the electro-
 - The electrolyte may ignite and cause a fire.
- Hybrid battery (traction battery)
- Your vehicle contains a sealed lithium-ion battery.

Never resell, hand over or modify the hybrid battery. To prevent accidents, hybrid batteries that have been removed from a disposed vehicle are collected through Toyota dealer. Do not dispose of the battery yourself.

Unless the battery is properly collected, the following may occur. resulting in death or serious injury:

- The hybrid battery may be illegally disposed of or dumped, and it is hazardous to the environment or someone may touch a high voltage part, resulting in an electric shock.
- · The hybrid battery is intended to be used exclusively with your hybrid vehicle. If the hybrid battery is used outside of your vehicle or modified in any way, accidents such as electric shock, heat generation, smoke generation, an explosion and electrolyte leakage may occur.

When reselling or handing over your vehicle, the possibility of an accident is extremely high because the person receiving the vehicle may not be aware of these dangers.

If your vehicle is disposed of without the hybrid battery having been removed, there is a danger of serious electric shock if high voltage parts, cables and their connectors are touched. In the event that your vehicle must be disposed of, the hybrid battery must be disposed of by your Toyota dealer or a qualified service shop. If the hybrid battery is not disposed of properly, it may cause electric shock that can result in death or serious injury.



NOTICE

Hybrid battery (traction battery)


Do not carry large amounts of water such as water cooler bottles in the vehicle. If water spills onto the hybrid battery (traction battery), the battery may be damaged. Have the vehicle inspected by your Toyota dealer.

Hybrid battery (traction battery) air intake vent

There are air intake vents under the left side of the rear seat with the purpose of cooling the hybrid battery (traction battery).

If the vents are blocked, it may interfere with the cooling of the hybrid battery (traction battery).

If input/output of the hybrid battery (traction battery) becomes limited and the distance that the vehicle can be driven using the electric motor (traction motor) is reduced, the fuel economy may be reduced.

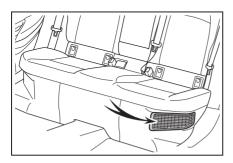

<u>^</u>

NOTICE

- Hybrid battery (traction battery)
- Make sure not to block the air intake vent with anything, such as a seat cover, plastic cover, or luggage.

The input/output of the hybrid battery (traction battery) may be restricted, leading to a reduction in hybrid battery (traction battery) output and a malfunction.

- Periodically clean the air intake vents to prevent them from clogging.(→P.304)
- Do not get water or foreign materials in the air intake vent as this may cause a short circuit and damage the hybrid battery (traction battery).


Emergency shut off system

When a certain level of impact is detected by the impact sensor, the emergency shut off system blocks the high voltage current and stops the fuel pump to minimize the risk of electrocution and fuel leakage. If the emergency shut off system activates, your vehicle will not restart. To restart the hybrid system, contact your Toyota dealer.

Hybrid warning message

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.

If a warning message is shown on the multi-information display, read the message and follow the instructions.

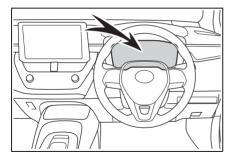

■ If a warning light comes on, a warning message is displayed, or the 12-volt battery is disconnected

The hybrid system may not start. In this case, try to start the system again. If the "READY" indicator does not come on, contact your Toyota dealer.


Immobilizer system

The vehicle's keys have built-in transponder chips that prevent the hybrid system from starting if a key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.

This system is designed to help prevent vehicle theft but does not guarantee absolute security against all vehicle thefts.

Operating the system

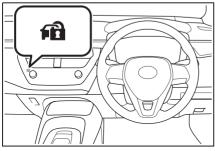

The indicator light flashes after the power switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the power switch has been turned to ACC or ON to indicate that the system has been canceled.

■ System maintenance

The vehicle has a maintenance-free type immobilizer system.

- Conditions that may cause the system to malfunction
- If the grip portion of the key is in contact with a metallic object
- If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle



NOTICE

■ To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

Alarm[†]

*: If equipped

The alarm uses light and sound to give an alert when an intrusion is detected.

The alarm is triggered in the following situations when the alarm is set:

- A locked door or back door is unlocked or opened in any way other than using the entry function, wireless remote control or mechanical key. (The doors will lock again automatically.)
- The hood is opened.

Setting/deactivating/stopping the alarm system

Items to check before locking the vehicle

To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following:


- Nobody is in the vehicle.
- The windows are closed before the alarm is set.
- No valuables or other personal items are left in the vehicle.

Setting

Close the doors, back door and hood, and lock all the doors. The system will set automatically after 30 seconds.

The indicator light changes from being

on to flashing when the system is set.

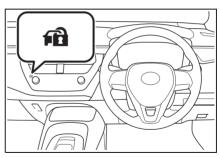

■ Deactivating or stopping

Do one of the following to deactivate or stop the alarms:

- Unlock the doors.
- Turn the power switch to ACC or ON, or start the hybrid system.
 (The alarm will be deactivated or stopped after a few seconds.)

■ System maintenance


The vehicle has a maintenance-free type alarm system.

■ Triggering of the alarm

The alarm may be triggered in the following situations: (Stopping the alarm deactivates the

alarm system.)


• A person inside the vehicle opens a

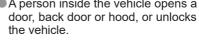



- A person inside the vehicle unlocks the door using the inside lock buttons.
- The 12-volt battery is recharged or replaced when the vehicle is locked.

(→P.360)

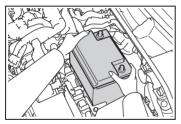

■ Alarm-operated door lock

In the following cases, depending on the situation, the door may automatically lock to prevent improper entry into the vehicle:

- When a person remaining in the vehicle unlocks the door and the alarm is activated
- While the alarm is activated, a person remaining in the vehicle unlocks the door.
- When recharging or replacing the 12-volt battery



NOTICE

■ To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be quaranteed.

Vehicle status information and indicators

2-1.	Instrument cluster
	Warning lights and indicators
	68
	Gauges and meters (7-inch display)72
	Gauges and meters (12.3-inch display)76
	Multi-information display (7-inch display)81
	Multi-information display (12.3-inch display)87
	Head-up display94
	Energy monitor/consumption

Warning lights and indicators

The warning lights and indicators on the instrument cluster, center panel and outside rear view mirrors inform the driver of the status of the vehicle's various systems.


Warning lights and indicators displayed on the instrument cluster

For the purpose of explanation, the following illustrations display all warning lights and indicators illuminated.

▶ 7-inch display



▶ 12.3-inch display (when 2-dial type is displayed)

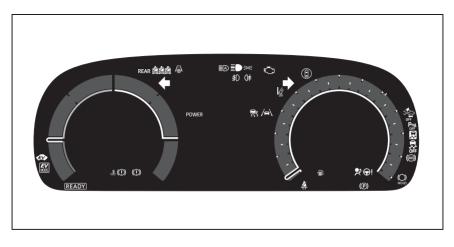

2

Warning lights

Warning lights inform the driver of malfunctions in the indicated vehicle's systems.



Brake system warning light*1 (→P.324)



Brake system warning light*1 (→P.324)



High coolant temperature warning light* *2 (\rightarrow P.324)



Hvbrid system overheat warning light*2 (→P.325)



Charging system warning $light^{*2} (\rightarrow P.325)$



Low engine oil pressure warning light*2 (→P.325)



Malfunction indicator lamp*1 (→P.325)



SRS warning light^{*1} (→P.326)



ABS warning light^{*1} (→P.326)



Inappropriate pedal operation warning light*2 (\rightarrow P.326)



Electric power steering system warning light*1 (→P.326)



Electric power steering system warning light*1 (→P.326)



Low fuel level warning light (→P.327)



Driver's and front passenger's seat belt reminder light (→P.327)





Rear passengers' seat belt reminder lights (→P.327)

P_{III} OFF

Tovota parking assist-sensor OFF indicator*1 (if equipped) (Flashes) (→P.328)



PCS warning light*1 (→P.328) òr illuminates)



LTA indicator (→P.328)



LDA indicator (→P.328)



Dynamic radar cruise control indicator (→P.328)



Cruise control indicator (→P.329)



Driving assist information indicator*1 (→P.329)



Slip indicator*1 (→P.329)



Parking brake indicator (→P.330)



Brake hold operated indica $tor^{*1} (\to P.330)$

*1: These lights come on when the power switch is turned to ON to indicate that a system check is being performed. They will turn off after the hybrid system is on, or after a few

seconds. There may be a malfunction in a system if the lights do not come on, or turn off. Have the vehicle inspected by your Toyota dealer.

- *2: This light illuminates on the multi-information display.
- *3: 12.3-inch display.
- *4: 7-inch display or 12.3-inch display.



WARNING

If a safety system warning light does not come on

Should a safety system light such as the ABS and SRS warning light not come on when you start the hybrid system, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by your Toyota dealer immediately if this occurs.

Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.



Turn signal indicator (→P.150)



Tail light indicator (→P.156)



Headlight high beam indicator (→P.157)



Automatic High Beam indicator (→P.158)



Front fog light indicator (if equipped) (\rightarrow P.161)



Rear fog light indicator $(\to P.161)$



PCS warning light*1, 2 (→P.176)



(Green/W LTA indicator (→P.189) hite/Orang

(Flashes1)



(Green/Or LDA indicator (→P.194) ange

(Flashes)



LDA OFF indicator*2 (→P.194)



Cruise control indicator

(Green/W (→P.198) hite)



Dynamic radar cruise control (Green/W indicator (→P.198)

hite)



Driving assist information indicator*1, 2 (→P.211, 221)



BSM outside rear view mirror indicators^{*1, 3} (→P.211)



Toyota parking assist-sensor OFF indicator*1, 2 (if equipped) (→P.216)



Slip indicator^{*1} (→P.244)

(Flashes)



VSC OFF indicator*1, 2 (→P.244)



Smart entry & start system indicator*4 (→P.142)



"READY" indicator (→P.142)



EV drive mode indicator $(\to P.146)$



Parking brake indicator (→P.151)



Brake hold standby indicator^{*1} (→P.154)



Brake hold operated indicator^{*1} (\rightarrow P.154)



EV indicator (→P.57)



Low outside temperature indicator*5 (→P.72, 76)



Security indicator^{*6} (→P.64, 65)



Eco drive mode indicator (→P.242)




Power mode indicator (→P.242)

- *1: These lights come on when the power switch is turned to ON to indicate that a system check is being performed. They will turn off after the hybrid system is ON, or after a few seconds. There may be a malfunction in a system if the lights do not come on, or turn off. Have the vehicle inspected by your Toyota dealer.
- *2: This light comes on when the system is turned off.
- *3: This light illuminates on the outside rear view mirrors.
- *4: This light illuminates on the multi-information display.
- *5: When the outside temperature is approximately 3°C (37°F) or lower, this indicator will flash for approximately 10 seconds, then stay on.
- *6: This light illuminates on the center panel.

Gauges and meters (7-inch display)

Meter display

■ Locations of gauges and meters

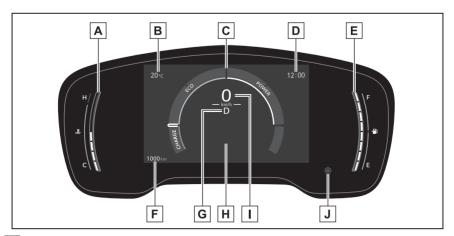

A Engine coolant temperature gauge

Displays the engine coolant temperature

B Outside temperature

Displays the outside temperature within the range of -40°C (-40°F) to 60°C (140°F)

C Hybrid System Indicator/Tachometer

Displays hybrid system output or regeneration level (→P.73)

This setting can be changed on the setting screen. (\rightarrow P.376)

D Clock (→P.74)

E Fuel gauge

Displays the quantity of fuel remaining in the tank

F Odometer and trip meter display (→P.74)

G Shift position indicator (→P.148)

H Multi-information display


Presents the driver with a variety of vehicle data (→P.81)

Displays warning messages if a malfunction occurs (→P.331)

I Speedometer

J Display change button (→P.74)

■ Hybrid System Indicator

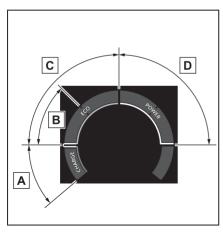

A Charge area

Shows regeneration* status.

Regenerated energy will be used to charge the hybrid battery (traction battery).

B Hybrid Eco area

Shows that gasoline engine power is not being used very often.

The gasoline engine will automatically stop and restart under various conditions.

c Eco area

Shows that the vehicle is being driven in an Eco-friendly manner.

By keeping the bar display within Eco area, more Eco-friendly driving can be achieved.

D Power area

Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)

*: When used in this manual, regeneration refers to the conversion of energy created by the movement of the vehicle into electrical energy.

■ Engine speed

On hybrid electric vehicles, engine speed is precisely controlled in order to help improve fuel efficiency and reduce exhaust emissions etc.

There are times when the engine speed that is displayed may differ even when vehicle operation and driving conditions are the same.

■ Hybrid System Indicator will operate when

The Hybrid System Indicator will operate in the following situations:

- The "READY" indicator is illuminated.
- The shift lever is in D or B

■ Outside temperature display

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change:
- When stopped, or driving at low speeds (less than 20 km/h [12 mph])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When "--" or "E" is displayed, the system may be malfunctioning. Take your vehicle to your Toyota dealer.

Liquid crystal display

→P 82

Customization

The gauges and meters can be customized in

of the multi-information display. (→P.376)



WARNING

■ The information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

WARNING

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or iniury.


NOTICE

- To prevent damage to the engine and its components
- Do not let the indicator needle of the tachometer enter the red zone. which indicates the maximum engine speed.
- The engine may be overheating if the engine coolant temperature gauge is in the red zone (H). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. $(\rightarrow P.362)$

Odometer and trip meter display

Changing the display

Press the display change button until the desired item is displayed.

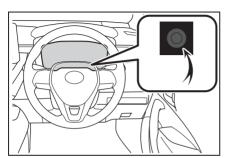

- Display items
- Odometer

Displays the total distance the vehicle has been driven

Trip meter A/Trip meter B

Displays the distance the vehicle has been driven since the meter was last reset. Trip meters A and B can be used to record and display different distances independently.

To reset, display the desired trip meter and press and hold the display change hutton

Instrument panel light control

Displays the instrument panel light control display.

- · The brightness of the instrument panel lights can be adjusted separately for when the tail lights are on and off
- To adjust the brightness, display the instrument panel light control display and press and hold the display change button.

Adjusting the clock (vehicles without navigation system)

- Adjusting the minute to "00"
- 1 Select of the multi-information display.
- 2 Press \langle or \rangle to select "Clock Settina".

Press the OK to set the clock to the beginning of the nearest hour.

e.g.

 $1:00 \text{ to } 1:29 \rightarrow 1:00$

1:30 to 1:59 \rightarrow 2:00

■ Changing the clock

- 1 Select of the multi-information display.
- 2 Press \(\lambda \) or \(\rangle \) to select "Clock Setting" and then press and hold OK.
- 3 Press ∧ or ∨ meter control switch to change the setting.

The following can be changed:

- 12-hour/24-hour format
- Hour
- Minute

Adjusting the clock (vehicles with navigation system)

■ The clocks can be adjusted on the audio system screen.


Refer to "Multimedia Owner's Manual".

Gauges and meters (12.3-inch display)

Meter display

Locations of gauges and meters

▶ 2-dial display

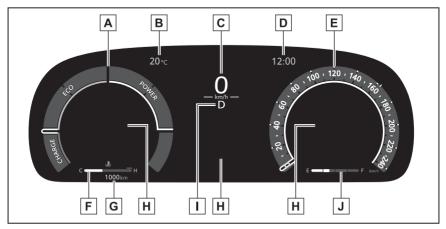

A Hybrid System Indicator/Tachometer

Displays hybrid system output or regeneration level (→P.79)

This setting can be changed on the setting screen. (\rightarrow P.376)

B Outside temperature

Displays the outside temperature within the range of -40°C (-40°F) to 60°C (140°F)

- C Speedometer
- D Clock (→P.81)
- **E** Speedometer
- F Engine coolant temperature gauge

Displays the engine coolant temperature

- **G** Odometer and trip meter display (→P.80)
- H Multi-information display


Presents the driver with a variety of vehicle data (→P.87)

Displays warning messages if a malfunction occurs (→P.331)

- Shift position indicator (→P.148)
- J Fuel gauge

Displays the quantity of fuel remaining in the tank

▶ 1-dial display

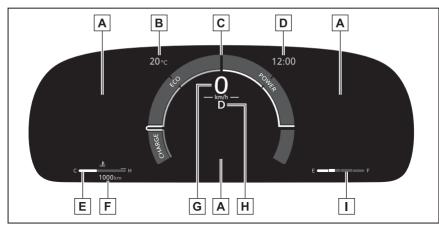

A Multi-information display

Presents the driver with a variety of vehicle data (\rightarrow P.87)

Displays warning messages if a malfunction occurs (→P.331)

B Outside temperature

Displays the outside temperature within the range of -40°C (-40°F) to 60°C (140°F)

C Hybrid System Indicator/Speedometer/Tachometer

Hybrid System Indicator: Displays hybrid system output or regeneration level $(\rightarrow P.79)$

This setting can be changed on the setting screen. (→P.376)


- **D** Clock (→P.81)
- E Engine coolant temperature gauge

Displays the engine coolant temperature

- F Odometer and trip meter display (→P.80)
- **G** Speedometer
- **H** Shift position indicator (→P.148)
- I Fuel gauge

Displays the quantity of fuel remaining in the tank

▶ Non-dial display

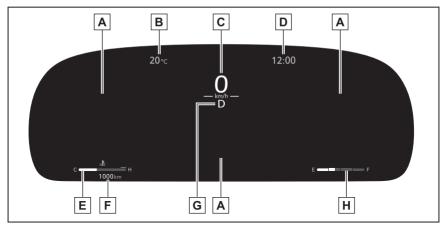

A Multi-information display

Presents the driver with a variety of vehicle data (→P.87)

Displays warning messages if a malfunction occurs (→P.331)

B Outside temperature

Displays the outside temperature within the range of -40°C (-40°F) to 60°C (140°F)


- **C** Speedometer
- **D** Clock (→P.81)
- E Engine coolant temperature gauge

Displays the engine coolant temperature

- F Odometer and trip meter display (→P.80)
- G Shift position indicator (→P.148)
- H Fuel gauge

Displays the quantity of fuel remaining in the tank

■ Hybrid System Indicator

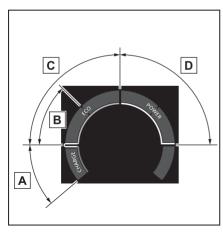

A Charge area

Shows regeneration* status.

Regenerated energy will be used to charge the hybrid battery (traction battery).

B Hybrid Eco area

Shows that gasoline engine power is not being used very often.

The gasoline engine will automatically stop and restart under various conditions.

c Eco area

Shows that the vehicle is being driven in an Eco-friendly manner.

By keeping the bar display within Eco area, more Eco-friendly driving can be achieved.

D Power area

Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)

*: When used in this manual, regeneration refers to the conversion of energy created by the movement of the vehicle into electrical energy.

■ Engine speed

On hybrid electric vehicles, engine speed is precisely controlled in order to help improve fuel efficiency and reduce exhaust emissions etc.

There are times when the engine speed that is displayed may differ even when vehicle operation and driving conditions are the same.

■ Hybrid System Indicator will operate when

The Hybrid System Indicator will operate in the following situations:

- The "READY" indicator is illuminated.
- The shift lever is in D or B.

■ Outside temperature display

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change:
- When stopped, or driving at low speeds (less than 20 km/h [12 mph])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When "--" or "E" is displayed, the system may be malfunctioning. Take your vehicle to your Toyota dealer.

Liquid crystal display

→P 87

■ Free/Open Source Software Information

This product contains Free/Open Source Software (FOSS). The license information and/or the source code of such FOSS can be found at the following URL.

https://www.denso.com/global/en/opensource/meter/toyota/

Customization

The gauges and meters can be customized in

of the multi-information display. (→P.376)

₩ WARNING

■The information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or iniurv.



NOTICE


■ To prevent damage to the engine and its components

- Do not let the indicator needle of the tachometer enter the red zone. which indicates the maximum engine speed.
- The engine may be overheating if the engine coolant temperature gauge is in the red zone (H). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. $(\rightarrow P.362)$

Odometer and trip meter display

Changing the display

Each time the "ODO TRIP" switch is pressed, the displayed item will be changed. When the trip meter is displayed, pressing and holding the switch will reset the trip meter.

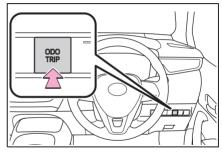

■ Display items

Odometer

Displays the total distance the vehicle has been driven.

Trip meter A/Trip meter B

Displays the distance the vehicle has been driven since the meter was last reset. Trip meters A and B can be used to record and display different distances independently.

To reset, display the desired trip meter and press and hold the "ODO TRIP" switch.

Changing the meter light brightness

The brightness of the meter light can be changed on a of the multi-information display.

- 1 Select **t** of the multi-information display.
- 2 Press the ∧ or ∨ meter control switch to select "Adjust Meter Brightness".
- 3 Press and hold the OK meter. control switch.

4 Press **〈** or **〉** to adjust the brightness.

Adjusting the clock


■ The clocks can be adjusted on the audio system screen.

Refer to "Multimedia Owner's Man-

Multi-information display (7-inch display)

Display and menu icons

Display

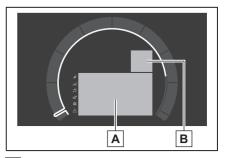

A Content display area

By selecting menu icons on the multi-information display, a variety of driving-related information can be displayed. The multi-information display can also be used to change display settings and other vehicle settings.

Warning or advice pop-up displays are also displayed in certain situations.

B Driving support system status display area

Displays an image when the following systems are operating and a menu icon

other than A is selected:

- · LTA (Lane Tracing Assist)
- LDA (Lane Departure Alert)
- Dynamic radar cruise control
- Cruise control

■ Menu icons

The menu icons will be displayed by pressing the ∧ or ∨ meter control switch.



Driving information display (→P.82)



Driving support system information display (→P.85)



Audio system-linked display (→P.85)



Vehicle information display (→P.85)



Settings display (→P.86)



Warning message display (→P.331)

■ Liquid crystal display

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

A

WARNING


Caution for use while driving

- When operating the multi-information display while driving, pay extra attention to the safety of the area around the vehicle.
- Do not look continuously at the multi-information display while driving as you may fail to see pedestrians, objects on the road, etc. ahead of the vehicle.
- The information display at low temperatures

→P.73

Changing the meter display

The multi-information display is operated using the meter control switches.

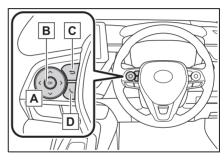

⟨ / ⟩ : Change displayed content, scroll the screen and move the cursor

- Press: Enter/Set
 Press and hold: Reset/Display
 customizable items
- c Return to the previous screen
- Call sending/receiving and history display


Linked with the hands-free system, sending or receiving call is displayed. For details regarding the hands-free system, refer to the "Multimedia Owner's Manual"

Content of driving information

- Display items
- Fuel economy
- ECO Accelerator Guidance/Eco score
- EV driving ratio
- Fuel economy

Use the displayed values as a refer-

ence only.

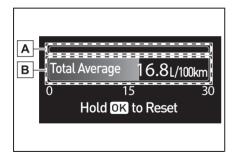

- A Current fuel consumption
 Displays instantaneous current fuel
 consumption.
- **B** Average fuel economy (after reset)

To reset the average fuel economy display, press and hold the OK meter control switch.

The average fuel economy display can be changed in \bigstar . (\rightarrow P.86)


Average fuel economy (after start)

Displays the average fuel consumption since hybrid system start.


Average fuel economy (after refuel)

Displays the average fuel consumption since the vehicle was refueled.

■ ECO Accelerator Guidance/Eco score

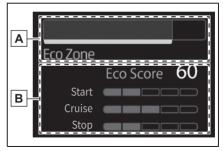

- A ECO Accelerator Guidance
- B Eco score
- ECO Accelerator Guidance

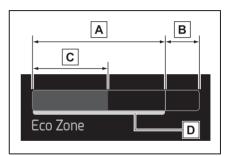

A Eco area

Indicates that the vehicle is being driven in an Eco-friendly manner.

B Power area

Indicates that the Eco-friendly driving range is being exceeded (during full power driving, etc.)

C Current accelerator pedal operation

Displayed as a green bar when within the Eco area.

Eco-friendly acceleration can be achieved by keeping the accelerator pedal operation display within the range indicated by the blue bar. (→P.135)


D Zone of Eco acceleration

Displayed as a blue bar, and represents an estimated suitable accelerator pedal operation range for the current driving conditions, such as starting off or cruising.

This display changes according to situation, such as when starting off or cruising.


Eco score

The following 3 Eco driving methods are evaluated in 5 levels: Smooth start-off acceleration, driving without sudden acceleration, and smooth stopping. When the vehicle is stopped, an Eco score out of 100 points will be displayed.

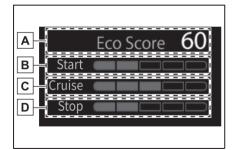


- A Score result
- B Eco start status
- c Eco cruise status
- **D** Eco stop status

How to read the bar display

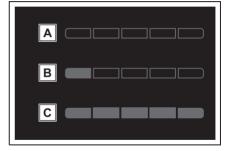

- A Not yet evaluated
- **B** Low
- C High
- After the hybrid system is started, the Eco score will not be displayed until the vehicle speed exceeds approximately 30 km/h (19 mph).
- The Eco score will be reset each time the hybrid system is started.

■ EV Ratio/EV Driving Ratio

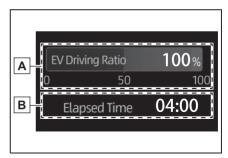

- A EV driving ratio after starting Displays the percentage of EV driving since the hybrid system was started.*
- **B** Elapsed time after starting
 Displays the elapsed time since hybrid system was started.*
- *: It is reset each time the hybrid system stops.

■ The ECO Accelerator Guidance/Eco score will not operate when

The ECO Accelerator Guidance/Eco score will not operate in the following situations:

- The Hybrid System Indicator is not operating.
- The vehicle is being driven using the cruise control or dynamic radar cruise control.

Driving support system information display

Driving support system information

Select to display the operational status of the following systems:

- LTA (Lane Tracing Assist)
 (→P.185)
- LDA (Lane Departure Alert)
 (→P.190)
- Dynamic radar cruise control (→P.195)
- Cruise control (→P.204)
- Navigation system-linked display (if equipped)

Select to display the following navigation system-linked information:

- Route guidance to destination
- Compass display (heading-up display)

Audio system-linked display


Select to enable selection of an audio source or track on the meter using the meter control switches.

This menu icon can be set to be displayed/not displayed in **\textstyle{\textstyle{\textstyle{1}}}{\textstyle{1}}.**

Vehicle information display

- Display items
- Drive information
- Energy monitor (→P.98)
- Drive information

Displays drive information such as the following:

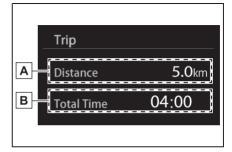

- A Drive information 1
- **B** Drive information 2

Displays the following depending on which drive information type and drive information items were

selected in \bigstar . (\rightarrow P.86)

- After start
- Distance: Displays the distance driven since hybrid system start
- Elapsed time: Displays the elapsed time since hybrid system start
- Average vehicle speed: Displays the average vehicle speed since hybrid system start
- After reset
- Distance: Displays the distance driven since the display was reset

- Elapsed time: Displays the elapsed time since the display was reset*
- Average vehicle speed: Displays the average vehicle speed since the display was reset*
- *: To reset, display the desired item and press and hold the OK meter control switch

Settings display

- Meter display settings that can be changed
- Language

Select to change the language displayed.

Units

Select to change the units of measure displayed.

Meter Type

Select to change the meter type.

Dial Type

Select to change the display of the speedometer, tachometer or Hybrid System Indicator.

FV indicator

Select to enable/disable the EV indicator



· Fuel economy display

Select to change the average fuel consumption display to any of the following: trip average/total average/tank average. (→P.82)

Hybrid system display
 Select to display/not display the zone of
 Eco acceleration of the Eco Accelerator

Guidance. (→P.83)



Select to display/not display the audio system linked display.

• 🚅

Select to change the displayed content of the following:

· Display contents

Select to display/not display the energy monitor. (→P.98)

· Drive information type

Select to change the drive information type display between trip information/total information.

· Drive information items

Select to set the first and second items of the drive information display to any of the following: average vehicle speed/distance/elapsed time.

Pop-up display

Select to enable/disable pop-up displays for each relevant system.

Multi-information display off

Select to turn the multi-information display off.

To turn the multi-information display on again, press any of the following meter control switches



Default setting

Select to reset the meter display settings to the default setting.

■ Vehicle functions and settings that can be changed

→P.376

■ Suspension of the settings display

- Some settings cannot be changed while driving. When changing settings, park the vehicle in a safe place.
- If a warning message is displayed, operation of the settings display will be suspended.

A

WARNING

Cautions during setting up the display

If the hybrid system is operating while changing certain settings on the settings display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.




NOTICE

■ During setting up the display

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while setting up the display features.

Multi-information display (12.3-inch display)

Display

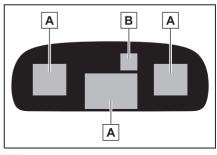

A Content display area

By selecting menu icons on the multi-information display, a variety of driving-related information can be displayed. The multi-information display can also be used to change display settings and other vehicle settings.

Warning or advice pop-up displays are also displayed in certain situations.

B Driving support system status display area

Displays a contracted display of the driving support system status when not selected for the multi-information display, while any of the following systems are operating:

- LTA (Lane Tracing Assist)
- LDA (Lane Departure Alert)
- Dvnamic radar cruise control
- · Cruise control

■ Liquid crystal display

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

A

WARNING

Caution for use while driving


- When operating the multi-information display while driving, pay extra attention to the safety of the area around the vehicle
- Do not look continuously at the multi-information display while driving as you may fail to see pedestrians, objects on the road, etc. ahead of the vehicle.
- The information display at low temperatures

→P.80

Changing the meter display

■ Meter control switch

The multi-information display is operated using the meter control switches

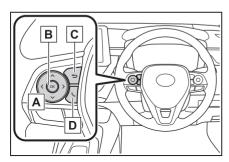


- A < /> : Select menu icons
 - ∧/ ➤: Change displayed content, scroll up/down the screen
 and move the cursor up/down
- B Press: Enter/Set
 Press and hold: Reset/Display
 customizable items
- C Return to the previous screen
- D Call sending/receiving and his-

tory display

Linked with the hands-free system, sending or receiving call is displayed. For details regarding the hands-free system, refer to the "Multimedia Owner's Manual"

■ Changing meter pages

Press the **〈** or **〉** meter control switch to change the meter page.

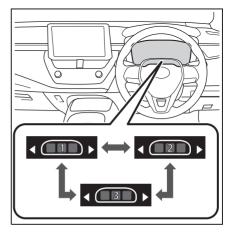

Content of multi-information display (Center)

- Display contents
- Driving support system information display
- Navigation system-linked display (if equipped)
- Settings
- Warning message (→P.331)
- Changing contents in a page

Select the desired content on the page's setting mode display.

- 1 Press the \(\) or \(\) meter control switch to select a page.
- 2 To enable page edit, press and hold the OK meter control switch.
- 3 Press the \(\) or \(\) meter control switch to select a display to be changed.
- 4 Press or meter control switch to select a content.
- 5 When the setting is complete, press ★ .

Driving support system information display

Select to display the operational status of the following systems:

- LTA (Lane Tracing Assist)
 (→P.185)
- LDA (Lane Departure Alert) (→P.190)
- Dynamic radar cruise control (→P.195)
- Cruise control (→P.204)

Navigation system-linked display (if equipped)

Select to display the following navigation system-linked information:

- Route guidance to destination
- Compass display (heading-up display)

Settings

The meter display settings can be changed in 🌣 .

Language

Select to change the language displayed.

Units

Select to change the units of measure displayed.

Meter Type

Select to change the meter type.

Meter Style

Select to change the meter style.

Dial Type

1 dial: Select to change the display of the speedometer, tachometer or Hybrid System Indicator.

2 dial: Select to change the left side dial of the Hybrid System Indicator or tachometer

EV indicator

Select to enable/disable the EV indicator.

Fuel Economy

Select to set the display of the fuel economy.

Hybrid System

Select to set the display of the zone of Eco acceleration.

TRIP A/B Items

Select to change the display of the drive information of TRIP A/B.

Pop-up display

Select to enable/disable pop-up displays for each relevant system.

Default settings

Select to reset the meter display settings to the default setting.

Content of multi-information display (Side)

- Display contents (Side)
- Fuel economy
- ECO Accelerator Guidance/Eco score
- EV Driving Ratio/Elapsed time after starting
- Driving support system information display
- Navigation system-linked display
- Audio system-linked display
- Drive information
- Drive information of Trip A/B
- Energy monitor (→P.98)


Changing items to be displayed on the side multi-information displays. $(\rightarrow P.90)$

- Changing contents in a page →P.88
- Changing contents to be displayed on the side multi-information displays
- 1 Press the \langle or \rangle meter control switch to select a page.
- 2 To enable page edit, press and hold the OK meter control switch.
- 3 Press the \(\) or \(\) meter control switch to select the desired side multi-information display to be changed.

- 4 Press the 〈 or 〉 meter control switch for the side that (■) is displayed to move to a content list screen that enables to select display/not display each items.
- 5 Press or ✓ control switch to select a content and select OK to set for display/not display the item

■ Fuel economy

Use the displayed values as a reference only.

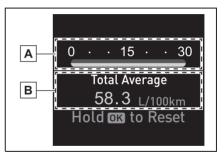

A Current fuel consumption
Displays instantaneous current fuel
consumption.

B Average fuel economy (after reset)

The average fuel economy display can be changed in \clubsuit . (\rightarrow P.89)

Average fuel economy (after start)

Displays the average fuel consumption since hybrid system start.


Average fuel economy (after reset)

Displays average fuel consumption


since display was reset.

To reset the average fuel economy display, press and hold the OK meter control switch.

■ ECO Accelerator Guidance/Eco score

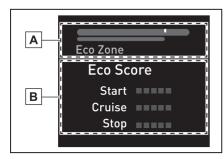

- A ECO Accelerator Guidance
- **B** Eco score
- ECO Accelerator Guidance

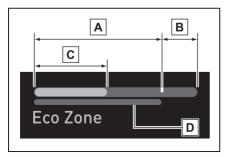

A Eco area

Indicates that the vehicle is being driven in an Eco-friendly manner.

B Power area

Indicates that the Eco-friendly driving range is being exceeded (during full power driving, etc.)

C Current accelerator pedal operation

Displayed as a green bar when within

the Eco area.

Eco-friendly acceleration can be achieved by keeping the accelerator pedal operation display within the range indicated by the blue bar. (→P.135)


D Zone of Eco acceleration

Displayed as a blue bar, and represents an estimated suitable accelerator pedal operation range for the current driving conditions, such as starting off or cruising.

This display changes according to situation, such as when starting off or cruising.


Eco score

The following 3 Eco driving methods are evaluated in 5 levels: Smooth start-off acceleration, driving without sudden acceleration, and smooth stopping. When the vehicle is stopped, an Eco score out of 100 points will be displayed.

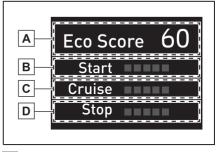


- A Score result
- B Eco start status
- c Eco cruise status
- **D** Eco stop status

How to read the bar display

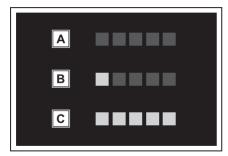

- A Not yet evaluated
- **B** Low
- C High
- After the hybrid system is started, the Eco score will not be displayed until the vehicle speed exceeds approximately 30 km/h (19 mph).
- The Eco score will be reset each time the hybrid system is started.
- EV Driving Ratio/Elapsed time after starting

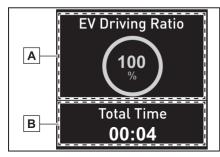

- A EV driving ratio after starting Displays the percentage of EV driving since the hybrid system was started.*
- **B** Elapsed time after starting Displays the elapsed time since hybrid system was started.*
- *: It is reset each time the hybrid system stops.

■ Driving support system information display

Select to display the operational status of the following systems:


- LTA (Lane Tracing Assist)
 (→P.185)
- LDA (Lane Departure Alert)
 (→P.190)
- Dynamic radar cruise control (→P.195)
- Cruise control (→P.204)
- Navigation system-linked display (if equipped)

Select to display the following navigation system-linked information:

- Route guidance to destination
- Compass display (heading-up display)
- Audio system-linked display

Displays the audio source or track.


Drive information

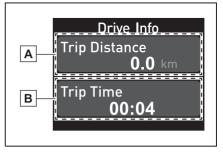

- A Drive information 1
- **B** Drive information 2

Displays the following depending on which drive information type and drive information items were selected in \bigstar . (\rightarrow P.93)

- Average speed: Displays the average vehicle speed since hybrid system start
- Trip distance: Displays the distance driven since hybrid system start
- Trip time: Displays the elapsed time since hybrid system start
- Drive information of TRIP A/B

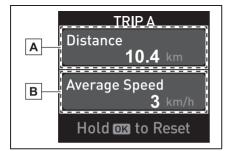

- A Drive information of trip A/B 1
- **B** Drive information of trip A/B 2 Displays the following depending on which drive information type and drive information items were

selected in \bigstar . (\rightarrow P.93)

- Average speed: Displays the average vehicle speed of trip A/B
- Trip distance: Displays the distance driven of trip A/B
- Trip time: Displays the elapsed time of trip A/B

■ The ECO Accelerator Guidance/Eco score will not operate when

The ECO Accelerator Guidance/Eco score will not operate in the following situations:

- The Hybrid System Indicator is not operating.
- The vehicle is being driven using the cruise control or dynamic radar cruise control.

Settings display

- Vehicle functions and settings that can be changed
- →P.376
- Meter display settings
- →P.89
- Suspension of the settings display
- Some settings cannot be changed while driving. When changing settings, park the vehicle in a safe place.
- If a warning message is displayed, operation of the settings display will be suspended.



WARNING

Cautions during setting up the display

If the hybrid system is operating while changing certain settings on the settings display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.



NOTICE

■ During setting up the display


To prevent 12-volt battery discharge, ensure that the hybrid system is operating while setting up the display features.

Head-up display

*: If equipped

The head-up display projects a variety of driving-related information and the operating state of the driving support systems on the windshield

System components

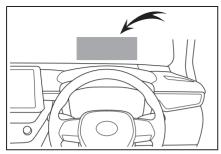


Can be changed the head-up display type. (→P.94)

The content displayed will differ according to the driving conditions and displaymode of the head-up display.

Depending on the situation, pop-up displays will also be displayed.


■ Full

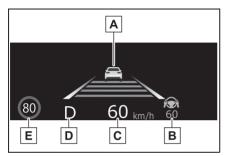

These images are examples only, and may vary slightly from actual conditions.

- A Driving support system information display area(→P.96)/navigation system-linked display area (if equipped)/Tachometer display area (→P.97)
- B Driving support system information display area (→P.96)
- C Speedometer
- **D** Shift position (→P.148)
- E RSA (Road Sign Assist) display area (→P.209)


■ Standard

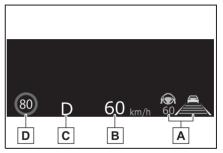

These images are examples only, and may vary slightly from actual conditions.

- A Driving support system information display area (→P.96)
- **B** Speedometer
- C Shift position (→P.148)
- D RSA (Road Sign Assist) display area (→P.209)

■ Minimum

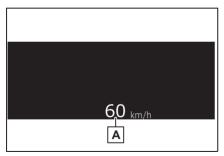

These images are examples only, and may vary slightly from actual conditions

A Speedometer

■ Head-up display will operate when The power switch is in ON.

■ When using the head-up display

The head-up display may seem dark or hard to see when viewed through sunglasses, especially polarized sunglasses. Adjust the brightness of the head-up display or remove your sunglasses.

Street name display (vehicles with a navigation system)

Only street names which are included in the map data will be displayed.

A

WARNING

■When using the head-up display

• Check that the position and brightness of the head-up display image does not interfere with safe driving. Incorrect adjustment of the image's position or brightness may obstruct the driver's view and lead to an accident, resulting in death or serious injury.

 Do not continuously look at the head-up display while driving as you may fail to see pedestrians, objects on the road, etc. ahead of the vehicle

A

NOTICE

Head-up display projector

 Do not place any drinks near the head-up display projector. If the projector gets wet, electrical malfunctions may result.



- Do not place anything on or put stickers onto the head-up display projector.
 - Doing so could interrupt head-up display indications.
- Do not touch the inside of the head-up display projector or thrust sharp edges or the like into the projector.

Doing so could cause mechanical malfunctions

Using the head-up display

Select ★ on the multi-information display (→P.86, 89) and then "HUD Main".

Enabling/disabling the head-up display

Press the OK meter control switch to enable/disable the head-up display.

Changing the head-up display settinas

Press and hold the OK meter control switch to change the following settinas:

 Enabling/disabling the head-up display

Select to enable/disable the head-up display

Display type

Select to change the display type of the head-up display

 Brightness and vertical position of the head-up display

Select to adjust the brightness or vertical position of the head-up display.

Display angle

Select to adjust the angle of the head-up display.

■ Enabling/disabling of the head-up display

If the head-up display is disabled, it will remain disabled when the power switch is turned off then back to ON.

■ Display brightness

The brightness of the head-up display can be adjusted on a of the multi-information display. Also, it is automatically adjusted according to the ambient brightness.



WARNING

Caution for changing settings of the head-up display

If the hybrid system is operating while changing certain settings on the settings display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard

NOTICE

When changing the settings of the head-up display

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while changing the settings of the head-up display.

Driving support system status

Displays the operational status of the following systems:

- LTA (Lane Tracing Assist) (→P.185)
- LDA (Lane Departure Alert) $(\to P.190)$
- Dynamic radar cruise control $(\to P.195)$
- Cruise control (→P.204)

Details of content displayed on the head-up display may differ from that displayed on the multi-information display. For details, refer to the explanation of each system.

Pop-up display

Pop-up displays for the following systems will be displayed when necessary:

■ Driving support systems

Displays a warning/suggestion/advice message or the operating state of a relevant system.

■ **A** icon

Displayed when a warning message is displayed on the multi-information display. (→P.331)

■ Warning message

Some warning messages are displayed when necessary, according to certain conditions

Details of content displayed on the head-up display may differ from that displayed on the multi-information display.

■ Audio system operation status

Displayed when an audio remote control switch on the steering wheel is operated.

■ Hands-free system status


Displayed when the hands-free system is operated.

■ When a pop-up display is displayed

When a pop-up display is displayed, a current display may no longer be displayed. In this case, the display will return after the pop-up display disappears.

Hybrid System Indicator/Tachometer

■ Hybrid System Indicator

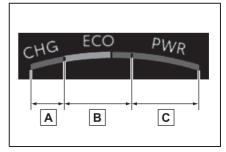

- A Charge area
- **B** Eco area
- **C** Power area

Displayed content is the same as that displayed on the multi-information display (Hybrid System Indicator). For details, refer to P.79.


■ Tachometer

Displays the engine speed in revolutions per minute.

Energy monitor/consumption screen

You can view the status of your hybrid system on the multi-information display and the audio system screen.

System components

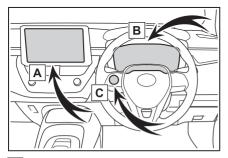

- A Audio system screen
- **B** Multi-information display
- © Meter control switches (→P.82, 88)

Energy monitor

The energy monitor can be used to check the vehicle drive status, hybrid system operation status and energy regeneration status.

■ Display procedure

- Multi-information display (7-inch display)

- 2 Press ∧ or ∨ to select "Energy Monitor" and then press and hold OK
- Multi-information display (12.3-inch display)
- Select of

 tion display and then press and hold OK .
- 2 Press \(\) or \(\) to select "Energy Monitor" and then press and hold OK .
- ▶ Audio system screen
- 1 Select a on the main menu.
- 2 Select "Energy flow".

■ Reading the display

The arrows will appear in accordance with the energy flow. When there is no energy flow, arrows will not be displayed.

The color of the arrows will change as follows


Green or blue: When the hybrid battery (traction battery) is regenerated or charged.

Yellow or orange: When the hybrid battery (traction battery) is in use.


Red: When the gasoline engine is in use.

The image shows all the arrows as an example. The actual display will vary depending on conditions.


Multi-information display (7-inch display)

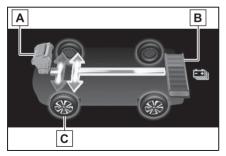

- A Gasoline engine
- **B** Hybrid battery (traction battery)
- **C** Tires
- Multi-information display (12.3-inch display)

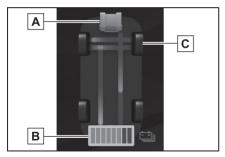

- A Gasoline engine
- **B** Hybrid battery (traction battery)
- **C** Tires
- ▶ Audio system screen

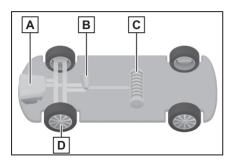

- A Gasoline engine
- **B** Electric motor (traction motor)
- C Hybrid battery (traction battery)
- **D** Tires

Color of the hybrid battery (traction battery) on the display

It will be green when the hybrid battery (traction battery) is being charged, and yellow when the hybrid battery (traction battery) is being used.

Remaining charge amount warning of hybrid battery (traction battery)


- The buzzer sounds intermittently when the hybrid battery (traction battery) remains without charging while the shift lever is in N, or the remaining charge amount drops below a certain level. If the remaining charge amount drops further, the buzzer sounds continuously.
- When a warning message is shown on the multi-information display and the buzzer sounds, follow the instructions displayed on the screen to perform trouble shooting.

Color of the gasoline engine on the audio system screen

It will be blue when the engine is warming up, and it will turn to red when the warming up is finished.

Hybrid battery (traction battery) status


Multi-information display (7-inch display)

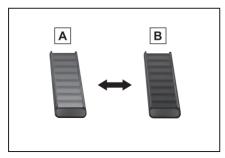

- A Low
- **B** High

These images are examples only, and may vary slightly from actual conditions.


Multi-information display (12.3-inch display)

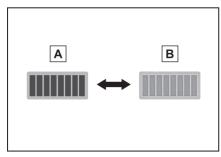

- A Low
- **B** High

These images are examples only, and may vary slightly from actual conditions.

► Audio system screen

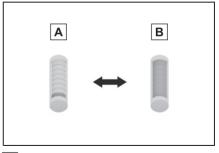


- A Low
- **B** High

These images are examples only, and may vary slightly from actual conditions.

Consumption

- Trip information
- 1 Select a on the main menu.
- 2 Select "Trip information".

If a screen other than "Current" is displayed, select "Current".

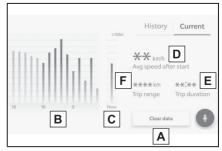

The image is an example only, and may vary slightly from actual conditions.

- A Resetting the consumption data
- **B** Fuel consumption in the past 15 minutes
- C Current fuel consumption


- D Average vehicle speed since the hybrid system was started.
- **E** Elapsed time since the hybrid system was started.
- F Cruising range

Average fuel consumption for the past 15 minutes is divided by color into past averages and averages attained since the power switch was last turned to ON. Use the displayed average fuel consumption as a reference.

■ History

- 1 Select a on the main menu.
- 2 Select "Trip information".

If a screen other than "History" is displayed, select "History".

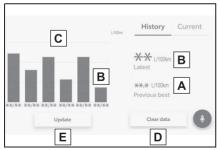

The image is an example only, and may vary slightly from actual conditions.

- A Best recorded fuel consumption
- **B** Latest fuel consumption
- © Previous fuel consumption record
- **D** Resetting the history data
- E Updating the latest fuel consumption data

The average fuel consumption his-

tory is divided by color into past averages and the average fuel consumption since the last updated. Use the displayed average fuel consumption as a reference.

■Updating the history data

Update the latest fuel consumption by selecting "Update" to measure the current fuel consumption again.

■ Resetting the data

The fuel consumption data can be deleted by selecting "Clear".

■ Cruising range

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

This distance is computed based on your average fuel consumption.
As a result, the actual distance that can be driven may differ from that displayed.

Before driving


3

3-1.	Key information
	Keys104
3-2.	Opening, closing and locking the doors
	Side doors107
	Back door111
	Smart entry & start system114
3-3.	Adjusting the seats
	Front seats119
	Rear seats120
	Head restraints122
3-4.	Adjusting the steering wheel and mirrors
	Steering wheel124
	Inside rear view mirror125
	Outside rear view mirrors
	126
3-5.	Opening and closing the windows
	Power windows128
3-6.	Favorite settings
	My Settings131

Kevs

The keys

The following keys are provided with the vehicle.

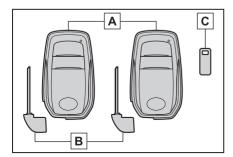

- A Electronic keys
- Operating the smart entry & start system (→P.114)
- Operating the wireless remote control function (→P.105)
- **B** Mechanical keys
- c Key number plate

■When riding in an aircraft

When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag, etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit radio waves that could interfere with the operation of the aircraft.

■ Electronic key battery depletion

- The standard battery life is 1 to 2 years.
- If the battery becomes low, an alarm will sound in the cabin and a message will be shown on the multi-information display when the hybrid system is stopped.

- To reduce key battery depletion when the electronic key is to not be used for long periods of time, set the electronic key to the battery-saving mode. (→P.115)
- As the electronic key always receives radio waves, the battery will become depleted even if the electronic key is not used. The following symptoms indicate that the electronic key battery may be depleted. Replace the battery when necessary. (→P.307)
- The smart entry & start system or the wireless remote control does not oper-
- The detection area becomes smaller.
- The LED indicator on the key surface does not turn on.
- To avoid serious deterioration, do not leave the electronic key within 1 m (3 ft.) of the following electrical appliances that produce a magnetic field:
- TVs
- · Personal computers
- Cellular phones, cordless phones and battery chargers
- Recharging cellular phones or cordless phones
- Table lamps
- Induction cookers
- If the electronic key is near the vehicle for longer than necessary, even if the smart entry & start system is not operated, the key battery may become depleted faster than normal.

■ Replacing the battery

→P 307

■ The electronic key function is suspended when

The electronic key function may be suspended when the electronic key is kept unmoved in a same location for a certain period, such as it is left on a same place. This is to reduce battery consumption. The function will be restored automatically when the electronic key is moved, such as it is picked up.

■ If "A New Key has been Registered Contact Your Dealer for Details" is shown on the multi-information display

This message will be displayed each time the driver's door is opened when the doors are unlocked from the outside for approximately 10 days after a new electronic key has been registered. If this message is displayed but you have not had a new electronic key registered, ask your Toyota dealer to check if an unknown electronic key (other than those in your possession) has been registered



NOTICE

■To prevent key damage

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for long periods of time
- Do not get the keys wet or wash them in an ultrasonic washer etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
- Do not disassemble the keys.
- Do not attach a sticker or anything else to the surface of the key.
- Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems and induction cookers, or medical electrical equipment, such as low-frequency therapy equipment.


Carrying the electronic key on vour person

Carry the electronic key 10 cm (3.9 in.) or more away from electric appliances that are turned on. Radio waves emitted from electric appliances within 10 cm (3.9 in.) of the electronic key may interfere with the key, causing the key to not function properly.

- In case of a smart entry & start system malfunction or other key-related problems
- →P.356
- ■When an electronic key is lost
- →P.355

Wireless remote control

The keys are equipped with the following wireless remote control:

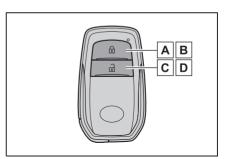

- A Locks the doors (→P.107)
- **B** Closes the windows* (→P.107)
- C Unlocks the doors (→P.107)
- D Opens the windows* (→P.107)
- *: This setting must be customized at your Toyota dealer.


Using the mechanical key

To take out the mechanical key,

push the release button and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key. $(\rightarrow P.356)$

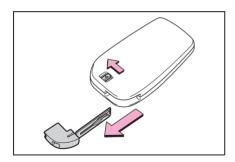

■ If you lose your mechanical keys →P.355

■ If a wrong key is used


The key cylinder rotates freely, isolated from the internal mechanism.

Side doors

Unlocking and locking the doors from the outside

■ Smart entry & start system

Carry the electronic key to enable this function

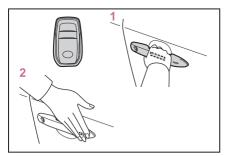

1 Grip the front door handle to unlock all the doors.*


Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.

- *: The door unlock settings can be changed. (→P.107, 376)
- 2 Touch the lock sensor (the indentation on the side of the front door handle) to lock all the doors.

Check that the door is securely locked.

■ Wireless remote control

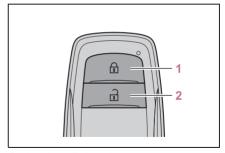

1 Locks all the doors

Check that the door is securely locked.

Press and hold to close the windows.*

2 Unlocks all the doors

Press and hold to open the windows.*

*: This setting must be customized at your Toyota dealer.

■ Switching the door unlock function

It is possible to set which doors the entry function unlocks using the wireless remote control

- 1 Turn the power switch off.
- when the indicator light on the key surface is not on, press and hold for approximately 5 seconds while pressing and holding .

The setting changes each time an operation is performed, as shown below. (When changing the setting continuously, release the buttons, wait for at least 5 seconds, and repeat step 2.)

Multi-information display/Beep	Unlocking function
(7.0-inch display)	Holding the driver's door handle unlocks only the driver's door.
(12.3-inch display) Exterior: Beeps 3 times Interior: Pings once	Holding the front passenger's door handle unlocks all the doors.
(7.0-inch display) (12.3-inch display) Exterior: Beeps twice Interior: Pings once	Holding either front door handle unlocks all the doors.

For vehicles with an alarm: To prevent unintended triggering of the alarm, unlock the doors using the wireless remote control and open and close a door once after the settings have been changed. (If a door is not opened within

30 seconds after is pressed, the doors will be locked again and the alarm will automatically be set.)
In case that the alarm is triggered,

Operation signals

A buzzer sounds and the emergency

immediately stop the alarm. (\rightarrow P.65)

flashers flash to indicate that the doors have been locked/unlocked using the entry function or wireless remote control. (Locked: Once; Unlocked: Twice)

A buzzer sounds to indicate that the windows are operating.


■ Security feature

If a door is not opened within approximately 30 seconds after the vehicle is unlocked using the entry function or wireless remote control, the security feature automatically locks the vehicle again.

When the door cannot be locked by the lock sensor on the surface of the front door handle

If the doors cannot be locked by touching the lock sensor with a finger, touch the lock sensor with the palm of your hand.

If you are wearing gloves, remove them.

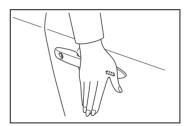

■ Door lock buzzer

If an attempt to lock the doors using the entry function or wireless remote control is made when a door is not fully closed, a buzzer will sound continuously for 5 seconds. Fully close the door to stop the buzzer, and lock the doors again.

■ Alarm (if equipped)

Locking the doors will set the alarm system. $(\rightarrow P.65)$

Conditions affecting the operation of the smart entry & start system or wireless remote control

→P.115

■ If the smart entry & start system or the wireless remote control does not operate properly

Use the mechanical key to lock and unlock the doors. (→P.356)

Replace the key battery with a new one if it is depleted. (\rightarrow P.307)

■ If the 12-volt battery is discharged

The doors cannot be locked and unlocked using the smart entry & start system or wireless remote control. Lock or unlock the doors using the mechanical key. (→P.356)

■ Rear seat reminder function

In order to remind you not to forget luggage, etc. in the rear seat, when the power switch is turned off after any of the following conditions are met, a buzzer will sound and a message will be displayed on the multi-information display for approximately 6 seconds.

- The hybrid system is started within approximately 10 minutes after opening and closing a rear door.
- A rear door has been opened and closed after the hybrid system was started.

However, if a rear door is opened and then closed within approximately 2 seconds, the rear seat reminder function may not operate.

The rear seat reminder function determines that luggage, etc. has been placed in a rear seat based on opening and closing of a rear door. Therefore, depending on the situation, the rear seat reminder function may not operate and you may still forget luggage, etc. in the rear seat, or it may operate unnecessarily.

■ Customization

Some functions can be customized. $(\rightarrow P.376)$



WARNING

■ To prevent an accident

Observe the following precautions while driving the vehicle.
Failure to do so may result in a door opening and an occupant being thrown out of the vehicle, resulting in death or serious injury.

- Ensure that all doors are properly closed and locked.
- Do not pull the inside door handle while driving.
 Be especially careful of the driver's door, as the door may be opened even if the inside lock button is in the locked position.
- Set the rear door child-protector locks when children are seated in the rear seats

■When opening or closing a door


Check the surroundings of the vehicle such as whether the vehicle is on an incline, whether there is enough space for a door to open and whether a strong wind is blowing. When opening or closing the door, hold the door handle tightly to prepare for any unpredictable movement.

When using the wireless remote control and operating the power windows


Operate the power windows after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the windows. Also, do not allow children to operate the wireless remote control. It is possible for children and other passengers to get caught in the power windows.

Unlocking and locking the doors from the inside

Door lock switches (to lock/unlock)

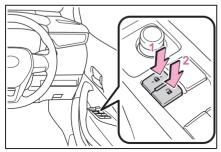

- 1 Locks all the doors
- 2 Unlocks all the doors
- Inside lock buttons

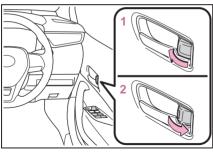

- 1 Locks the door
- 2 Unlocks the door

The driver's door can be opened by pulling the inside handle even if the lock button is in the lock position.

■ Locking the front doors from the outside without a key

- 1 Move the inside lock button to the lock position.
- 2 Close the door while pulling the door handle.

The door cannot be locked if the power switch is in ACC or ON, or the electronic key is left inside the vehicle.

The key may not be detected correctly and the door may be locked.


■ Open door warning buzzer

If a door or the back door is not fully closed, a buzzer will sound when the vehicle speed reaches 5 km/h (3 mph).

The open door(s) or back door is indicated on the multi-information display.

Rear door child-protector lock

The door cannot be opened from inside the vehicle when lock is set.

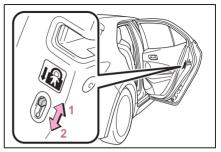

- 1 Unlock
- 2 Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

Back door

The back door can be locked/unlocked and opened by the following procedures.

A

WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

Caution while driving

- Keep the back door closed while driving. If the back door is left open, it may hit near-by objects while driving or luggage may be unexpectedly thrown out, causing an accident.
 - In addition, exhaust gases may enter the vehicle, causing death or a serious health hazard. Make sure to close the back door before driving.
- Before driving the vehicle, make sure that the back door is fully closed. If the back door is not fully closed, it may open unexpectedly while driving, causing an accident.
- Never let anyone sit in the luggage compartment. In the event of sudden braking or a collision, they are susceptible to death or serious injury.
- When children are in the vehicle
- Do not allow children to play in the luggage compartment.
 If a child is accidentally locked in the luggage compartment, they could have heat exhaustion or other injuries.
- Do not allow a child to open or close the back door.
 Doing so may cause the back door to move unexpectedly, or cause the child's hands, head, or neck to be caught by the closing back door.

Operating the back door

- Remove any heavy loads, such as snow and ice, from the back door before opening it. Failure to do so may cause the back door to suddenly shut again after it is opened.
- When opening or closing the back door, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- Use caution when opening or closing the back door in windy weather as it may move abruptly in strong wind
- The back door may suddenly shut if it is not opened fully. It is more difficult to open or close the back door on an incline than on a level surface, so beware of the back door unexpectedly opening or closing by itself. Make sure that the back door is fully open and secure before using the luggage compartment.




 When closing the back door, take extra care to prevent your fingers etc. from being caught.



- When closing the back door, make sure to press it lightly on its outer surface. If the back door handle is used to fully close the back door, it may result in hands or arms being caught.
- Do not pull on the back door damper stay to close the back door. and do not hang on the back door damper stav. Doing so may cause hands to be caught or the back door damper stay to break, causing an accident
- If a bicycle carrier or similar heavy object is attached to the back door. it may suddenly shut again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Toyota part is recommended

Unlocking and locking the back door from the outside

■ Entry function

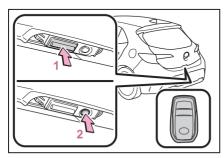

Press the button to unlock the back door.

The door cannot be unlocked for 3 seconds after the door is locked.

2 Press the button to lock the back door.

Check that the door is securely locked.

■ Wireless remote control

→P 107

■ Operation signals

→P 108

Unlocking and locking the back door from the inside

Door lock switches


→P 110

Opening/closing the back door

Open

Raise the back door while pushing up the back door opener switch.

The back door cannot be closed immediately after the back door opener switch is pushed.

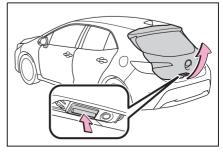


Close

Lower the back door using the back door handle, and make sure to push the back door down from the outside to close it

Be careful not to pull the back door sideways when closing the back

door with the handle

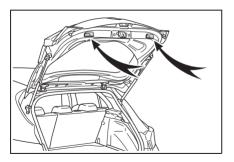

■ Open door warning buzzer

→P.110

■ Luggage compartment light

The luggage compartment light turns on when the back door is opened.



NOTICE

■ Back door damper stays

The back door is equipped with damper stays that hold the back door in place.

Observe the following precautions. Failure to do so may cause damage to the back door damper stay, resulting in malfunction.

 Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the damper stay rod.



- Do not touch the damper stay rod with gloves or other fabric items.
- Do not attach any accessories other than genuine Toyota parts to the back door.


 Do not place your hand on the damper stay or apply lateral forces to it

Smart entry & start system

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. The driver should always carry the electronic key.


- Locks and unlocks the doors (→P.107)
- Locks and unlocks the back door (→P.112)
- Starts the hybrid system (→P.142)

■ Antenna location

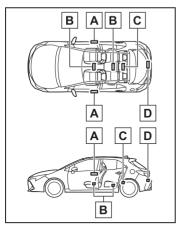

- A Antennas outside the cabin
- **B** Antennas inside the cabin
- C Antenna inside the luggage compartment
- Antenna outside the luggage compartment

■ Effective range (areas within which the electronic key is detected)

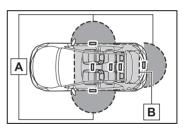

A When locking or unlocking the

The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) of an outside front door handle and back door. (Only the doors detecting the key can be operated.)

B When starting the hybrid system or changing power switch modes

The system can be operated when the electronic kev is inside the vehicle.

■ Alarms and warning messages

A combination of exterior and interior buzzers as well as warning messages shown on the multi-information display are used to prevent theft of the vehicle and accidents resulting from erroneous operation. Take appropriate measures based on the displayed message. (\rightarrow P.331)

When only an alarm sounds, circumstances and correction procedures are as follows

Exterior buzzer sounds once for 5 seconds

Situation	Correction procedure
An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.

Interior buzzer sounds continuously

Situation	Correction procedure
The power switch was turned to ACC while the driver's door was open (or the driver's door was opened while the power switch was in ACC).	Turn the power switch off and close the driver's door.
The power switch was turned to off while the driver's door was open.	Close the driver's door

■ Battery-saving function

The battery-saving function will be activated in order to prevent the electronic key battery and the 12-volt battery from being discharged while the vehicle is not operated for a long time.

- In the following situations, the smart entry & start system may take some time to unlock the doors.
- The electronic key has been left within approximately 3.5 m (11 ft.) of the outside of the vehicle for 2 minutes or longer.
- The smart entry & start system has not been used for 5 days or longer.
- If the smart entry & start system has not been used for 14 days or longer, the doors cannot be unlocked from any door except the driver's door. In this case, hold the driver's door handle, or use the wireless remote control or mechanical key to unlock the doors.

■ Electronic key battery-saving function

 When battery-saving mode is set, battery depletion is minimized by stopping the electronic key from receiving radio waves.

Press twice while pressing and

holding . Confirm that the electronic key indicator flashes 4 times.

While the battery-saving mode is set, the smart entry & start system cannot be used. To cancel the function, press any of the electronic key buttons.



 Electronic keys that will not be used for long periods of time can be set to the battery-saving mode in advance.

■ Conditions affecting operation

The smart entry & start system uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart entry & start system, wireless remote control and immobilizer system from operating properly.

- When the electronic key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication device
- When the electronic key is in contact with, or is covered by the following metallic objects
- Cards to which aluminum foil is attached
- Cigarette boxes that have aluminum foil inside
- Metallic wallets or bags
- Coins
- · Hand warmers made of metal
- Media such as CDs and DVDs.
- When other wireless keys (that emit radio waves) are being used nearby
- When carrying the electronic key

- together with the following devices that emit radio waves
- Another vehicle's electronic key or a wireless key that emits radio waves
- Personal computers or personal digital assistants (PDAs)
- Digital audio players
- · Portable game systems
- If window tint with a metallic content or metallic objects are attached to the rear window
- When the electronic key is placed near a battery charger or electronic devices
- When the vehicle is parked in a pay parking spot where radio waves are emitted

If the doors cannot be locked/unlocked using the smart entry & start system, lock/unlock the doors by performing any of the following:

- Bring the electronic key close to either front door handle and operate the entry function.
- Operate the wireless remote control.

If the doors cannot be locked/unlocked using the above methods, use the mechanical key. (→P.356)

If the hybrid system cannot be started using the smart entry & start system, refer to P.357.

■ Note for the entry function

- Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases:
- The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
- The electronic key is on the instrument panel, luggage cover or floor, or in the door pockets or glove box when the hybrid system is started or power switch modes are changed.
- Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle.

- Depending on the radio wave reception conditions, it may be detected by the antenna outside the cabin and the door will become lockable from the outside, possibly trapping the electronic key inside the vehicle.
- As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone. However, only the doors detecting the electronic key can be used to unlock the vehicle.
- Even if the electronic key is not inside the vehicle, it may be possible to start the hybrid system if the electronic key is near the window.
- The doors may unlock or lock if a large amount of water splashes on the door handle, such as in the rain or in a car wash when the electronic key is within the effective range. (The doors will automatically be locked after approximately 30 seconds if the doors are not opened and closed.)
- If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)
- Touching the door lock or unlock sensor while wearing gloves may prevent lock or unlock operation.
- When the lock operation is performed using the lock sensor, recognition signals will be shown up to two consecutive times. After this, no recognition signals will be given.
- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:
- Place the electronic key in a location 2 m (6 ft.) or more away from the vehicle. (Take care to ensure that the key is not stolen.)
- · Set the electronic key to battery-sav-

- ing mode to disable the smart entry & start system. (\rightarrow P.115)
- If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.
- The lock sensor may not work properly if it comes into contact with ice, snow, mud, etc. Clean the lock sensor and attempt to operate it again.
- A sudden handle operation or a handle operation immediately after entering the effective range may prevent the doors from being unlocked. Touch the door unlock sensor and check that the doors are unlocked before pulling the door handle again.
- If there is another electronic key in the detection area, it may take slightly longer to unlock the doors after the door handle is gripped.
- When the vehicle is not driven for extended periods
- To prevent theft of the vehicle, do not leave the electronic key within 2 m (6 ft.) of the vehicle.
- The smart entry & start system can be deactivated in advance. (→P.376)
- Setting the electronic key to battery-saving mode helps to reduce key battery depletion. (→P.115)
- To operate the system properly

Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.

Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention function may not operate.)

- If the smart entry & start system does not operate properly
- Locking and unlocking the doors: →P.356
- Starting the hybrid system: →P.357
- Customization

Some functions can be customized. $(\rightarrow P.376)$

- If the smart entry & start system has been deactivated in a customized setting
- Locking and unlocking the doors: Use the wireless remote control or mechanical key. (→P.107, 356)
- Starting the hybrid system and changing power switch modes: →P.357
- Stopping the hybrid system: →P.143



WARNING

■ Caution regarding interference with electronic devices

People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the smart entry & start system antennas. (→P.114) The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask your Toyota dealer for details, such as the frequency of radio waves and timing of the emitted radio waves. Then, consult your doctor to see if you should disable the entry function.




Users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

Ask your Toyota dealer for details on disabling the entry function.

Front seats


Adjustment procedure

Manual seat

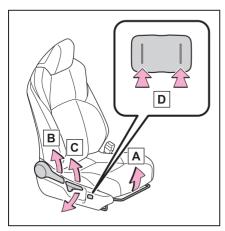

- A Seat position adjustment lever
- **B** Seatback angle adjustment lever
- C Vertical height adjustment lever (driver's side only)
- **D** Lumbar support adjustment switch* (driver's side only)
- *: If equipped

► Power seat (driver's side only)

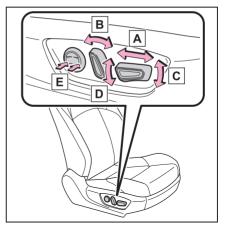

- A Seat position adjustment switch
- B Seatback angle adjustment switch
- © Seat cushion (front) angle adjustment switch
- D Vertical height adjustment switch
- E Lumbar support adjustment switch

A

WARNING

■When adjusting the seat position

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid injury.
 - Fingers or hands may become jammed in the seat mechanism.
- Make sure to leave enough space around the feet so they do not get stuck.

Seat adjustment

- Be careful that the seat does not hit. passengers or luggage.
- To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than neces-

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident

Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

Manual seat only: After adjusting the seat, make sure that the seat is locked in position.



NOTICE

When adjusting a front seat


When adjusting a front seat, make sure that the head restraint does not contact the headliner. Otherwise, the head restraint and headliner may be damaged.

Rear seats

The seathacks of the rear seats can be folded down


Folding down the rear seatbacks

- Move the front seats forward (→P.119)
- 2 Stow the rear armrest. $(\rightarrow P.277)$
- 3 Stow the rear center seat belt. buckle

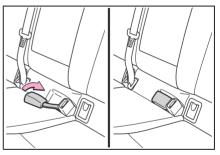

- Lower the head restraints to the lowest position. (→P.122)
- 5 Pull the seatback lock release lever and fold the seatback down

Each seatback may be folded separately.

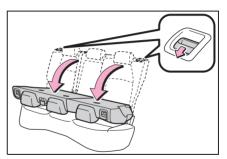

Observe the following precautions. Failure to do so may result in death or serious injury.

- When folding the rear seatbacks down
- Do not fold the seatbacks down. while driving.
- Stop the vehicle on level ground, set the parking brake and shift the shift lever to P
- Do not allow anyone to sit on a folded seatback or in the luggage compartment while driving.
- Do not allow children to enter the luggage compartment.
- Do not allow anyone to sit on the rear center seat if the rear right seat is folded down, as the seat belt buckle for the rear center seat belt. is then concealed under the folded. seat and cannot be used.
- Be careful not to get your hand caught when folding the rear seathacks
- Adjust the position of the front seats before folding down the rear seatbacks so that the front seats do not interfere with the rear seatbacks. when folding down the rear seatbacks.

After returning the rear seatback to the upright position


Make sure that the seatback is securely locked in position by lightly pushing it back and forth.

If the seatback is not securely locked. the red marking will be visible on the seatback lock release lever. Make sure that the red marking is not visible



Check that the seat belts are not twisted or caught in the seatback.

If the seat belt gets caught between the seatback's securing hook and latch, it may damage the seat belt.

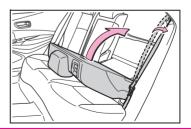

Head restraints

Head restraints are provided for all seats.

A

WARNING


Head restraint precautions

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.

Adjusting a head restraint

■ Front seats

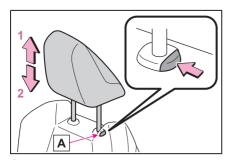


1 Up

Pull the head restraints up.

2 Down

Push the head restraint down while pressing the lock release button **A**.

■ Rear outside seats

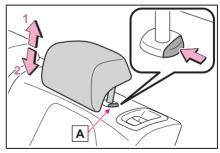


1 Ur

Pull the head restraints up.

2 Down

Push the head restraint down while pressing the lock release button **A**.

■ Rear center seat

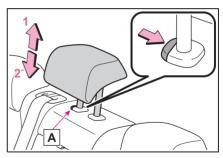

1 Ur


Pull the head restraint up.

2 Down

Push the head restraint down while pressing the lock release button **A**.

■ Adjusting the height of the head restraints (front seats)

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

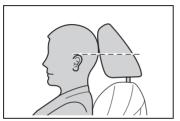


■ Adjusting the rear seat head restraints

Always raise the head restraint one level from the stowed position when using.

Removing the head restraints


■ Front and rear outside seats

Pull the head restraint up while pressing the lock release button **A**.

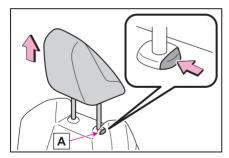

■ Rear center seat

Pull the head restraint up while pressing the lock release button **A**.

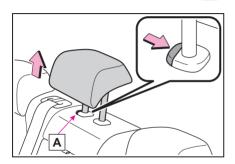


Installing the head restraints

■ Front and rear outside seats

Align the head restraint with the installation holes and push it down to the lock position.

Press and hold the lock release button

A when lowering the head restraint.

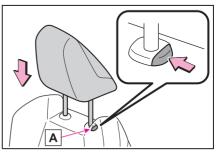


■ Rear center seat

Align the head restraint with the installation holes and push it down to the lock position.

Press and hold the lock release button


A when lowering the head restraint.

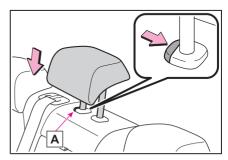

Steering wheel


Adjustment procedure

1 Hold the steering wheel and push the lever down.

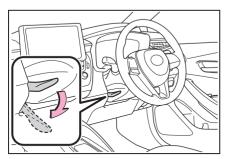

Adjust to the ideal position by moving the steering wheel horizontally and vertically.

After adjustment, pull the lever up to secure the steering wheel.

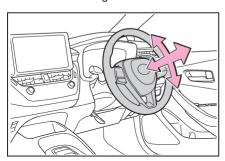

A

WARNING

Caution while driving

Do not adjust the steering wheel while driving.

Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.


After adjusting the steering wheel

Make sure that the steering wheel is securely locked.

Otherwise, the steering wheel may move suddenly, possibly causing an accident, and resulting in death or serious injury. Also, the horn may not sound if the steering wheel is not securely locked.

Horn

To sound the horn, press on or close to the mark.

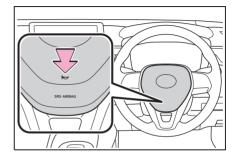


Inside rear view mirror

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view

Adjusting the height of rear view mirror

The height of the rear view mirror can be adjusted to suit your driving posture.

Adjust the height of the rear view mirror by moving it up and down.

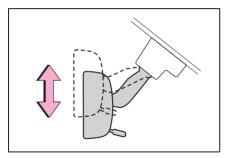

A

WARNING

Caution while driving


Do not adjust the position of the mirror while driving.

Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.

Anti-glare function

Manual anti-glare inside rear view mirror

Reflected light from the headlights of vehicles behind can be reduced by operating the lever.

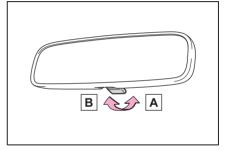

- A Normal position
- **B** Anti-glare position
- Auto anti-glare inside rear view mirror


Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.

Changing automatic anti-glare function mode

On/off


When the automatic anti-glare function is in ON mode, the indicator A illuminates. The function will set to ON mode each time the power switch is turned to ON

Pressing the button turns the function to off mode. (The indicator A also turns off.)

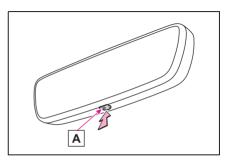

■ To prevent sensor error (vehicles with an auto anti-glare inside rear view mirror)

To ensure that the sensors operate properly, do not touch or cover them.

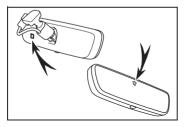

Outside rear view mir-

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.

■ When using the outside rear view mirrors in a cold weather

When it is cold and the outside rear view mirrors are frozen, it may not be possible to fold/extend them or adjust the mirror surface. Remove the ice, snow, etc. covering the outside rear view mirrors.



WARNING

■ Important points while driving


Observe the following precautions while driving.

Failure to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.


- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

Adjustment procedure

1 To select a mirror to adjust, turn the switch.

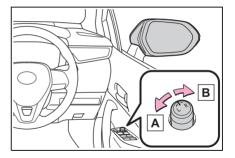

- A Left
- **B** Right
- 2 To adjust the mirror, operate the switch

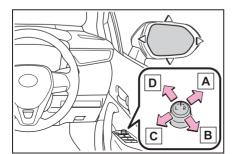

- **A** Right
- **B** Down
- C Left
- **D** Up

■ Mirror angle can be adjusted when

The power switch is in ACC or ON.

■ When the mirrors are fogged up

The outside rear view mirrors can be cleared using the mirror defoggers. Turn on the rear window defogger to turn on the outside rear view mirror defoggers. $(\rightarrow P.257)$




WARNING

When the mirror defoggers are operating

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

Folding and extending the mirrors

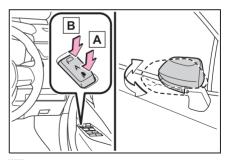

- A Folds the mirrors
- **B** Extends the mirrors

Putting the outside rear view mirror folding switch in the neutral position sets the mirrors to automatic mode. Automatic mode allows the folding or extending of the mirrors to be linked to locking/unlocking of the doors.

■ Using automatic mode in cold weather

When automatic mode is used in cold weather, the door mirror could freeze up and automatic stowing and return may not be possible. In this case, remove any ice and snow from the door mirror, then either operate the mirror using manual mode or move the mirror by hand

Customization

Some functions can be customized. $(\rightarrow P.376)$



WARNING

■ When a mirror is moving


To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

Power windows

Opening and closing the power windows

The power windows can be opened and closed using the switches.

Operating the switch moves the windows as follows:

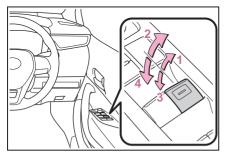

- 1 Closina
- 2 One-touch closing*
- 3 Opening
- 4 One-touch opening*
- *: To stop the window partway, operate the switch in the opposite direction.

■ The power windows can be operated when

The power switch is in ON.

Operating the power windows after turning the hybrid system off

The power windows can be operated for approximately 45 seconds after the power switch is turned to ACC or OFF. They cannot, however, be operated once either front door is opened.

■ Jam protection function

If an object becomes jammed between the window and the window frame while the window is closing, window movement is stopped and the window is opened slightly.

■ Catch protection function

If an object becomes caught between the door and window while the window is opening, window movement is stopped.

When the window cannot be opened or closed

When the jam protection function or catch protection function operates unusually and the door window cannot be opened or closed, perform the following operations with the power window switch of that door

- Stop the vehicle. With the power switch in ON, within 4 seconds of the jam protection function or catch protection function activating, continuously operate the power window switch in the one-touch closing direction or one-touch opening direction so that the door window can be opened and closed.
- If the door window cannot be opened and closed even when performing the above operations, perform the following procedure for function initialization.
- 1 Turn the power switch to ON.
- 2 Pull and hold the power window switch in the one-touch closing direction and completely close the door window.
- 3 Release the power window switch for a moment, resume pulling the switch in the one-touch closing direction, and hold it there for approximately 6 seconds or more.
- 4 Press and hold the power window switch in the one-touch opening direction. After the door window is completely opened, continue holding the switch for an additional 1 second or more.
- 5 Release the power window switch for a moment, resume pushing the switch in the one-touch opening direction, and hold it there for approximately 4 seconds or more.
- 6 Pull and hold the power window switch in the one-touch closing

direction again. After the door window is completely closed, continue holding the switch for a further 1 second or more.

If you release the switch while the window is moving, start again from the beginning.

If the window reverses and cannot be fully closed or opened, have the vehicle inspected by your Toyota dealer.

■ Door lock linked window operation

- The power windows can be opened and closed using the mechanical key.* (→P.356)
- The power windows can be opened and closed using the wireless remote control.* (→P.107)
- *: These settings must be customized at your Toyota dealer.

■ Power windows open warning buzzer

A buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the power switch is turned off and the driver's door is opened with the power windows open.

■ Customization

Some functions can be customized. $(\rightarrow P.376)$



WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

Closing the windows

- The driver is responsible for all the power window operations, including the operation for the passengers. In order to prevent accidental operation, especially by a child, do not let a child operate the power windows. It is possible for children and other passengers to have body parts caught in the power window. Also, when riding with a child, it is recommended to use the window lock switch. (→P.130)
- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.



- When using the wireless remote control or mechanical key and operating the power windows, operate the power window after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window. Also do not let a child operate window by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the power window.
- When exiting the vehicle, turn the power switch off, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

Jam protection function

- Never use any part of your body to intentionally activate the iam protection function
- The iam protection function may not work if something gets jammed just before the window is fully closed. Be careful not to get any part of vour body iammed in the window.

Catch protection function

- Never use any part of your body or clothing to intentionally activate the catch protection function.
- The catch protection function may not work if something gets caught just before the window is fully opened. Be careful not to get any part of your body or clothing caught in the window


Preventing accidental operation (window lock switch)

This function can be used to prevent children from accidentally opening or closing a passenger window

Press the switch

The indicator A will come on and the passenger windows will be locked.

The passenger windows can still be opened and closed using the driver's switch even if the lock switch is on

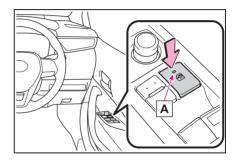

■ The power windows can be operated when

The power switch is in ON.

■ When the 12-volt battery is disconnected

The window lock switch is disabled. If necessary, press the window lock switch after reconnecting the 12-volt battery.

Mv Settings

Drivers are identified using devices such as electronic keys to store the vehicle settings for each. Then the information can be recalled the next time the vehicle is driven

Authentication devices can be assigned in advance to drivers so that they can drive using their preferred settings.

Settings for 3 drivers can be stored in My Settings.

For information on authentication devices registration/deletion, changing the driver's name, initializing driver registered settings, manually switching drivers and deleting drivers registration refer to the "Multimedia Owner's Manual".

Types of assigned authentication devices

An individual can be identified using the following authentication devices.

Electronic key

An individual is identified when the smart entry & start system detects their electronic key. (\rightarrow P.114)

Bluetooth[®] device

An individual is identified when a Bluetooth[®] device is connected to the audio system. For information on how

to connect Bluetooth® devices, refer to the "Multimedia Owner's Manual". When an individual is identified with an electronic key identifying using a Bluetooth® device is not performed. Bluetooth is a registered trademark of Bluetooth SIG. Inc.

Recalled functions

When an individual is identified from an authentication device, settings for the following functions are recalled.

Meter displays and audio system information*

When an individual is identified, the display settings used when the power switch was last turned off are recalled

 Vehicle settings that can be set using the audio system*

When an individual is identified, the vehicle settings used when the power switch was last turned off are recalled.

*: Some settings are excluded

Driving

4-1.	Before driving
	Driving the vehicle134
	Cargo and luggage140
	Trailer towing141
4-2.	Driving procedures
	Power (ignition) switch142
	EV drive mode146
	Hybrid transmission148
	Turn signal lever150
	Parking brake151
	Brake Hold154
4-3.	Operating the lights and wipers
	Headlight switch156
	AHB (Automatic High Beam)
	Fog light switch161
	Windshield wipers and washer162
	Rear window wiper and washer165
4-4.	Refueling
	Opening the fuel tank cap167
4-5.	Using the driving support systems
	Toyota Safety Sense169
	PCS (Pre-Collision System)
	LTA (Lane Tracing Assist)
	LDA (Lane Departure Alert)
	190

	Dynamic radar cruise control
	Cruise control204 Emergency Driving Stop Sys-
	tem206
	RSA (Road Sign Assist)209 BSM (Blind Spot Monitor)211
	Toyota parking assist-sensor
	RCTA (Rear Cross Traffic Alert) function221
	PKSB (Parking Support Brake)
	Parking Support Brake function (static objects)233
	Parking Support Brake function (rear-crossing vehicles)236
	Safe Exit Assist238
	Driving mode select switch
	Driving assist systems243
4-6.	Driving tips
	Hybrid vehicle driving tips
	Winter driving tips250

Driving the vehicle

The following procedures should be observed to ensure safe driving:

Driving procedure

■ Starting the hybrid system
→P 142

Driving

- With the brake pedal depressed, shift the shift lever to D. (→P.148)
- 2 Release the parking brake. (→P.151)

If the parking brake is in automatic mode, the parking brake will be released automatically. (→P.151)

3 Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle

■ Stopping

- 1 With the shift lever in D, depress the brake pedal.
- 2 If necessary, set the parking brake. (→P.151)

If the vehicle is to be stopped for an extended period of time, shift the shift lever to P. $(\rightarrow P.148)$

■ Parking the vehicle

With the shift lever in D, depress the brake pedal to stop the vehicle completely. 2 Set the parking brake (→P.151), and shift the shift lever to P. (→P.148)

Make sure the parking brake indicator light is on.

- **3** Press the power switch to stop the hybrid system.
- 4 Slowly release the brake pedal.
- 5 Lock the door, making sure that you have the electronic key on your person.

If parking on a hill, block the wheels as needed.

■ Starting off on a steep uphill

- Make sure that the parking brake is set and shift the shift lever to D.
- **2** Gently depress the accelerator pedal.
- 3 Release the parking brake.

■ For fuel-efficient driving

Keep in mind that hybrid vehicles are similar to conventional vehicles, and it is necessary to refrain from activities such as sudden acceleration. (→P.248)

■ Driving in the rain

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

Restraining the hybrid system output (Brake Override System)

- When the accelerator and brake pedals are depressed at the same time, the hybrid system output may be restrained
- A warning message is displayed on the multi-information display while the system is operating.

■ ECO Accelerator Guidance (→P.83, 91)

Eco-friendly driving may be achieved more easily by staying within the zone of Eco acceleration. Also, by staying within the zone of Eco acceleration, it will be easier to obtain a good Eco score.

When starting off:

Gradually depress the accelerator pedal to stay within the zone of Eco acceleration and accelerate to the desired speed. By refraining from excessive acceleration, a good eco start score will be obtained.

When driving:

After accelerating to the desired speed, release the accelerator pedal and drive at a stable speed while staying within the zone of Eco acceleration. By staying within the zone of Eco acceleration, a good eco cruise score will be obtained.

When stopping:

By starting to release the accelerator pedal early before decelerating, a good eco stop score will be obtained.

■ Breaking in your new Toyota

To extend the life of the vehicle, observing the following precautions is recommended:

- For the first 300 km (186 miles):
- Avoid sudden stops.
- For the first 800 km (500 miles):

Do not tow a trailer.

- For the first 1000 km (621 miles):
- Do not drive at extremely high speeds.
- · Avoid sudden acceleration.

 Do not drive at a constant speed for extended periods.

Operating your vehicle in a foreign country

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (\rightarrow P.369)



WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

When starting the vehicle

Always keep your foot on the brake pedal while stopped with the "READY" indicator is illuminated. This prevents the vehicle from creeping.

When driving the vehicle

- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.
- Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident.
- When backing up, you may twist your body around, leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
- Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
- Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.

- The driver should pay extra attention to pedestrians when the vehicle is powered only by the electric motor (traction motor). As there is no engine noise, the pedestrians may misjudge the vehicle's movement
- Do not drive the vehicle over or stop the vehicle near flammable materials The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.
- During normal driving, do not turn off the hybrid system. Turning the hybrid system off while driving will not cause loss of steering or braking control, however, power assist to the steering will be lost. This will make it more difficult to steer smoothly, so you should pull over and stop the vehicle as soon as it is safe to do so In the event of an emergency, such as if it becomes impossible to stop the vehicle in the normal way:
- Use engine braking (shift position) B) to maintain a safe speed when driving down a steep hill. Using the brakes continuously may cause the brakes to overheat and lose effectiveness. (→P.148)

→P316

- Do not adjust the positions of the steering wheel, the seat, or the inside or outside rear view mirrors while driving. Doing so may result in a loss of vehicle control.
- Always check that all passengers' arms, heads or other parts of their body are not outside the vehicle.

When driving on slippery road surfaces

- Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle
- Sudden acceleration, engine braking due to shifting, or changes in engine speed could cause the vehicle to skid
- After driving through a puddle. lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected.

When shifting the shift lever

- Do not let the vehicle roll backward. while a forward driving position is selected, or roll forward while the shift lever is in R. Doing so may result in an accident or damage to the vehicle.
- Do not shift the shift lever to P while. the vehicle is moving. Doing so can damage the transmission and may result in a loss of vehicle control
- Do not shift the shift lever to R while. the vehicle is moving forward. Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to a driving position while the vehicle is moving backward. Doing so can damage the transmission and may result in a loss of vehicle control.

- Moving the shift lever to N while the vehicle is moving will disengage the hvbrid system. Engine braking is not available with the hybrid system disengaged.
- Be careful not to shift the shift lever. with the accelerator nedal depressed. Shifting the shift lever to any positions other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.
- If you hear a squealing or scraping noise (brake pad wear indicators)

Have the brake pads checked and replaced by your Toyota dealer as soon as possible.

Rotor damage may result if the pads are not replaced when needed.

It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

When the vehicle is stopped

- Do not depress the accelerator pedal unnecessarily. If the shift lever is any position other than P or N. the vehicle may accelerate suddenly and unexpectedly, causing an accident.
- In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while stopped with the "READY" indicator is illuminated, and apply the parking brake as necessary.

- If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed
- Avoid revving or racing the engine. Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat which could result in a fire if combustible material is nearby.

When the vehicle is parked

- Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the
 - Doing so may result in the following:
- · Gas may leak from a cigarette lighter or spray can, and may lead to a fire
- The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
- · Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.
- Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.
- Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehicle.

№ WARNING

- Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.
- Always apply the parking brake. shift the shift lever to P. stop the hybrid system and lock the vehicle. Do not leave the vehicle unattended while the hybrid system is operating.

If the vehicle is parked with the shift lever in P but the parking brake is not set, the vehicle may start to move, possibly leading to an accident.

- Do not touch the exhaust pipes while the "READY" indicator is illuminated or immediately after turning the hybrid system off. Doing so may cause burns.
- When taking a nap in the vehicle

Always turn the hybrid system off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to hybrid system overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

When braking

When the brakes are wet, drive more cautiously. Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also, the parking brake may not securely hold the vehicle.

- If the electronically controlled brake system does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require
 - In this case, braking is still possible. but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase. Have your brakes fixed immediately.
- The brake system consists of 2 or more individual hydraulic systems; if one of the systems fails, the other(s) will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase. Have your brakes fixed immediately.

If the vehicle becomes stuck

Do not spin the wheels excessively when a driven wheel is up in the air. or the vehicle is stuck in sand, mud. etc. This may damage the driveline components or propel the vehicle forward or backward, causing an accident



NOTICE

When driving the vehicle

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain the hybrid system output.
- Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill

When parking the vehicle

Always set the parking brake and shift the shift lever to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

NOTICE

Avoiding damage to vehicle parts

- Do not turn the steering wheel fully in either direction and hold it there for an extended period of time.
 Doing so may damage the power steering motor.
- When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.

If you get a flat tire while driving

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

- It may be difficult to control your vehicle.
- The vehicle will make abnormal sounds or vibrations.
- The vehicle will lean abnormally.

Information on what to do in case of a flat tire (→P.335.346)

When encountering flooded roads

Do not drive on a road that has flooded after heavy rain etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle becomes flooded or stuck in mud or sand, be sure to have your Toyota dealer check the following:

Brake function

- Changes in quantity and quality of oil and fluid used for the engine, hybrid transmission, differential, etc.
- Lubricant condition for the bearings and suspension joints (where possible), and the function of all joints, bearings, etc.

Sudden start restraint control (Drive-Start Control [DSC])

When the following unusual operation is performed with the accelerator pedal depressed, the hybrid system output may be restrained.

- When the shift lever is shifted to R*
- When the shift lever is shifted from P or R to forward drive shift position such as D*.

When the system operates, a message appears on the multi-information display. Read the message and follow the instruction.

*: Depending on the situation, the shift position may not be changed.

■ Drive-Start Control (DSC)

When the TRC is turned off (→P.244), sudden start restraint control also does not operate. If your vehicle have trouble escaping from the mud or fresh snow due to sudden start restraint control operation, deactivate TRC (→P.244) so that the vehicle may become able to escape from the mud or fresh snow.

Cargo and luggage

Take notice of the following information about storage precautions, cargo capacity and load:

WARNING

■ Things that must not be carried in the luggage compartment

The following things may cause a fire if loaded in the luggage compartment:

- Receptacles containing gasoline
- Aerosol cans

Storage precautions


Observe the following precautions. Failure to do so may prevent the pedals from being depressed properly, may block the driver's vision, or may result in items hitting the driver or passengers, possibly causing an accident.

- Stow cargo and luggage in the luggage compartment whenever possible
- Do not place cargo or luggage in or on the following locations.
- · At the feet of the driver
- On the front passenger or rear seats (when stacking items)
- · On the luggage cover
- On the instrument panel
- · On the dashboard
- Secure all items in the occupant compartment.
- Load and distribution
- Do not overload your vehicle.

Do not apply loads unevenly. Improper loading may cause deterioration of steering or braking control which may cause death or serious injury.

Trailer towing

Toyota does not recommend towing a trailer with your vehicle. Toyota also does not recommend the installation of a tow hitch or the use of a tow hitch carrier for a wheelchair, scooter, bicycle, etc. Your vehicle is not designed for trailer towing or for the use of tow hitch mounted carriers.

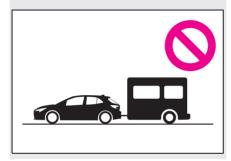

Power (ignition) switch

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes power switch modes.

Starting the hybrid system

Pull the parking brake switch to check that the parking brake is set. (→P.151)

The parking brake indicator will come on.


- 2 Check that the shift lever is set in P.
- 3 Firmly depress the brake pedal.
- and a message will be displayed on the multi-information display. If it is not displayed, the hybrid system cannot be started
- **4** Press the power switch shortly and firmly.

When operating the power switch, one short, firm press is enough. It is not necessary to press and hold the switch. If the "READY" indicator turns on, the hybrid system will operate normally. Continue depressing the brake pedal until the "READY" indicator is illumi-

The hybrid system can be started from

nated.

any power switch mode.

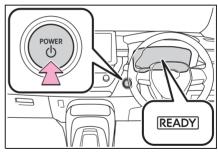

5 Check that the "READY" indicator is illuminated.

The vehicle cannot be driven if the "READY" indicator is off.

■ Power switch illumination

According to the situation, the power switch illumination operates as follows:

- When a door is opened, or the power switch mode is changed from ACC or ON to off, the power switch illumination comes on
- When depressing the brake pedal with carrying the electronic key on your person, the power switch illumination blinks
- When the power switch mode is in ACC or ON, the power switch illumination is constantly illuminated.

■ If the hybrid system does not start

- The immobilizer system may not have been deactivated. (→P.64) Contact your Toyota dealer.
- If a message related to start-up is shown on the multi-information display, read the message and follow the instructions.
- When the ambient temperature is low, such as during winter driving conditions
- When starting the hybrid system, the flashing time of the "READY" indicator may be long. Leave the vehicle as it is until the "READY" indicator is steady on, as steady means the vehicle is

able to move

- When the hybrid battery (traction battery) is extremely cold (below approximately -30°C [-22°F]) under the influence of the outside temperature, it may not be possible to start the hybrid system. In this case, try to start the hybrid system again after the temperature of the hybrid battery increases due to the outside temperature increase etc.
- Sounds and vibrations specific to a hybrid vehicle

→P.58

■ If the 12-volt battery is discharged

The hybrid system cannot be started using the smart entry & start system. Refer to P.358to restart the hybrid system.

- Electronic key battery depletion
- →P.104
- Conditions affecting operation
- →P.115
- Notes for the entry function

→P 116

■ If the "READY" indicator does not come on

In the event that the "READY" indicator does not come on even after performing the proper procedures for starting the vehicle, contact your Toyota dealer immediately.

- If the hybrid system is malfunctioning
- →P.62
- Electronic key battery
- →P.307

■ Operation of the power switch

- If the switch is not pressed shortly and firmly, the power switch mode may not change or the hybrid system may not start.
- If attempting to restart the hybrid system immediately after turning the power switch off, the hybrid system

may not start in some cases. After turning the power switch off, please wait a few seconds before restarting the hybrid system.

■ Customization

If the smart entry & start system has been deactivated in a customized setting, refer to P.356.



WARNING

■When starting the hybrid system

Always start the hybrid system while sitting in the driver's seat. Do not depress the accelerator pedal while starting the hybrid system under any circumstances.

Doing so may cause an accident resulting in death or serious injury.



NOTICE

■When starting the hybrid system

If the hybrid system becomes difficult to start, have your vehicle checked by your Toyota dealer immediately.

Symptoms indicating a malfunction with the power switch

If the power switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact your Toyota dealer immediately.

Stopping the hybrid system

- 1 Stop the vehicle completely.
- 2 Set the parking brake (→P.151), and shift the shift lever to P.

Check the parking brake indicator is illuminated.

3 Press the power switch shortly and firmly.

The hybrid system will stop, and the meter display will be extinguished.

4 Release the brake pedal and check that "ACCESSORY" or "IGNITION ON" is not shown on the multi-information display.

A


WARNING

Stopping the hybrid system in an emergency

- If you want to stop the hybrid system in an emergency while driving the vehicle, press and hold the power switch for more than 2 seconds, or press it briefly 3 times or more in succession. (\rightarrow P.316) However, do not touch the power switch while driving except in an emergency. Turning the hybrid system off while driving will not cause loss of steering or braking control. however, power assist to the steering will be lost. This will make it more difficult to steer smoothly, so you should pull over and stop the vehicle as soon as it is safe to do SO
- If the power switch is operated while the vehicle is running, a warning message will be shown on the multi-information display and a buzzer sounds.
- To restart the hybrid system after performing an emergency shutdown, shift the shift lever to N and then press the power switch.

Changing power switch modes

Modes can be changed by pressing the power switch with brake pedal released. (The mode changes each time the switch is pressed.)

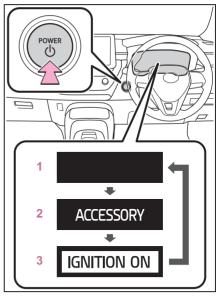

1 OFF*1

The emergency flashers can be used.

2 ACC*2

Some electrical components such as the audio system can be used.

"ACCESSORY" will be displayed on the multi-information display.

3 ON

All electrical components can be used. "IGNITION ON" will be displayed on the multi-information display.

- *1: If the shift lever is in a position other than P when turning off the hybrid system, the power switch will be turned to ACC, not to off.
- *2: ACC mode can be enabled/disabled on the customize menu. (→P.376)

■ Auto power off function

If the vehicle is left in ACC or ON (the hybrid system is not operating) for more than 20 minutes with the shift lever in P, the power switch will automatically turn off.

Also, if the remaining 12-volt battery is low with the shift lever in P and the power switch in ACC or ON (hybrid system is not operating), a buzzer sounds and a message is displayed in the multi-information display. If left in this state, the power switch automatically turns to off

However, this function cannot entirely prevent 12-volt battery discharge. Do not leave the vehicle with the power switch in ACC or ON for long periods of time when the hybrid system is not operating.

■ When ACC customization is in off

With the power switch is turned off, the multimedia system can still be used for a certain time until the battery saving function starts operating.



NOTICE

- To prevent 12-volt battery discharge
- Do not leave the power switch in ACC or ON for long periods of time without the hybrid system on.
- If "ACCESSORY" or "IGNITION ON" is displayed on the multi-information display, the power switch is not off. Exit the vehicle after turning the power switch off.

When stopping the hybrid system with the shift lever in a position other than P

If the hybrid system is stopped with the shift lever in a position other than P, the power switch will not be turned off. Perform the following procedure to turn the switch off:

- Check that the parking brake is set.
- 2 Shift the shift lever to P.

- 3 Check that "IGNITION ON" is displayed on the multi-information display and press the power switch shortly and firmly.
- 4 Check that "ACCESSORY" or "IGNITION ON" on the multi-information display are off.



NOTICE

■ To prevent 12-volt battery discharge

Do not stop the hybrid system when the shift lever is in a position other than P. If the hybrid system is stopped in another shift lever position, the power switch will not be turned off and remained to ON. If the vehicle is left in ON, battery discharge may occur.

EV drive mode


In EV drive mode, electric power is supplied by the hybrid battery (traction battery), and only the electric motor (traction motor) is used to drive the vehicle.

This mode allows you to drive in residential areas early in the morning and late at night, or in indoor parking lots etc. without concern for noises and gas emissions

Operating instructions

Turns EV drive mode on/off

When EV drive mode is turned on, the EV drive mode indicator will come on. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

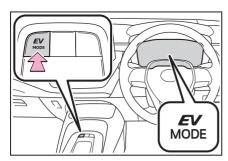

■ Situations in which EV drive mode cannot be turned on

It may not be possible to turn EV drive mode on in the following situations. If it cannot be turned on, a buzzer will sound and a message will be shown on the multi-information display.

- The temperature of the hybrid system is high.
 - The vehicle has been left in the sun, driven on a hill, driven at high speeds, etc.
- The temperature of the hybrid system is low.
 - The vehicle has been left for a long period of time etc.
- The gasoline engine is warming up.
- The hybrid battery (traction battery) is low.

The remaining battery level indicated in the energy monitor display is low. $(\rightarrow P.100)$

- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.
- The windshield defogger is in use.

Switching to EV drive mode when the gasoline engine is cold

After the hybrid system has started and the "READY" indicator has illuminated, press the EV drive mode switch before the gasoline engine starts to switch to EV drive mode.

However, depending on vehicle conditions, EV drive mode may be canceled and normal driving (using the gasoline engine and electric motor [traction motor]) may be resumed.

■ Automatic cancelation of EV drive mode

When driving in EV drive mode, the gasoline engine may start automatically and the vehicle may be driven by the gasoline engine and electric motor (traction motor) in the following situations. When EV drive mode is canceled, a buzzer will sound, the EV drive mode indicator will flash, and a message will be displayed on the multi-information display.

- The hybrid battery (traction battery) becomes low.
 - The remaining battery level indicated in the energy monitor display is low. $(\rightarrow P.100)$
- Vehicle speed is high.

The accelerator pedal is depressed firmly or the vehicle is on a hill etc.

■ Possible driving distance when driving in EV drive mode

EV drive mode's possible driving distance ranges from a few hundred meters to approximately 1 km (0.6 mile). However, depending on vehicle conditions, there are situations when EV drive mode cannot be used.

(The distance that is possible depends on the hybrid battery [traction battery] level and driving conditions.)

■ Fuel economy

The hybrid system is designed to achieve the best possible fuel economy during normal driving (using the gasoline engine and electric motor [traction motor]). Driving in EV drive mode more than necessary may lower fuel economy.

■ If "EV Mode Unavailable" is shown on the multi-information display

The EV drive mode is not available. The reason the EV drive mode is not available (the vehicle is idling, battery charge is low, vehicle speed is higher than the EV drive mode operating speed range or accelerator pedal is depressed too much) may be displayed. Use the EV drive mode when it becomes available.

■ If "EV Mode Deactivated" is shown on the multi-information display

The EV drive mode has been automatically canceled. The reason the EV drive mode is not available (the battery charge is low, vehicle speed is higher than the EV drive mode operating speed range or accelerator pedal is depressed too much) may be displayed. Drive the vehicle for a while before attempting to turn on the EV drive mode again.



WARNING

■ Caution while driving

When driving in EV drive mode, pay special attention to the area around the vehicle. Because there is no engine noise, pedestrians, people riding bicycles or other people and vehicles in the area may not be aware of the vehicle starting off or approaching them, so take extra care while driving.

Hybrid transmission

Select the shift position depending on your purpose and situation.

Shift position purpose and functions

Shift posi- tion	Objective or function
Р	Parking the vehicle/start- ing the hybrid system
R	Reversing
N	Neutral (Condition in which the power is not transmitted)
D	Normal driving*
В	Applying moderate engine braking driving down hills

^{*:} To improve fuel efficiency and reduce noise, shift the shift lever to D for normal driving.

Restraining sudden start (Drive-Start Control)

→P.139



WARNING

When driving on slippery road surfaces

Do not accelerate or shift gears suddenly.

Sudden changes in engine braking may cause the vehicle to spin or skid, resulting in an accident.




NOTICE

■ Hybrid battery (traction battery) charge

If the shift lever is in N, the hybrid battery (traction battery) will not be charged even when the engine is running. Therefore, if the vehicle is left with the shift lever in N for a long period of time, the hybrid battery (traction battery) will discharge, and this may result in the vehicle not being able to start.

Shifting the shift lever

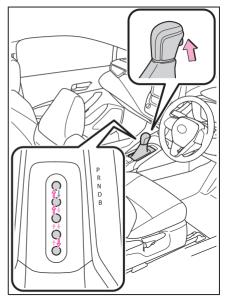

While the power switch is in ON, depress the brake pedal and while pressing the button move the shift lever.

While the power switch is in ON and the brake pedal depressed*, shift the shift lever while pushing the shift release button on the shift knob.

:Shift the shift lever while pushing the shift release button on the shift knob.

:Shift the shift lever normally.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

*: For the vehicle be able to be shifted from P, the brake pedal must be depressed before the shift release button is pushed. If the shift release button is pushed first, the shift lock will not be released

■ Shift lock system

The shift lock system is a system to prevent accidental operation of the shift lever in starting.

The shift lever can be shifted from P only when the power switch is in ON and the brake pedal is being depressed.

If the shift lever cannot be shifted from P

First, check whether the brake pedal is being depressed.


If the shift lever cannot be shifted with your foot on the brake pedal, there may be a problem with the shift lock system. Have the vehicle inspected by your Toyota dealer immediately.

The following steps may be used as an emergency measure to ensure that the shift lever can be shifted.

Releasing the shift lock:


- Set the parking brake.
- 2 Turn the power switch off.
- 3 Depress the brake pedal.
- 4 Ply the cover up with a flathead screwdriver or equivalent tool. To prevent damaging the cover,

wrap the tip of the flathead screwdriver with a tape.

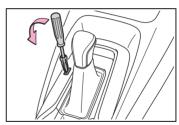

5 Press and hold the shift lock override button and then push the button on the shift knob.

The shift lever can be shifted while the button is pressed.

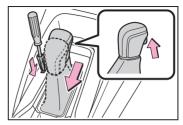

■ About engine braking

When shift position B is selected, releasing the accelerator pedal will apply engine braking.

- When the vehicle is driven at high speeds, compared to ordinary gasoline-fueled vehicles, the engine braking deceleration is felt less than that of other vehicles.
- The vehicle can be accelerated even when shift position B is selected.

If the vehicle is driven continuously in the B position, fuel efficiency will become low. Usually, select the D position.

A

WARNING

■ To prevent an accident when releasing the shift lock


Before pressing the shift lock override button, make sure to set the parking brake and depress the brake pedal. If the accelerator pedal is accidentally depressed instead of the brake pedal when the shift lock override button is pressed and the shift lever is shifted out of P, the vehicle may suddenly start, possibly leading to an accident resulting in death or serious injury.

Selecting the driving mode

→P.242

Turn signal lever

Operating instructions

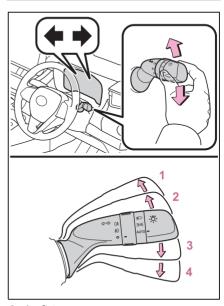

- Left turn
- 2 Lane change to the left (move the lever partway and release it)

The left hand signals will flash 3 times.

3 Lane change to the right (move the lever partway and release it)

The right hand signals will flash 3 times.

- 4 Right turn
- Turn signals can be operated when

The power switch is in ON.

■ If the indicator flashes faster than usual

Check that a light bulb in the front or rear turn signal lights has not burned out.

Customization

Some functions can be customized. $(\rightarrow P.376)$

Parking brake

The parking brake can be set or released automatically or manually.


In automatic mode, the parking brake can be set or released automatically according to shift lever operation.

Also, even in automatic mode, the parking brake can be set or released manually.

Operating instructions

■ Using the manual mode

The parking brake can be set and released manually.

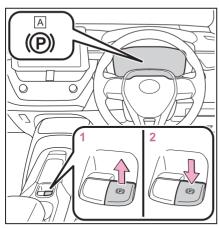

- A Parking brake indicator light
- 1 Pull the switch to set the parking brake.

The parking brake indicator light will turn on.

Pull and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving.

- Press the switch to release the parking brake.
- Operate the parking brake switch while depressing the brake pedal.
- Using the parking brake automatic release function, the parking brake can be released by depressing the accelerator pedal. When using this function, slowly depress the accelerator pedal. (

 P.152)

Make sure that the parking brake indicator light turn off.

If the parking brake indicator light flash, operate the switch again. $(\rightarrow P.330)$

■ Turning the automatic mode on

While the vehicle is stopped, pull and hold the parking brake switch until a buzzer sounds and a message is shown on the multi-information display.

When the automatic mode is turned on, the parking brake operates as follows.

- When the shift lever is shifted from P, the parking brake will be released, and the parking brake indicator light will turn off.
- When the shift lever is shifted to P, the parking brake will be set, and the parking brake indicator light will turn on.

Operate the shift lever with the vehicle stopped and the brake pedal depressed.

The auto function may not operate if the

shift lever is moved extremely quickly. In this situation, apply the parking brake manually. (→P.151)

■ Turning the automatic mode off

While the vehicle is stopped and depressing the brake pedal, press and hold the parking brake switch until a buzzer sounds and a message is shown on the multi-information display.

■ Parking brake operation

- When the power switch is not in ON, the parking brake cannot be released using the parking brake switch.
- When the power switch is not in ON, automatic mode (automatic brake setting and releasing) is not available.

■ Parking brake automatic release function

When all of the following conditions are met, the parking brake can be released by depressing the accelerator pedal.

- The driver's door is closed
- The driver is wearing the seat belt
- The shift lever is in a forward driving position or reverse driving position
- The malfunction indicator lamp or brake system warning light is not illuminated.

When depressing the accelerator pedal, depress it slowly.

If the parking brake is not released when the accelerator pedal is depressed, release the parking brake manually.

When the shift lever is shifted from P, the parking brake will be released automatically.

■ Parking brake automatic lock function

The parking brake will be set automatically under the following conditions:

- The brake pedal is not depressed
- The driver's door is open
- The driver's seat belt is not fastened.
- The shift lever is in a position other than P or N
- The malfunction indicator lamp and brake system warning light are not illuminated

■If "Parking Brake Temporarily Unavailable" is displayed on the multi-information display

If the parking brake is operated repeatedly over a short period of time, the system may restrict operation to prevent overheating. If this happens, refrain from operating the parking brake. Normal operation will return after about 1 minute.

■If "Parking Brake Unavailable" is displayed on the multi-information display

Operate the parking brake switch. If the message does not disappear after operating the switch several times, the system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

■ Parking brake operation sound

When the parking brake operates, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

■ Parking brake indicator light

- Depending on the power switch mode, the parking brake indicator light will turn on and stay on as described below:
 - ON: Comes on until the parking brake is released.
 - Not in ON: Stays on for approximately 15 seconds.
- When the power switch is turned off with the parking brake set, the parking brake indicator light will stay on for about 15 seconds. This does not indicate a malfunction.

■ When the parking brake switch malfunctions

Automatic mode (automatic brake setting and releasing) will be turned on automatically.

- Parking the vehicle
- →P.134
- Parking brake engaged warning buzzer

A buzzer will sound if the vehicle is driven with the parking brake engaged. "Parking Brake ON" is displayed on the multi-information display (with the vehicle reaching a speed of 5 km/h [3 mph]).

- If the brake system warning light comes on
- →P.324
- **■** Usage in winter time
- →P.250



WARNING

■When parking the vehicle

Do not leave a child in the vehicle alone. The parking brake may be released unintentionally by a child and there is the danger of the vehicle moving that may lead to an accident resulting in death or serious injury.

Parking brake switch

Do not set any objects near the parking brake switch.

Objects may interfere with the switch and may lead the parking brake to unexpectedly operate.

Parking brake automatic lock function

Never use the automatic parking brake engagement function in place of normal parking brake operation. This function is designed to reduce the risk of a collision due to the driver forgetting to engage the parking brake. Over-reliance on this function to park the vehicle safely may lead to an accident resulting in death or serious injury.



NOTICE

■When parking the vehicle

Before you leave the vehicle, shift the shift lever to P, set the parking brake and make sure that the vehicle does not move.

■ When the system malfunctions

Stop the vehicle in a safe place and check the warning messages.

■ When the vehicle battery is discharged

The parking brake system cannot be activated. (→P.358)

When the parking brake cannot be released due to a malfunction

Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear

Have the vehicle inspected by your Toyota dealer immediately if this occurs.


Brake Hold

The brake hold system keeps the brake applied when the shift lever is in D, B or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or B to allow smooth start off.

Enabling the system

Turns the brake hold system on

The brake hold standby indicator (green) A comes on. While the system is holding the brake, the brake hold operated indicator (yellow) B comes on.

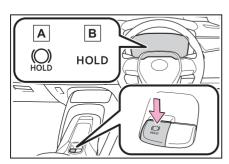

Brake hold system operating conditions

The brake hold system cannot be turned on in the following conditions:

- The driver's door is not closed.
- The driver is not wearing the seat belt.
- The parking brake is engaged.
 If any of the conditions above are detected when the brake hold system is

enabled, the system will turn off and the brake hold standby indicator light will go off. In addition, if any of the conditions are detected while the system is holding the brake, a warning buzzer will sound and a message will be shown on the multi-information display. The parking brake will then be set automatically.

■ Brake hold function

- If the brake pedal is left released for a period of about 3 minutes after the system has started holding the brake, the parking brake will be set automatically. In this case, a warning buzzer sounds and a message is shown on the multi-information display.
- To turn the system off while the system is holding the brake, firmly depress the brake pedal and press the button again.
- The brake hold function may not hold the vehicle when the vehicle is on a steep incline. In this situation, it may be necessary for the driver to apply the brakes. A warning buzzer will sound and the multi-information display will inform the driver of this situation. If a warning message is shown on the multi-information display, read the message and follow the instructions.
- When do not wish for the parking brake to operate automatically, press and hold the brake hold switch until the standby indicator (green) turns off, and then turn the power switch off.
- ■When the parking brake is set automatically while the system is holding the brakes

Perform any of the following operations to release the parking brake:

- Depress the accelerator pedal. (The parking brake will not be released automatically if the seat belt is not fastened.)
- Operate the parking brake switch with the brake pedal depressed.

Make sure that the parking brake indicator light goes off. $(\rightarrow P.151)$

■ When an inspection at your Toyota dealer is necessary

When the brake hold standby indicator (green) does not illuminate even when the brake hold switch is pressed with the brake hold system operating conditions met, the system may be malfunctioning. Have the vehicle inspected at your Toyota dealer.

■ If "Brake Hold Malfunction Press Brake to Deactivate Visit Your Dealer" or "Brake Hold Malfunction Visit Your Dealer" is displayed on the multi-information display

The system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

■ Warning messages and buzzers

Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution. If a warning message is shown on the multi-information display, read the message and follow the instructions.

■ If the brake hold operated indicator flashes

→P 330

A

WARNING

When the vehicle is on a steep incline

Take care when using the brake hold system on a steep incline, exercise caution. The brake hold function may not hold brakes in such situations.

■When stopped on a slippery road

The system cannot stop the vehicle when the gripping ability of the tires has been exceeded. Do not use the system when stopped on a slippery road.

Λ

NOTICE

When parking the vehicle


The brake hold system is not designed for use when parking the vehicle for a long period of time. Turning the power switch off while the system is holding the brake may release the brake, which would cause the vehicle to move. When operating the power switch, depress the brake pedal, shift the shift lever to P and set the parking brake.

Headlight switch

The headlights can be operated manually or automatically.

Operating instructions

Operating the -\overline{\tau}\cdot switch turns on the lights as follows:

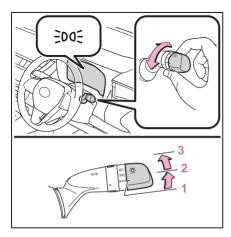

- 1 Auto The headlights, daytime running lights (→P.156) and all the lights listed above turn on and off automatically.
- 2 ⇒ The front position, tail, license plate and instrument panel lights turn on.

■ AUTO mode can be used when


The power switch is in ON.

■ Daytime running light system

To make your vehicle more visible to other drivers during daytime driving, the daytime running lights turn on automatically whenever hybrid system is started and the parking brake is released with

the headlight switch in the AUTO position. (Illuminate brighter than the front position lights.) Daytime running lights are not designed for use at night.

■ Headlight control sensor

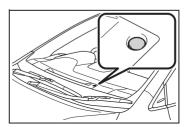

The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield.

Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

■ Automatic light off system

- When the headlights are on: The headlights and tail lights turn off 30 seconds after the driver's door is opened and closed if the power switch is turned to ACC or OFF. (The lights turn off immediately if no the key is pressed after all the doors are closed.)
- When only the tail lights are on: The tail lights turn off automatically if the power switch is turned to ACC or OFF and the driver's door is opened.

To turn the lights on again, turn the power switch to ON, or turn the light

switch off once and then back to ⇒o € or



■ Light reminder buzzer

A buzzer sounds when the power switch is turned to OFF or ACC and the driver's door is opened while the lights are turned on.

■ 12-volt battery-saving function

In order to prevent the 12-volt battery of the vehicle from discharging, if the headlights and/or tail lights are on when the power switch is turned off the 12-volt battery saving function will operate and automatically turn off all the lights after approximately 20 minutes. When the power switch is turned to ON, the 12-volt battery-saving function will be disabled. When any of the following are performed, the 12-volt battery-saving function is canceled once and then reactivated. All the lights will turn off automatically 20 minutes after the 12-volt battery-saving function has been reactivated:

- When the headlight switch is operated
- When a door is opened or closed

■ Customization

Some functions can be customized. $(\rightarrow P.376)$




NOTICE

■ To prevent 12-volt battery discharge

Do not leave the lights on longer than necessary when the hybrid system is off.

Turning on the high beam headlights

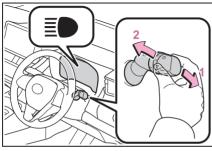


With the headlights on, push the lever away from you to turn on the high beams. Pull the lever toward you to the center position to turn the high beams off.

Pull the lever toward you and release it to flash the high beams once.

You can flash the high beams with the headlights on or off.

Manual headlight leveling dial

The level of the headlights can be adjusted according to the number of passengers and the loading condition of the vehicle.

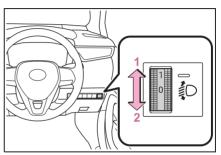

- 1 Raises the level of the headlights
- 2 Lowers the level of the headlights

■ Guide to dial settings

Occupancy and luggage load conditions		Dial position
Occupants	Luggage load	Biai posicion
Driver	None	0
Driver and front pas- senger	None	0.5
All seats occupied	None	1.5

Occupancy and luggage load conditions		Dial position
Occupants	Luggage load	Biai pooliion
All seats occupied	Full lug- gage load- ing	2.5
Driver	Full lug- gage load- ing	4

AHB (Automatic High Beam)

The Automatic High Beam uses a front camera located on the upper portion of the windshield to detect the brightness of the lights of vehicles ahead, streetlights, etc., and automatically changes the head lights between the high beams and low beams.



WARNING


For safe use

Do not overly rely on the Automatic High Beam. Always drive safely, taking care to observe your surroundings and turning the high beams on or off manually if necessary.

- To prevent unintentional operation of the Automatic High Beam System
- When it is necessary to disable the system: →P.169

Using the Automatic High Beam system


1 Press the Automatic High Beam switch.

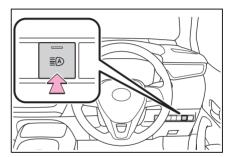

2 Turn the headlight switch to the Auto or

□ position.

When the headlight switch lever is in the low beam position, the AHB system will be enabled and the AHB indicator will illuminate

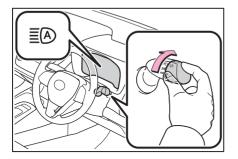

Automatic operating conditions of the high beams

- When all of the following conditions are met, the high beams will illuminate automatically:
- The vehicle speed is approximately 30 km/h (19 mph) or more.
- · The area ahead of the vehicle is dark.
- There are no vehicles ahead with lights on.
- There are few streetlights or other lights on the road ahead.
- If any of the following conditions are met, the headlights will change to the low beams:
- Vehicle speed drops below approximately 25 km/h (16 mph).
- The area ahead of the vehicle is not dark.
- There is a vehicle ahead with lights on.
- There are many streetlights or other lights on the road ahead.

Front camera detection

- In the following situations, the high beams may not be automatically changed to the low beams:
- When a vehicle cuts in front of your vehicle
- · When another vehicle crosses in front

- of the vehicle
- When vehicles ahead are repeatedly detected and then hidden due to repeated curves, road dividers or roadside trees
- When a vehicle ahead approaches from a far lane
- When a vehicle ahead is far away
- · When a vehicle ahead has no lights
- When the lights of a vehicle ahead are dim
- When a vehicle ahead is reflecting strong light, such as own headlights
- Situations in which the sensors may not operate properly: →P.172
- The headlights may change to the low beams if a vehicle ahead that is using fog lights without its headlights turned on is detected.
- House lights, street lights, traffic signals, and illuminated billboards or signs may cause the high beams to change to the low beams, or the low beams to remain on
- The following may change the timing at which the headlights change to the low beams:
- The brightness of lights of vehicles ahead
- The movement and direction of vehicles ahead
- The distance between the vehicle and a vehicle ahead
- When a vehicle ahead only has lights illuminated on one side
- When a vehicle ahead is a two-wheeled vehicle
- The condition of the road (gradient, curve, condition of the road surface, etc.)
- The number of passengers and amount of luggage
- The headlights may change between the high beams and low beams unexpectedly.
- Bicycles and other small vehicles may not be detected.
- In the following situations, the system may not be able to correctly detect the brightness of the surroundings. This

may cause the low beams to remain on or the high beams to flash or dazzle pedestrians or vehicles ahead. In such a case, it is necessary to manually change between the high beams and low beams.

- When there are lights similar to headlights or tail lights in the surrounding area
- When headlights or tail lights of vehicles ahead are turned off, dirty, changing color, or not aimed properly
- When the headlights are repeatedly changing between the high beams and low beams.
- When use of the high beams is inappropriate or when the high beams may be flashing or dazzling pedestrians or other drivers.
- When the vehicle is used in an area in which vehicles travel on the opposite side of the road of the country for which the vehicle was designed, for example using a vehicle designed for right-hand traffic in a left-hand traffic area, or vice versa
- When it is necessary to disable the system: →P.169
- Situations in which the sensors may not operate properly: →P.172


Turning the high beams on/off manually

■ Changing to the high beams

Push the lever forward.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on

Pull the lever to its original position to enable the Automatic High Beam system again.

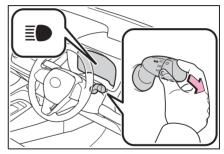


■ Changing to the low beams

Press the Automatic High Beam switch

The Automatic High Beam indicator will turn off

Press the switch to enable the Automatic High Beam system again.

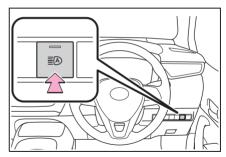


■ Temporarily changing to the low beams

It is recommended to switch to the low beams when use of the high beams is inappropriate or when the high beams may cause problems or distress to other drivers or pedestrians nearby.

Pull the lever rearward and then return it to its original position.

The high beams will illuminate while the lever is pulled, however, after the lever is returned to its original position, the low beams will remain on for a certain

amount of time. After this, the Automatic High Beam system will operate.

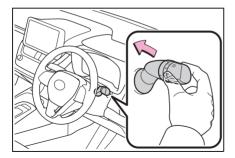


Fog light switch

The fog lights secure excellent visibility in difficult driving conditions, such as in rain and fog.


Operating instructions

▶ Rear fog light switch Turns the rear fog light on Releasing the switch ring returns it to **O** .



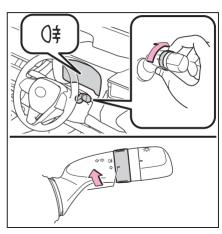

▶ Front and rear fog light switch

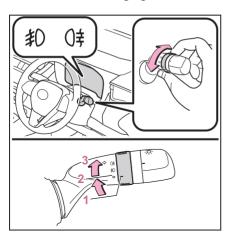

- 1 O Turns the front fog lights off
- 2 # Turns the front fog lights on

Releasing the switch ring returns it to **1**.

Operating the switch ring again turns only the rear fog light off.

■ Fog lights can be used when

Front fog lights: The headlights or the front position lights are turned on. Rear fog light: The headlights are turned on.

Windshield wipers and washer

Operating the lever can use the windshield wipers or the washer.

\wedge


NOTICE

■When the windshield is dry

Do not use the wipers, as they may damage the windshield.


Operating the wiper lever

► Intermittent windshield wipers with interval adjuster

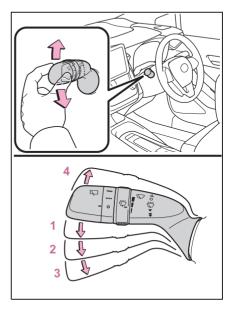


- 2 ▼ Low speed windshield wiper operation
- 4 △ Temporary operation

Wiper intervals can be adjusted when intermittent operation is selected

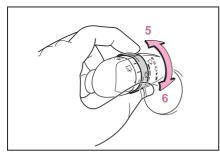


- 5 Increases the intermittent windshield wiper frequency
- 6 Decreases the intermittent windshield wiper frequency

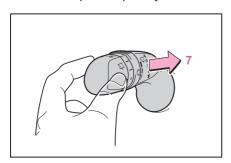

Pulling the lever operates the wipers and washer.

Wipers will automatically operate a couple of times after the washer squirts.


▶ Rain-sensing windshield wipers

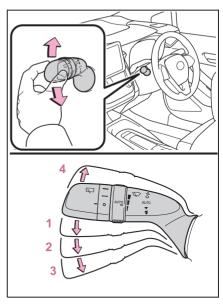


- 1 Auto Rain-sensing windshield wiper operation
- 2 ▼ Low speed windshield wiper operation
- 4 ▲ Temporary operation

When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

When "AUTO" is selected, the sensor sensitivity can be adjusted as follows by turning the switch ring.

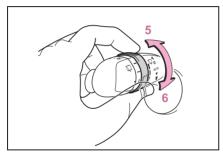

- 5 Increases the rain-sensing windshield wiper sensitivity
- 6 Decreases the rain-sensing windshield wiper sensitivity

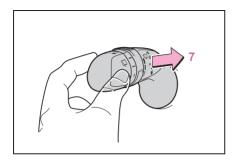

Pulling the lever operates the wipers and washer.

Wipers will automatically operate a couple of times after the washer squirts.

■ The windshield wiper and washer can be operated when


The power switch is in ON.

Effects of vehicle speed on wiper operation (vehicles with rain-sensing windshield wipers)

Vehicle speed affects the Intermittent wiper interval.

- Raindrop sensor (vehicles with rain-sensing windshield wipers)
- The raindrop sensor judges the amount of raindrops.

An optical sensor is adopted. It may not operate properly when sunlight from the rising or setting of the sun intermittently strikes the windshield, or if bugs etc. are present on the windshield.

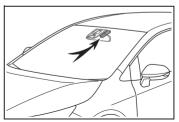

- If the wiper is turned to AUTO mode while the power switch is in ON, the wipers will operate once to show that AUTO mode is activated
- If the temperature of the raindrop sensor is 85°C (185°F) or higher, or -15°C (5°F) or lower, automatic operation may not occur. In this case, operate the wipers in any mode other than AUTO mode.

■ If no windshield washer fluid sprays

Check that the washer nozzles are not blocked if there is washer fluid in the windshield washer fluid reservoir

■ Front door opening linked windshield wiper stop function (vehicles with rain-sensing windshield wipers)

When AUTO mode is selected and the windshield wipers are operating, if a front door is opened while the vehicle is stopped and the P shift position is selected, operation of the windshield wipers will be stopped to prevent anyone near the vehicle from being sprayed by water from the wipers. When the front door is closed, wiper operation will resume.

■ When stopping the hybrid system in an emergency while driving

If the windshield wipers are operating when the hybrid system is stopped, the windshield wipers will operate in high

speed operation. After the vehicle is stopped, operation will return to normal when the power switch is turned to ON. or operation will stop when the driver's door is opened

WARNING

Caution regarding the use of windshield wipers in AUTO mode (vehicles with rain-sensing windshield wipers)

The windshield wipers may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in AUTO mode. Take care that vour fingers or anything else do not become caught in the windshield wipers.

Caution regarding the use of washer fluid

When it is cold, do not use the washer fluid until the windshield becomes warm. The fluid may freeze on the windshield and cause low visibility. This may lead to an accident, resulting in death or serious injury.



NOTICE

When there is no washer fluid spray from the nozzle

Damage to the washer fluid pump may be caused if the lever is pulled toward vou and held continually.

When a nozzle becomes blocked

In this case, contact your Toyota dealer. Do not try to clear it with a pin or other object. The nozzle will be damaged.

Rear window wiper and washer

Operating the lever can use the rear window wiper or the washer




NOTICE

When the rear window is dry


Do not use the wiper, as it may damage the rear window.

Operating instructions

Operating the switch operates the rear wiper as follows:

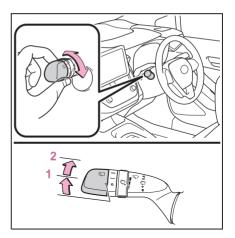

- 1 === Intermittent window wiper operation
- Normal window wiper operation

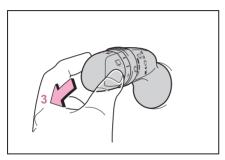

3 Washer/wiper dual opera-

Pushing the lever operates the wiper and washer.

The wiper will automatically operate a couple of times after the washer squirts.

■ The rear window wiper and washer can be operated when

The power switch is in ON.

If no windshield washer fluid sprays

Check that the washer nozzle is not blocked if there is washer fluid in the windshield washer fluid reservoir.

■ Back door opening linked rear window wiper stop function

When the rear window wiper are operating, if a back door is opened while the vehicle is stopped, operation of the rear window wiper will be stopped to prevent anyone near the vehicle from being sprayed by water from the wiper. When the back door is closed, wiper operation will resume.



NOTICE

When the washer fluid tank is empty

Do not operate the switch continually as the washer fluid pump may overheat.

When a nozzle becomes blocked

In this case, contact your Toyota dealer.

Do not try to clear it with a pin or other object. The nozzle will be damaged.

Opening the fuel tank cap

Perform the following steps to open the fuel tank cap:

Before refueling the vehicle

- Turn the power switch off and ensure that all the doors and windows are closed.
- Confirm the type of fuel.
- Fuel types
- →P.375
- Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your vehicle has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

A

WARNING

■When refueling the vehicle

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.

After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.

- Always hold the grips on the fuel tank cap and turn it slowly to remove it
 - A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out the filler neck and cause injury.
- Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.
- Do not inhale vaporized fuel.
 Fuel contains substances that are harmful if inhaled.
- Do not smoke while refueling the vehicle.
 Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged.
 This may cause static electricity to build up, resulting in a possible ignition hazard

When refueling

Observe the following precautions to prevent fuel overflowing from the fuel tank:

- Securely insert the fuel nozzle into the fuel filler neck.
- Stop filling the tank after the fuel nozzle automatically clicks off.
- Do not top off the fuel tank.




NOTICE

Refueling


Do not spill fuel during refueling. Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.

Opening the fuel tank cap

1 Pull up the opener to open the fuel filler door

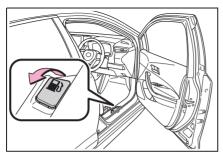


2 Turn the fuel tank cap slowly and remove it, then hang it on the back of the fuel filler door.

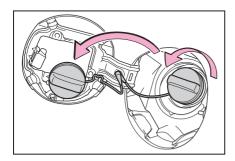

Closing the fuel tank cap

After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

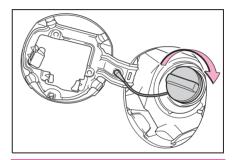

A

WARNING

When replacing the fuel tank cap

Do not use anything but a genuine Toyota fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

Tovota Safety Sense

The Tovota Safety Sense consists of the driving assist systems and contributes to a safe and comfortable driving experience:

WARNING

■ Tovota Safety Sense

The Toyota Safety Sense operates under the assumption that the driver will drive safely, and is designed to help reduce the impact to the occupants in a collision and assist the driver under normal driving conditions

As there is a limit to the degree of recognition accuracy and control performance that this system can provide. do not overly rely on this system. The driver is solely responsible for paying attention to the vehicle's surroundings and driving safely.

For safe use

- Do not overly rely on this system. The driver is solely responsible for paying attention to the vehicle's surroundings and driving safely. This system may not operate in all situations and provided assistance is limited. Over-reliance on this system to drive the vehicle safely may lead to an accident resulting in death or serious injury.
- Do not attempt to test the operation of the system, as it may not operate properly, possibly leading to an accident.
- If attention is necessary while performing driving operations or a system malfunction occurs, a warning message or warning buzzer will be operated. If a warning message is displayed on the display, follow the instructions displayed.

- Depending on external noise, the volume of the audio system, etc. it may be difficult to hear the warning buzzer, Also, depending on the road conditions, it may be difficult to recognize the operation of the sys-
- When it is necessary to disable the system

In the following situations, make sure to disable the system.

Failure to do so may lead to the system not operating properly, possibly leading to an accident resulting in death or serious injury.

- When the vehicle is tilted due to being overloaded or having a flat
- When driving at extremely high. speeds
- When towing another vehicle
- When the vehicle is being transported by a truck, ship, train, etc.
- When the vehicle is raised on a lift and the tires are allowed to rotate freely
- When inspecting the vehicle using a drum tester such as a chassis dynamometer or speedometer tester, or when using an on vehicle wheel balancer
- When the vehicle is driven in a sporty manner or off-road
- When using an automatic car wash
- When a sensor is misaligned or deformed due to a strong impact being applied to the sensor or the area around the sensor
- When accessories which obstruct a sensor or light are temporarily installed to the vehicle

WARNING

- When a compact spare tire or tire chains are installed to the vehicle or an emergency tire puncture repair kit has been used
- When the tires are excessively worn or the inflation pressure of the tires is low
- When tires other than the manufacturer specified size are installed
- When the vehicle cannot be driven. stably, due to a collision, malfunction, etc.


Driving assist system

- PCS (Pre-Collision System)
- \rightarrow P.175
- LTA (Lane Tracing Assist)
- →P 185
- LDA (Lane Departure Alert)
- \rightarrow P.190
- Emergency Driving Stop System
- →P.206
- AHB (Automatic High Beam)
- →P.158
- RSA (Road Sign Assist)
- →P.209
- Dynamic radar cruise control
- →P.195
- Cruise control
- →P.204

Sensors used by Toyota Safety Sense

Various sensors are used to obtain the necessary information for system operation.

Sensors which detect the surrounding conditions

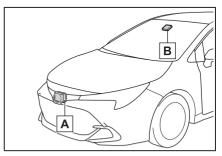

- A Front radar sensor
- **B** Front camera



WARNING

■ To prevent malfunction of the radar sensors


Observe the following precautions. Failure to do so may lead to a radar sensor not operating properly, possibly leading to an accident resulting in death or serious injury.

WARNING

 Keep the radar sensors and radar sensor covers clean at all times

Clean the front of a radar sensor or the front or back of a radar sensor. cover if it is dirty or covered with water droplets, snow, etc.

When cleaning the radar sensor and radar sensor cover, use a soft cloth to remove dirt so as to not damage them

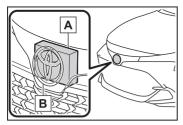


- A Radar sensor
- B Radar sensor cover
- Do not attach accessories, stickers (including transparent stickers), aluminum tape, etc. to a radar sensor or radar sensor cover and their surrounding area.
- Do not subject a radar sensor or its surrounding area to impact. If a radar sensor, the front grille, or front bumper has been subjected to a impact, have the vehicle inspected by your Toyota dealer.
- Do not disassemble the radar sensors.
- Do not modify or paint the radar sensors or radar sensor cover. or replace them with anything other than Toyota genuine parts.
- In the following situations, recalibration of the radar sensors will be necessary. For details, contact your Toyota dealer.
- · When a radar sensor is removed and installed, or replaced

- When the front humper or the front grille has been replaced
- To prevent malfunction of the front camera

Observe the following precautions. Failure to do so may lead to the front camera not operating properly, possibly leading to an accident resulting in death or serious injury.

- Always keep the windshield clean.
- If the windshield is dirty or covered with an oily film, water droplets. snow, etc., clean the windshield.
- · Even if a glass coating agent is applied to the windshield, it will still be necessary to use the windshield wipers to remove water droplets. etc. from the area of the windshield in front of the front camera
- If the inner side of the windshield. where the front camera is installed. is dirty, contact your Toyota dealer.
- Do not attach stickers (including) transparent stickers) or other items to the area of the windshield in front of the front camera (shaded area in the illustration).

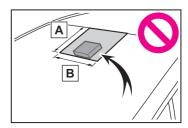

- A Approximately 4 cm (1.6 in.)
- **B** Approximately 4 cm (1.6 in.)
- If the part of the windshield in front of the front camera is fogged up or covered with condensation or ice. use the windshield defogger to remove the fog, condensation, or

WARNING

- If water droplets cannot be properly removed from the area of the windshield in front of the front camera by the windshield wipers, replace the wiper insert or wiper blade.
- Do not attach window tint to the windshield
- Replace the windshield if it is damaged or cracked. If the windshield has been replaced, recalibration of the front camera will be necessary. For details, contact your Toyota dealer.
- Do not allow liquids to contact the front camera
- Do not allow bright lights to shine into the front camera
- Do not damage the lens of the front camera or allow it to become dirty. When cleaning the inside of the windshield, do not allow glass cleaner to contact the lens of the front camera. Do not touch the lens of the front camera If the lens of the front camera is dirty or damaged, contact your
- Do not subject the front camera to a strong impact.

Tovota dealer.

- Do not change the position or orientation of the front camera or remove it
- Do not disassemble the front camera
- Do not modify any parts around the front camera, such as the inside rear view mirror or ceiling.
- Do not attach accessories which may obstruct the front camera to the hood, front grille, or front bumper. For details, contact your Toyota dealer.


- If a surfboard or other long object is to be mounted on the roof make sure that it will not obstruct the front camera
- Do not modify or change the headlights and other lights.
- Front camera installation area on the windshield

If the system determines that the windshield may be fogged up, it will automatically operate the heater to defog the part of the windshield around the front camera. When cleaning, etc., be careful not to touch the area around the front camera until the windshield has cooled sufficiently, as touching it may cause burns.


■ Situations in which the sensors may not operate properly

- When the height or inclination of the vehicle has been changed due to modifications
- When the windshield is dirty, fogged up, cracked or damaged
- When the ambient temperature is high or low
- When mud, water, snow, dead insects, foreign matter, etc., is attached to the front of the sensor
- When in inclement weather such as heavy rain, fog, snow, or a sandstorm
- When water, snow, dust, etc. is thrown up in front of the vehicle, or when driving through mist or smoke
- When the headlights are not illuminated while driving in the dark, such as at night or when in a tunnel
- When the lens of a headlight is dirty and illumination is weak
- When the headlights are misaligned
- When a headlight is malfunctioning
- When the headlights of another vehicle, sunlight, or reflected light shines directly into the front camera

- When the brightness of the surrounding area changes suddenly
- When driving near a TV tower, broadcasting station, electric power plant, radar equipped vehicles, etc., or other location where strong radio waves or electrical noise may be present
- When a wiper blade is blocking the front camera
- When in a location or near objects which strongly reflect radio waves, such as the following:
- Tunnels
- · Truss bridges
- · Gravel roads
- · Rutted, snow-covered roads
- Walls
- · Large trucks
- Manhole covers
- Guardrail
- · Metal plates
- When near a step or protrusion
- When a detectable vehicle is narrow, such as a small mobility vehicle
- When a detectable vehicle has a small front or rear end, such as an unloaded truck
- When a detectable vehicle has a low front or rear end, such as a low bed trailer

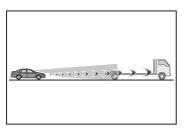

 When a detectable vehicle has extremely high ground clearance

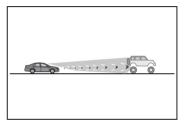

- When a detectable vehicle is carrying a load which protrudes from its cargo area
- When a detectable vehicle has little exposed metal, such as a vehicle which is partially covered with cloth, etc.
- When a detectable vehicle is irregularly shaped, such as a tractor, sidecar, etc.
- When the distance between the vehicle and a detectable vehicle has become extremely short
- When a detectable vehicle is at an angle
- When snow, mud, etc. is attached to a detectable vehicle
- When driving on the following kinds of roads:
- Roads with sharp curves or winding roads
- Roads with changes in grade, such as sudden inclines or declines
- Roads which is sloped to the left or right
- Roads with deep ruts
- Roads which are rough and unmaintained
- Roads which frequently undulate or are bumpy
- When the steering wheel is being operated frequently or suddenly
- When the vehicle is not in a constant position within a lane
- When parts related to this system, the brakes, etc. are cold or extremely hot, wet. etc.
- When the wheels are misaligned
- When driving on slick road surfaces,

- such as when it is covered with ice, snow, gravel, etc.
- When the course of the vehicle differs from the shape of a curve
- When the vehicle speed is excessively high when entering a curve
- When entering/exiting a parking lot, garage, car elevator, etc.
- When driving in a parking lot
- When driving through an area where there are obstructions which may contact your vehicle, such as tall grass, tree branches, a curtain, etc.
- When driving in strong wind
- Situations in which the lane may not be detected
- When the lane is extremely wide or narrow
- Immediately after changing lanes or passing through an intersection
- When driving in a temporary lane or lane regulated by construction
- When there are structures, patterns, shadows which are similar to lane lines in the surrounding
- When the lane lines are not clear or driving on a wet road surface
- When a lane line is on a curb
- When driving on a bright, reflective road surface, such as concrete
- Situations in which some or all of the functions of the system cannot operate
- When a malfunction is detected in this system or a related system, such as the brakes, steering, etc.
- When the VSC, TRC, or other safety related system is operating
- When the VSC, TRC, or other safety related system is off
- Changes in brake operation sound and pedal response
- When the brakes have been operated, brake operation sounds may be heard

- and the brake pedal response may change, but this does not indicate a malfunction
- When the system is operating, the brake pedal may feel stiffer than expected or sink. In either situation the brake pedal can be depressed further. Further depress the brake pedal as necessary.

PCS (Pre-Collision System)

The pre-collision system uses sensors to detect objects $(\rightarrow P.175)$ in the path of the vehicle. When the system determines that the possibility of a frontal collision with a detectable object is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a collision is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

The pre-collision system can be disabled/enabled and the warning timing can be changed. (→P.184)

A

WARNING

For safe use

- Driving safely is solely the responsibility of the driver. Pay careful attention to the surrounding conditions in order to ensure safe driving. Never use the pre-collision system in place of normal braking operations. This system cannot help avoid or reduce the impact of a collision in every situation. Over-reliance on this system to drive the vehicle safely may lead to an accident resulting in death or serious injury.
- Although the pre-collision system is designed to help avoid or help reduce the impact of a collision, its effectiveness may change according to various conditions. Therefore, it may not always be able to achieve the same level of performance

Read the following items carefully. Do not overly rely on this system and always drive carefully.

- For safe use: →P 169
- When to disable the pre-collision system
- When it is necessary to disable the system: →P.169

Detectable objects

The system can detect the following as detectable objects. (Detectable objects differ depending on the function.)

- Vehicles
- Bicvcles*
- Pedestrians
- Motorcycles*
- *: Detected as a detectable object only


when being ridden.

System functions


■ Pre-collision warning

When the system determines that the possibility of a collision is high, a buzzer will sound and an icon and warning message will be displayed on the multi-information display to urge the driver to take evasive action

If the detectable object is a vehicle, moderate braking will be performed with the warning.

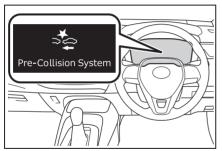

If the system determines that the accelerator pedal is strongly depressed, the following icon and message will be displayed on the multi-information display.

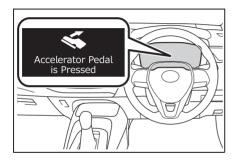

■ Pre-collision brake assist

If the system determines that the possibility of a collision is high and the brake operation by the driver is insufficient, the braking power will be increased.

■ Pre-collision brake control


If the system determines that the possibility of a collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the impact of the collision.

■ Emergency steering assist

If the system determines that the following conditions are met, assistance will be provided to help enhance vehicle stability and prevent lane departure. During assistance, in addition to the pre-collision warning, the following icon will be displayed on the multi-information display.

- The possibility of a collision is high
- There is sufficient space within the lane to perform evasive steering maneuvers
- The driver is operating the steering wheel

During assistance, the pre-collision warning will operate and a message will be displayed to warn the driver.

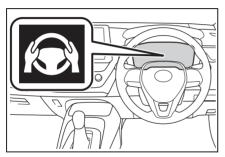


Intersection collision avoidance support (left/right turn)


In situations such as the following, if the system determines that the possibility of a collision is high, the pre-collision warning and pre-collision braking will operate.

Depending on the intersection, assistance may not operate correctly.

 When turning left/right at an intersection and crossing the path of an oncoming vehicle

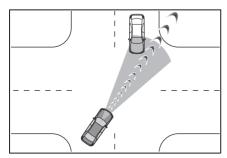


 When turning left/right and an oncoming pedestrian or bicycle is detected

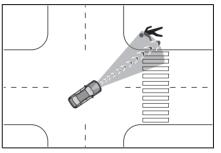

Intersection collision avoidance support (crossing vehicles)

At an intersection, etc., if the system determines that the possibility of a collision with an approaching vehicle or motorcycle is high, the pre-collision warning and pre-collision braking will operate.


Depending on the intersection, assistance may not operate correctly.

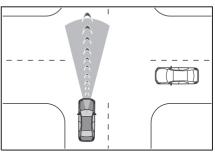

Acceleration Suppression at Low Speed

When driving at a low speed, if the accelerator pedal is strongly depressed and the system determines that there is a possibility of a collision, hybrid system output will be restrained or the brakes will be applied weakly to restrict accelera-

tion. During operation, a buzzer will sound and a warning indicator and message will be displayed on the multi-information display.

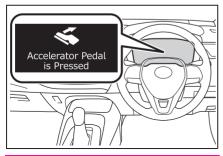

⚠ WARNING

Pre-collision braking

- When the pre-collision braking function is operating, a large amount of braking force will be applied.
- The pre-collision braking function is not designed to hold the vehicle stopped. If the vehicle is stopped by pre-collision brake control, the driver should operate the brakes immediately as necessary.
- The pre-collision braking function may not operate if certain operations are performed by the driver. If the accelerator pedal is being depressed strongly or the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the pre-collision braking function from operating.
- If the brake pedal is being depressed, the system may determine that the driver is taking evasive action and possibly delay the operation timing of the pre-collision brake control.

■ Acceleration Suppression at Low Speed

If the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the Acceleration Suppression at Low Speed function from operating.

■ Emergency steering assist

- The emergency steering assist will be canceled when the system determines that lane departure prevention control has completed.
- Depending on operations performed by the driver, emergency steering assist may not operate or operation may be canceled.
- If the accelerator pedal is depressed strongly, the steering wheel is turned heavily, the brake pedal is depressed, or the turn signal lever is operated, the system may determine that the driver is taking evasive action and the emergency steering assist may not operate.
- While the emergency steering assist is operating, if the accelerator pedal is depressed strongly, the steering wheel is turned heavily, or the brake pedal is depressed, the system may determine that the driver is taking evasive action and emergency steering assist operation may be canceled.
- While the emergency steering assist is operating, if the steering wheel is held or turned in the opposite direction of system operation, emergency steering assist operation will be canceled.

■ Operating conditions of each function of the pre-collision system

The pre-collision system is enabled and the system determines that the possibility of a frontal collision with a detected object is high.

However, the system will not operate in the following situations:

- When the vehicle has not been driven a certain amount after a terminal of the 12-volt battery has been disconnected and reconnected
- When the shift lever is in R
- When the VSC OFF indicator is illuminated (only the pre-collision warning function will be operational)

The following are the operational speeds and cancelation conditions of each function:

Pre-collision warning

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding vehicles, stopped vehicles	Approximately 5 to 180 km/h (3 to 110 mph)	Approximately 5 to 180 km/h (3 to 110 mph)
Oncoming vehicles	Approximately 30 to 180 km/h (20 to 110 mph)	Approximately 80 to 220 km/h (50 to 130 mph)
Bicycles	Approximately 5 to 80 km/h (3 to 50 mph)	Approximately 5 to 80 km/h (3 to 50 mph)
Pedestrians	Approximately 5 to 80 km/h (3 to 50 mph)	Approximately 5 to 80 km/h (3 to 50 mph)
Preceding motorcycles, stopped motorcycles	Approximately 5 to 180 km/h (3 to 110 mph)	Approximately 5 to 80 km/h (3 to 50 mph)
Oncoming motorcycles	Approximately 30 to 180 km/h (20 to 110 mph)	Approximately 30 to 180 km/h (20 to 110 mph)

While the pre-collision warning is operating, if the steering wheel is operated heavily or suddenly, the pre-collision warning may be cancelled.

Pre-collision brake assist

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding vehicles, stopped vehicles	Approximately 30 to 180 km/h (20 to 110 mph)	Approximately 10 to 180 km/h (7 to 110 mph)
Bicycles	Approximately 30 to 80 km/h (20 to 50 mph)	Approximately 30 to 80 km/h (20 to 50 mph)

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Pedestrians	Approximately 30 to 80 km/h (20 to 50 mph)	Approximately 30 to 80 km/h (20 to 50 mph)
Preceding motorcycles, stopped motorcycles	Approximately 30 to 180 km/h (20 to 110 mph)	Approximately 10 to 80 km/h (7 to 50 mph)

Pre-collision braking

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding vehicles, stopped vehicles	Approximately 5 to 180 km/h (3 to 110 mph)	Approximately 5 to 180 km/h (3 to 110 mph)
Oncoming vehicles	Approximately 30 to 180 km/h (20 to 110 mph)	Approximately 80 to 220 km/h (50 to 130 mph)
Bicycles	Approximately 5 to 80 km/h (3 to 50 mph)	Approximately 5 to 80 km/h (3 to 50 mph)
Pedestrians	Approximately 5 to 80 km/h (3 to 50 mph)	Approximately 5 to 80 km/h (3 to 50 mph)
Preceding motorcycles, stopped motorcycles	Approximately 5 to 180 km/h (3 to 110 mph)	Approximately 5 to 80 km/h (3 to 50 mph)
Oncoming motorcycles	Approximately 30 to 180 km/h (20 to 110 mph)	Approximately 30 to 180 km/h (20 to 110 mph)

If either of the following occur while the pre-collision braking function is operating, it will be canceled:

- · The accelerator pedal is strongly depressed
- The steering wheel is operated heavily or suddenly
- Emergency steering assist

The emergency steering assist will not operate when the turn signal lights are flashing.

The emergency steering assist will not operate when the VSC OFF indicator is illuminated.

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding vehicles, stopped vehicles, bicy- cles, pedestrians, motorcy- cles		Approximately 40 to 80 km/h (25 to 50 mph) Active steering function: * to 80 km/h (* to 50 mph)

^{*:} Minimum vehicle speed: Vehicle speed at which evasion using pre-collision brake

control is difficult

While the emergency steering assist is operating, if any of the following are performed, emergency steering assist operation may be cancelled:

- The accelerator pedal is strongly depressed
- · The steering wheel is operated heavily or suddenly
- · The brake pedal is depressed
- Intersection collision avoidance support (left/right turn)

The intersection collision avoidance support (for left/right turning vehicles) will not operate when the turn signal lights are not flashing.

Detectable objects	Vehicle speed	Oncoming vehicle speed	Relative speed between your vehi- cle and object
Oncoming vehicles	Approximately 5 to 40 km/h (3 to 25 mph)	Approximately 5 to 75 km/h (3 to 45 mph)	Approximately 10 to 115 km/h (7 to 70 mph)
Pedestrians	Approximately 5 to 30 km/h (3 to 20 mph)	_	Approximately 5 to 40 km/h (3 to 25 mph)
Bicycles	Approximately 5 to 30 km/h (3 to 20 mph)	_	Approximately 5 to 50 km/h (3 to 30 mph)
Oncoming motorcy- cles	Approximately 5 to 40 km/h (3 to 25 mph)	Approximately 5 to 75 km/h (3 to 45 mph)	Approximately 10 to 115 km/h (7 to 70 mph)

• Intersection collision avoidance support (crossing vehicles)

Detectable objects	Vehicle speed	Crossing vehicle speed	Relative speed between your vehi- cle and object
Vehicles (side)	Approximately 5 to 60 km/h (3 to 38 mph)	Your vehicle speed or less Approximately 40 km/h (25 mph) or less	Approximately 5 to 60 km/h (3 to 38 mph)
Motorcycles (side)	Approximately 5 to 60 km/h (3 to 38 mph)	Your vehicle speed or less Approximately 40 km/h (25 mph) or less	Approximately 5 to 60 km/h (3 to 38 mph)

Acceleration Suppression at Low Speed

The Acceleration Suppression at Low Speed function will not operate when the turn signal lights are flashing.

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Preceding vehicles, stopped vehicles	Approximately 0 to 15 km/h (0 to 9 mph)	Approximately 0 to 15 km/h (0 to 9 mph)
Pedestrians	Approximately 0 to 15 km/h (0 to 9 mph)	Approximately 0 to 15 km/h (0 to 9 mph)
Bicycles	Approximately 0 to 15 km/h (0 to 9 mph)	Approximately 0 to 15 km/h (0 to 9 mph)

While the Acceleration Suppression at Low Speed function is operating, if any of the following are performed, the low speed sudden acceleration suppression function operation will be cancelled:

- · The accelerator pedal is released.
- · The steering wheel is operated heavily or suddenly

■ Detection of detectable objects

Objects are detected based on their size, shape, and movement.


Depending on the ambient brightness, movement, posture and direction of a detectable object, it may not be detected and the system may not operate properly.

The system detects shapes, such as the following, as detectable objects.




- Situations in which the system may operate even though the possibility of a collision is not high
- In certain situations, such as the following, the system may determine that the possibility of a collision is high and operate:
- When passing a detectable object
- When changing lanes while overtaking a detectable object
- · When suddenly approaching a detect-


- able object
- When approaching a detectable object or other object on the roadside, such as guardrails, utility poles, trees, walls. etc.
- When there is a detectable object or other object by the roadside at the entrance of a curve.

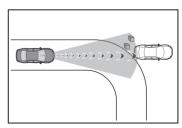


- When there are patterns or a painting ahead of the vehicle that may be mistaken for a detectable object
- When passing a detectable object that is changing lanes or turning left/right

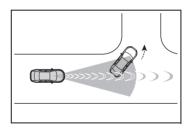


 When passing a detectable object which is stopped to make a left/right furn

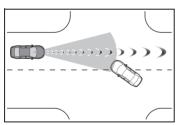

- When a detectable object stops immediately before entering the path of the vehicle
- When passing through a location with a structure above the road (traffic sign, billboard, etc.)

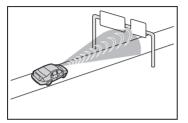

- When approaching an electric toll gate barrier, parking lot barrier, or other barrier that opens and closes
- When turning left/right and an oncoming vehicle or pedestrian crosses in front of the vehicle
- When attempting to turn left/right in front of an oncoming vehicle or pedestrian
- When turning left/right and an oncoming vehicle or pedestrian stops immediately before entering the path of the vehicle
- When turning left/right and an oncoming vehicle turns left/right in front of the vehicle

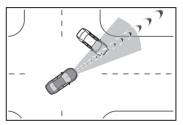


 When the steering wheel is operated toward the path of an oncoming vehicle

■ Situations in which the system may not operate properly


- In certain situations, such as the following, a detectable object may not be detected by the front sensors, and the system may not operate properly:
- When a detectable object is approaching your vehicle
- When your vehicle or a detectable object is wandering
- When a detectable object makes an abrupt maneuver (such as sudden swerving, acceleration or deceleration)
- When suddenly approaching a detectable object
- When the detectable object is near a wall, fence, guardrail, manhole cover, steel plate on the road surface, or another vehicle
- When there is a structure above a detectable object
- When part of a detectable object is hidden by another object (large luggage, umbrella, guardrail, etc.)
- When multiple detectable objects are overlapping
- When a bright light, such as the sun, is reflecting off of a detectable object
- When a detectable object is white and looks extremely bright
- When the color or brightness of a detectable object causes it to blend in with its surroundings
- When a detectable object cuts in front of or suddenly emerges in front of your vehicle
- When approaching a vehicle which is diagonal
- · If a vehicle ahead is a child sized bicy-

cle, is carrying a large load, is carrying an extra passenger, or has an unusual shape (bicycles equipped with a child seat, tandem bicycles, etc.)

- If a pedestrian or bicycle is shorter than approximately 1 m (3.2 ft.) or taller than approximately 2 m (6.5 ft.).
- When the silhouette of a pedestrian or bicycle is unclear (such as when they are wearing a raincoat, long skirt, etc.)
- When a pedestrian or bicycle is bending forward or squatting
- When a pedestrian or bicycle is moving at high speed
- When a pedestrian is pushing a stroller, wheelchair, bicycle or other vehicle
- When a detectable object blends in with the surrounding area, such as when it is dim (at dawn or dusk) or dark (at night or in a tunnel)
- While turning left/right or a few seconds after turning left/right
- While driving around a curve and a few seconds after driving around a curve
- When turning left/right and an oncoming vehicle is driving in a lane 3 or more lanes from the vehicle
- When turning left/right and the direction of the vehicle differs greatly from the direction traffic flows in the oncoming lane

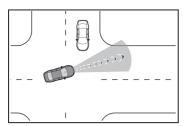

When turning left/right and approaching a pedestrian which was traveling in the same direction as the vehicle and continues straight

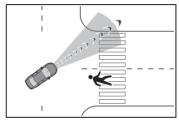


- In addition to the preceding, in certain situations, such as the following, the emergency steering assist may not operate properly:
- When a detectable object is too close to the vehicle
- When there is insufficient space to perform evasive steering maneuvers or an obstruction exists in the evasion direction
- · When there is an oncoming vehicle

Changing the pre-collision setting

 The pre-collision system can be enabled/disabled through a customize setting. (→P.381)

The system is enabled each time the power switch is turned to ON.

 When the system is disabled, the PCS warning light will illuminate and a message will be displayed on the multi-information display.

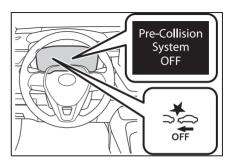

 The pre-collision setting can be changed on the customize settings. (→P.381)

- When the pre-collision warning timing is changed, the emergency steering assist (excluding the active steering function) timing will also be changed.
 When "Later" is selected, the emergency steering assist (excluding the active steering function) will not operate in most cases.
- When the dynamic radar cruise control is operating, the pre-collision warning will operate at the "Earlier" timing, regardless of the user setting.

LTA (Lane Tracing Assist)

LTA functions

 When driving on a road with clear lane lines with the dynamic radar cruise control operating, lane lines and preceding and surrounding vehicles are detected using the front camera and radar sensor, and the steering wheel is operated to maintain the vehicle's lane position.


Use this function only on highways and expressways.

If the dynamic radar cruise control is not operating, the function will not operate.

In situations where the lane lines are difficult to see or are not visible, such as when in a traffic jam, support will be provided using the path of preceding and surrounding vehicles.


If the system determines that the steering wheel has not been operated for a certain amount of time or the steering wheel is not being firmly gripped, the driver will be alerted via a display and this function will be temporarily canceled.

If the steering wheel is firmly gripped, the function will begin operating again.

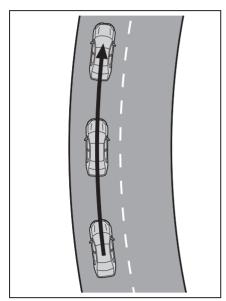

• When the function is operating, if the vehicle is likely to depart from its lane, the driver will be alerted via a display and buzzer.

When the buzzer sounds, check the area around the vehicle and carefully operate the steering wheel to move the vehicle back to the center of the lane.

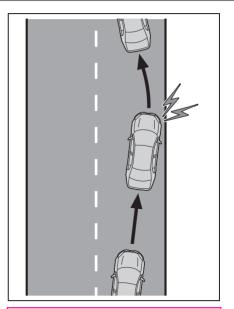

WARNING

■ Before using the LTA system

- Do not overly rely on the LTA system. The LTA system is not a system which provides automated assistance in driving and it is not a system which reduces the amount of attention necessary for safe driving. The driver is solely responsible for paving attention to their surroundings and operating the steering wheel as necessary to ensure safety. Also, the driver is responsible for taking adequate breaks when fatigued, such as when driving for a long time.
- Failure to perform appropriate driving operations and pay careful attention may lead to an accident.
- When not using the LTA system. turn it off using the LTA switch.

Operating conditions of function

This function is operable when all of the following conditions are met:

The LTA system detects lane lines or

the path of preceding or surrounding vehicles (except when the preceding vehicle is small, such as a motorcycle).

- The dynamic radar cruise control is operating.
- The lane width is approximately 3 to 4 m (10 to 13 ft.).
- The turn signal lever is not being operated
- The vehicle is not being driven around a sharp curve.
- The vehicle is not accelerating or decelerating more than a certain amount
- The steering wheel is not being turned with a large force.
- The hands off steering wheel warning (→P.187) is not operating.
- The vehicle is being driven in the center of a lane.

■ Temporary cancelation of functions

- When the operating conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function will automatically be restored. (→P.186)
- If the operating conditions of a function are no longer met while the function is operating, a buzzer may sound to indicate that the function has been temporarily canceled.
- The steering assist operation of the function can be overridden by the steering wheel operation of the driver.

■ Lane departure warning function when the LTA is operating

- Even if the LDA warning method is changed to vibration of the steering wheel, if the vehicle deviates from the lane while the LTA is operating, the warning buzzer will sound to alert the driver
- If steering wheel operation equivalent to that necessary for a lane change is

detected, the system will determine the vehicle is not deviating from the lane and the warning will not operate.

■ Hands off steering wheel warning operation

In the following situations, a message urging the driver to grip the steering wheel and the icon shown in the illustration will be displayed on the multi-information display to warn the driver. If the system detects that the steering wheel is held, the warning will be canceled. When using the system, make sure to grip the steering wheel firmly, regardless of whether the warning is operating or not



 When the system determines the driver is not holding the steering wheel while the function is operating


If no operations are detected for a certain amount of time, a buzzer will sound, the warning will operate, and the function will be temporarily canceled. This warning may also operate if the driver only operates steering wheel a small amount continuously.

Depending on the condition of the vehicle, handle control condition and road surface, the warning function may not operate.

Enabling/disabling the system

The LTA will change between enabled/disabled each time the LTA switch is pressed.

When the LTA is enabled, the LTA indicator will illuminate.

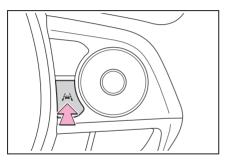


WARNING

Situations in which the functions may not operate properly

In the following situations, the functions may not operate properly and the vehicle may depart from its lane. Do not overly rely on these functions. The driver is solely responsible for paving attention to their surroundings and operating the steering wheel as necessary to ensure safety.

When a preceding or surrounding vehicle changes lanes (Your vehicle may follow the preceding or surrounding vehicle and also change lanes)

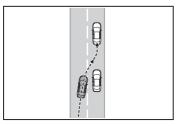

- When a preceding or surrounding vehicle is swaying (Your vehicle may sway accordingly and depart from the lane)
- When a preceding or surrounding vehicle departs from a lane (Your vehicle may follow the preceding or surrounding vehicle and also depart from the lane)

- When a preceding or surrounding vehicle is being driven extremely close to the left/right lane line (Your vehicle may follow the preceding or surrounding vehicle accordingly and depart from the lane)
- When there are moving objects or structures in the surrounding area (Depending on the position of the moving object or structure relative to vour vehicle, vour vehicle may swav)
- When the vehicle is struck by a crosswind or the turbulence of other nearby vehicles
- Situations in which the sensors may not operate properly: →P.172
- Situations in which the lane may not be detected: →P 174
- When it is necessary to disable the system: →P.169

Operation display of steering wheel operation support

The operating state of the LTA system is indicated.

Indicator	Lane display	Steering icon	Situation
White	Gray	Gray	LTA is on standby
Green	Green	Green	LTA is operating
Orange Flashing	Orange Flashing	Green	The vehicle is departing the lane toward the side which the lane display is flashing

LDA (Lane Departure Alert)

Basic functions

The LDA system warns the driver if the vehicle may deviate from the current lane or course*, and also can slightly operate the steering wheel to help avoid deviation from the lane or course*

The front camera is used to detect lane lines or a course*

*: Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc.


■ Lane departure alert function

When the system determines that the vehicle might depart from its lane or course, a warning is displayed on a display, and either a warning buzzer will sound or the steering wheel will vibrate to alert the driver.

Check the area around your vehicle and carefully operate the steering wheel to move the vehicle back to the center of the lane or course*.

If the system determines that the vehicle may collide with a vehicle in an adjacent lane, the lane departure alert will operate even if the turn signals are operating.

*: Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, quardrail, etc.

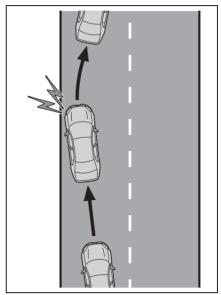


■ Lane departure prevention function

If the system determines that the vehicle is likely to depart from its lane or course*, it provides assistance through steering wheel operations to help avoid deviation from the lane or course.

If the system determines that the steering wheel has not been operated for a certain amount of time or the steering wheel is not being firmly gripped, a warning message may be displayed and a warning buzzer may sound to alert the driver.


If the system determines that the vehicle may collide with a vehicle in an adjacent lane, the lane departure prevention function will operate even if the turn signals are operating.

*: Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc.

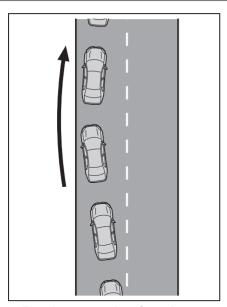

■ Break suggestion function

If the vehicle is swaying, a message will be displayed and a warning buzzer will sound to urge the driver to take a break.

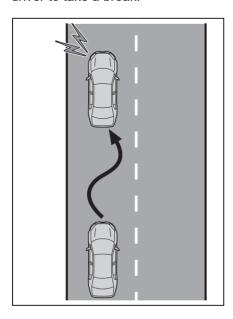

A

WARNING

■ Before using the LDA system

- Do not overly rely on the LDA system. The LDA system is not a system which provides automated assistance in driving and it is not a system which reduces the amount of attention necessary for safe driving. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary to ensure safety. Also, the driver is responsible for taking adequate breaks when fatigued, such as when driving for a long time.
- Failure to perform appropriate driving operations and pay careful attention may lead to an accident.

■ Operating conditions of each function

Lane departure alert/prevention function

This function is operable when all of the following conditions are met:

The vehicle speed is approximately 50 km/h (30 mph) or more.

Operation may be possible when the vehicle speed is approximately 40 km/h (25 mph) or more if vehicles, motorcycles, bicycles, or pedestrians are detected near the lane.

- The system recognizes a lane or course^{*}. (When recognized on only one side, the system will operate only for the recognized side.)
- The lane width is approximately 3 m (9.8 ft.) or more.
- The turn signal lever is not being operated. (Except when a vehicle is detected in the direction that the turn signal lever is operated.)
- The vehicle is not being driven around a sharp curve.
- The vehicle is not accelerating or decelerating more than a certain

amount

- The steering wheel is not being turned sufficiently to perform a lane change.
- *: Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc.
- Break suggestion function

This function is operable when all of the following conditions are met:

- The vehicle speed is approximately 50 km/h (32 mph) or more.
- The lane width is approximately 3 m (9.8 ft.) or more.

■ Temporary cancellation of functions

When the operating conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function will automatically be restored. (→P.191)

- Operation of the lane departure alert function/lane departure prevention function
- Depending on the vehicle speed, road conditions, lane departure angle, etc., operation of the lane departure prevention function may not be felt or the function may not operate.
- Depending on the conditions, the warning buzzer may operate even if vibration is selected through a customize setting.
- If a course* is not clear or straight, the lane departure alert function or lane departure prevention function may not operate.
- The lane departure alert function or lane departure prevention function may not operate if the system judges that the vehicle is intentionally being steered to avoid a pedestrian or parked vehicle.
- It may not be possible for the system to judge if there is danger of a collision with a vehicle in an adjacent lane.
- The steering assist operation of the

- lane departure prevention function can be overridden by the steering wheel operation of the driver.
- *: Boundary between the asphalt and grass, soil, etc., or structures, such as a curb, quardrail, etc.

■ Hands off steering wheel warning operation

In the following situations, a message urging the driver to operate the steering wheel and an icon will be displayed and a buzzer will sound to warn the driver. When using the system, make sure to grip the steering wheel firmly, regardless of whether the warning is operating or not



• When the system determines that the driver is not securely holding the steering wheel, or the steering wheel is not being operated when the steering assist operation of the lane departure prevention function is operating

The length of time that the warning buzzer operates will become longer as the frequency of the steering assist operating increases. Even if the system judges that the steering wheel has been operated, the warning buzzer will sound for a certain amount of time.

■ Break suggestion function

If the vehicle is swaying, a message will be displayed and a warning buzzer will sound to urge the driver to take a break.



Depending on the condition of the vehicle and road surface, the break suggestion function may not operate.

Changing LDA settings

- The LDA system can be enabled/disabled through a customize setting. (→P.376)
- The settings of the LDA can be changed on the customize settings. (→P.376)

A

WARNING

■ Situations in which the system may not operate properly

In the following situations, the system may not operate properly and the vehicle may depart from its lane. Do not overly rely on these functions. The driver is solely responsible for paying attention to their surroundings and operating the steering wheel as necessary to ensure safety.

- When the boundary between the asphalt and grass, soil, etc., or structures, such as a curb, guardrail, etc. is not clear or straight
- When the vehicle is struck by a crosswind or the turbulence of other nearby vehicles
- Situations in which the lane may not be detected: →P.174
- Situations in which the sensors may not operate properly: →P.172

- Situations in which some or all of the functions of the system cannot operate: →P.174
- When it is necessary to disable the system: →P.169

Displays and system operation

The operating state of the lane departure alert function and steering assist operation of the lane departure prevention function are indicated.

Indicator	Lane display	Steering icon	Situation
Orange Illuminated	Not illumi- nated	Not illumi- nated	System disabled
Not illumi- nated	Gray	Not illumi- nated	Lane lines are not detected by the system
Not illumi- nated	White	Not illumi- nated	Lane lines are detected by the system
Orange Flashing	Orange Flashing	Not illumi- nated	Lane departure alert function is operating for the side which the lane display is flashing
Green	Green	Green	Lane departure prevention function is operating for the side which the lane display is illuminated
Orange Flashing	Orange Flashing	Green	Lane departure alert function/lane departure prevention function is operat- ing for the side which the lane display is flashing

Dynamic radar cruise control

This dynamic radar cruise control detects the presence of vehicles ahead, determines the current vehicle-to-vehicle distance, and operates to maintain a suitable distance from the vehicle ahead. The desired vehicle-to-vehicle distance can be set by operating the vehicle-to-vehicle distance switch.

Use the dynamic radar cruise control only on highways and expressways.



WARNING

- For safe use
- Driving safely is solely the responsibility of the driver. Do not overly rely on this system, and pay careful attention to the surrounding conditions in order to ensure safe driving.
- The dynamic radar cruise control provides driving assistance to reduce the driver's burden. However, there are limitations to the assistance provided.

Read the following items carefully. Do not overly rely on this system and always drive carefully.

Conditions under which the system may not operate correctly: →P.201

Set the speed appropriately according to the speed limit, traffic flow, road conditions, weather conditions, etc. The driver is responsible for confirming the set speed.

- Even if the system is operating correctly, the condition of a preceding vehicle as recognized by the driver and detected by the system may differ. Therefore, it is necessary for the driver to pay attention, assess risks, and ensure safety. Over-reliance on this system to drive the vehicle safely may lead to an accident resulting in death or serious injury.
- Precautions for the driving assist systems

Observe the following precautions, as there are limitations to the assistance provided by the system. Over-reliance on this system may lead to an accident resulting in death or serious injury.

Details of support provided for the driver's vision

The dynamic radar cruise control is only intended to help the driver in determining the distance between the driver's own vehicle and a designated preceding vehicle. It is not a system which allows for careless or inattentive driving, and is not a system which assists in poor visibility conditions.

The driver must pay attention to their surroundings, even when the vehicle stops.

Details of support provided for the driver's judgement

The dynamic radar cruise control determines whether the distance between the driver's own vehicle and a designated preceding vehicle is within a set range. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger.

 Details of support provided for the driver's operation

WARNING


The dynamic radar cruise control does not include functions which will prevent or avoid collisions with vehicles ahead of your vehicle. Therefore. if there is ever any possibility of danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure safety.

■ Situations in which the dynamic radar cruise control should not be used

Do not use the dynamic radar cruise control in the following situations. As the system will not be able to provide appropriate control, using it may lead to an accident resulting in death or serious injury.

- Roads where there are pedestrians. cyclists, etc.
- When driving on a highway or expressway entrance or exit
- When the approach warning sounds frequently
- Situations in which the sensors may not operate properly: \rightarrow P.172
- Situations in which the lane may not be detected: \rightarrow P.174

Basic functions

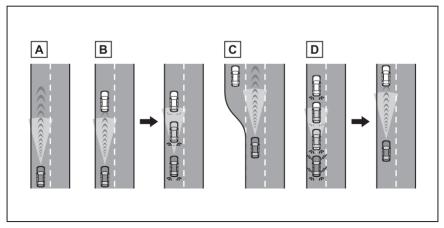

A Constant speed cruising:

When there are no vehicles ahead

The vehicle drives at the speed set by the driver.

If the set vehicle speed is exceeded while driving down a hill, the set vehicle speed display will blink and a buzzer will sound.

B Deceleration and follow-up cruising

When a preceding vehicle driving slower than the set vehicle speed is detected

When a vehicle is detected driving ahead of your vehicle, the vehicle automatically decelerates and if a greater reduction in vehicle speed is necessary, the brakes are applied (the stop lights will come on at this time). The vehicle is controlled to maintain the vehicle-to-vehicle distance set by the driver, in accordance with changes in the speed of the preceding vehicle. If vehicle deceleration is not sufficient and the vehicle approaches the vehicle ahead, the approach warning will sound.

C Acceleration

When there are no longer any preceding vehicles driving slower than the set vehicle speed

The vehicle accelerates until the set vehicle speed is reached and then resumes constant speed cruising.


D Starting off:

If a preceding vehicle stops, the vehicle will also stop (controlled stop). After the preceding vehicle starts off, pressing the "RES" switch or depressing the accelerator pedal will resume follow-up cruising (start off operation). If a start off operation is not performed, the controlled stop

will continue


System Components

■ Meter display

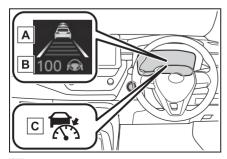

- A Multi-information display
- B Set vehicle speed
- **C** Indicators

Switches

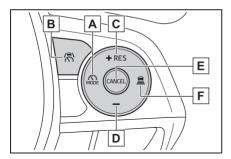


- A Driving assist mode select switch
- **B** Driving assist switch
- c "+" switch / "RES" switch
- D "-" switch
- E Cancel switch
- F Vehicle-to-vehicle distance switch speed.

Using the dynamic radar cruise control

Setting the vehicle speed

 Press the driving assist mode select switch to select dynamic radar cruise control.


The dynamic radar cruise control indicator will illuminate.

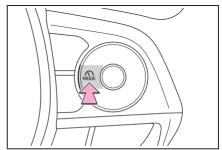

2 Using the accelerator pedal, accelerate or decelerate to the desired vehicle speed (approximately 30 km/h [20 mph] or more), and press the driving assist switch to set the set vehicle speed.

The set vehicle speed will be displayed on the multi-information display.


The vehicle speed at the moment the switch is released will be the set vehicle

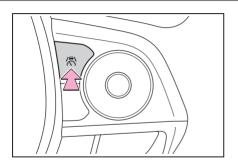

Adjusting the set vehicle speed

 Adjusting the set vehicle speed using the switches

To change the set vehicle speed, press the "+" or "-" switch until the desired speed is displayed.

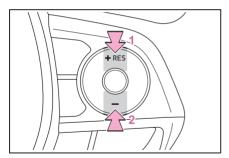

- 1 Increase set vehicle speed
- 2 Decrease set vehicle speed Short press adjustment: Press the switch

Long press adjustment: Press and hold the switch until the desired set vehicle speed is reached.

The set vehicle speed will increase or decrease as follows:

Short press adjustment: By 1 km/h (0.6 mph) or 1 mph (1.6 km/h) each time the switch is pressed


Long press adjustment: Increases or

decreases in 5 km/h (3.1 mph) or 5 mph (8 km/h) increments continuously while the switch is pressed and held

The set vehicle speed adjustment increment can be changed through a customize setting.

- Increasing the set vehicle speed using the accelerator pedal
- Depress the accelerator pedal to accelerate the vehicle to the desired vehicle speed.
- 2 Press the "+" switch

Canceling/resuming control

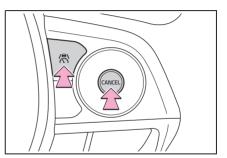

 Press the cancel switch or driving assist switch to cancel control

Control will also be canceled if the brake pedal is depressed.

(If the vehicle has been stopped by system control, depressing the brake pedal will not cancel control.)

2 Press the "RES" switch to resume control

Changing the vehicle-to-vehicle distance

Each time the switch is pressed, the vehicle-to-vehicle distance setting will change as follows:

If a preceding vehicle is detected, the preceding vehicle mark will be displayed.

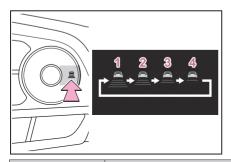


Illustration Number	Vehicle-to-vehicle dis- tance	Approximate Distance (Vehicle Speed: 100 km/h [60 mph])
1	Extra long	Approximately 70 m (230 ft.)
2	Long	Approximately 60 m (200 ft.)
3	Medium	Approximately 45 m (145 ft.)
4	Short	Approximately 30 m (100 ft.)

The actual vehicle-to-vehicle distance varies in accordance with the vehicle speed. Also, when the vehicle is stopped by system control, it will be stopped at a certain distance from the preceding vehicle, depending on the situation, regardless of the setting.

Operating conditions

- The shift lever is in D.
- The desired set speed can be set when the vehicle speed is approximately 30 km/h (20 mph) or more.
- If the vehicle speed is set while driving at below approximately 30 km/h (20 mph), the set vehicle speed will be approximately 30 km/h (20 mph).
- If the vehicle speed is set while driving at a speed that exceeds the system's upper limit, the set vehicle speed will be the system's upper limit.

■ Accelerating after setting the vehicle speed

As with normal driving, acceleration can

be performed by depressing the accelerator pedal. After accelerating, the vehicle will return to the set vehicle speed. However, while in vehicle-to-vehicle distance control mode, the vehicle speed may decrease to below the set vehicle speed in order to maintain the distance from the preceding vehicle.

- When the vehicle is stopped by system control during follow-up cruising
- When the "+RES" switch is pressed while the vehicle is stopped by system control, if the preceding vehicle starts off within approximately 3 seconds, follow-up cruising will resume.
- If the preceding vehicle starts off

within approximately 3 seconds of the vehicle being stopped by system control, follow-up cruising will resume.

Automatic cancellation of vehicle-to-vehicle distance control mode

In the following situations, vehicle-to-vehicle distance control mode will be canceled automatically:

- When the brake control or output restriction control of a driving support system operates (For example: Pre-Collision System, drive-start control)
- When the parking brake has been operated
- When the vehicle is stopped by system control on a steep incline
- When any of the following are detected while the vehicle is stopped by system control:
- · The driver's seat belt is unfastened
- · The driver's door is opened
- Approximately 3 minutes have elapsed since the vehicle was stopped

The parking brake may be actived automatically.

- Situations in which some or all of the functions of the system cannot operate: →P.174
- Dynamic radar cruise control system warning messages and buzzers

For safe use: →P.169

Preceding vehicles that the sensor may not detect correctly

In the following situations, depending on the conditions, if the system cannot provide sufficient deceleration or acceleration is necessary, operate the brake pedal or accelerator pedal.

As the sensor may not be able to correctly detect these types of vehicles, the approach warning (\rightarrow P.201) may not operate.

When a vehicle cuts in front of your

- vehicle or changes lanes away from your vehicle extremely slowly or quickly
- When changing lanes
- When a preceding vehicle is driving at a low speed
- When a vehicle is stopped in the same lane as the vehicle
- When a motorcycle is traveling in the same lane as the vehicle

Conditions under which the system may not operate correctly

In the following situations, operate the brake pedal (or accelerator pedal, depending on the situation) as necessary.

As the sensor may not be able to correctly detect a vehicle, the system may not operate properly.

- When a preceding vehicle brakes suddenly
- When changing lanes at low speeds, such as in a traffic jam

Approach warning

In situations where the vehicle approaches a preceding vehicle and the system cannot provide sufficient deceleration, such as if a vehicle cuts in front of the vehicle, a warning display will flash and a buzzer will sound to alert the driver. Depress the brake pedal to ensure appropriate vehicle-to-vehicle distance.

■ Warnings may not occur when

In the following situations, the warning may not operate even though the vehicle-to-vehicle distance is short.

• When the preceding vehicle is

traveling at the same speed or faster than your vehicle

- When the preceding vehicle is traveling at an extremely low speed
- Immediately after the vehicle speed has been set
- When the accelerator pedal is depressed

Curve speed reduction function

When a curve is detected, the vehicle speed will begin being reduced. When the curve ends, the vehicle speed reduction will end.

Depending on the situation, the vehicle speed will then return to the set vehicle speed.

In situations where vehicle-to-vehicle distance control needs to operate, such as when a preceding vehicle cuts in front of your vehicle, the curve speed reduction function will be canceled.



Situations in which the curve speed reduction function may not operate

In situations such as the following, the curve speed reduction function may not operate:

- When the vehicle is being driven around a gentle curve
- When the accelerator pedal is being depressed
- When the vehicle is being driven around an extremely short curve

Support for lane change

If your vehicle is being driven at approximately 80 km/h (50 mph) or more and a lane change to the passing lane is performed, when the turn signal lever is operated and the lane is changed, the vehicle will accelerate up to the set speed to assist in overtaking.


The system's recognition of which lane is the passing lane may be based solely on the location of the steering wheel in the vehicle (left-hand drive/right-hand drive). If the vehicle is driven in a location where the passing lane is on the opposite side of that where the vehicle was originally sold, the vehicle may accelerate when the turn signal lever is operated away from the passing lane. (e.g. The vehicle was manufactured for a right-hand traffic location, but is being driven in a left-hand traffic location. The vehicle may accelerate when the turn signal lever is operated to the right.)

If your vehicle is being driven at approximately 80 km/h (50 mph) or more and the lane is changed to that with a vehicle traveling slower than your vehicle, when the turn signal lever is operated the vehicle will gradually decelerate to assist in changing lanes.

Dynamic Radar Cruise Control with Road Sign Assist


When RSA function is enabled and the dynamic radar cruise control system is operating, if a speed limit sign is detected, the detected speed limit will be displayed with an up/down arrow. The set speed can be increased/reduced to the detected speed limit by pressing and holding the "+" switch or "-" switch

When the set speed is lower than the detected speed limit

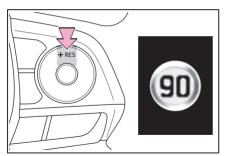

Press and hold the "+" switch.

When the set speed is higher than the detected speed limit

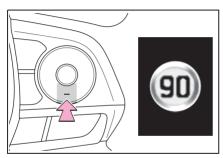

Press and hold the "-" switch.

■ The dynamic radar cruise control with road sign assist may not operate properly when

As the dynamic radar cruise control with road sign assist may not operate properly in situations where the RSA may not operate or cannot detect signs correctly (\rightarrow P.209), when using this function, make sure to confirm the actual speed limit

In the following situations, the set speed may not change to the detected speed limit by pressing and holding the "+" switch or "-" switch:

- When speed limit information is not available
- When the detected speed limit is the same as the set speed
- When the detected speed limit is outside of the speed range which the dynamic radar cruise control system can operate

Changing Dynamic radar cruise control settings

 The settings of Dynamic radar cruise control can be changed through customize settings. (→P.376)

Cruise control

The vehicle can be driven at a set speed even if the accelerator pedal is not depressed.

Use the cruise control only on highways and expressways.

A

WARNING

For safe use

- Driving safely is solely the responsibility of the driver. Therefore, do not overly rely on this system. The driver is solely responsible for paying attention to the vehicle's surroundings and driving safely.
- Set the speed appropriately according to the speed limit, traffic flow, road conditions, weather conditions, etc. The driver is responsible for confirming the set speed.
- Situations in which cruise con-

Do not use the cruise control in the following situations. As the system will not be able to provide appropriate control, using it may lead to an accident resulting in death or serious injury.


- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep downhills, or where there are sudden changes between sharp up and down gradients

Vehicle speed may exceed the set speed when driving down a steep hill.

When it is necessary to disable the system: →P.169


System Components

■ Meter display

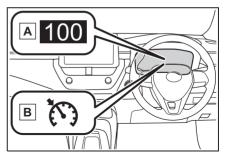

- A Set vehicle speed
- B Cruise control indicator

Switches

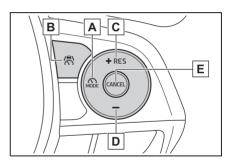


- A Driving assist mode select switch
- **B** Driving assist switch
- c "+" switch / "RES" switch
- D "-" switch
- E Cancel switch

Using the cruise control

Setting the vehicle speed


 Press the driving assist mode select switch to select cruise control

The cruise control indicator will illuminate

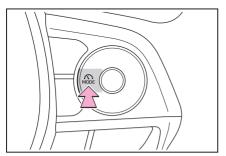

2 Using the accelerator pedal, accelerate to the desired vehicle speed (approximately 30 km/h [20 mph] or more), and press the driving assist switch to set the set vehicle speed.


The vehicle speed at the moment the switch is released will be the set vehicle speed.

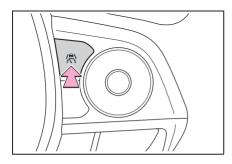

Adjusting the set vehicle speed

Adjusting the set vehicle speed using the switches

To change the set vehicle speed, press the "+" or "-" switch until the desired speed is displayed.

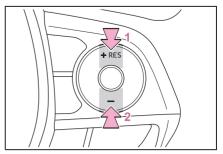

- 1 Increase set vehicle speed
- 2 Decrease set vehicle speed


The set vehicle speed will increase or decrease as follows:

Fine adjustment: By 1 km/h (0.6 mph) or 1 mph (1.6 km/h) each time the switch is pressed

Large adjustment: Increases continuously while the switch is pressed and held

- Increasing the set vehicle speed using the accelerator pedal
- Depress the accelerator pedal to accelerate the vehicle to the desired vehicle speed.
- 2 Press the "+" switch.

Canceling/resuming control

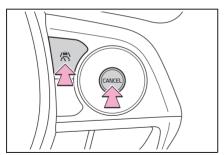

 Press the cancel switch or driving assist switch to cancel control

Control will also be canceled if the brake pedal is depressed.

2 Press the "RES" switch to resume control.

Automatic cancellation of the cruise control

In the following situations, the cruise control will be canceled automatically:

- When the vehicle speed drops approximately 16 km/h (10 mph) or more below the set vehicle speed
- When the vehicle speed drops below approximately 30 km/h (20 mph)
- When the brake control or output restriction control of a driving support system operates (For example: PCS, drive-start control)
- When the parking brake has been operated
- Situations in which some or all of the functions of the system cannot operate: →P 174

Emergency Driving Stop System

The emergency driving stop system is a system which automatically decelerates and stops the vehicle within its lane if the driver becomes unable to continue driving the vehicle, such as if they have suffered a medical emergency, etc.

During LTA (Lane Tracing Assist) control, if the system does not detect driving operations, such as if the driver is not holding the steering wheel, and determines the driver is not responsive, the vehicle will be decelerated and stopped within its current lane to help avoid a collision or reduce the impact of a collision.



WARNING

For safe use

Driving safely is solely the responsibility of the driver. Pay careful attention to the surrounding conditions in order to ensure safe driving. The emergency driving stop system is designed to provide support in an emergency where it is difficult for the driver to continue driving, such as if they have had a medical emergency. It is not designed to support driving while drowsy or in poor physical health, or inattentive driving.

WARNING

- Although the emergency driving stop system is designed to decelerate the vehicle within its lane to help avoid or help reduce the impact of a collision if the system determines that it is difficult for the driver to continue driving, its effectiveness may change according to various conditions. Therefore. it may not always be able to achieve the same level of performance. Also, if the operating conditions are not met, this function will not operate.
- After the emergency driving stop system operates, if driving becomes possible again, immediately begin driving again or, if necessary, park the vehicle on the shoulder of the road and set a warning reflector and flare to warn other drivers of your stopped vehicle
- After this system operates, passengers should attend to the driver as necessary and take appropriate hazard prevention measures, such as moving to a place where safety can be ensured, such as the shoulder of the road or behind a quard-
- This system detects the condition of the driver through the operation of the steering wheel. This system may operate if the driver is aware but intentionally and continuously does not operate the vehicle. Also, the system may not operate if it cannot determine that the driver is not responsive, such as if they are leaning on the steering wheel.

Summary of the system

Operation of this system is separated into 4 control states. Through control state "warning phase 1" and "warning phase 2", the system determines if the driver is aware and responsive while outputting a warning and controlling the vehicle speed. If the system determines the driver is not responsive, it will operate in control state "deceleration stop phase" and "stop hold phase" and decelerate and stop the vehicle. It will then operate continuously in "stop hold phase".

Operating conditions

This system operates when all of the following conditions are met:

- When the LTA is on
- When the vehicle speed is approximately 50 km/h (30 mph) or more
- Operation cancelation conditions In the following situations, system operation will be canceled.
- When LTA control has been canceled (the LTA switch has been pressed,
- When the dynamic radar cruise control has been canceled
- When driver operations are detected (the steering wheel is held, the brake pedal, accelerator pedal, parking brake, hazard light switch, or turn signal lever is operated)
- When the driving assist switch is pressed while in the stop and hold phase
- When the power switch has been turned from ON to off
- Situations in which some or all of the functions of the system cannot operate: →P.174

LTA control when operation is canceled

When emergency driving stop system

operation is canceled, LTA control may also be canceled

Warning phase 1

If driving operations are not detected after the hands off steering wheel warning operates, a buzzer will sound intermittently and a message will be displayed to warn the driver, and the system will judge if the driver is responsive or not. If driving operations, such as holding the steering wheel, are not performed within a certain amount of time, the system will enter warning phase 2.

Warning phase 2

After entering warning phase 2, a buzzer will sound in short intervals and a message will be displayed to warn the driver, and the vehicle will slowly decelerate. If driving operations, such as holding the steering wheel, are not performed within a certain amount of time, the system will determine that the driver is not responsive and enter the deceleration stop phase.

The audio system will be muted until the driver becomes responsive.

When the vehicle is decelerating, the brake lights may illuminate, depending on the road conditions, etc.

After the vehicle has decelerated a certain amount, the emergency flashers (hazard lights) will flash.

Deceleration stop phase

After the driver is judged as being not responsive, a buzzer will sound continuously and a message will be displayed to warn the driver, and the vehicle will slowly decelerate and stop. While the vehicle is decelerating, the emergency flashers (hazard lights) will flash to warn other drivers of the emergency.

Stop hold phase

After the vehicle is stopped, the parking brake will be applied automatically. After entering the stop and hold phase, the buzzer will continue sounding continuously, the emergency flashers (hazard lights) will flash to warn other drivers of the emergency, and the doors will unlock.

RSA (Road Sign Assist)

The RSA system detects specific road signs using the front camera and warns the driver via displays and buzzers.

A

WARNING

- For safe use
- Driving safely is solely the responsibility of the driver. Pay careful attention to the surrounding conditions in order to ensure safe driving.
- Do not rely solely upon the RSA. The RSA assists the driver by providing road sign information, but it is not a replacement for the driver's own vision and awareness. Driving safely is solely the responsibility of the driver. Pay careful attention to the surrounding conditions in order to ensure safe driving.
- Situations in which the RSA should not be used
- When it is necessary to disable the system: →P.169
- Situations in which the system may not operate properly
- Situations in which the sensors may not operate properly: →P.172

Display Function

- When the front camera detects a sign, the sign will be displayed on the display.
- Multiple signs can be displayed.

Depending on the specifications of the vehicle, the number of displayed signs may be limited.

■ Operating conditions of sign display

Signs will be displayed when the following conditions are met:

- The system has detected a sign In the following situations, a displayed sign may stop being displayed:
- When a new sign has not been detected for a certain distance
- When the system determines that the road being driven on has changed, such as after a left or right turn

■ Situations in which the display function may not operate properly

In the following situations, the RSA system may not operate properly and may not detect signs or may display the incorrect sign. However, this does not indicate a malfunction

- When a sign is dirty, faded, tilted or bent
- When the contrast of an electronic sign is low
- When all or part of a sign is hidden by a tree, utility pole, etc.
- When a sign is detected by the front camera for a short amount of time
- When the driving state (turning, changing lanes, etc.) is judged incorrectly
- When a sign is immediately after a freeway junction or in an adjacent lane just before merging
- When stickers are attached to the rear of a preceding vehicle
- When a sign similar to a system compatible sign is detected as a system compatible sign
- When a speed limit sign for a frontage road is within detection range of the front camera
- When driving around a roundabout
- When a sign intended for trucks, etc. is detected

- When the navigation system map data is out of date
- When the navigation system cannot be used

In this case, the speed limit signs displayed on the multi-information display and navigation system display may differ

Notification function

In the following situations, the RSA system will output a warning to notify the driver.

- If the vehicle speed exceeds the speed warning threshold of the speed limit sign displayed on the display, the sign display will be emphasized and a buzzer will sound.
- Operating conditions of the notification functions
- Excess speed notification function

This function will operate when the following condition is met:


 A speed limit road sign is recognized by the system.

Types of road signs supported

 The following types of road signs can be displayed.

However, non-standard or recently introduced traffic signs may not be displayed.


Speed limit road signs*



- *: No speed limt information is displayed when a speed limit sign is not available.
- ► Speed limit with supplemental mark*



- *: Displayed simultaneously with a speed limit sign.
- Depending on the specifications of the vehicle, signs may be displayed overlapping.

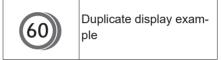

Changing RSA settings

The following settings of the RSA can be changed through customize settings. (\rightarrow P.376)

BSM (Blind Spot Monitor)


The Blind Spot Monitor is a system that uses rear side radar sensors installed on the inner side of the rear bumper on the left and right side to assist the driver in confirming safety when changing lanes.

A

WARNING

- Cautions regarding the use of the system
- The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.
- The Blind Spot Monitor is a supplementary function which alerts the driver that a vehicle is in a blind spot of the outside rear view mirrors or is approaching rapidly from behind into a blind spot. Do not overly rely on the Blind Spot Monitor. As the function cannot judge if it is safe to change lanes, over reliance could lead to an accident resulting in death or serious injury. As the system may not function correctly under certain conditions, the driver's own visual confirmation of safety is necessary.

System components

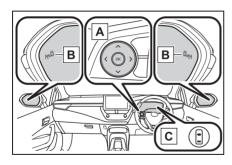

A Meter control switches

Turning the Blind Spot Monitor on/off.

B Outside rear view mirror indicators

When a vehicle is detected in a blind spot of the outside rear view mirrors or approaching rapidly from behind into a blind spot, the outside rear view mirror indicator on the detected side will illuminate. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator flashes.

© Driving assist information indicator

Illuminates when the Blind Spot Monitor is turned off. At this time, "Blind Spot Monitor OFF" will be displayed on the multi-information display.

Outside rear view mirror indicator visibility

In strong sunlight, the outside rear view mirror indicator may be difficult to see.

■ Customization

Some functions can be customized. $(\rightarrow P.376)$



WARNING


■ To ensure the system can operate properly

Blind Spot Monitor sensors are installed behind the left and right sides of the rear bumper respectively. Observe the following to ensure the Blind Spot Monitor can operate correctly.

WARNING

Keep the sensors and the surrounding areas on the rear bumper clean at all times.

If a sensor or its surrounding area on the rear bumper is dirty or covered with snow, the Blind Spot Monitor may not operate and a warning message will be displayed. In this situation. clear off the dirt or snow and drive the vehicle with the operation conditions of the BSM function (→P.214) satisfied for approximately 10 minutes. If the warning message does not disappear, have the vehicle inspected by your Toyota dealer.

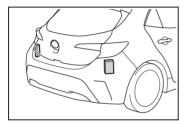

- Do not attach accessories, stickers (including transparent stickers), aluminum tape, etc. to a sensor or its surrounding area on the rear bumper.
- Do not subject a sensor or its surrounding area on the rear bumper to a strong impact. If a sensor is moved even slightly off position, the system may malfunction and vehicles may not be detected correctly. In the following situations, have your vehicle inspected by your Toyota dealer.
- · A sensor or its surrounding area is subject to a strong impact.
- If the surrounding area of a sensor is scratched or dented, or part of them has become disconnected

- Do not disassemble the sensor
- Do not modify the sensor or surrounding area on the rear bumper.
- If a sensor or the rear bumper needs to be removed/installed or replaced, contact your Toyota dealer
- Do not paint the rear bumper any color other than an official Tovota color

Turning the Blind Spot Monitor on/off

The Blind Spot Monitor can be enabled/disabled on a of the multi-information display. (→P.376)


When the Blind Spot Monitor function is off, the driving assist information indicator (→P.70) will illuminate. At this time, "Blind Spot Monitor OFF" will be displayed on the multi-information display.

Each time the power switch is turned to ON, the Blind Spot Monitor is enabled

Blind Spot Monitor operation

Objects that can be detected while driving


The Blind Spot Monitor uses rear side radar sensors to detect the following vehicles traveling in adjacent lanes and advises the driver of the presence of such vehicles via the indicators on the outside rear view mirrors

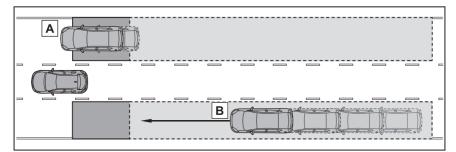

- A Vehicles that are traveling in areas that are not visible using the outside rear view mirrors (the blind spots)
- B Vehicles that are approaching rapidly from behind in areas that are not visible using the outside rear view mirrors (the blind spots)

■ Detection range while driving

The areas that vehicles can be detected in are outlined below.

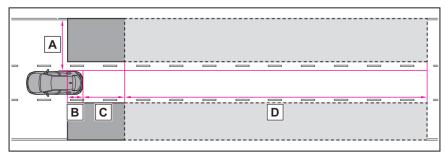

The range of each detection area is:

- Approximately 0.5 m (1.6 ft.) to 3.5 m (11.5 ft.) from either side of the vehicle*1
- B Approximately 1 m (3.3 ft.) forward of the rear bumper
- C Approximately 3 m (9.8 ft.) from the rear bumper
- D Approximately 3 m (9.8 ft.) to 60 m (197 ft.) from the rear bumper 2

^{*1:} The area between the side of the vehicle and 0.5 m (1.6 ft.) from the side of the

vehicle cannot be detected.

*2: The greater the difference in speed between your vehicle and the detected vehicle is, the farther away the vehicle will be detected, causing the outside rear view mirror indicator to illuminate or flash.

■ The Blind Spot Monitor is operational when

The Blind Spot Monitor is operational when all of the following conditions are met:

- The power switch is in ON.
- The Blind Spot Monitor is on.
- The shift lever is in a position other than R.
- The vehicle speed is approximately 10km/h (7 mph) or more.

■ The Blind Spot Monitor will detect a vehicle when

The Blind Spot Monitor will detect a vehicle present in the detection area in the following situations:

- A vehicle in an adjacent lane overtakes your vehicle.
- You overtake a vehicle in an adjacent lane slowly.
- Another vehicle enters the detection area when it changes lanes.

■ Situations in which the blind spot monitor cannot detect vehicles.

The blind spot monitor cannot detect the following vehicles and other objects:

- Small motorcycles, bicycles, pedestrians, etc.*
- Vehicles traveling in the opposite direction
- Guardrails, walls, signs, parked vehicles and similar stationary objects*
- Following vehicles that are in the same lane*
- Vehicles traveling 2 lanes away from your vehicle*
- Vehicles which are being overtaken rapidly by your vehicle*

- *: Depending on the conditions, detection of a vehicle and/or object may
- Conditions under which the System may not function correctly
- The Blind Spot Monitor may not detect vehicles correctly in the following situations:
- When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
- When mud, snow, ice, a sticker, etc. is covering the sensor or surrounding area on the rear bumper
- When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
- When multiple vehicles are approaching with only a small gap between each vehicle
- When the distance between your vehicle and a following vehicle is short
- When there is a significant difference in speed between your vehicle and the vehicle that enters the detection area
- When the difference in speed between your vehicle and another vehicle is changing
- When a vehicle enters a detection area traveling at about the same speed as your vehicle
- As your vehicle starts from a stop, a vehicle remains in the detection area
- When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
- When driving on roads with sharp bends, consecutive curves, or uneven surfaces
- When vehicle lanes are wide, or when driving on the edge of a lane, and the vehicle in an adjacent lane is far away from your vehicle
- · When an accessory (such as a bicycle

- carrier) is installed to the rear of the vehicle
- When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
- Immediately after the Blind Spot Monitor is turned on
- · When towing with the vehicle
- Instances of the Blind Spot Monitor unnecessarily detecting a vehicle and/or object may increase in the following situations:
- When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
- When the distance between your vehicle and a guardrail, wall, etc. that enters the detection area is short
- When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
- When vehicle lanes are narrow, or when driving on the edge of a lane, and a vehicle traveling in a lane other than the adjacent lanes enters the detection area
- When driving on roads with sharp bends, consecutive curves, or uneven surfaces
- When the tires are slipping or spinning
- When the distance between your vehicle and a following vehicle is short
- When an accessory (such as a bicycle carrier) is installed to the rear of the vehicle
- · When towing with the vehicle


Toyota parking assist-sensor*

*: If equipped

The distance from your vehicle to objects, such as a wall, when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the audio system screen and a buzzer. Always check the surrounding area when using this system.

System components

■ Types of sensors

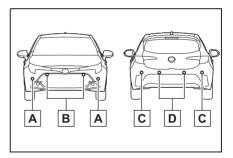

- A Front corner sensors
- **B** Front center sensors
- C Rear corner sensors
- **D** Rear center sensors

■ Display

When the sensors detect an object, such as a wall, a graphic is shown on the audio system screen depending on the position and distance to the object.



- A Front corner sensor detection
- **B** Front center sensor detection
- c Rear corner sensor detection
- D Rear center sensor detection

Turning Toyota parking assist-sensor on/off

Use the meter control switches to enable/disable the Toyota parking assist-sensor. (→P.82, 88)

- ▶ 7-inch display
- 1 Press ∧ or ∨ to select 🌣.
- 2 Press 〈 or 〉 to select P[™] and then press and hold OK .
- ▶ 12.3-inch display
- 1 Press \langle or \rangle to select \diamondsuit .
- 2 Press or to select P[™] and then press OK .

When the Toyota parking assist-sensor function is disabled, the Toyota parking assist-sensor OFF indicator (→P.68) illuminates. To re-enable the system when it was disabled, select on the multi-information display, select P™

and then on. If disabled using this method, the system will not be re-enabled by turning the power switch off and then to ON.

Λ

WARNING

■ Cautions regarding the use of the system

There is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle' surroundings and driving safely.

- To ensure the system can operate properly
- Do not damage the sensors, and always keep them clean.
- Do not attach a sticker or install an electronic component, such as a backlit license plate (especially fluorescent type), fog lights, fender pole or wireless antenna near a radar sensor
- Do not subject the surrounding area of the sensor to a strong impact. If subjected to an impact, have the vehicle inspected by your Toyota dealer. If the front or rear bumper needs to be removed/installed or replaced, contact your Toyota dealer.
- Do not modify, disassemble or paint the sensors.
- Do not attach a license plate cover.
- Keep your tires properly inflated.

■When to disable the function

In the following situations, disable the function as it may operate even though there is no possibility of a collision.

 Failing to observe the warnings above.

WARNING

- A non-genuine Toyota suspension (lowered suspension, etc.) is installed
- Notes when washing the vehicle

Do not apply intensive bursts of water or steam to the sensor area

Doing so may result in the sensor malfunctioning.

- When using a high pressure washer to wash the vehicle, do not spray the sensors directly, as doing so may cause a sensor to malfunction
- When using steam to clean the vehicle, do not direct steam too close to the sensors as doing so may cause a sensor to malfunction.

■ The system can be operated when

- The power switch is in ON.
- Toyota parking assist-sensor function is on
- The vehicle speed is less than about 10 km/h (6 mph).
- A shift lever other than P is selected.
- If "Parking Assist Unavailable Sensor Blocked" is displayed on the multi-information display

A sensor may be covered with water droplets, ice, snow, dirt, etc. Remove the water droplets, ice, snow, dirt, etc. from the sensor to return the system to normal

If the malfunction display is displayed even though the sensors are not covered with water droplets, ice, snow, or dirt, the sensors may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

■ If "System Stopped See Owner's Manual" is displayed on the multi-information display

Water may be continuously flowing over the sensor surface, such as in

a heavy rain. When the system determines that it is normal, the system will return to normal

■ If "System Malfunction Visit Your Dealer" is displayed on the multi-information display

The sensors may be malfunctioning or there may be a problem with the voltage. Have the vehicle inspected by your Toyota dealer.

■ Sensor detection information

The following situations may occur during use.

- The sensors may be able to only detect objects near the front and rear bumpers.
- Depending on the shape of the object and other factors, the detection distance may shorten, or detection may be impossible.
- If an object is extremely close to a sensor, it may not be detected.
- There will be a short delay between object detection and display. Even at low speeds, there is a possibility that the object will come within the sensor's detection areas before the display is shown and the warning beep sounds
- It might be difficult to hear the buzzer due to the volume of the audio system or air flow noise of the air conditioning system.
- It may be difficult to hear the buzzer if buzzers for other systems are soundina.


■ Situations in which the system may not operate properly

Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect objects. Particular instances where this may occur are listed below.

- There is dirt. snow or ice on a sensor. (Cleaning the sensors will resolve this problem.)
- A sensor is frozen. (Thawing the area

will resolve this problem.)
In especially cold weather, if a sensor is frozen the sensor display may be displayed abnormally, or objects, such as a wall, may not be detected.

- A sensor is covered in any way.
- When a sensor or the area around a sensor is extremely hot or cold.

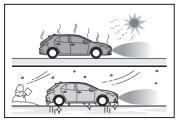


- On an extremely bumpy road, on an incline, on gravel, or on grass.
- When vehicle horns, vehicle detectors, motorcycle engines, air brakes of large vehicles, the clearance sonar of other vehicles or other devices which produce ultrasonic waves are near the vehicle
- A sensor is coated with a sheet of spray or heavy rain.
- If objects draw too close to the sensor.
- When a pedestrian is wearing clothing that does not reflect ultrasonic waves (ex. skirts with gathers or frills).
- When objects that are not perpendicular to the ground, not perpendicular to the vehicle traveling direction, uneven, or waving are in the detection range.
- Strong wind is blowing
- When driving in inclement weather such as fog, snow or a sandstorm
- When an object that cannot be detected is between the vehicle and a detected object
- If an object such as a vehicle, motorcycle, bicycle or pedestrian cuts in front of the vehicle or runs out from the side of the vehicle
- If the orientation of a sensor has been

- changed due to a collision or other impact
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier,or snow plow
- If the front of the vehicle is raised or lowered due to the carried load
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When a tire chains, compact spare tire or an emergency tire puncture repair kit is used
- Situations in which the system may operate even if there is no possibility of a collision

In some situations, such as the following, the system may operate even though there is no possibility of a collision

When driving on a narrow road

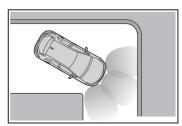

- When driving toward a banner, flag,low-hanging branch or boom barrier(such as those used at railroad crossings, toll gates and parking lots)
- When there is a rut or hole in the surface of the road
- When driving on a metal cover (grating), such as those used for drainage ditches
- When driving up or down a steep slope
- If a sensor is hit by a large amount of water, such as when driving on a flooded road

- There is dirt, snow, water drops or ice on a sensor. (Cleaning the sensors will resolve this problem.)
- A sensor is coated with a sheet of spray or heavy rain
- When driving in inclement weather such as fog, snow or a sandstorm
- When strong winds are blowing



- When vehicle horns, vehicle detectors, motorcycle engines, air brakes of large vehicles, the clearance sonar of other vehicles or other devices which produce ultrasonic waves are near the vehicle
- If the front of the vehicle is raised or lowered due to the carried load
- If the orientation of a sensor has been changed due to a collision or other impact
- The vehicle is approaching a tall or curved curb
- Driving close to columns (H-shaped steel beams, etc.) in multistory parking garages, construction sites, etc.
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- On an extremely bumpy road, on an incline, on gravel, or on grass



- When a tire chains, compact spare tire or an emergency tire puncture repair kit is used
- Objects which the system may not be properly detected


The shape of the object may prevent the sensor from detecting it. Pay particular attention to the following objects:

- Wires, fences, ropes, etc.
- Cotton, snow and other materials that absorb sound waves
- Sharply-angled objects
- Low objects
- Tall objects with upper sections projecting outwards in the direction of your vehicle

People may not be detected if they are wearing certain types of clothing.

Sensor detection display, object distance

■ Detection range of the sensors

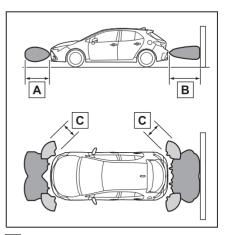

- A Approximately 100 cm (3.3 ft.)
- **B** Approximately 150 cm (4.9 ft.)
- C Approximately 60 cm (2.0 ft.)

The diagram shows the detection range of the sensors. Note that the sensors

cannot detect objects that are extremely close to the vehicle.

The range of the sensors may change depending on the shape of the object, etc.

■ The distance and buzzer

Approximate distance to obstacle	Buzzer
Front center sensor: 100 cm to 60 cm (3.3 ft. to 2.0 ft.)* Rear center sensor: 150 cm to 60 cm (4.9 ft. to 2.0 ft.)*	Slow
60 cm to 45 cm (2.0 ft. to 1.5 ft.)*	Medium
45 cm to 30 cm (1.5 ft. to 1.0 ft.)*	Fast
30 cm to 15 cm (1.0 ft. to 0.5 ft.)	Continuous
Less than 15 cm (0.5 ft)	

^{*:} Automatic buzzer mute function is enabled. (→P.220)

Buzzer operation and distance to an object

A buzzer sounds when the sensors are operating.

- The buzzer beeps faster as the vehicle approaches an object.
 When the vehicle comes within approximately 30 cm (1.0 ft.) of the object, the buzzer sounds continuously.
- When 2 or more objects are detected simultaneously, the buzzer sounds for the nearest object. If one or more objects come within approximately 30 cm (1.0 ft.) of the vehicle, the buzzer will repeat a long tone, followed by fast beeps.
- Automatic buzzer mute function: After a buzzer begins sounding, if the distance between the vehicle and the detected object does

not become shorter, the buzzer will be muted automatically. (However, if the distance between the vehicle and object is 30 cm (1.0 ft.) or less, this function will not operate.)

Adjusting the buzzer volume

The buzzer volume can be adjusted on the multi-information display.

Use the meter control switches to

- ▶ 7-inch display
- 1 Press ∧ or ∨ to select 🌣.

change settings. $(\rightarrow P.81, 87)$

- 2 Press 〈 or 〉 to select P[™] and then press and hold OK .
- 3 Select the volume and then press OK .

Each time the switch is pressed, the volume level will change between 1, 2, and 3.

- ▶ 12.3-inch display
- 1 Press \langle or \rangle to select \clubsuit .
- 2 Press ∧ or ∨ to select P[™] and then press and hold OK .
- 3 Select the volume and then press OK .

Each time the switch is pressed, the volume level will change between 1, 2, and 3.

■ Muting a buzzer

A mute button will be displayed on the multi-information display when an object is detected. To mute the

buzzer, press OK.

The buzzers for the Toyota parking assist-sensor and RCTA function (if equipped) will be muted simultaneously.

Mute will be canceled automatically in the following situations:

- When the shift lever is changed.
- When the vehicle speed exceeds a certain speed.
- When the operating function is temporarily canceled.
- When the operating function is disabled manually.
- When the power switch is turned off.

RCTA (Rear Cross Traffic Alert) function*

*: If equipped

The RCTA function uses the BSM rear side radar sensors installed behind the rear bumper. This function is intended to assist the driver in checking areas that are not easily visible when backing up.

A

WARNING


■ Cautions regarding the use of the system

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings. The RCTA function is only a supplementary function which alerts the driver that a vehicle is approaching from the right or left at the rear of the vehicle. As the RCTA function may not function correctly under certain conditions, the driver's own visual confirmation of safety is necessary. Over reliance on this function may lead to an accident resulting death or serious injury.

■ To ensure the system can operate properly

→P 211

System components

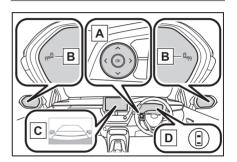

A Meter control switches
Turning the RCTA function on/off.
When the RCTA function is disabled,
the RCTA OFF indicator illuminates.

Outside rear view mirror indicators

If a vehicle is detected as approaching from the left or right behind the vehicle, both outside rear view mirror indicators will blink and a buzzer will sound

C Audio system screen

If a vehicle approaching from the right or left at the rear of the vehicle is detected, the RCTA icon (→P.223) for the detected side will be displayed on the audio system screen. This illustration shows an example of a vehicle approaching from both sides of the vehicle.

D Driving assist information indicator

When the RCTA is off, "Rear Cross Traffic Alert OFF" will be displayed on the multi-information display.

Turning the RCTA function on/off

The RCTA can be enabled/disabled on

on the multi-information display. (→P.376)

When the RCTA function is off, the driving assist information indicator (→P.70) will illuminate. At this time, "Rear Cross Traffic Alert OFF" will be displayed on the multi-information display.

Each time the power switch is turned to ON, the RCTA is enabled.

Outside rear view mirror indicator visibility

In strong sunlight, the outside rear view mirror indicator may be difficult to see.

■ Hearing the RCTA buzzer

The RCTA buzzer may be difficult to hear over loud noises, such as if the audio system volume is high.


Rear side radar sensors

→P.211

RCTA function

■ Operation of the RCTA function

The RCTA function uses rear side radar sensors to detect vehicles approaching from the right or left at the rear of the vehicle and alerts the driver of the presence of such vehicles by flashing the outside rear view mirror indicators and sounding a buzzer.

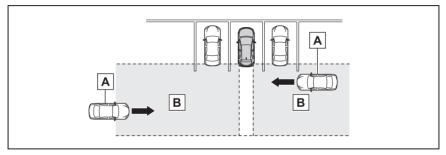


- A Approaching vehicles
- **B** Detection areas of approaching vehicles

■ RCTA icon display


When a vehicle approaching from the right or left at the rear of the vehicle is detected, the following will be displayed on the audio system screen.

Example: Vehicles are approaching from both sides of the vehicle

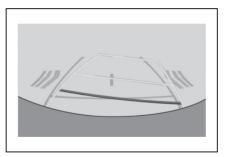

■ RCTA function detection areas

The areas that vehicles can be detected in are outlined below.

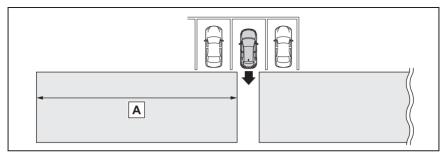

The buzzer can alert the driver of faster vehicles approaching from farther away.

Example:

Approaching vehicle speed	A Approximate alert distance
56 km/h (34 mph) (fast)	40 m (131 ft.)
8 km/h (5 mph) (slow)	5.5 m (18 ft.)

■ The RCTA function is operational when

The RCTA function operates when all of the following conditions are met:

- The power switch is in ON.
- The RCTA function is on.
- The shift lever is in R.
- The vehicle speed is less than approximately 15 km/h (9 mph).
- The approaching vehicle speed is between approximately 8 km/h (5 mph) and 56 km/h (34 mph).

■ Setting the buzzer volume

The buzzer volume can be adjusted on the multi-information display.

The volume of the RCTA buzzer can be adjusted on

of the multi-information display. (→P.82, 88)

■ Muting a buzzer temporarily

When an object is detected, the temporary mute switch is displayed on the multi-information display.

Select OK to mute a buzzer of the Toyota parking assist-sensor and RCTA, all together.


Mute will be canceled automatically in the following situations:

- When the shift lever is changed.
- When the vehicle speed exceeds a certain speed.
- When there is a malfunction in a sensor or the system is temporarily unavailable.
- When the operating function is disabled manually.
- When the power switch is turned off.

Conditions under which the system will not detect a vehicle

The RCTA function is not designed to detect the following types of vehicles and/or objects:

- Vehicles approaching from directly behind
- Vehicles backing up in a parking space next to your vehicle
- Vehicles that the sensors cannot detect due to obstructions

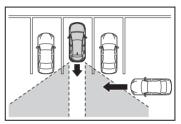


- Guardrails, walls, signs, parked vehicles and similar stationary objects*
- Small motorcycles, bicycles, pedestrians, etc.*
- Vehicles moving away from your vehicle
- Vehicles approaching from the parking spaces next to your vehicle*
- The distance between the sensor and approaching vehicle gets too close
- *: Depending on the conditions, detection of a vehicle and/or object may

■ Situations in which the system may not operate properly


The RCTA function may not detect vehicles correctly in the following situations:

 When the sensor is misaligned due to a strong impact to the sensor or its surrounding area

- When mud, snow, ice, a sticker, etc., is covering the sensor or surrounding area on the position above the rear bumper
- When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
- When multiple vehicles are approaching with only a small gap between each vehicle
- When a vehicle is approaching at high speed
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow
- When backing up on a slope with a sharp change in grade

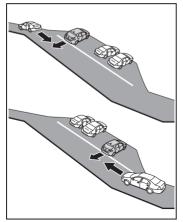


 When backing out of a sharp angle parking spot

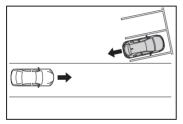


Immediately after the RCTA function is turned on

- Immediately after the hybrid system is started with the RCTA function on
- When the sensors cannot detect a vehicle due to obstructions
- When towing a trailer
- When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
- When a sensor or the area around a sensor is extremely hot or cold
- If the suspension has been modified or tires of a size other than specified are installed
- If the front of the vehicle is raised or lowered due to the carried load
- When turning while backing up

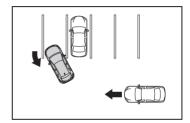


When a vehicle turns into the detection area

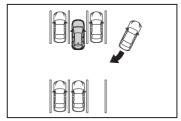


Situations in which the system may operate even if there is no possibility of a collision

Instances of the RCTA function unnecessary detecting a vehicle and/or object may increase in the following situations:


 When the parking space faces a street and vehicles are being driven on the street

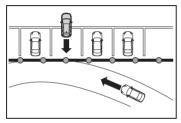


When the distance between your vehicle and metal objects, such as a guardrail, wall, sign, or parked vehicle, which may reflect electrical waves toward the rear of the vehicle, is short

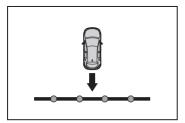

- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow
- When a vehicle passes by the side of your vehicle

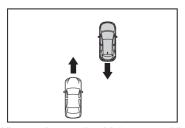

 When a detected vehicle turns while approaching the vehicle

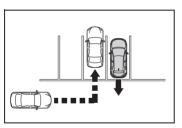

- When there are spinning objects near your vehicle such as the fan of an air conditioning unit
- When water is splashed or sprayed toward the rear bumper, such as from a sprinkler
- Moving objects (flags, exhaust fumes, large rain droplets or snowflakes, rain water on the road surface, etc.)
- When the distance between your vehicle and a guardrail, wall, etc., that enters the detection area is short
- Gratings and gutters
- When a sensor or the area around a sensor is extremely hot or cold
- If the suspension has been modified or tires of a size other than specified are installed
- If the front of the vehicle is raised or lowered due to the carried load

PKSB (Parking Support Brake)*

*: If equipped

The Parking Support Brake system consists of the following functions that operate when driving at a low speed or backing up, such as when parking. When the system determines that a collision with a detected object is high, a warning operates to urge the driver to take evasive action. If the system determines that the possibility of a collision with a detected object is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

PKSB (Parking Support Brake) system

 Parking Support Brake function (static objects) (if equipped)

Ultrasonic sensors are used to detect static objects, such as a wall, in the detection area when driving at a low speed or backing up. (→P.233)

 Parking Support Brake function (rear-crossing vehicles) (if equipped)

Rear radar sensors are used to detect approaching vehicles in the

detection area behind the vehicle when backing up. $(\rightarrow P.236)$



WARNING

■ Cautions regarding the use of the system

Do not overly rely on the system, as doing so may lead to an accident. Always drive while checking the safety of the surroundings of the vehicle.

Depending on the vehicle and road conditions, weather, etc., the system may not operate.

The detection capabilities of sensors and radars are limited.

Always drive while checking the safety of the surroundings of the vehicle.

- The driver is solely responsible for safe driving. Always drive carefully, taking care to observe your surroundings. The Parking Support Brake system is designed to provide support to lessen the severity of collisions. However, it may not operate in some situations.
- The Parking Support Brake system is not designed to stop the vehicle completely. Additionally, even if the system has stopped the vehicle, it is necessary to depress the brake pedal immediately as brake control will be canceled after approximately 2 seconds.
- It is extremely dangerous to check the system operations by intentionally driving the vehicle into the direction of a wall, etc. Never attempt such actions.

■ When to disable the Parking Support Brake

In the following situations, disable the Parking Support Brake as the system may operate even though there is no possibility of a collision.

WARNING

- When inspecting the vehicle using a chassis roller, chassis dynamo or free roller
- When loading the vehicle onto a boat, truck or other transport vessel
- If the suspension has been modified or tires of a size other than specified are installed
- If the front of the vehicle is raised or. lowered due to the carried load
- When equipment that may obstruct a sensor is installed, such as a towing evelet, bumper protector (an additional trim strip, etc.), bicvcle carrier, or snow plow
- When using automatic car washing. devices
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When the vehicle is driven in a sporty manner or off-road
- When the tires are not properly inflated
- When the tires are very worn
- When a tire chains, compact spare tire or an emergency tire puncture repair kit is used
- During emergency towing
- Precautions for the suspension

If the height or tilt of the vehicle is changed, the sensors may not be able to detect detectable objects and the system may not operate correctly, possibly leading to an accident. Do not modify the suspension.



NOTICE

If "Parking Support Brake Unavailable" is displayed on the multi-information display and the driving assist information indicator is illuminated

If this message is displayed immediately after the power switch is changed to ON, operate the vehicle carefully, paying attention to your surroundings. It may be necessary to drive the vehicle for a certain amount of time before the system returns to normal. (If the system does not return to normal after driving for a while. clean the sensors and their surrounding area on the bumpers.)

Enabling/Disabling the Parking Support Brake

The Parking Support Brake can be enabled/disabled on the multi-information display. All of the Parking Support Brake functions (static objects and rear-crossing vehicles) are enabled/disabled simultaneously.

The Parking Support Brake can be enabled/disabled on the multi-information display.

Use the meter control switches to enable/disable the parking support brake. $(\rightarrow P.81, P.87)$

- 7-inch display
- 1 Press ∧ or ∨ to select 🏚.
- 2 Press \langle or \rangle to select \triangleleft and then press OK.

- ▶ 12.3-inch display
- 1 Press \langle or \rangle to select $\stackrel{\bullet}{\triangle}$.
- 2 Press ∧ or ∨ to select <a>↑
 and then press OK .

When the Parking Support Brake is disabled, the Driving assist information indicator (→P.68) illuminates.

To re-enable the system when it was

disabled, select on the multi-information display, select and then On. If disabled using this method, the system will not be re-enabled by turning

the power switch off and then to ON.

Displays and buzzers for hybrid system output restriction control and brake control

If the hybrid system output restriction control or brake control operates, a buzzer will sound and a message will be displayed on the audio system display (if equipped) and multi-information display, to alert the driver. On vehicles with a head-up display, the head-up display will display the same message as the multi-information display.

Depending on the situation, hybrid system output restriction control will operate to either limit acceleration or restrict output as much as possible.

 Hybrid system output restriction control is operating (acceleration restriction)

Acceleration greater than a certain amount is restricted by the system.

Audio system display: No warning displayed

Multi-information display: "Object Detected Ahead Speed Reduced"

Driving assist information indicator: Not illuminated

Buzzer: Does not sound

 Hybrid system output restriction control is operating (output restricted as much as possible)

The system has determined that stronger-than-normal brake operation is necessary.

Audio system display: "BRAKE!"

Multi-information display: "Brake!"

Driving assist information indicator: Not illuminated

Buzzer: Short beep

Brake control is operating

The system determined that emergency braking is necessary.

Audio system display: "BRAKE!"

Multi-information display: "Brake!"

Driving assist information indicator: Not illuminated

Buzzer: Short beep

Vehicle stopped by system operation

The vehicle has been stopped by brake control operation.

Audio system display: "Press Brake Pedal"

Multi-information display: "Switch to Brake" (If the accelerator pedal is not depressed, "Press Brake Pedal" will be displayed.)

Driving assist information indicator: Illuminated


Buzzer: Short beep

System overview


If the Parking Support Brake determines that a collision with a detected object or pedestrian is possible, the hybrid system output will be restricted to restrain any increase in the vehicle speed. (Hybrid system output restriction control: See figure 2.)

Additionally, if the accelerator pedal continues to be depressed, the brakes will be applied automatically to reduce the vehicle speed. (Brake control: See figure 3.)


• Figure 1: When the PKSB (Parking Support Brake) is disabled

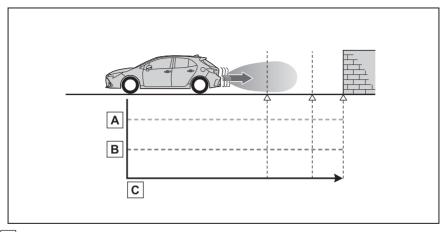

- A Hybrid system output
- **B** Braking force
- C Time
- Figure 2: When hybrid system output restriction control operates

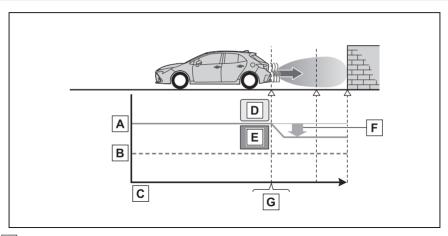

- A Hybrid system output
- **B** Braking force
- C Time
- D Hybrid system output restriction control begins operating
- **E** System determines that possibility of collision with detected object is high
- F Hybrid system output reduced
- **G** Example: Multi-information display: "Brake!"
- Figure 3: When brake control operates

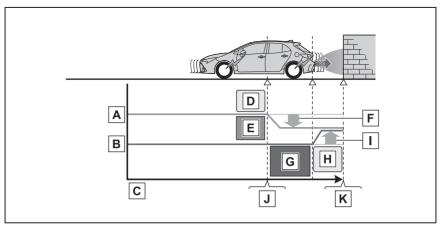

- A Hybrid system output
- **B** Braking force

- C Time
- D Hybrid system output restriction control begins operating
- **E** System determines that possibility of collision with detected object is high
- F Hybrid system output reduced
- **G** System determines that possibility of collision with detected object is extremely high
- H Brake control begins operating
- I Brake control strength increased
- J Example: Multi-information display: "Brake!"
- K Example: Multi-information display: "Switch to Brake"

■ If the Parking Support Brake has operated

If the vehicle is stopped due to operation of the Parking Support Brake, the Parking Support Brake will be disabled and the driving assist information indicator will illuminate. If the Parking Support Brake operates unnecessarily, brake control can be canceled by depressing the brake pedal or waiting for approximately 2 seconds for it to automatically be canceled. Then, the vehicle can be operated by depressing the accelerator pedal.

■ Re-enabling the Parking Support Brake

To re-enable the Parking Support Brake when it is disabled due to operation of the Parking Support Brake, either enable the system again (→P.228), or turn the power switch off and then back to ON. Also in the following situations, the Parking Support Brake will be re-enabled automatically and the driving assist information indicator will turn off. (→P.70, P.70)

- If "Parking Support Brake Unavailable" is displayed on the multi-information display and the driving assist information indicator is illuminated
- A sensor may be covered with water droplets, ice, snow, dirt, etc. Remove the water droplets, ice, snow, dirt, etc.,from the sensor to return the system to normal.
 - Also in a cold weather, if a sensor is frozen, the malfunction display may be displayed or detectable objects may not be detected.
- If the display is displayed even though the dirt is removed from the sensor or the sensor is not dirty, have the vehicle inspected by your Toyota dealer.

■ Toyota parking-assist sensor buzzer

Regardless of whether the Toyota parking-assist sensor is on or off, when the Parking Support Brake is enabled (→P.228) and the brake control and hybrid system output restriction control are operated, the buzzer of the Toyota parking-assist sensor will also sound, ready to notify you of an approximate distance to a detectable object.

Parking Support Brake function (static objects)


*: If equipped

If the sensors detect a static object, such as a wall, in the travelling direction of the vehicle and the system determines that a collision may occur due to the vehicle suddenly moving forward due to an accidental accelerator pedal operation, the vehicle moving the unintended direction due to the wrong shift lever being selected, or while parking or traveling at low speeds, the system will operate to lessen the impact with the detected static object and reduce the resulting damage.


Examples of function operation

This function will operate in situations such as the following if an object is detected in the traveling direction of the vehicle.


■ When traveling at a low speed and the brake pedal is not depressed, or is depressed late

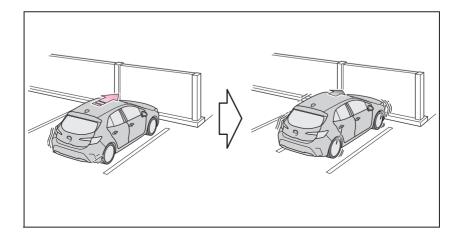

■ When the accelerator pedal is depressed excessively

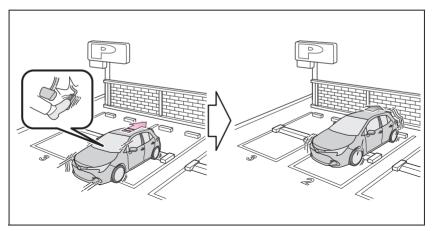

■ When the vehicle moves in the unintended direction due to the wrong shift lever being selected

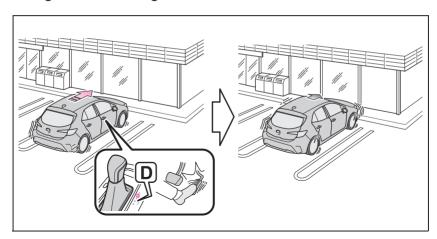

Types of sensors

→P.215



WARNING

■ To ensure the system can operate properly

→P.216

- If the PKSB (Parking Support Brake) operates unnecessarily, such as at a railroad crossing
- →P.232
- Notes when washing the vehicle

→P.217

■ The Parking Support Brake function (static object) will operate when

The function will operate when the driving assist information indicator is not illuminated (→P.69, 70) and all of the following conditions are met:

- Hybrid system output restriction control
- The Parking Support Brake is enabled
- The vehicle speed is approximately 15 km/h (9 mph) or less.
- There is a static object in the traveling direction of the vehicle and approximately 2 to 4 m (6 to 13 ft.) away.
- The Parking Support Brake determines that a stronger-than-normal brake operation is necessary to avoid a collision.
- Brake control
- Hybrid system output restriction control is operating.
- The Parking Support Brake determines that an immediate brake operation is necessary to avoid a collision.

■ The Parking Support Brake function (static objects) will stop operating when

The function will stop operating if any of the following conditions are met:

- Hybrid system output restriction control
- The Parking Support Brake is disabled.
- The system determines that the collision has become avoidable with normal brake operation.
- The static object is no longer approximately 2 to 4 m (6 to 13 ft.) away from the vehicle or in the traveling direction of the vehicle.
- Brake control
- The Parking Support Brake is disabled.
- Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
- · The brake pedal is depressed after

- the vehicle is stopped by brake con-
- The static object is no longer approximately 2 to 4 m (6 to 13 ft.) away from the vehicle or in the traveling direction of the vehicle
- Detection range of the Parking Support Brake function (static objects)

The detection range of the Parking Support Brake function (static objects) differs from the detection range of the Toyota parking assist-sensor. (→P.219) Therefore, even if the Toyota parking assist-sensor detects an object and provides a warning, the Parking Support Brake function (static objects) may not start operating.

- Situations in which the system may not operate properly
- →P.217
- Situations in which the system may operate even if there is no possibility of a collision
- →P.218

Parking Support Brake function (rear-crossing vehicles)*


*: If equipped

If a rear radar sensor detects a vehicle approaching from the right or left at the rear of the vehicle and the system determines that the possibility of a collision is high, this function will perform brake control to reduce the likelihood of an impact with the approaching vehicle.

Examples of function operation

This function will operate in situations such as the following if a vehicle is detected in the traveling direction of the vehicle.

■ When reversing, a vehicle is approaching and the brake pedal is not depressed, or is depressed late

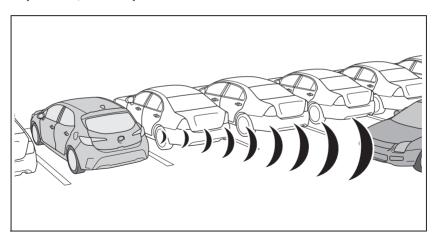

Types of sensors

 \rightarrow P.215



WARNING

To ensure the system can operate properly

→P.216

■ The Parking Support Brake function (rear-crossing vehicles) will operate when

The function will operate when the driving assist information indicator is not illuminated or flashing (→P.69, 70) and all of the following conditions are met:

- Hybrid system output restriction control
- The Parking Support Brake is enabled.
- The vehicle speed is approximately 15

- km/h (9 mph) or less.
- Vehicles which are approaching from the right or left at the rear of the vehicle at a traveling speed of approximately 8 km/h (5 mph) or more.
- The shift lever is in R
- The Parking Support Brake determines that a stronger than normal brake operation is necessary to avoid a collision with an approaching vehicle
- Brake control
- Hybrid system output restriction control is operating.
- The Parking Support Brake determines that an emergency brake operation is necessary to avoid a collision with an approaching vehicle.
- The Parking Support Brake function (rear-crossing vehicles) will stop operating when

The function will stop operating if any of the following conditions are met:

- Hybrid system output restriction control
- The Parking Support Brake is disabled
- The collision becomes avoidable with normal brake operation.
- A vehicle is no longer approaching from the right or left at the rear of the vehicle
- Brake control
- The Parking Support Brake is disabled.
- Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
- The brake pedal is depressed after the vehicle is stopped by brake control.
- A vehicle is no longer approaching from the right or left at the rear of the vehicle.
- Detection area of the Parking Support Brake function (rear-crossing vehicles)

The detection area of the Parking Support Brake function (rear-crossing vehicles) differs from the detection area of the RCTA function (→P.223). Therefore, even if the RCTA function detects a vehicle and provides an alert, the Parking Support Brake function (rear-crossing vehicles) may not start operating.

■ RCTA buzzer

Regardless of whether the RCTA function is on or off, when the PKSB (Parking Support Brake) is enabled and the brake control is operated, a buzzer will sound to alert the driver.

- Situations in which the system may not operate properly
- →P.224
- Situations in which the system may operate even if there is no possibility of a collision
- →P.225

Safe Exit Assist

The safe exit assist is a system that uses rear side radar sensors installed on the inner side of the rear bumper to help occupants judge if an approaching vehicle or bicycle may collide with a door when opening it or cancel opening of the door, to reduce the possibility of a collision.




WARNING

Cautions regarding the use of the system

- The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.
- The safe exit assist is a supplementary system that, when the vehicle is stopped, informs occupants of the existence of approaching vehicles and bicycles. As this system alone cannot be used to judge safety, over-reliance on this system may lead to an accident resulting in death or serious injury.

In certain situations, this system may not function to its fullest extent. Therefore it is necessary for the occupants to visually check for safety directly and using the mirrors.

System components

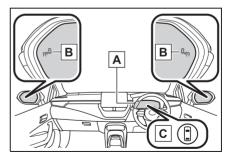

A Multi-information display

Turning the safe exit assist on/off.

When the system determines that the possibility of a collision with a door is high, the target door is displayed on the multi-information display. Also, if the door is opened when the outside rear view mirror indicator is illuminated, a buzzer will sound as a warning.

B Outside rear view mirror indicators

When a vehicle or bicycle which may collide with a door (other than the back door) when opened is detected, the outside rear view mirror indicator on the detected side will illuminate. When a door on the detected side is opened, the outside rear view mirror indicator will flash

© Driving assist information indicator

Illuminates when the safe exit assist is turned off. At this time, "Safe Exit Assist OFF" will be displayed on the multi-information display.

Outside rear view mirror indicator visibility

In strong sunlight, the outside rear view mirror indicator may be difficult to see.

Ruzzer

If the volume setting of the audio system is high or the surrounding area is loud, it may be difficult to hear the buzzer.

Customization

Some functions can be customized. $(\rightarrow P.376)$

A


WARNING

■ To ensure the system can operate properly

Safe exit assist sensors are installed behind the left and right sides of the rear bumper respectively. Observe the following to ensure the safe exit assist can operate correctly.

 Keep the sensors and the surrounding areas on the rear bumper clean at all times.

If a sensor or its surrounding area on the rear bumper is dirty or covered with snow, the Safe Exit Assist may not operate and a warning message will be displayed. In this situation, clear off the dirt or snow and drive the vehicle with the operation conditions of the SEA function satisfied for approximately 10 minutes. If the warning message does not disappear, have the vehicle inspected by your Toyota dealer.

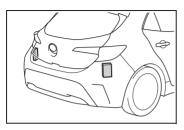

 Do not attach accessories, stickers (including transparent stickers), aluminum tape, etc. to a sensor or its surrounding area on the rear bumper.

- Do not subject a sensor or its surrounding area on the rear bumper to a strong impact.
 If a sensor is moved even slightly off position, the system may malfunction and vehicles may not be detected correctly.
 - In the following situations, have your vehicle inspected by your Tovota dealer.
 - A sensor or its surrounding area is subject to a strong impact.
 - If the surrounding area of a sensor is scratched or dented, or part of them has become disconnected.
 - Do not disassemble the sensor.
- Do not modify the sensor or surrounding area on the rear bumper.
- If a sensor or the rear bumper needs to be removed/installed or replaced, contact your Toyota dealer
- Do not paint the rear bumper any color other than an official Toyota color

Turning the Safe exit assist system ON/OFF

The safe exit assist can be enabled/disabled on


of the multi-information display. (→P.376)

When the safe exit assist is off, the driving assist information indicator will illuminate. At this time, "Safe Exit Assist OFF" will be displayed on the multi-information display. Each time the power switch is turned to ON, the safe exit assist is enabled.

Safe exit assist operation

■ Objects that can be detected by the Safe exit assist


When the safe exit assist detects the following vehicles or bicycles behind your vehicle using a rear side radar sensor, the occupants of the vehicle are informed through an outside rear view mirror indicator, buzzer, and the multi-information display.

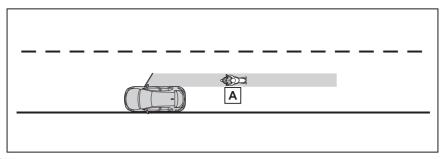

A Vehicle or bicycle which has a high possibility of colliding with a door (other than the back door) when opened

■ The Safe exit assist detection areas

The areas that vehicles can be detected in are outlined below.

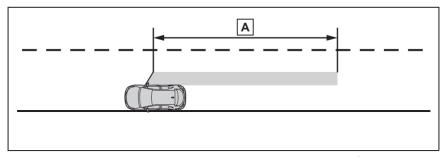

Approximately 45 m (145 ft.) rearward from the front door*

*: The faster a vehicle or bicycle is approaching, the distance at which an outside rear view mirror indicator will illuminate or blink will become further.

■ The Safe exit assist is operational when

The Safe exit assist is operational when all of the following conditions are met:

- When the power switch is ON, less than 3 minutes have elapsed since the hybrid system was off, or less than
- 3 minutes have elapsed since a door was opened and someone has entered the vehicle (the time which operation is possible may be extended if a door is opened and closed)
- Safe exit assist is on

- The vehicle is stopped.
- The shift lever is in a position other than R

■ The Safe exit assist will detect a vehicle when

The Safe exit assist will detect a vehicle present in the detection area in the following situations:

- When the vehicle is stopped and a vehicle or bicycle, which is traveling parallel to the vehicle, is approaching within the area that a door opens (other than the back door)
- Conditions under which the system will not detect a vehicle
- Safe exit assist does not detect the following objects, vehicles, and bicycles:
- Vehicles or bicycles which are approaching slowly *
- Vehicles or bicycles which are determined to have a low possibility of colliding with a door (other than the back door) when opened*
- Vehicles or bicycles which are approaching from directly behind*
- Vehicles or bicycles which are approaching from the front*
- Guardrails, walls, signs, parked vehicles, and other stationary objects*
- Pedestrians, animals, etc.
- *: Depending on the conditions, detection of a vehicle and/or object may occur.
- In situations such as the following, safe exit assist will not operate:
- When 3 minutes or more have elapsed since the engine off (the time which operation is possible may be extended if a door is opened and closed)
- When your vehicle is not completely stopped
- Conditions under which the system may not function correctly
- The Safe exit assist may not detect


- vehicles correctly in the following situations:
- When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
- When mud, snow, ice, a sticker, etc. is covering the sensor or surrounding area on the rear bumper
- When the vehicle is stopped on a wet road surface, such as in a puddle, while in inclement weather, such as heavy rain, snow, fog. etc.
- When a vehicle or bicycle approaches from behind a nearby parked vehicle
- When an approaching vehicle or bicycle suddenly changes direction
- Immediately after a vehicle or bicycle starts moving
- · When the back door is open
- When a bicycle carrier, ramp, or other accessory is installed to the back of the vehicle
- When a parked vehicle, wall, sign, person or other stationary object is behind the vehicle
- When the vehicle is stopped at an angle to the road
- When a vehicle is traveling near an approaching vehicle or bicycle
- When an approaching vehicle or bicycle is traveling along a stationary object, such a wall or sign
- When a vehicle or bicycle is approaching at high speed
- · When towing with the vehicle
- When stopped on a steep slope
- When stopped on a curve or at the exit of a curve
- Instances of the Safe exit assist unnecessarily detecting a vehicle and/or object may increase in the following situations:
- When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
- When a vehicle or bicycle approaches from behind your vehicle at an angle
- When the vehicle is stopped at an angle to the road
- When a vehicle or bicycle approaches from behind a parked vehicle at an angle

- When a parked vehicle, wall, sign, person or other stationary object is behind the vehicle
- When an approaching vehicle or bicycle suddenly changes direction
- When an approaching vehicle or bicycle is traveling along a stationary object, such a wall or sign
- When the back door is open
- When a bicycle carrier, ramp, or other accessory is installed to the back of the vehicle
- When a vehicle or bicycle is approaching at high speed
- · When towing with the vehicle
- When stopped on a steep slope
- When stopped on a curve or at the exit of a curve

Driving mode select switch

The driving modes can be selected to suit driving condition

Selecting a drive mode

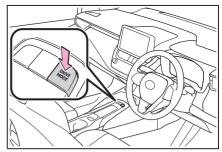

Each time the switch is pressed, the system changes between power mode, normal mode and Eco drive mode

Normal mode

Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for normal driving.

Power mode

Controls the hybrid system to provide quick, powerful acceleration. Making it suitable for when agile driving response is desired, such as when driving on roads with many curves.

When the power mode is selected, power mode indicator comes on.

Eco drive mode

Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).

When the Eco drive mode is selected,

Operation of the air conditioning system in Eco drive mode

Eco drive mode controls the heating/cooling operations and fan speed of the air conditioning system to enhance fuel efficiency. To improve air conditioning performance, perform the following operations:

- Turn off eco air conditioning mode (→P.257)
- Adjust the fan speed (→P.256)
- Turn off Fco drive mode
- Automatic deactivation of power mode

If the power switch is turned off after driving in power mode, the drive mode will be changed to normal mode.

Driving assist systems

To keep driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

Summary of the driving assist systems

■ ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface

■ Brake assist

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation

■ VSC (Vehicle Stability Control)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces.

Provides cooperative control of the ABS, TRC, VSC and EPS.

Helps to maintain directional stability when swerving on slippery road surfaces by controlling steering performance.

■ The Secondary Collision Brake

When the SRS airbag sensor detects a collision and the system operates, the brakes and brake lights are automatically controlled to reduce the vehicle speed and help reduce the possibility of further damage due to a secondary collision.

■ TRC (Traction Control)

Helps to maintain drive power and prevent the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

■ Active Cornering Assist (ACA)

Helps to prevent the vehicle from drifting to the outer side by performing inner wheel brake control when attempting to accelerate while turning

■ Hill-start assist control

Helps to reduce the backward movement of the vehicle when starting on an uphill

■ EPS (Electric Power Steering)


Employs an electric motor to reduce the amount of effort needed to turn the steering wheel.

■ Emergency brake signal

When the brakes are applied suddenly, the emergency flashers automatically flash to alert the vehicle behind.

■ When the TRC/VSC/ABS systems are operating

The slip indicator light will flash while the TRC/VSC/ABS systems are operating.

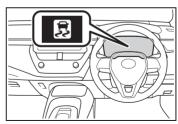

■ Disabling the TRC system


If the vehicle gets stuck in mud, dirt or snow, the TRC system may reduce power from the hybrid system to the

wheels. Pressing $\begin{cases}{l} \begin{cases} \begin{ca$

To turn the TRC system off, quickly press and release $\begin{cases} \end{cases}$.

The "Traction Control Turned OFF" will be shown on the multi-information display.

Press again to turn the system

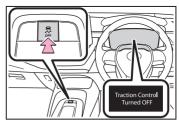

■ Turning off both TRC and VSC systems

To turn the TRC and VSC systems off, press and hold for more than 3 seconds while the vehicle is stopped.

The VSC OFF indicator light will come on and the "Traction Control Turned"

OFF" will be shown on the multi-information display.*

- *: PCS will also be disabled (only Pre-Collision warning is available). The PCS warning light will come on and a message will be displayed on the multi-information display. (→P.184)
- When the message is displayed on the multi-information display showing that TRC has been disabled even if the ♣ switch has not been pressed

TRC is temporary deactivated. If the information continues to show, contact your Toyota dealer.

Operating conditions of hill-start assist control

When all of the following conditions are met, the hill-start assist control will operate:

- The shift lever is in a position other than P or N (when starting off forward/backward on an upward incline).
- The vehicle is stopped
- The accelerator pedal is not depressed
- The parking brake is not engaged
- The power switch is turned to ON

Automatic system cancelation of hill-start assist control

The hill-start assist control will turn off in any of the following situations:

- The shift lever is shifted to P or N.
- The accelerator pedal is depressed
- The parking brake is engaged
- 2 seconds at maximum elapsed after the brake pedal is released
- The power switch is turned to OFF

- Sounds and vibrations caused by the ABS, brake assist, VSC, TRC and hill-start assist control systems
- A sound may be heard from the engine compartment when the brake pedal is depressed repeatedly, when the hybrid system is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
- Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.
- Vibrations may be felt through the vehicle body and steering.
- A motor sound may be heard also after the vehicle comes to a stop.
- The brake pedal may pulsate slightly after the ABS is activated.
- The brake pedal may move down slightly after the ABS is activated.

■ Active Cornering Assist operation sounds and vibrations

When the Active Cornering Assist is operated, operation sounds and vibrations may be generated from the brake system, but this is not a malfunction.

■ EPS operation sound

When the steering wheel is operated, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

■ Automatic reactivation of TRC and VSC systems

After turning the TRC and VSC systems off, the systems will be automatically re-enabled in the following situations:

- When the power switch is turned off
- If only the TRC system is turned off, the TRC will turn on when vehicle speed increases

If both the TRC and VSC systems are turned off, automatic re-enabling will not occur when vehicle speed increases.

■ Operating conditions of Active Cornering Assist

The system operates when the following occurs

- TRC/VSC can operate
- The driver is attempting to accelerate while turning
- The system detects that the vehicle is drifting to the outer side
- The brake pedal is released

■ Reduced effectiveness of the EPS system

The effectiveness of the EPS system is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result. Should this occur, refrain from excessive steering input or stop the vehicle and turn the hybrid system off. The EPS system should return to normal within 10 minutes.

Secondary Collision Brake operating conditions

The system operates when the SRS airbag sensor detects a collision while the vehicle is in motion.

However, the system does not operate when the components are damaged.

■ Secondary Collision Brake automatic cancellation

The system is automatically canceled in any of the following situations.

- The vehicle speed drops below approximately 0 km/h (0 mph)
- A certain amount of time elapses during operation
- The accelerator pedal is depressed a large amount

Operating conditions of emergency brake signal

When the following conditions are met, the emergency brake signal will operates:

The emergency flashers are off

- Actual vehicle speed is over 55 km/h (35 mph)
- The system judges from the vehicle deceleration that it is a sudden braking operation

Automatic system cancelation of emergency brake signal

The emergency brake signal will be canceled in any of the following situations:

- The emergency flashers are turned on
- The system judges from the vehicle deceleration that is not a sudden braking operation



WARNING

■ The ABS does not operate effectively when

- The limits of tire gripping performance have been exceeded (such as excessively worn tires on a snow covered road).
- The vehicle hydroplanes while driving at high speed on wet or slick roads

Stopping distance when the ABS is operating may exceed that of normal conditions

The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you, especially in the following situations:

- When driving on dirt, gravel or snow-covered roads
- When driving with tire chains
- When driving over bumps in the road
- When driving over roads with potholes or uneven surfaces

WARNING

TRC/VSC may not operate effectively when

Directional control and power may not be achievable while driving on slipperv road surfaces, even if the TRC/VSC system is operating. Drive the vehicle carefully in conditions where stability and power may be lost.

Active Cornering Assist does not operate effectively when

- Do not overly rely on Active Cornering Assist, Active Cornering Assist may not operate effectively when accelerating down slopes or driving on slippery road surfaces.
- When Active Cornering Assist frequently operates. Active Cornering Assist may temporarily stop operating to ensure proper operation of the brakes. TRC and VSC.

Hill-start assist control does not operate effectively when

- Do not overly rely on hill-start assist control. Hill-start assist control may not operate effectively on steep inclines and roads covered with ice
- Unlike the parking brake, hill-start assist control is not intended to hold the vehicle stationary for an extended period of time. Do not attempt to use hill-start assist control to hold the vehicle on an incline. as doing so may lead to an accident

When the TRC/ABS/VSC is activated

The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes.

■ When the TRC/VSC systems are turned off

Be especially careful and drive at a speed appropriate to the road conditions. As these are the systems to help ensure vehicle stability and driving force, do not turn the TRC/VSC systems off unless necessary.

■ Secondary Collision Brake

Do not rely solely upon the Secondary Collision Brake. This system is designed to help reduce the possibility of further damage due to a secondary collision, however, that effect changes according to various conditions. Overly relying on the system may result in death or serious injury.

Replacing tires

Make sure that all tires are of the specified size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.

The ABS. TRC and VSC systems will not function correctly if different tires are installed on the vehicle. Contact your Toyota dealer for further information when replacing tires or wheels.

Handling of tires and the suspension

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system to malfunction.

Hybrid vehicle driving tips

For economical and ecological driving, pay attention to the following points:

Using Eco drive mode

When using Eco drive mode, the torque corresponding to the accelerator pedal depression amount can be generated more smoothly than it is in normal conditions. In addition, the operation of the air conditioning system (heating/cooling) will be minimized, improving the fuel economy. (→P.242)

Use of Hybrid System Indicator

The Eco-friendly driving is possible by keeping the indicate of Hybrid System Indicator within Eco area. (→P.72, 76)

Shift lever operation

Shift the shift lever to D when stopped at a traffic light, or driving in heavy traffic etc. Shift the shift lever to P when parking. When using the N, there is no positive effect on fuel consumption. In the N, the gasoline engine operates but electricity cannot be generated. Also, when using the air conditioning system, etc., the hybrid battery

(traction battery) power is consumed

Accelerator pedal/brake pedal operation

- Drive your vehicle smoothly. Avoid abrupt acceleration and deceleration. Gradual acceleration and deceleration will make more effective use of the electric motor (traction motor) without having to use gasoline engine power.
- Avoid repeated acceleration.
 Repeated acceleration consumes hybrid battery (traction battery) power, resulting in poor fuel consumption. Battery power can be restored by driving with the accelerator pedal slightly released.

When braking

Make sure to operate the brakes gently and in a timely manner. A greater amount of electrical energy can be regenerated when slowing down

Delays

Repeated acceleration and deceleration, as well as long waits at traffic lights, will lead to bad fuel economy. Check traffic reports before leaving and avoid delays as much as possible. When driving in

a traffic jam, gently release the brake pedal to allow the vehicle to move forward slightly while avoiding overuse of the accelerator pedal. Doing so can help control excessive gasoline consumption.

Highway driving

Control and maintain the vehicle at a constant speed. Before stopping at a toll booth or similar, allow plenty of time to release the accelerator and gently apply the brakes. A greater amount of electrical energy can be regenerated when slowing down.

Air conditioning

Use the air conditioning only when necessary. Doing so can help reduce excessive gasoline consumption.

In summer: When the ambient temperature is high, use the recirculated air mode. Doing so will help to reduce the burden on the air conditioning system and reduce fuel consumption as well.

In winter: Because the gasoline engine will not automatically cut out until it and the interior of the vehicle are warm, it will consume fuel. Also, fuel consumption can be improved by avoiding overuse of the heater.

Checking tire inflation pressure

Make sure to check the tire inflation pressure frequently. Improper tire inflation pressure can cause poor fuel economy.

Also, as snow tires can cause large amounts of friction, their use on dry roads can lead to poor fuel economy. Use tires that are appropriate for the season.

Luggage

Carrying heavy luggage will lead to poor fuel economy. Avoid carrying unnecessary luggage. Installing a large roof rack will also cause poor fuel economy.

Warming up before driving

Since the gasoline engine starts up and cuts out automatically when cold, warming up the engine is unnecessary. Moreover, frequently driving short distances will cause the engine to repeatedly warm up, which can lead to excess fuel consumption.

Winter driving tips

Carry out the necessary preparations and inspections before driving the vehicle in winter.

Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

Pre-winter preparations

- Use fluids that are appropriate to the prevailing outside temperatures
- · Engine oil
- Engine/power control unit coolant
- Washer fluid
- Have a service technician inspect the condition of the 12-volt battery.
- Have the vehicle fitted with four snow tires or purchase a set of tire chains for the front tires

Ensure that all tires are the same size and brand, and that chains match the size of the tires.

A

WARNING

Driving with snow tires

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the size specified.
- Maintain the recommended level of air pressure.

- Do not drive at speeds in excess of the speed limit or the speed limit specified for the snow tires being
- Use snow tires on all, not just some wheels.

Driving with tire chains

Observe the following precautions to reduce the risk of accidents.
Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 50 km/h (30 mph), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.
- Do not use LTA (Lane Tracing Assist) system.
- Do not use LDA (Lane Departure Alert) system.

Before driving the vehicle

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of

the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.

- Check for and remove any excess ice or snow that may have accumulated on the exterior lights, vehicle's roof, chassis, around the tires or on the brakes.
- Remove any snow or mud from the bottom of your shoes before getting in the vehicle.

When driving the vehicle

Accelerate the vehicle slowly, keep a safe distance between you and the vehicle ahead, and drive at a reduced speed suitable to road conditions.

When parking the vehicle

 Turn automatic mode of the parking brake off. Otherwise, the parking brake may freeze and not be able to be released automatically.

Also, avoid using the following as the parking brake may operate automatically, even if automatic mode is off.

- · Brake hold system
- Park the vehicle and shift the shift lever to P without setting the parking brake. The parking brake may freeze up, preventing it from being released. If the vehicle is parked without setting the parking brake, make sure to block the

wheels


Failure to do so may be dangerous because it may cause the vehicle to move unexpectedly, possibly leading to an accident.

- When the parking brake is in automatic mode, release the parking brake after shifting the shift lever to P. (→P.151)
- If the vehicle is parked without setting the parking brake, confirm that the shift lever cannot be moved out of P.
- If the vehicle is left parked with the brakes damp in cold temperatures, there is a possibility of the brakes freezing.

Selecting tire chains

Use the correct tire chain size when mounting the tire chains.

Chain size is regulated for each tire size.

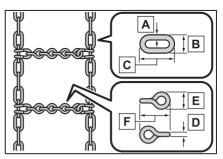

- A Side chain (3 mm [0.12 in.] in diameter)
- B Side chain (10 mm [0.39 in.] in width)
- C Side chain (30 mm [1.18 in.] in

length)

- Cross chain (4 mm [0.16 in.] in diameter)
- E Cross chain (14 mm [0.55 in.] in width)
- F Cross chain (25 mm [0.98 in.] in length)

Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains

■ Tire chain installation

Observe the following precautions when installing and removing chains:

- Install and remove tire chains in a safe location.
- Install tire chains on the front tires only. Do not install tire chains on the rear tires
- Install tire chains on the front tires as tightly as possible. Retighten chains after driving 0.5—1.0 km (1/4—1/2 mile).
- Install tire chains following the instructions provided with the tire chains.

⋾
$\overline{}$
O
\equiv
O
Ť
=
Ø
0
莒
$\overline{}$


5-1.	Using the air conditioning system and defogger
	Automatic air conditioning system254
	Seat heaters261
5-2.	Using the interior lights
	Interior lights list262
5-3.	Using the storage features
	List of storage features264
	Luggage compartment features
5-4.	Other interior features
	Other interior features269

Automatic air conditioning system

Air outlets are automatically selected and fan speed is automatically adjusted according to the set temperature setting.

Air conditioning controls


▶ Type A

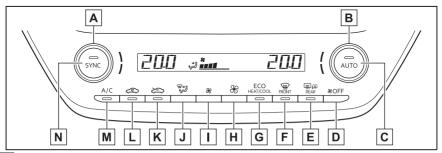

- A Left-hand side temperature control switch
- **B** Right-hand side temperature control switch
- C Automatic mode switch
- **D** Off switch
- **E** Rear window defogger and outside rear view mirror defoggers switch
- F Windshield defogger switch
- **G** Eco air conditioning mode switch
- H Fan speed increases switch
- I Fan speed decreases switch
- J Airflow mode control switch
- K Outside air mode switch
- L Recirculated air mode switch
- M "A/C" switch
- N "SYNC" switch

5

▶ Type B

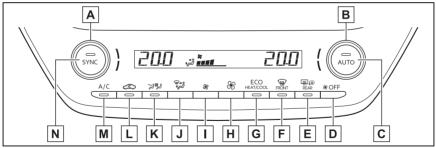

- A Left-hand side temperature control switch
- **B** Right-hand side temperature control switch
- C Automatic mode switch
- D Off switch
- **E** Rear window defogger and outside rear view mirror defoggers switch
- F Windshield defogger switch
- **G** Eco air conditioning mode switch
- H Fan speed increases switch
- I Fan speed decreases switch
- J Airflow mode control switch
- K S-FLOW mode switch
- L Outside/recirculated air mode switch
- M "A/C" switch
- N "SYNC" switch

Adjusting the temperature setting

To adjust the temperature setting, turn the temperature control switch clockwise (warm) or counterclockwise (cool).

If "A/C" switch is not pressed, the system will blow ambient temperature air or heated air.

The air conditioning system switches

between individual and synchronized modes each time "SYNC" switch is pressed.

Synchronized modes (indicator on):

The right-hand side temperature control switch can be used to adjust the temperature for the driver's and front passenger's side. At this time, operate the left-hand side temperature control switch to enter individual mode.

Individual modes (indicator off):

The temperature for the driver's and front passenger's side can be adjusted separately.

■ Setting the fan speed


Operate the fan speed increases switch to increase the fan speed and the fan speed decrease switch to decrease the fan speed.

Pressing the off switch to turns off the fan

■ Change the airflow mode

Press the airflow mode control switch.

The airflow mode changes as follows each time the switch is pressed.

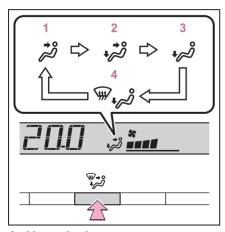

- 1 Upper body
- 2 Upper body and feet
- 3 Feet
- 4 Feet and the windshield defogger operates
- Switching between outside air and recirculated air modes
- ▶ Type A
- To change to recirculated air mode, press the recirculated air

mode switch.

The indicator illuminates on the recirculated air mode switch

 To change to outside air mode, press the outside air mode switch.

The indicator illuminates on the outside air mode switch

▶ Type B

Press the outside/recirculated air mode switch.

The mode switches between outside air mode and recirculated air mode modes each time the switch is operated.

When recirculated air mode is selected, the indicator illuminates on the outside/recirculated air mode switch.

Set cooling and dehumidification function

Press the "A/C" switch

When the function is on, the indicator illuminates on the "A/C" switch.

■ Defogging the windshield

Defoggers are used to defog the windshield and front side windows.

Press the windshield defogger switch

Set the outside/recirculated air mode switch to outside air mode if the recirculated air mode is used. (It may switch automatically.)

To defog the windshield and the side windows quickly, turn the air flow and temperature up.

To return to the previous mode, press the windshield defogger switch again when the windshield is defogged.

5

When the windshield defogger switch is on, the indicator illuminates on the windshield defogger switch.

■ Defogging the rear window and outside rear view mirrors

Defoggers are used to defog the rear window, and to remove raindrops, dew and frost from the outside rear view mirrors.

Press the rear window and outside rear view mirror defoggers switch.

The defoggers will automatically turn off after a while.

When the rear window and outside rear view mirror defoggers switch is on, the indicator illuminates on the rear window and outside rear view mirror defoggers switch.

■ Eco air conditioning mode

The air conditioning is controlled with low fuel consumption prioritized such as reducing fan speed, etc.

Press the eco air conditioning mode switch.

When the eco air conditioning mode is on, the indicator illuminates on the eco air conditioning mode switch.

■ Fogging up of the windows

- The windows will easily fog up when the humidity in the vehicle is high. Turning "A/C" on will dehumidify the air from the outlets and defog the windshield effectively.
- If you turn "A/C" off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.

■ When driving on dusty roads

Close all windows. If dust thrown up by the vehicle is still drawn into the vehicle after closing the windows, it is recommended that the air intake mode be set to outside air mode and the fan speed to any setting except off.

■ Outside/recirculated air mode

- Setting to the recirculated air mode temporarily is recommended in preventing dirty air from entering the vehicle interior and helping to cool the vehicle when the outside air temperature is high.
- Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

■ Eco air conditioning mode

When Eco drive mode is selected using the driving mode select switch, eco air conditioning mode turns on.

When a drive mode other than Eco drive mode is selected, eco air conditioning mode may turn off.

Operation of the air conditioning system in Eco drive mode

- In Eco drive mode, the air conditioning system is controlled as follows to prioritize fuel efficiency:
- Engine speed and compressor operation controlled to restrict heating/cooling capacity
- Fan speed restricted when automatic mode is selected
- To improve air conditioning performance, perform the following operations:
- Turn off eco air conditioning mode (→P.257)
- · Adjust the fan speed
- Turn off Eco drive mode (→P.242)

■ When the outside temperature falls to nearly 0°C (32°F)

The dehumidification function may not operate even when "A/C" switch is pressed.

■ Ventilation and air conditioning odors

- To let fresh air in, set the air conditioning system to the outside air mode.
- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents
- To reduce potential odors from occur-
- · It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
- The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.
- When parking, the system automatically switches to outside air mode to encourage better air circulation throughout the vehicle, helping to reduce odors that occur when starting the vehicle.

■ Air conditioning filter

 \rightarrow P303

■ Using the voice command system

Air conditioning system can be operated using voice commands.

For details, refer to the "Multimedia" Owner's Manual"

Customization

Some functions can be customized. (→P.376)



WARNING

■ To prevent the windshield from fogging up

Do not use the windshield defogger switch during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

■ When the outside rear view mirror defoggers are operating

Do not touch the outside rear view mirror surfaces, as they can become very hot and burn you.



NOTICE

To prevent 12-volt battery discharge

Do not leave the air conditioning system on longer than necessary when the hybrid system is off.

Using automatic mode

- Press the automatic mode. switch
- 2 Adjust the temperature setting.
- 3 To stop the operation, press the off switch

If the fan speed setting or air flow modes are operated, the automatic mode indicator goes off. However. automatic mode for functions other than that operated is maintained.

■ Using automatic mode

Fan speed is adjusted automatically according to the temperature setting and the ambient conditions.

Therefore, the fan may stop for a while until warm or cool air is ready to flow immediately after the automatic mode switch pressed.

Using front seat concentrated airflow mode (S-FLOW) (if equipped)

Directing airflow to the front seats only and to all seats can be

switched via switch operation.
Unnecessary air conditioning is suppressed, contributing to increased fuel efficiency.

Press on the air conditioning operation panel and switch the airflow

- Indicator illuminated: Airflow to the front seats only
- Indicator off: Airflow to all the seats


■ Operation of airflow control

Even if the function is switched to directing airflow to only the front seats, when a rear seat is occupied, it may automatically direct airflow to all seats.

Air outlet layout and operations


Location of air outlets

The air outlets and air volume changes according to the selected air flow mode.

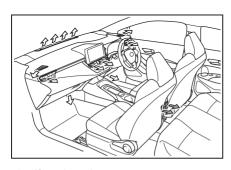


:If equipped

- Adjusting the position of and opening and closing the air outlets
- ▶ Front center

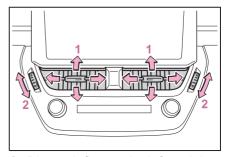


- Direct air flow to the left or right, up or down
- 2 Turn the knob to open or close the vent
- ▶ Front right-hand side

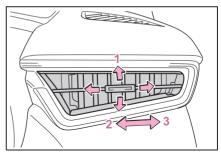


- Direct air flow to the left or right, up or down
- 2 Open the vent
- 3 Close the vent

► Front left-hand side

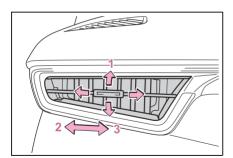

- Direct air flow to the left or right, up or down
- 2 Close the vent
- 3 Open the vent
- ► Rear center (if equipped)

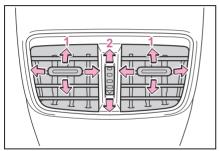


- Direct air flow to the left or right, up or down
- 2 Turn the knob to open or close the vent



WARNING

■ To prevent the windshield defogger from operating improperly

Do not place anything on the instrument panel which may cover the air outlets. Otherwise, air flow may be obstructed, preventing the windshield defoagers from defoaging.

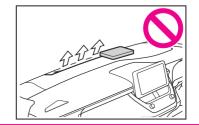

5

Seat heaters

*: If equipped

Warm up the seat upholstery



WARNING

■ To prevent minor burn injuries

Care should be taken if anyone in the following categories comes in contact with the seats when the heater is on:

- Babies, small children, the elderly, the sick and the physically challenged
- Persons with sensitive skin.
- Persons who are fatigued
- Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)



NOTICE

■ To prevent damage to the seat heaters


Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles. nails, etc.) into the seat.

■ To prevent 12-volt battery discharge

Do not use the functions when the hybrid system is off.

Operation instructions

Turns seat heaters on/off

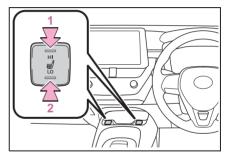

- High temperature
- 2 Low temperature

When the seat heater is on, the indicator illuminates on the seat heater. switch

When not in use, put the switch in the neutral position. The indicator will turn off

■ The seat heaters can be used when The power switch is in ON.



WARNING


To prevent overheating and minor burn injuries

Observe the following precautions when using the seat heaters.

- Do not cover the seat with a blanket or cushion when using the seat heater.
- Do not use seat heater more than. necessarv.

Interior lights list

Location of the interior lights

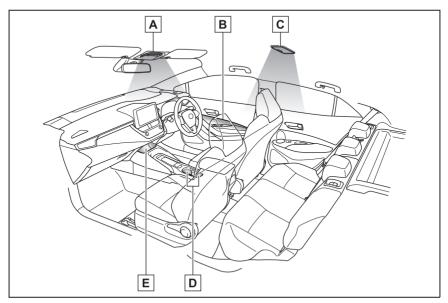

- A Front interior/personal lights (→P.262)
- **B** Door trim lights (if equipped)
- **C** Rear interior light (→P.263)
- **D** Cup holder lights (if equipped)
- E Center tray light (if equipped)

Operating the interior lights

■ Front




1 Turns the door position on/off When a door is opened while the door

position is on, the lights turn on.

2 Turns the lights on/off

Rear

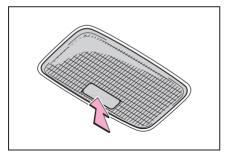


Turns the lights on/off

When the door position is on for the front interior lights, the rear interior light will turn on when a door is open and turn off when all of them are closed

When the rear interior light is on linked to the door position for the front interior lights, it will not turn off even though the switch is pressed.

Operating the personal lights

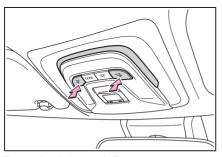

Turns the lights on/off

■ Illuminated entry system

The lights automatically turn on/off according to the power switch mode, the

presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are open/closed.

■ To prevent the 12-volt battery from being discharged

If the interior lights remain on when the power switch is turned off, the lights will go off automatically after 20 minutes.

■ The interior lights may turn on automatically when

If any of the SRS airbags deploy (inflate) or in the event of a strong rear impact, the interior lights will turn on automatically.

The interior lights will turn off automatically after approximately 20 minutes. The interior lights can be turned off manually. However, in order to help prevent further collisions, it is recommended that they be left on until safety can be ensured.

(The interior lights may not turn on automatically depending on the force of the impact and conditions of the collision.)

Customization

Some functions can be customized. $(\rightarrow P.376)$




NOTICE

■ To prevent 12-volt battery discharge

Do not leave the lights on longer than necessary when the hybrid system is off.

List of storage features

Location of the storage features

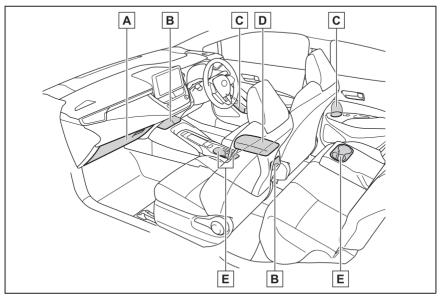

- \blacksquare Glove box (\rightarrow P.265)
- **B** Open trays (if equipped) (→P.266)
- © Bottle holders (→P.265)
- D Console box (→P.266)
- E Cup holders (→P.265)

A


WARNING

Items that should not be left in the storage spaces

Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:

 Glasses may be deformed by heat or cracked if they come into contact with other stored items. Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.

Glove box

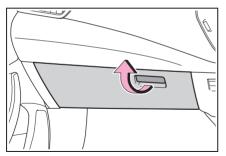

Pull up the lever to open the glove box.

■ Glove box light

The glove box light turns on when the tail lights are on.




WARNING

Caution while driving

Keep the glove box closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the open glove box or the items stored inside.


Cup holders

▶ Front

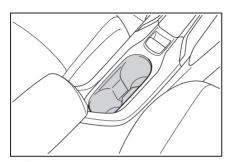

Rear

Pull the armrest down.

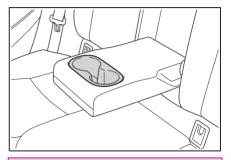

▲ WARNING


Items unsuitable for the cup holder

Do not place anything other than cups or beverage cans in the cup holders. Inappropriate items must not be stored in the cup holders even if the lid is closed


Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury. If possible, cover hot drinks to prevent hurns

Bottle holders

▶ Front

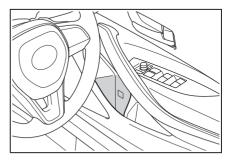

▶ Rear

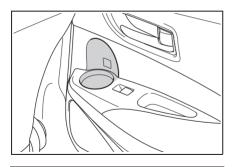

■ Bottle holders

- When storing a bottle, close the cap.
- The bottle may not be stored depending on its size or shape.




WARNING

Items unsuitable for the bottle holders

Do not place anything other than a bottle in the bottle holders.


Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury.

Console box

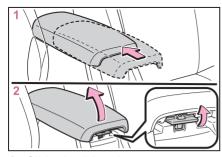

- Slide the lid to the rear most position. (vehicles with a slide function)
- 2 Lift the lid while pulling up the knob.

■ Slide function (if equipped)

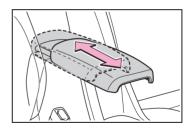

The console box lid can be slid forward or backward.

A


WARNING

■ Caution while driving


Keep the console box closed. Injuries may result in the event of an accident or sudden braking.

Open trays (if equipped)

▶ Front

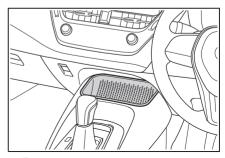

▶ Rear

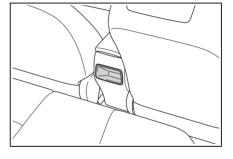

5

WARNING


Caution while driving

Observe the following precautions when putting items in the open tray. Failure to do so may cause items to be thrown out of the trav in the event of sudden braking or steering. In these cases, the items may interfere with pedal operation or cause driver distraction, resulting in an accident.

- Do not store items in the tray that can easily shift or roll out.
- Do not stack items in the tray higher than the trav's edge.
- Do not put items in the tray that may protrude over the trav's edge.

Luggage compartment features

Grocery bag hooks

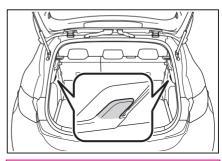


WARNING

■To prevent damage to the grocerv bag hooks

Do not hang any object heavier than 2 kg (4.4 lb.) on the grocery bag hooks.


Auxiliary box (if equipped)

Lift the deck mat

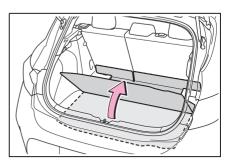




Side tray (if equipped)

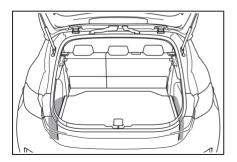

Removing the luggage cover

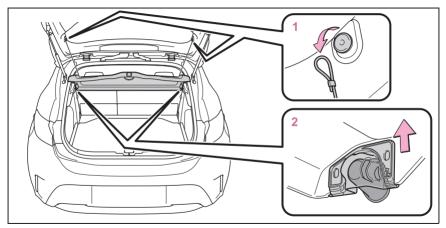

- 1 Unhook the cords.
- 2 Remove the cover from the anchors.

Other interior features

USB charging port (if equipped)

The USB charging port are used to supply 3.0 A of electricity at 5 V to external devices.


The USB charging port are for charging only. They are not designed for data transfer or other purposes.

Depending on the external device, it may not charge properly. Refer to the manual included with the device before using a USB charging port.

■ Using the USB charging port


▶ Front

Open the console box lid.

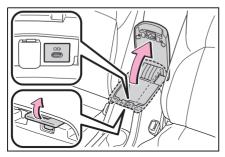

► Rear (if equipped)

Open the lid.

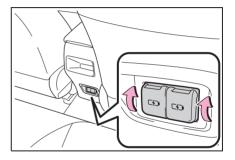

■ The USB charging port can be used when

The power switch is in ACC or ON.

- Situations in which the USB charging port may not operate correctly
- If a device which consumes more than 3.0 A at 5 V is connected
- If a device designed to communicate with a personal computer, such as a USB memory device, is connected
- If the connected external device is turned off (depending on device)
- If the temperature inside the vehicle is high, such as after the vehicle has been parked in the sun
- About connected external device

Depending on the connected external device, charging may occasionally be suspended and then start again. This is not a malfunction



NOTICE

- To prevent damage to the USB charging port
- Do not insert foreign objects into the port.
- Do not spill water or other liquids into the port.
- Rear console: When the USB charging ports are not in use, close the lids. If a foreign object or liquid enters a port may cause a short circuit.

Λ

NOTICE


- Do not apply excessive force to or impact the USB charging port.
- Do not disassemble or modify the USB charging port.
- To prevent damage to external devices
- Do not leave external devices in the vehicle. The temperature inside the vehicle may become high, resulting in damage to an external device.
- Do not push down on or apply unnecessary force to an external device or the cable of an external device while it is connected
- To prevent 12-volt battery discharge

Do not use the USB charging port for a long period of time with the hybrid system stopped.

Power outlets

The power outlet can be used for 12 V accessories that run on less than 10 A

Open the console box lid and open the lid.

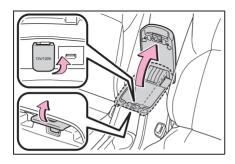

■ The power outlet can be used when The power switch is in ACC or ON.

■When stopping the hybrid system

Disconnect electrical devices with charging functions, such as mobile battery packs.

If such devices are left connected, the hybrid system may not stop normally.



NOTICE

To prevent the fuse from being blown

Do not use an accessory that uses more than 12 V 10 A.

■ To avoid damaging the power outlet

Close the power outlet lid when the power outlet is not in use. Foreign objects or liquids that enter

Foreign objects or liquids that enter the power outlet may cause a short circuit.

■ To prevent 12-volt battery discharged

Do not use the power outlet longer than necessary when the hybrid system is off

Wireless charger (if equipped)

A portable device, such as a smartphone or mobile battery, can be charged by just placing it on the charging area, provided the device is compatible with the Qi wireless charging standard created by the Wireless Power Consortium.

The wireless charger cannot be used with a portable device that is larger than the charging area. Additionally, depending on the portable device, the wireless charger may not operate properly. Refer to the operation manual of the portable


device

■ The "Qi" symbol

The "Qi" symbol is a trademark of the Wireless Power Consortium.



■ Name for all parts

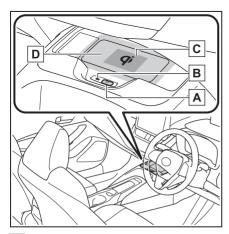

- A Power supply switch
- **B** Operation indicator light
- C Charge area*
- **D** Charging tray
- *: Compatible portable devices and the wireless charger contain charging coils. The charging coil inside the wireless charger can move within the area around the center of the charging tray.

When the charging coil inside a portable device is detected within the charging area, the charging coil in the wireless charger will move near the other coil and charging will begin. If the charging coil inside the portable device is moved out of the charging area, charging will be stopped automatically.

Additionally, if 2 or more portable devices are placed on the charging tray at the same time, each charging coil may not be detected correctly and charging may not be possible.


■ Using the wireless charger

1 Press the power supply switch of the wireless charger.

Pressing the switch again turns the wireless charger off.

When turned on, the operation indicator light (green) comes on.

When the power switch is turned off, the on/off state of the wireless charger will be memorized.

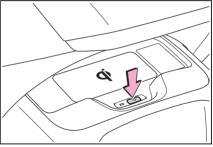

Place a portable device on the charging tray.

Place the portable device so that it is centered in the charging area with its charging surface facing the portable charger.


Depending on the portable device, its charging coil may not be in the center of the device. In this case, place the portable device so that its charging coil is centered in the charging area.

While charging, the operation indicator light (orange) will be illuminated.

If charging does not begin, move the portable device as close to the center of the charging area as possible. If charging is not performed, the operation indicator light will slowly illuminate in green

and orange alternatively and a sound of charging coil operation may be heard repeatedly.

When charging is complete, the operation indicator light (green) will illuminate.

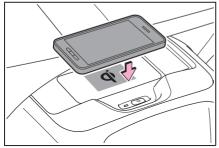

■ Recharging function

- If a certain amount of time has elapsed since charging completed and the portable device has not been moved, the wireless charger will restart charging.
- If a portable device is moved significantly within the charging area, the charging coil may disconnect and charging may temporarily be stopped. However, if a charging coil is detected within

the charging area, the charging coil inside the wireless charger will move near the other coil and charging will resume. If a portable device is moved out of the charging area, charging will be stopped. At that time, the operation indicator light will slowly illuminate in green and orange alternatively and a sound of charging coil operation may be heard repeatedly. Re-set the portable device to the center of the charging area.

■ Rapid charging function

- Portable devices, such as the following, can be rapidly charged.
- Rapid charging capable devices which conform to WPC Ver 1.2.4.
- 7.5 W charging capable iPhone (iPhone 8 and later)
- When a portable device that supports rapid charging is charged, charging automatically switches to the rapid charging.

■ Operation indicator light status

Operation indicator light	State
Off	The Wireless charger is off
Green (illuminated)	Standby (charging is possible)*1
Green (manimated)	Charging is complete ^{*2}
Orange (illuminated)	A portable device has been placed on the charging area (identifying the portable device)
	Charging in progress

^{*1:} While in standby, charging power is not output. If a metal object is placed on the charging tray in this state, the object will not heat up.

- *2: Depending on the portable device, the operation indicator light may stay illuminated (orange) after charging has completed.
- If the operation indicator light blinks

If an error is detected, the operation indicator light will blink (orange). Take the appropriate measures according to the table below.

Operation indicator light	Suspected cause	Measure
Green (illuminated)	Key being detected by smart entry & start system	Wait until the key detection is completed.
Continuously blinks 1 time per second	Vehicle to wireless charger communication failure	If the hybrid system is running, stop the engine and then restart it. If the power switch is in ACC, start the hybrid system. (→P.142)
Continuously flashes 3 times (orange)	Foreign matter detected If a metallic foreign object is detected in the charge area, the overheat prevention function will operate to prevent the metallic foreign object from being overheated.	Remove the foreign object from the charge area.
	Portable device not aligned correctly If the charging coil of a portable device is not properly positioned on the charging area, the overheat prevention function will operate.	Remove the portable device from the charging tray, check that the operation indicator light changes back to green, and then place the portable device so that it is near the center of the charging tray. Also, if a case or cover is installed to the portable device, remove it.

Operation indicator light	Suspected cause	Measure
Continuously flashes 4 times (orange)	Temperature inside wire- less charger exceeded a certain amount	Stop charging, remove the portable device from the charging tray, and wait for the temperature to decrease before attempting to begin charging again.

■ The wireless charger can be operated when

The power switch is in ACC or ON.

Portable devices that can be charged

- Portable devices compatible with the Qi wireless charging standard can be charged by the wireless charger. However, compatibility with all devices which meet the Qi wireless charging standard is not guaranteed.
- The wireless charger is designed to supply low power electricity (5 W or less) to a cellular phone, smartphone, or other portable device.
- However, portable devices, such as the following, can be charged with more than 5 W
- 7.5 W charging compatible iPhone can be charged at 7.5 W or less.
- Portable devices which conform to WPC Ver 1.2.4 (Extended Power profile) can be charged at 10 W or less.

■ Using the smart entry & start system

During charging, when the smart entry & start system searches for an electronic key, charging may be temporarily suspended.

If a cover or accessory is attached to the portable device

Do not charge a portable device if a cover or accessory which is not Qi compatible is attached. Depending on the type of cover (including some genuine parts of the manufacturer) and/or acces-

sory attached, it may not be possible to charge the portable device. If the portable device is placed on the charging area and does not charge, remove the cover and/or accessories.

■ If interference is heard in AM radio broadcasts while charging

- Turn off the wireless charger and check if the noise is reduced. If noise is reduced, press and hold the power supply switch of the wireless charger for 2 seconds. The frequency of the wireless charger is changed and noise may be reduced. When the frequency is changed, the operation indicator light will blink (orange) 2 times.
- Rapid charging for iPhone is performed using a specific radio wave frequency.

Depending on the version of iOS installed, while the frequency is being changed, rapid charging may not be performed.

■ Charging precautions

While charging, the wireless charger and the portable device will become warm. This is not a malfunction.

If a portable device becomes warm while charging and charging stops due to the protection function of the portable device, wait until the portable device cools down and charge it again.

Also, to decrease the temperature inside the wireless charger, a fan may operate. This does not indicate a malfunction.

■ Sound generated during operation

Operation sounds may be heard when

5

the power supply switch is pressed to turn the wireless charger on, when the power switch is pressed to change to ACC or ON while the wireless charger is on, or when a portable device is being detected. This does not indicate a malfunction

■ Situations in which the wireless charger may not operate correctly

In the following situations, the wireless charger may not operate correctly:

- When the camera lens of a portable device protrudes 3mm (0.12 in) or more from its surface
- When the electronic key is not inside the vehicle
- When a portable device is fully charged
- When a portable device is being charged by a wired connection
- When there is a foreign object between the charging area and portable device
- When the temperature of a portable device becomes high while charging
- When the temperature near the charding tray is 35°C (95°F) or more due to being in direct sunlight, etc.
- When a portable device is placed with its charging surface facing up
- When a portable device is not centered on the charging area
- When a portable device is larger than the charging tray
- When a foldable portable device is placed outside of the charging area
- When the vehicle is near a TV tower, electric power plant, fuel station, radio station, large display, airport, or other facility that generates strong radio waves or electrical noise
- When the any of the following objects, with a thickness of 2 mm (0.08 in.) or more, are between the charging surface of a portable device and the charging are:
- · Thick cases or covers

- Thick decorations
- · Accessories, such as finger rings. straps, etc.
- When the portable device is in contact with, or is covered by any of the following metallic objects:
- · Casing which has magnet in it on the charging side of the portable device
- Cards covered with metal, such as aluminum foil
- Cigarette boxes that have aluminum foil inside
- · Metallic wallets or bags
- Coins
- Heat packs
- Recorded media such as CDs and **DVDs**
- Metallic decorations
- Metallic cases or covers
- When wireless kevs (that emit radio waves) other than those of your vehicle are being used nearby
- When 2 or more portable devices are placed on the charging tray at the same time

In situations other than above, if the wireless charger does not operate properly or the operation indicator light blinks continuously, the wireless charger may be malfunctioning.

Contact your Toyota dealer.

■ Cleaning the wireless charger

→P 283

■ iPhone

iPhone is a trademark of Apple Inc., registered in the U.S. and other countries.



WARNING

Caution while driving

When charging a portable device while driving, for safety reasons, the driver should not operate the portable device.

A

WARNING

■ Precautions for when driving

Do not charge small, lightweight portable devices, such as wireless earbuds, while driving. Lightweight devices may fly off of the charging tray, possibly leading to an accident.

Caution regarding interference with electronic devices

People with implantable cardiac pacemakers, cardiac resynchronization therapy pacemakers or implantable cardioverter defibrillators, as well as any other electrical medical device, should consult their physician about the usage of the wireless charger. Operations of the wireless charger may have an affect on medical devices.

■ To prevent damage or burns

Observe the following precautions. Failure to do so may result in the possibility of fire, equipment failure or damage, or burns due to heat.

- Do not put any metallic objects between the charging area and the portable device while charging.
- Do not attach metallic objects, such as aluminum stickers, to the charging area.
- Do not charge portable devices with aluminum stickers or other metallic objects attached to the side which touches the charging area.
- Do not store items on the wireless charger instead of in an auxiliary box
- Do not apply force or impact to the wireless charger.
- Do not disassemble, modify or remove the wireless charger.

- Do not attempt to charge portable devices which are not compatible with the Qi wireless charging standard.
- Do not allow magnetic objects to come near the wireless charger.
- Do not perform charging if the charging area is dirty.
- Do not cover the wireless charger with a cloth or other object while charging.



NOTICE

■ To prevent failure or damage to data

- Do not place magnetic cards, such as a credit card, or magnetic recording media, close to the wireless charger while charging. Otherwise, data may be erased due to the influence of magnetism. Additionally, do not bring precision instruments such as wrist watches, close to the wireless charger, as such objects may malfunction.
- Do not perform charging with a contactless smart card, such as a credit card, between the charging surface of a portable device and the charging area. The IC chip in the card may become extremely hot, possibly damaging the portable device or smart card.
 Be extra careful to not charge a portable device with a case or cover which a contactless smart card can be inserted
- Do not leave portable devices in the cabin. The temperature inside the cabin may become high when parked in the sun, and cause damage to the device.



NOTICE


■ When the OS of a smartphone has been updated

When the OS version of a smartphone has been changed, the charging specifications may have changed. If the WPC compatibility version is changed, the rapid charging function may no longer be able to be used. For details, check for information on the website for the smartphone manufacturer.

■ To prevent battery discharge

Do not use the wireless charger for a long period of time with the hybrid system stopped.

Sun visors

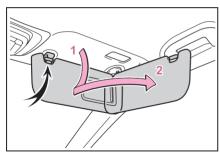


- 1 To set the visor in the forward position, flip it down.
- 2 To set the visor in the side position, flip down, unhook, and swing it to the side.

Vanity mirrors

Slide the cover to open.

The vanity light turns on.

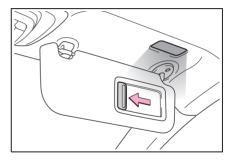

■ To prevent 12-volt battery discharge

If the vanity lights remain on when the power switch is OFF, the lights will go off automatically after 20 minutes.




NOTICE

■ To prevent the 12-volt battery from being discharged

Do not leave the vanity lights on for extended periods while the hybrid system is off.

Armrest

Fold down the armrest for use.

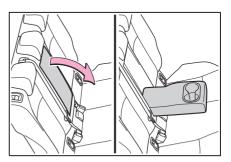




NOTICE

■ To prevent damage to the armrest

Do not apply too much load on the armrest.

Assist grips

An assist grip installed on the ceiling can be used to support your body while sitting on the seat.

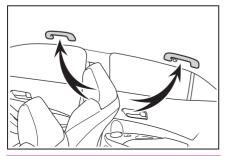

WARNING

Assist grip

Do not use the assist grip when getting in or out of the vehicle or rising from your seat.


NOTICE

■ To prevent damage to the assist grip

Do not hang any heavy object or put a heavy load on the assist grip.

Coat hooks

The coat hooks are provided with the rear assist grips.

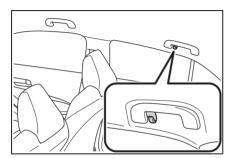

WARNING

■ Items that cannot be hung on the coat hook

Do not hang coat hangers or other hard or sharp objects on the hook. If the SRS curtain shield airbags deploy. these items may become projectiles. causing death or serious injury.

6-1.	Maintenance and care
	Cleaning and protecting the vehicle exterior280
	Cleaning and protecting the vehicle interior283
6-2.	Maintenance
	Maintenance requirements286
6-3.	Do-it-yourself maintenance
	Do-it-yourself service precautions288
	Hood290
	Positioning a floor jack291
	Engine compartment292
	Tires298
	Tire inflation pressure300
	Wheels301
	Air conditioning filter303
	Cleaning the hybrid battery (traction battery) air intake vents304
	Electronic key battery307
	Checking and replacing fuses309
	Light bulbs312

Maintenance and care

6

Cleaning and protecting the vehicle exterior

Perform cleaning in a manner appropriate to each component and its material.

Cleaning instructions

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.

If water does not bead on a clean surface, apply wax when the vehicle body is cool

Automatic car washes

- Fold the mirrors before washing the vehicle. Start washing from the front of the vehicle. Make sure to extend the mirrors before driving.
- Brushes used in automatic car washes may scratch the vehicle surface, parts (wheel, etc.) and harm your vehicle's paint.
- In certain automatic car washes, the rear spoiler may interfere with machine operation. This may prevent the vehicle from being cleaned prop-

erly or result in damage to the rear spoiler.

■ High pressure car washes

As water may enter the cabin, do not bring the nozzle tip near the gaps around the doors or perimeter of the windows, or spray these areas continuously.

■When using a car wash

If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:

- Place the key in a position 2 m (6 ft.) or more separate from the vehicle while the vehicle is being washed. (Take care to ensure that the key is not stolen.)
- Set the electronic key to battery-saving mode to disable the smart entry & start system. (→P.115)

■ Wheels and wheel ornaments

- Remove any dirt immediately by using a neutral detergent.
- Wash detergent off with water immediately after use.
- To protect the paint from damage, make sure to observe the following precautions.
- Do not use acidic, alkaline or abrasive detergent
- · Do not use hard brushes
- Do not use detergent on the wheels when they are hot, such as after driving or parking in hot weather

■ Brake pads and calipers

Rust may form if the vehicle is parked with wet brake pads or disc rotors, causing them to stick. Before parking the vehicle after it is washed, drive slowly and apply the brakes several times to dry the parts.

Bumpers

Do not scrub with abrasive cleaners

■ Front side windows water-repellent coating

- The following precautions can extend the effectiveness of the water-repellent coating.
- Remove any dirt, etc. from the front side windows regularly.
- Do not allow dirt and dust to accumulate on the windows for a long period.
 Clean the windows with a soft, damp cloth as soon as possible.
- Do not use wax or glass cleaners that contain abrasives when cleaning the windows
- Do not use any metallic objects to remove condensation build up.

■ Plated portions

If dirt cannot be removed, clean the parts as follows:

- Use a soft cloth dampened with an approximately 5% solution of neutral detergent and water to clean the dirt off.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture.
- To remove oily deposits, use alcohol wet wipes or a similar product.

A


WARNING

When washing the vehicle

Do not apply water to the inside of the engine compartment. Doing so may cause the electrical components, etc. to catch fire

When cleaning the windshield (vehicles with rain-sensing windshield wipers)

Set the wiper switch to off. If the wiper switch is in "AUTO", the wipers may operate unexpectedly in the following situations, and may result in hands being caught or other serious injuries and cause damage to the wiper blades.

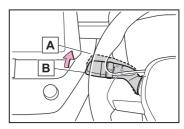

- A Off
- **B** AUTO

■ Precautions regarding the exhaust pipe

Exhaust gasses cause the exhaust pipe to become quite hot.
When washing the vehicle, be careful not to touch the pipe until it has cooled sufficiently, as touching a hot exhaust pipe can cause burns.

■ Precaution regarding the front bumper and rear bumper

If the paint of the front bumper and rear bumper is chipped or scratched, the following systems may not function correctly. If this occurs, consult your Toyota dealer.

- BSM (if equipped)
- RCTA (if equipped)
- SEA (if equipped)
- Toyota parking assist-sensor

Λ

NOTICE

- To prevent paint deterioration and corrosion on the body and components (aluminum wheels, etc.)
- Wash the vehicle immediately in the following cases:
- · After driving near the sea coast
- · After driving on salted roads
- If coal tar or tree sap is present on the paint surface
- If dead insects, insect droppings or bird droppings are present on the paint surface
- After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
- If the vehicle becomes heavily soiled with dust or mud
- If liquids such as benzene and gasoline are spilled on the paint surface
- If the paint is chipped or scratched, have it repaired immediately.
- To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.

■ Cleaning the exterior lights

 Wash carefully. Do not use organic substances or scrub with a hard brush.

This may damage the surfaces of the lights.

 Do not apply wax to the surfaces of the lights.

Wax may cause damage to the lenses.

When using an automatic car wash (vehicles with rain-sensing windshield wipers)

Set the wiper switch to the off position. If the wiper switch is in "AUTO", the wipers may operate and the wiper blades may be damaged.

When using a high pressure car wash

- When washing the vehicle, do not spray the camera or its surrounding area directly with a high pressure washer. Shock applied from high pressure water may cause the device to not operate normally.
- Do not spray water directly on the radar which is equipped behind the emblem. Otherwise it may cause the device to be damaged.
- Do not bring the nozzle tip close to boots (rubber or resin manufactured cover), connectors or the following parts. The parts may be damaged if they come into contact with high-pressure water.
- · Traction related parts
- · Steering parts
- · Suspension parts
- Brake parts
- Keep the cleaning nozzle at least 30 cm (11.9 in.) away from the vehicles body. Otherwise resin section, such as moldings and bumpers, may be deformed and damaged. Also, do not continuously hold the nozzle in the same place.
- Do not spray the lower part of the windshield continuously. If water enters the air conditioning system intake located near the lower part of the windshield, the air conditioning system may not operate correctly.
- Do not wash the underside of the vehicle using a high pressure car washer.

Cleaning and protecting the vehicle interior

Perform cleaning in a manner appropriate to each component and its material.

Protecting the vehicle interior

- Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.
- If dirt cannot be removed, wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
 Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

■ Shampooing the carpets

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not use water. Wipe dirty surfaces and let them dry. Excellent results are obtained by keeping the carpet as dry as possible.

■ Handling the seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.



WARNING

Water in the vehicle

- Do not splash or spill liquid in the vehicle, such as on the floor, in the hybrid battery (traction battery) air intake vent, and in the luggage compartment. (→P.283) Doing so may cause the hybrid battery, electrical components, etc. to malfunction or catch fire
- Do not get any of the SRS components or wiring in the vehicle interior wet. (→P.29) An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or serious injury.
- Vehicles with wireless charger: Do not let the wireless charger (→P.270) get wet. Failure to do so may cause the charger to become hot and cause burns or could cause electric shock resulting in death or serious injury.

Cleaning the interior (especially instrument panel)

Do not use polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.



NOTICE

■ Cleaning detergents

- Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
- Non-seat portions: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dve. and bleach

<u>^</u>

NOTICE

- Seats: Alkaline or acidic solutions, such as thinner, benzene, and alcohol
- Do not use polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

■ Preventing damage to leather surfaces

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

- Remove any dust or dirt from leather surfaces immediately.
- Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or containing wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

Water on the floor

Do not wash the vehicle floor with water.

Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components such as the audio system above or under the floor of the vehicle. Water may also cause the body to rust.

When cleaning the inside of the windshield

Do not allow glass cleaner to contact the lens. Also, do not touch the lens. $(\rightarrow P.170)$

■ Cleaning the inside of the rear window

- Do not use glass cleaner to clean the rear window, as this may cause damage to the rear window defogger heater wires or antenna. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires or antenna
- Be careful not to scratch or damage the heater wires or antenna.

Cleaning the areas with satin-finish metal accents

- Remove dirt using a water-dampened soft cloth or synthetic chamois.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture.

Cleaning the areas with satin-finish metal accents

The metal areas use a layer of real metal for the surface. It is necessary to clean them regularly. If dirty areas are left uncleaned for long periods of time, they may be difficult to clean.

Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe off any excess dirt and dust with a soft cloth dampened with diluted detergent.

Use a diluted water solution of approximately 5% neutral wool detergent.

Wring out any excess water from

- the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded and ventilated area.

■ Caring for leather areas

Toyota recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

Cleaning the synthetic leather areas

- Remove dirt and dust using a vacuum cleaner
- Wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
- Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

Maintenance requirements

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. Toyota recommends the maintenance below.

■ Where to go for maintenance service?

It makes good sense to take your vehicle to your local Toyota dealer for maintenance service as well as other inspections and repairs.

Toyota technicians are well-trained specialists receiving the latest service information through technical bulletins, service tips, and in-dealership training programs. They learn to work on Toyota before they work on your vehicle, rather than while they are working on it. Doesn't that seem like the best way?

Your Toyota dealer has invested a lot of money in special Toyota tools and service equipment. It helps them to do the job better and at less cost.

Your Toyota dealer's service department will perform all of the scheduled maintenance on your vehicle reliably and economically.



WARNING

If your vehicle is not properly maintained

Improper maintenance could result in serious damage to the vehicle and possible death or serious injury.

■ Handling of the 12-volt battery

12-volt battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (→P.295)

Scheduled maintenance

Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

For full details of your maintenance schedule, refer to the "Warranty and Service Booklet".

Do-it-vourself maintenance

What about do-it-yourself maintenance?

Many of the maintenance items are easy to do yourself if you have a little mechanical ability and a few basic automotive tools.

Note, however, that some maintenance tasks require special tools and skills. These are best performed by qualified technicians. Even if you are an experienced do-it-yourself mechanic, we recommend that repairs and maintenance be conducted by your Toyota dealer who will keep a record of maintenance on your vehicle. This record could be helpful should you ever require Warranty Service.

■ Does your vehicle need repairs?

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine missing, stumbling or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning system after use is normal.)
- Change in exhaust sound (This may

6

- indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driven straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches the floor, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal (→P.72, 76)

If you notice any of these clues, take your vehicle to your Toyota dealer as soon as possible. Your vehicle may need adjustment or repair.

Do-it-yourself service precautions

If you perform maintenance by yourself, be sure to follow the correct procedure as given in these sections.

Maintenance

Items	Parts and tools
12-volt bat- tery condi- tion (→P.295)	 Warm water Baking soda Grease Conventional wrench (for terminal clamp bolts)
Engine/powe r control unit coolant level (→P.294)	"Toyota Super Long Life Coolant" or a similar high quality ethylene glycol-based non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology "Toyota Super Long Life Coolant" is pre-mixed with 50% coolant and 50% deionized water. Funnel (used only for adding coolant)
Engine oil level (→P.292)	 "Toyota Genuine Motor Oil" or equivalent Rag or paper towel Funnel (used only for adding engine oil)

Items	Parts and tools
Fuses (→P.309)	Fuse with same amperage rating as original
Light bulbs (→P.312)	 Bulb with same number and wattage rating as original Flathead screwdriver Wrench
Radiator and condenser (→P.295)	_
Tire inflation pressure (→P.300)	Tire pressure gauge Compressed air source
Washer fluid (→P.297)	 Water or washer fluid containing antifreeze (for winter use) Funnel (used only for adding water or washer fluid)

WARNING

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions.

- When working on the engine compartment
- Make sure that the "ACCESSORY" or "IGNITION ON" on the multi-information display and the "READY" indicator are both off.
- Keep hands, clothing and tools away from the moving fan.
- Be careful not to touch the engine, power control unit, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.

WARNING

- Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.
- Do not smoke, cause sparks or expose an open flame to fuel. Fuel fumes are flammable
- Be extremely cautious when working on the 12-volt battery. It contains poisonous and corrosive sulfuric acid
- Take care because brake fluid can harm your hands or eves and damage painted surfaces. If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately.

If you still experience discomfort. consult a doctor.

When working near the electric cooling fans or radiator grille

Be sure the power switch is off. With the power switch in ON, the electric cooling fans may automatically start to run if the air conditioning is on and/or the coolant temperature is high. $(\rightarrow P.295)$

Safety glasses

Wear safety glasses to prevent flving or falling material, fluid spray, etc. from getting in your eyes.



NOTICE

If you remove the air cleaner filter

Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air.

If the fluid level is low or high

It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.


If the reservoir needs frequent refilling, it may indicate a serious problem.

6


Hood

Opening the hood


1 Pull the hood lock release lever. The hood will pop up slightly.

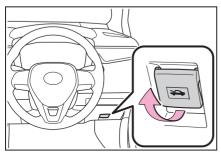

2 Pull the auxiliary catch lever to the left and lift the hood

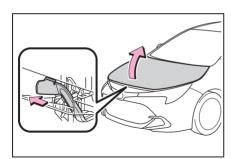

3 Hold the hood open by inserting the support rod into the slot.

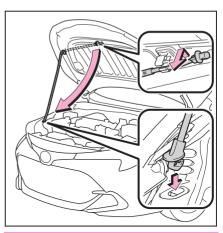

A

WARNING

Pre-driving check

Check that the hood is fully closed and locked.

If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

■ After installing the support rod into the slot

Make sure the rod supports the hood securely preventing it from falling down onto your head or body.



NOTICE

■When closing the hood

Be sure to return the support rod to its clip before closing the hood. Closing the hood with the support rod not clipped could cause the hood to bend.


Positioning a floor jack

When using a floor jack, follow the instructions in the manual provided with the jack and perform the operation safely.


When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.

Location of the jack point

■ Front

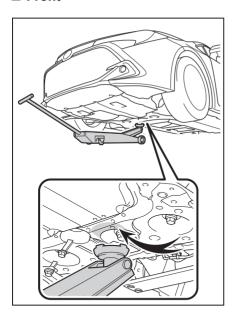


■ Rear

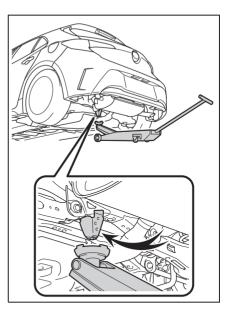

Engine compartment

Components

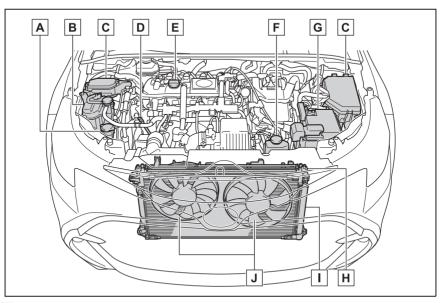

- A Washer fluid tank (→P.297)
- **B** Engine coolant reservoir (→P.294)
- **C** Fuse boxes (→P.309)
- **D** Engine oil level dipstick (→P.292)
- **E** Engine oil filler cap (→P.293)
- F Power control unit coolant reservoir (→P.294)
- **G** 12-volt battery (→P.295)
- H Radiator (→P.295)
- I Condenser (→P.295)
- J Electric cooling fans


Checking and adding the engine oil

With the engine at operating temperature and turned off, check the oil level on the dipstick.


■ Checking the engine oil

 Park the vehicle on level ground. After warming up the engine and turning off the hybrid system, wait more than 5 minutes for the oil to drain back into the bottom of the engine.

2 Holding a rag under the end, pull the dipstick out.

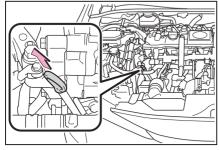

- 3 Wipe the dipstick clean.
- 4 Reinsert the dipstick fully.
- 5 Holding a rag under the end, pull the dipstick out and check the oil level.

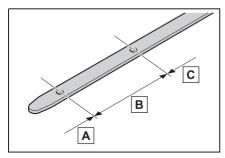

- A Low
- **B** Normal
- **C** Excessive

The shape of the dipstick may differ depending on the type of vehicle or engine.

6 Wipe the dipstick and reinsert it fully.


■ Checking the oil type and preparing the item needed

Make sure to check the oil type and prepare the items needed before adding oil.

- Engine oil selection→P.369
- Oil quantity (Low → Full)
 1.5 L (1.6 qt., 1.3 lmp. qt.)
- ItemClean funnel

Adding engine oil

If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.

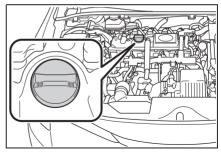

- Remove the oil filler cap by turning it counterclockwise.
- 2 Add engine oil slowly, checking the dipstick.
- 3 Install the oil filler cap by turning it clockwise.

■ Engine oil consumption

A certain amount of engine oil will be consumed while driving. In the following situations, oil consumption may increase, and engine oil may need to be refilled in between oil maintenance intervals.

- When the engine is new, for example directly after purchasing the vehicle or after replacing the engine
- If low quality oil or oil of an inappropriate viscosity is used
- When driving at high engine speeds or with a heavy load, or when driving while accelerating or decelerating frequently
- When leaving the engine idling for a long time, or when driving frequently through heavy traffic

A

WARNING

■Used engine oil

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation and skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner.
 Do not dispose of used oil and filters in household trash, in sewers or onto the ground.
 Call your Toyota dealer, service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children



NOTICE

■ To prevent serious engine damage

Check the oil level on a regular basis.


- When replacing the engine oil
- Be careful not to spill engine oil on the vehicle components.

- Avoid overfilling, or the engine could be damaged.
- Check the oil level on the dipstick every time you refill the vehicle.
- Be sure the engine oil filler cap is properly tightened.

Checking the coolant

■ Engine coolant reservoir

The coolant level is satisfactory if it is between the "MAX" and "MIN" lines on the reservoir when the engine is cold.

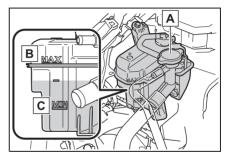


- A Reservoir
- B "MAX" line
- C "MIN" line

If the level is on or below the "MIN" line, add coolant up to the "MAX" line. $(\rightarrow P.362)$

■ Power control unit coolant reservoir

The coolant level is satisfactory if it is between the "MAX" and "MIN" lines on the reservoir when the hybrid system is cold.

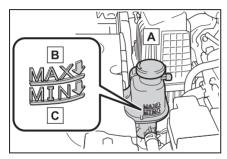

- A Reservoir
- **B** "MAX" line
- C "MIN" line

If the level is on or below the "MIN" line, add coolant up to the "MAX" line. $(\rightarrow P.362)$

■ Coolant selection

Only use "Toyota Super Long Life Coolant" or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

"Toyota Super Long Life Coolant" is a mixture of 50% coolant and 50% deionized water. (Minimum temperature: -35°C [-31°F])

For more details about coolant, contact your Toyota dealer.

If the coolant level drops within a short time of replenishing

Visually check the radiator, hoses, engine/power control unit coolant reservoir caps, drain cock and water pump. If you cannot find a leak, have your Toyota dealer test the cap and check for leaks in the cooling system.



WARNING

■When the hybrid system is hot

Do not remove the engine/power control unit coolant reservoir caps. $(\rightarrow P.364)$

The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.



NOTICE

■When adding coolant

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

If you spill coolant

Be sure to wash it off with water to prevent it from damaging parts or paint.

Checking the radiator and condenser

Check the radiator and condenser and clear away any foreign objects. If either of the above parts is extremely dirty or you are not sure of their condition, have your vehicle inspected by your Toyota dealer.



WARNING

■When the hybrid system is hot

Do not touch the radiator or condenser as they may be hot and cause serious injuries, such as burns.


12-volt battery

Check the 12-volt battery as fol-

lows.

■ 12-volt battery exterior

Make sure that the 12-volt battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.

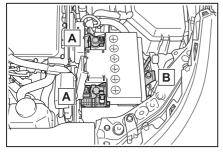

- **A** Terminals
- **B** Hold-down clamp

■ Before recharging

When recharging, the 12-volt battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following precautions before recharging:

- If recharging with the 12-volt battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the charger is off when connecting and disconnecting the charger cables to the 12-volt battery.
- After recharging/reconnecting the 12-volt battery
- Unlocking the doors using the smart entry & start system may not be possible immediately after reconnecting the 12-volt battery. If this happens, use the wireless remote control or the mechanical key to lock/unlock the doors.
- Start the hybrid system with the power switch in ACC. The hybrid system may not start with the power switch turned off. However, the hybrid sys-

- tem will operate normally from the second attempt.
- The power switch mode is recorded by the vehicle. If the 12-volt battery is reconnected, the vehicle will return the power switch mode to the status it was in before the 12-volt battery was disconnected. Make sure to turn off the power before disconnecting the 12-volt battery. Take extra care when connecting the 12-volt battery if the power switch mode prior to discharge is unknown.

If the system will not start even after multiple attempts, contact your Toyota dealer.



WARNING

■ Chemicals in the 12-volt battery

The 12-volt battery contains poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the 12-volt battery:

- Do not cause sparks by touching the 12-volt battery terminals with tools.
- Do not smoke or light a match near the 12-volt battery.
- Avoid contact with eyes, skin and clothes
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the 12-volt battery.
- Keep children away from the 12-volt battery.

6

WARNING

Where to safely charge the 12-volt batterv

Always charge the 12-volt battery in an open area. Do not charge the 12-volt battery in a garage or closed room where there is insufficient ventilation

Emergency measures regarding electrolyte

- If electrolyte gets in your eyes Flush your eves with clean water for at least 15 minutes and get immediate medical attention. If possible. continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin. Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolvte Drink a large quantity of water or milk. Get emergency medical attention immediately.

When disconnecting the 12-volt battery

Do not disconnect the negative (-) terminal on the body side. The disconnected negative (-) terminal may touch the positive (+) terminal, which may cause a short and result in death or serious injury.




NOTICE

When recharging the 12-volt batterv

Never recharge the 12-volt battery while the hybrid system is operating. Also, be sure all accessories are turned off.


Adding the washer fluid

If the washer fluid level is at "LOW". add washer fluid

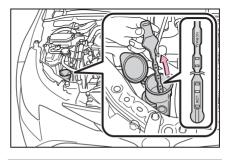

■ Using the gauge

The washer fluid level can be checked by observing the position of the level on the liquid-covered holes in the gauge. If the level falls below the second hole from the bottom (the "LOW" position), refill the washer fluid

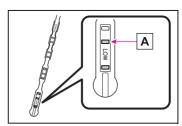

A Current fluid level

WARNING

When adding washer fluid

Do not add washer fluid when the hybrid system is hot or operating as washer fluid contains alcohol and may catch fire if spilled on the engine. etc.

NOTICE

■ Do not use any fluid other than washer fluid

Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surfaces, as well as damaging the pump leading to problems of the washer fluid not spraying.

Diluting washer fluid

Dilute washer fluid with water as necessarv.

Refer to the freezing temperatures listed on the label of the washer fluid bottle


Tires

Replace or rotate tires in accordance with maintenance schedules and treadwear.

Checking tires

Check if the treadwear indicators are showing on the tires. Also check the tires for uneven wear. such as excessive wear on one side of the tread

Check the spare tire condition and pressure if not rotated.

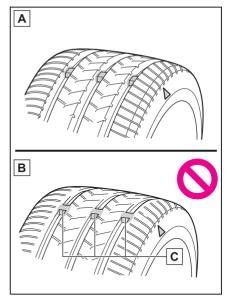

- A New tread
- **B** Worn tread
- c Treadwear indicator

The location of treadwear indicators is shown by a "TWI" or " \(\lambda \) " mark, etc., molded into the sidewall of each tire.

Replace the tires if the treadwear indicators are showing on a tire.

■ When to replace your vehicle's

Tires should be replaced if:

- The treadwear indicators are showing. on a tire
- You have tire damage such as cuts. splits, cracks deep enough to expose the fabric, and bulges indicating internal damage
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage

If you are not sure, consult with your Tovota dealer.

■ Tire life

Any tire over 6 years old must be checked by a qualified technician even if it has seldom or never been used or damage is not obvious.

Low profile tires (18-inch tires)

Generally, low profile tires will wear more rapidly and tire grip performance will be reduced on snowy and/or icy roads when compared to standard tires. Be sure to use snow tires or tire chains. on snowy and/or icy roads and drive carefully at a speed appropriate for road and weather conditions

If the tread on snow tires wears down below 4 mm (0.16 in.)

The effectiveness of the tires as snow tires is lost

■ Checking the tire valves

When replacing the tires, check the tire valves for deformation, cracks, and other damage.



WARNING

When inspecting or replacing tires

Observe the following precautions to prevent accidents

Failure to do so may cause damage to parts of the drive train as well as dangerous handling characteristics. which may lead to an accident resulting in death or serious injury.

- Do not mix tires of different makes. models or tread patterns. Also, do not mix tires of remarkably different treadwear
- Do not use tire sizes other than those recommended by Toyota.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires
- Do not use tires that have been used on another vehicle. Do not use tires if you do not know how they were used previously.



NOTICE

Low profile tires (18-inch tires)

Low profile tires may cause greater damage than usual to the tire wheel when sustaining impact from the road surface. Therefore, pay attention to the following:

- Be sure to use proper tire inflation pressure. If tires are under-inflated. they may be damaged more severely.
- Avoid potholes, uneven pavement, curbs and other road hazards. Failure to do so may lead to severe tire and wheel damage.

<u>^</u>

NOTICE

■ If tire inflation pressure of each tire becomes low while driving


Do not continue driving, or your tires and/or wheels may be ruined.

Driving on rough roads

Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.

Tire rotation

Rotate the tires in the order shown.

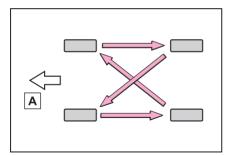

A Front

To equalize tire wear and help extend tire life, Toyota recommends that tire rotation is carried out approximately every 10000 km (6000 miles).

Tire inflation pressure

Make sure to maintain proper tire inflation pressure. Tire inflation pressure should be checked at least once per month. However, Toyota recommends that tire inflation pressure be checked once every two weeks. (→P.373)

■ Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel economy
- Reduced driving comfort and poor handling
- Reduced tire life due to wear
- Reduced safety
- Damage to the drive train

If a tire needs frequent inflating, have it checked by your Toyota dealer.

■ Instructions for checking tire inflation pressure

When checking tire inflation pressure, observe the following:

- Check only when the tires are cold. If your vehicle has been parked for at least 3 hours or has not been driven for more than 1.5 km or 1 mile, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge. It is difficult to judge if a tire is properly inflated based only on its appearance.
- It is normal for the tire inflation pressure to be higher after driving as heat is generated in the tire. Do not reduce tire inflation pressure after driving.
- Passengers and luggage weight should be placed so that the vehicle is balanced.

WARNING

Proper inflation is critical to save tire performance

Keep your tires properly inflated. If the tires are not properly inflated, the following conditions may occur which could lead to an accident resulting in death or serious injury:

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Air leaking from between tire and
- Wheel deformation and/or tire damage
- Greater possibility of tire damage while driving (due to road hazards, expansion joints, sharp edges on the road, etc.)



NOTICE

When inspecting and adjusting tire inflation pressure

Be sure to put the tire valve caps back

If a valve cap is not installed, dirt or moisture may get into the valve and cause an air leak, resulting in decreased tire inflation pressure.

Wheels

If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause a loss of handling control

Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width and inset*

Replacement wheels are available at vour Tovota dealer.

*: Conventionally referred to as offset.

Tovota does not recommend using the following:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened



WARNING

When replacing wheels

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in a loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire.

Doing so may result in an accident, causing death or serious injury.

WARNING

When installing the wheel nuts

- Be sure to install the wheel nuts. with the tapered ends facing inward. (→P.351) Installing the nuts with the tapered ends facing outward can cause the wheel to break and eventually cause the wheel to come off while driving, which could lead to an accident resulting in death or serious injury.
- Never use oil or grease on the wheel bolts or wheel nuts. Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off. causing an accident and resulting in death or serious injury. Remove any oil or grease from the wheel bolts or wheel nuts
- Use of defective wheels prohibited

Do not use cracked or deformed wheels. Doing so could cause the tire to leak air during driving, possibly causing an accident.

Aluminum wheel precautions

- Use only Toyota wheel nuts and wheel nut wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- Be careful not to damage the aluminum wheels when using tire chains.


 Use only Toyota genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.

Air conditioning filter


The air conditioning filter must be changed regularly to maintain air conditioning efficiency.

Removing the air conditioning filter

- 1 Turn the power switch off.
- 2 Open the glove box. Slide off the damper.

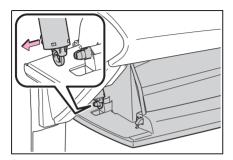


3 Push in the glove box on the vehicle's outer side to disconnect the claws. Then pull out the glove box and disconnect the lower claws.

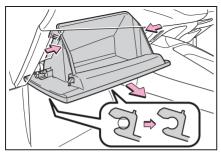


4 Unlock the filter cover (A), pull the filter cover out of the claws

(B), and remove the filter

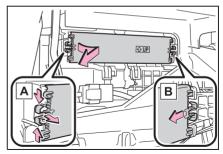


5 Remove the filter case.

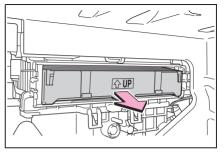

6 Remove the air conditioning filter from the filter case and replace it with a new one.

The " UP" marks shown on the filter and the filter case should be pointing up.

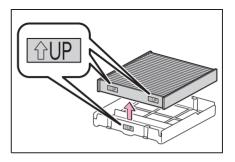

■ Checking interval

Inspect and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with

heavy traffic flow, early replacement may be required. (For scheduled maintenance information, please refer to the "Warranty and Service Booklet".)

If air flow from the vents decreases dramatically

The filter may be clogged. Check the filter and replace if necessary.



NOTICE


■ When using the air conditioning system

Make sure that a filter is always installed.

Using the air conditioning system without a filter may cause damage to the system.

To prevent damage to the filter cover

When moving the filter cover in the direction of arrow to release the fitting, pay attention not to apply excessive force to the claws. Otherwise, the claws may be damaged.

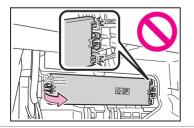

Cleaning the hybrid battery (traction battery) air intake vents

To prevent the fuel economy from being affected, visually inspect the hybrid battery (traction battery) air intake vents periodically for clogs. If it is dusty or clogged or if "Maintenance Required for Traction Battery Cooling Parts See Owner's Manual" is displayed on the multi-information display, clean the air intake vent using the following procedures:

■ Scheduled maintenance of the air intake vent is necessary when

In some situations such as when the vehicle is used frequently or in heavy traffic or dusty areas, the air intake vent may need to be cleaned more regularly. For details, refer to "Schedule maintenance guide" or "Owner's Manual Supplement".

■ Cleaning the air intake vent

Improper handling of the air intake vent cover and filter may result in damage to them. If you have any concerns about cleaning the filter, contact your Toyota dealer.




NOTICE

If "Maintenance Required for Traction Battery Cooling Parts See Owner's Manual" is displayed on the multi-information display

Clean the air intake vent immediately. If the vehicle is continuously driven with the warning message displayed, it may cause a malfunction or output restriction of the hybrid battery (traction battery).


Cleaning procedure

- 1 Turn the power switch off.
- 2 Remove the air intake vent cover.

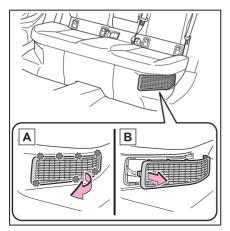

- A Pull the cover as shown in the illustration to disengage the 7 claws, starting from the claw in the upper right corner.
- **B** Pull the cover toward the front of the vehicle to remove it.

3 Remove the filter from the air intake vent cover

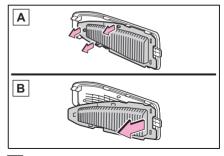


- A Disengage the 3 claws as shown in the illustration.
- **B** Remove the filter from the cover.

If dust has accumulated on the air intake vent cover, remove the dust with a vacuum cleaner, etc.

4 Remove the dust and sand from the filter.

Using a vacuum cleaner, etc., absorb dust and sand from the filter by profiling the nozzle lightly along the fold.

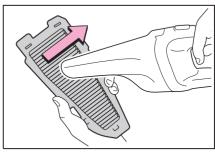

5 Hold the filter to the light and check if it is not clogged.

If the dust or sand cannot be removed

completely, contact your Toyota dealer.



- 6 Install the filter in its original position, and then install the air intake vent cover.
- ▶ If "Maintenance Required for Traction Battery Cooling Parts See Owner's Manual" is displayed on the multi-information display
- 7 Start the hybrid system and check that the warning message is no longer displayed.

It may be necessary to drive the vehicle for warning message is displayed again then disappears.

If the warning message does not disappear after some time, have the vehicle inspected by your Toyota dealer.

■ If the dust or sand on the filter cannot be removed

It is recommended to use a vacuum cleaner with plastic brushes.



WARNING

When cleaning the air intake vent

 Do not use water or other liquids to clean the air intake vent. If water is applied to the hybrid battery (traction battery) or other components, a malfunction or fire may occur.

- Before cleaning the air intake vent, make sure to turn the power switch off to stop the hybrid system.
- Do not put a hand or leg in the air intake vent. If it is caught in a cooling fan, or if it touches a high voltage part that results in an electric shock, death or serious injuries may result.




tion battery).

NOTICE

■When cleaning the air intake vent

Do not use an air blow gun, etc.

Dust may be blown out, possibly causing a malfunction or output restriction of the hybrid battery (trac-

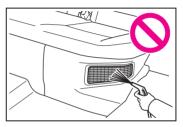

■ To prevent damage to the vehicle

Observe the following precautions:

- Do not allow liquid or foreign material to enter the air intake vent.
- Make sure to reinstall the filter and cover to their original positions after cleaning.
- Do not install anything to the air intake vent other than the exclusive filter for this vehicle or use the vehicle without the filter installed.

■ To prevent damage to the filter

Observe the following precautions. If the filter is damaged, have it replaced with a new filter by your Toyota dealer.

Do not use an air blow gun, etc.

6

NOTICE

- Do not press hard a vacuum cleaner, etc.against the filter.
- Do not use a hard brush, such as a metal brush.
- Do not break the fold of the filter.

Electronic key battery

Replace the battery with a new one if it is depleted.

As the key may be damaged if the following procedure is not performed properly, it is recommended that key battery replacement be performed by your Toyota dealer.

■ If the electronic key battery is depleted

The following symptoms may occur:

- The smart key system and wireless remote control will not function properly.
- The operational range will be reduced.

Items to prepare


- Flathead screwdriver
- Small flathead screwdriver
- Lithium battery CR2450

■ Use a CR2450 lithium battery

- Batteries can be purchased at your Toyota dealer, local electrical appliance shops or camera stores.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to local laws.


Replacing the battery

1 Release the lock and remove the mechanical key.

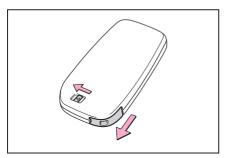

2 Remove the key cover.

To prevent damage to the key, cover the tip of the flathead screwdriver with a rag.

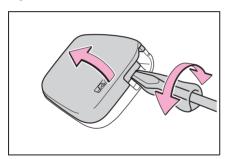


3 Remove the depleted battery using a small flathead screwdriver.

When removing the cover, the electronic key module may stick to the cover and the battery may not be visible. In this case, remove the electronic key module in order to remove the battery.

Insert a new battery with the "+" termi-

nal facing up.

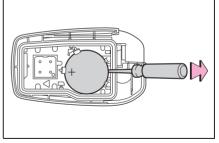

- 4 When installing the key cover and mechanical key, install by conducting step 2 and step 1 with the directions reversed
- 5 Operate the or switch and check that the doors can be locked/unlocked.

Λ

WARNING

■ Battery precautions

Observe the following precautions. Failure to do so may result in death or serious injury.

- Do not swallow the battery. Doing so may cause chemical burns.
- A coin battery or button battery is used in the electronic key. If a battery is swallowed, it may cause severe chemical burns in as little as 2 hours and may result in death or serious injury.
- Keep away new and removed batteries from children.
- If the cover cannot be firmly closed, stop using the electronic key and stow the key in the place where children cannot reach, and then contact your Toyota dealer.
- If you accidentally swallow a battery or put a battery into a part of your body, get emergency medical attention immediately.

6

WARNING

- To prevent battery explosion or leakage of flammable liquid or gas
- Replace the battery with a new battery of the same type. If a wrong type of battery is used, it may explode.
- Do not expose batteries to extremely low pressure due to high altitude or extremely high temperatures
- Do not burn, break or cut a battery.



NOTICE

When replacing the battery

Use a flathead screwdriver of appropriate size. Applying excessive force may deform or damage the cover.

For normal operation after replacing the battery

Observe the following precautions to prevent accidents:

- Always work with dry hands. Moisture may cause the battery to rust.
- Do not touch or move any other component inside the remote control.
- Do not bend either of the battery terminals.


Checking and replacing fuses

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.

Checking and replacing fuses


- 1 Turn the power switch off.
- 2 Open the fuse box cover.
- ► Engine compartment: type A fuse box

Push the tabs in and lift the lid off

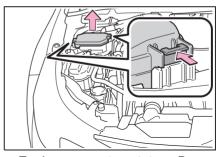

► Engine compartment: type B fuse box


Push the tabs in and lift the lid off

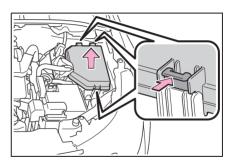

Under the passenger's side instrument panel


Remove the cover and then remove the lid

Make sure to push the claw when removing/installing the lid.

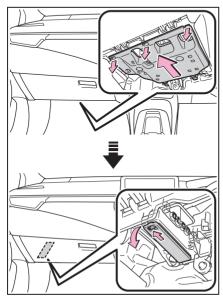

3 Remove the fuse with the pullout tool.


Only type A fuse can be removed using the pullout tool.

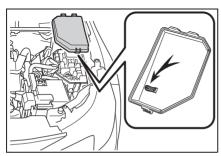


4 Check if the fuse is blown.

Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.


▶ Type A

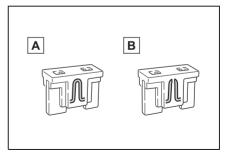

- A Normal fuse
- **B** Blown fuse
- ▶ Type B

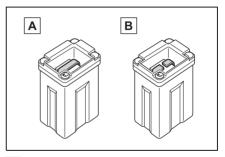


- A Normal fuse
- **B** Blown fuse
- ▶ Type C

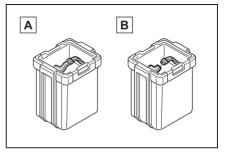

- A Normal fuse
- **B** Blown fuse

6

▶ Type D

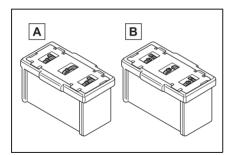

- A Normal fuse
- **B** Blown fuse

■ After a fuse is replaced

- When installing the lid, make sure that the tab is installed securely.
- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement.
- If the replaced fuse blows again, have the vehicle inspected by your Toyota dealer

■ If there is an overload in a circuit

The fuses are designed to blow, protecting the wiring harness from damage.

■ When replacing light bulbs

Tovota recommends that you use genuine Toyota products designed for this vehicle

Because certain bulbs are connected to circuits designed to prevent overload, non-genuine parts or parts not designed for this vehicle may be unusable.



WARNING

■ To prevent system breakdowns and vehicle fire

Observe the following precautions. Failure to do so may cause damage to the vehicle, and possibly a fire or injury.

- Never use a fuse of a higher amperage rating than that indicated, or use any other object in place of a fuse.
- Always use a genuine Toyota fuse or equivalent Never replace a fuse with a wire. even as a temporary fix.
- Do not modify the fuses or fuse boxes.



NOTICE

■ Before replacing fuses

Have the cause of electrical overload determined and repaired by your Toyota dealer as soon as possible.


Light bulbs

You may replace the following bulbs by yourself. The difficulty level of replacement varies depending on the bulb. As there is a danger that components may be damaged, we recommend that replacement is carried out by your Toyota dealer.

Preparing for light bulb replacement

Check the wattage of the light bulb to be replaced. (\rightarrow P.374)

Bulb locations

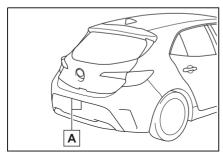

- A License plate lights
- Bulbs that need to be replaced by your Toyota dealer
- Headlights
- Front position lights
- Daytime running lights
- Turn signal lights
- Front fog lights (if equipped)

- Tail lights
- Stop lights
- Back-up light
- Rear fog light
- High mounted stoplight

■LED light bulbs

The lights other than the license plate lights consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to your Toyota dealer to have the light replaced.

■ Condensation build-up on the inside of the lens

Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction. Contact your Toyota dealer for more information in the following situations:

- Large drops of water have built up on the inside of the lens.
- Water has built up inside the headlight.
- ■When replacing light bulbs

→P.311


Replacing light bulbs

- License plate lights
- 1 Remove the light unit.


Insert a flathead screwdriver or similar into the hole next to the light and remove it as shown in the illustration.

To prevent damaging the vehicle, wrap


the flathead screwdriver with a tape.

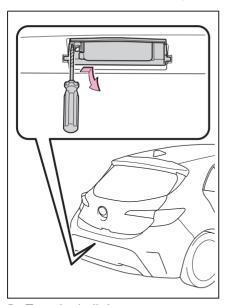

2 Turn the bulb base counterclockwise and remove it.

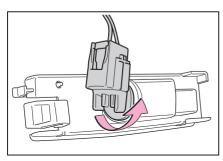

3 Remove the light bulb.

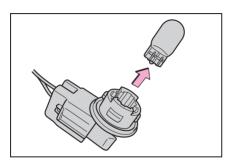

4 When installing, reverse the steps listed.



WARNING

Replacing light bulbs

- Turn off the lights. Do not attempt to replace the bulb immediately after turning off the lights. The bulbs become very hot and may cause burns.
- Do not touch the glass portion of the light bulb with bare hands. When it is unavoidable to hold the glass portion, use and hold with a clean dry cloth to avoid getting moisture and oils on the bulb. Also, if the bulb is scratched or dropped, it may blow out or crack.
- Fully install light bulbs and any parts used to secure them. Failure to do so may result in heat damage, fire, or water entering the light unit. This may damage the lights or cause condensation to build up on the lens.

■ To prevent damage or fire

Make sure bulbs are fully seated and locked.

When trouble arises

7-1.	Essential information
	Emergency flashers316
	If your vehicle has to be
	stopped in an emergency
	316
	If the vehicle is submerged or
	water on the road is rising
7-2 .	Steps to take in an emer-
1-2.	gency
	If your vehicle needs to be towed319
	If you think something is wrong
	If a warning light turns on or a warning buzzer sounds324
	If a warning message is displayed331
	If you have a flat tire (vehicles without spare tire)335
	If you have a flat tire (vehicles with a spare tire)346
	If the hybrid system will not start354
	If you lose your keys355
	If the electronic key does not operate properly356
	If the 12-volt battery is discharged358
	If your vehicle overheats362
	If the vehicle becomes stuck
	365

Emergency flashers


The emergency flashers are used to warn other drivers when the vehicle has to be stopped on the road due to a breakdown, etc.

Operating instructions

Press the switch

All the turn signal lights will flash.

To turn them off, press the switch once again.

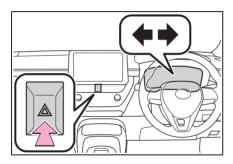

■ Emergency flashers

the collision.)

- If the emergency flashers are used for a long time while the hybrid system is not operating (while the "READY" indicator is not illuminated), the 12-volt battery may discharge.
- If any of the SRS airbags deploy (inflate) or in the event of a strong rear impact, the emergency flashers will turn on automatically.

 The emergency flashers will turn off automatically after operating for approximately 20 minutes. To manually turn the emergency flashers off, press the switch twice.

 (The emergency flashers may not turn on automatically depending on the force of the impact and conditions of

If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:


Stopping the vehicle

 Steadily step on the brake pedal with both feet and firmly depress it.

Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.

- 2 Shift the shift lever to N.
- ▶ If the shift lever is shifted to N
- 3 After slowing down, stop the vehicle in a safe place by the road.
- 4 Stop the hybrid system.
- If the shift lever cannot be shifted to N
- 3 Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.
- 4 To stop the hybrid system, press and hold the power switch for 2 consecutive seconds or more.

or press it briefly 3 times or more in succession

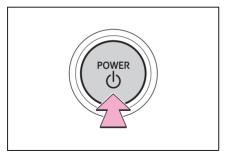

5 Stop the vehicle in a safe place by the road.



WARNING

If the hybrid system has to be turned off while driving

Power assist for the steering wheel will be lost, making the steering wheel heavier to turn. Decelerate as much as possible before turning off the hybrid system.

If the vehicle is submerged or water on the road is rising

This vehicle is not designed to be able to drive on roads that are deeply flooded with water. Do not drive on roads where the roads may be submerged or the water may be rising. It is dangerous to remain in the vehicle, if it anticipated that the vehicle will be flooded or set a drift. Remain calm and follow the following.

- If the door can be opened, open the door and exit the vehicle.
- If the door can not be opened, open the window using the power window switch and ensure an escape route.
- If the window can be opened, exit the vehicle through the window.
- If the door and window cannot be opened due to the rising water, remain calm, wait until the water level inside the vehicle rises to the point that the water pressure inside of the vehicle equals the water pressure outside of the vehicle and then open the door after waiting for the rising water to enter the vehicle, and exit the vehicle. When the outside water level exceeds half the height of the door, the door cannot be opened from the inside due to

water pressure.

■ Water level exceeds the floor

When the water level exceeds the floor and time has passed, the electrical equipment will get damaged, the power windows will not operate, the engine and motor stop, and the vehicle may not be able to get moving.

■ Using an emergency escape hammer*

Laminated glass is used in the windshield on this vehicle. Laminated glass cannot be shattered with an emergency hammer*. Tempered glass is used in the windows on this vehicle

*: Contact your Toyota dealer or aftermarket accessory manufacturer for further information about an emergency hammer.



WARNING

Caution while driving

Do not drive on roads where the roads may be submerged or the water may be rising. Otherwise the vehicle may be damaged and cannot move, as well as become flooded and set a drift, which may lead to death.

If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by your Toyota dealer or commercial towing service, using a wheel-lift type truck or flathed truck.

Use a safety chain system for all towing, and abide by all state/provincial and local laws.




WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.

■When towing the vehicle

Be sure to transport the vehicle with the front wheels raised or with all four wheels raised off the ground. If the vehicle is towed with the front wheels contacting the ground, the drivetrain and related parts may be damaged or electricity generated by the operation of the motor may cause a fire to occur depending on the nature of the damage or malfunction.

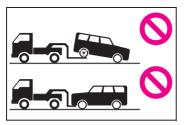

While towing

- When towing using cables or chains, avoid sudden starts, etc. which place excessive stress on the towing eyelets, cables or chains. The towing eyelets, cables or chains may become damaged, broken debris may hit people, and cause serious damage.
- Do not turn the power switch off.
 There is a possibility that the steering wheel is locked and cannot be operated.
- Installing towing eyelets to the vehicle

Make sure that towing eyelets are installed securely.

If not securely installed, towing eyelets may come loose during towing.



NOTICE

- To prevent damage to the vehicle when towing using a wheel-lift type truck
- Do not tow the vehicle from the rear when the power switch is off.
- When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.
- To prevent damage to the vehicle when towing with a sling-type truck

Do not tow with a sling-type truck, either from the front or rear.

■ To prevent damage to the vehicle during emergency towing

Do not secure cables or chains to the suspension components.


Situations when it is necessary to contact dealers before towing

The following may indicate a problem with your transmission. Contact your Toyota dealer or commercial towing service before towing.

- The hybrid system warning message is shown on the multi-information display and the vehicle does not move.
- The vehicle makes an abnormal sound

Towing with a wheel-lift type truck


From the front

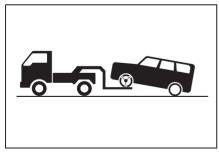

Release the parking brake.

Turn automatic mode off. (→P.152)

▶ From the rear

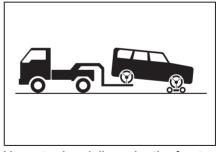


Use a towing dolly under the front wheels.




Using a flatbed truck

If your vehicle is transported by a flatbed truck, it should be tied down at the locations shown in the illustration.

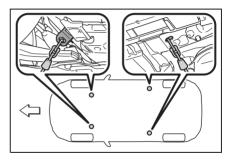

If you use chains or cables to tie down your vehicle, the angles shaded in black must be 45°

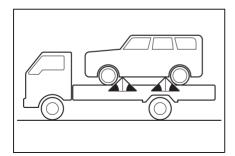

\triangle

NOTICE

Using a flatbed truck

Do not overly tighten the tie downs or the vehicle may be damaged.

Emergency towing

If a tow truck is not available in an emergency, your vehicle may be temporarily towed using cables or chains secured to the emergency towing eyelets. This should only be attempted on hard surfaced roads for a short distances at under 30 km/h (18 mph).

A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.


Emergency towing procedure

To have your vehicle towed by another vehicle, the towing eyelet must be installed to your vehicle.


Install the towing eyelet using the following procedure.

- 1 Take out the wheel nut wrench, flathead screwdriver and towing eyelet. (→P.337, 347)
- 2 Remove the eyelet cover using a flathead screwdriver.


To protect the bodywork, place a rag between the screwdriver and the vehicle body as shown in the illustration.

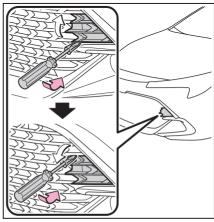

Insert the towing eyelet into the hole and tighten partially by hand.

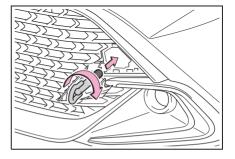

4 Tighten down the towing eyelet securely using a wheel nut wrench or hard metal bar

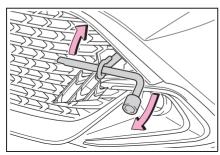

5 Securely attach cables or chains to the towing eyelet.

Take care not to damage the vehicle body.

6 Enter the vehicle being towed and start the hybrid system.

If the hybrid system does not start, turn the power switch to ON.

7 Shift the shift lever to N and release the parking brake. Turn automatic mode off. (→P.152)
When the shift lever cannot be shifted: →P.149

■ While towing

If the hybrid system is off, the power assist for the brakes and steering will not function, making steering and braking more difficult.

■ Wheel nut wrench

Wheel nut wrench is installed in luggage compartment. (→P.337, 347)

If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact your Toyota dealer as soon as possible.

Visible symptoms

- Fluid leaks under the vehicle.
 (Water dripping from the air conditioning after use is normal.)
- Flat-looking tires or uneven tire wear
- Engine coolant temperature gauge needle continually points higher than normal.

Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system
- Pinging or other noises related to the hybrid system

Operational symptoms

- Engine missing, stumbling or running roughly
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking

- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

If a warning light turns on or a warning buzzer sounds

Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system. However, if this continues to occur, have the vehicle inspected by your Toyota dealer.

Actions to the warning lights or warning buzzers

■ Brake system warning light (warning buzzer)

Warning light	Details/Actions
(Red)	Indicates that: ■ The brake fluid level is low; or ■ The brake system is malfunctioning → Immediately stop the vehicle in a safe place and contact your Toyota dealer. Continuing to drive the vehicle may be dangerous.

■ Brake system warning light (warning buzzer)

Warning light	Details/Actions
(Yellow)	Indicates a malfunction in: ■ The regenerative braking system; ■ The electronically controlled brake system; or ■ The parking brake system → Have the vehicle inspected by your Toyota dealer immediately.

■ High coolant temperature warning light* (warning buzzer)

Warning light	Details/Actions
	Indicates that the engine coolant temperature is excessively high → Immediately stop the vehicle in a safe place. Handling method (→P.362)

^{*:} This light illuminates on the multi-information display.

■ Hybrid system overheat warning light* (warning buzzer)

Warning light	Details/Actions
- SSSS	Indicates that the temperature of the hybrid system is excessively high → Stop the vehicle in a safe place. Handling method (→P.362)

^{*:} This light illuminates on the multi-information display.

■ Charging system warning light*

Warı	ning light	Details/Actions
[- +	Indicates a malfunction in the vehicle's charging system → Immediately stop the vehicle in a safe place and contact your Toyota dealer.

^{*:} This light illuminates on the multi-information display.

■ Low engine oil pressure warning light* (warning buzzer)

Warning light	Details/Actions
المتك	Indicates that the engine oil pressure is excessively low → Immediately stop the vehicle in a safe place and contact your Toyota dealer.

^{*:} This light illuminates on the multi-information display.

■ Malfunction indicator lamp (warning buzzer)

Warning light	Details/Actions
	Indicates a malfunction in: ■ The hybrid system; ■ The electronic engine control system; or ■ The electronic throttle control system → Immediately stop the vehicle in a safe place and contact your Toyota dealer.

■ SRS warning light (warning buzzer)

Warning light	Details/Actions
?	Indicates a malfunction in: ■ The SRS airbag system; or ■ The seat belt pretensioner system → Have the vehicle inspected by your Toyota dealer immediately.

■ ABS warning light

Warning light	Details/Actions
(AB)	Indicates a malfunction in: ■ The ABS; or ■ The brake assist system → Have the vehicle inspected by your Toyota dealer immediately.

■ Inappropriate pedal operation warning light^{*} (warning buzzer)

Warning light	Details/Actions
••	When a buzzer sounds: ■ Brake Override System is malfunctioning ■ Drive-Start Control is malfunctioning ■ Drive-Start Control is operating → Follow the instructions displayed on the multi-information display. (→P.331)
	When a buzzer does not sound: Brake Override System is operating. → Release the accelerator pedal and depress the brake pedal.

^{*:} This light illuminates on the multi-information display.

■ Electric power steering system warning light (warning buzzer)

Warning light	Details/Actions
(Red) or (Yellow)	Indicates a malfunction in the EPS (Electric Power Steering) system → Have the vehicle inspected by your Toyota dealer immediately.

■ Low fuel level warning light

Warning light	Details/Actions
	Indicates that remaining fuel is approximately 6.4 L (1.7 gal., 1.4 lmp. gal.) or less → Refuel the vehicle.

■ Driver's and front passenger's seat belt reminder light (warning buzzer)*

Warning light Details/Actions	
Warns the driver and/or front passenger to fast → Fasten the seat belt. If the front passenger's seat is occupied ger's seat belt also needs to be fastened ing light (warning buzzer) turn off.	the front passen-

^{*:} Driver's and front passenger's seat belt warning buzzer:

The driver's and front passenger's seat belt warning buzzer sounds to alert the driver and front passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches a certain speed.

■ Rear passengers' seat belt reminder lights (warning buzzer)*

Warning light	Details/Actions
(12.3-inch display) (7.0-inch or 12.3-inch display)	Warns the rear passengers to fasten their seat belts $ o$ Fasten the seat belt.

^{*:} Rear passengers' seat belt warning buzzer:

The rear passengers' seat belt warning buzzer sounds to alert the rear passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches a certain speed.

■ Toyota parking assist-sensor OFF indicator (warning buzzer)

Warning light	Details/Actions
P <u>w</u> ≜ off	Indicates a malfunction in the Toyota parking assist-sensor function
(Flashes) (if equipped)	Indicates that the system is temporarily unavailable, possibly due to a sensor being dirty or covered with ice, etc.
	ightarrow Follow the instructions displayed on the multi-information display. ($ ightarrow$ P.217)

■ PCS warning light

Warning light	Details/Actions
	Indicates a malfunction in the PCS (Pre-Collision System).
200	\rightarrow Follow the instructions displayed on the multi-information display. (\rightarrow P.331)
(Flashes or illuminates)	If the PCS (Pre-Collision System) or VSC (Vehicle Stability Control) system is disabled, the PCS warning light will illuminate. → P.175

■ LTA indicator (warning buzzer)

Warning light	Details/Actions
i a	Indicates a malfunction in the LTA (Lane Tracing Assist). → Follow the instructions displayed on the multi-information display. (→P.331)

■ LDA indicator (warning buzzer)

Warning light	Details/Actions
	Indicates a malfunction in the LDA (Lane Departure Alert). → Follow the instructions displayed on the multi-information display. (→P.331)

■ Dynamic radar cruise control indicator (warning buzzer)

Warning light	Details/Actions
	Indicates a malfunction in the dynamic radar cruise control. → Follow the instructions displayed on the multi-information display. (→P.331)

■ Cruise control indicator (warning buzzer)

Warning light	Details/Actions
- 1 to 1	Indicates a malfunction in the cruise control. → Follow the instructions displayed on the multi-information display. (→P.331)

■ Driving assist information indicator

Warning light	Details/Actions
	Indicates either of the following systems may be malfunctioning. • PCS (Pre-Collision System) • LDA (Lane Departure Alert)
	→ Follow the instructions displayed on the multi-information display. (→P.331)
	Indicates one of the following systems is malfunctioning or disabled.
	● BSM (Blind Spot Monitor) [*]
	● RCTA(Rear cross traffic alert) [*]
	● SEA (Safe Exit Assist)*
	\rightarrow Follow the instructions displayed on the multi-information display. (\rightarrow P.331)

^{*:} If equipped

■ Slip indicator

Warning light	Details/Actions
A ??	Indicates a malfunction in: ■ The VSC system; ■ The TRC system; or ■ The hill-start assist control system → Have the vehicle inspected by your Toyota dealer immediately.

■ Parking brake indicator

Warning light	Details/Actions
(Flasiles)	It is possible that the parking brake is not fully engaged or released → Operate the parking brake switch once again. This light comes on when the parking brake is not released. If the light turns off after the parking brake is fully released, the system is operating normally.

■ Brake hold operated indicator

Warning light	Details/Actions
HOLD (Flashes)	Indicates a malfunction in the brake hold system → Have the vehicle inspected by your Toyota dealer immediately.

■ Warning buzzer

In some cases, the buzzer may not be heard due to being in a noisy location or audio sound.

Front passenger detection sensor, seat belt reminder and warning buzzer

- If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.
- If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

■ Electric power steering system warning light (warning buzzer)

When the 12-volt battery charge becomes insufficient or the voltage temporarily drops, the electric power steering system warning light may come on and the warning buzzer may sound.

A

▲ WARNING

If both the ABS and the brake system warning lights remain on

Stop your vehicle in a safe place immediately and contact your Toyota dealer.

The vehicle will become extremely unstable during braking, and the ABS system may fail, which could cause an accident resulting in death or serious injury.

When the electric power steering system warning light comes

When the light comes on yellow, the assist to the power steering is restricted. When the light comes on red, the assist to the power steering is lost and handling operations of the steering wheel become extremely heavy.

When steering wheel operations are heavier than usual, grip the steering wheel firmly and operate it using more force than usual.

If a warning message is displayed

The multi-information display shows warnings for system malfunctions and incorrectly performed operations, and messages that indicate a need for maintenance. When a message is displayed, perform the appropriate corrective action for the message.

If a warning message is displayed again after the appropriate actions have been performed, contact your Toyota dealer.

Additionally, if a warning light comes on or flashes at the same time that a warning message is displayed, take the appropriate corrective action for the warning light. (→P.324)

■ Warning messages

The warning messages explained below may differ from the actual messages according to operation conditions and vehicle specifications.

■ Warning buzzer

A buzzer may sound when a message is displayed.

The buzzer may not be audible if the vehicle is in a noisy location or if the audio system volume is high.

■If "Engine Oil Level Low Add or Replace" is displayed

The engine oil level is low. Check the level of the engine oil, and add if necessary.

This message may appear if the vehicle

is stopped on a slope. Move the vehicle to a level surface and check to see if the message disappears.

■ If "Hybrid System Stopped Steering Power Low" is displayed

This message is displayed if the hybrid system is stopped while driving.

When steering wheel operations are heavier than usual, grip the steering wheel firmly and operate it using more force than usual.

■ If "Hybrid System Overheated Output Power Reduced" is displayed

This message may be displayed when driving under severe operating conditions. (For example, when driving up a long steep hill.)

Handling method: →P.362

■ If "Traction Battery Needs to be Protected Refrain from the Use of N Position" is displayed

This message may be displayed when the shift lever is in N.

As the hybrid battery (traction battery) cannot be charged when the shift lever is in N, shift the shift lever to P when the vehicle is stopped.

■ If "Traction Battery Needs to be Protected Shift into P to Restart" is displayed

This message is displayed when the hybrid battery (traction battery) charge has become extremely low because the shift lever has been left in N for a certain amount of time.

When operating the vehicle, shift to P and restart the hybrid system.

■ If "Shift is in N Release Accelerator Before Shifting" is displayed

The accelerator pedal has been depressed when the shift lever is in N.

Release the accelerator pedal and shift the shift lever to D or R.

■ If "Shift to P Before Exiting Vehicle" is displayed

This message is displayed when the driver's door is opened without turning

the power switch off with the shift lever in any position other than P. Shift the shift lever to P

■If "Press Brake when Vehicle is Stopped Hybrid System may Overheat" is displayed

The message may be displayed when the accelerator pedal is depressed to hold the vehicle while the vehicle is stopped on an incline, etc. The hybrid system may overheat. Release the accelerator pedal and depress the brake pedal.

If "Auto Power OFF to Conserve Battery" is displayed

Power was cut off due to the automatic power off function. Next time when starting the hybrid system, operate the hybrid system for approximately 5 minutes to recharge the 12-volt battery.

■ If "Headlight System Malfunction Visit Your Dealer" is displayed

The following systems may be malfunctioning. Have the vehicle inspected by your Toyota dealer immediately.

- The LED headlight system
- AHB (Automatic High Beam)
- If "System Malfunction Visit Your Dealer" is displayed

Indicates one of the following systems is disabled.

- PCS (Pre-Collision system)
- LDA (Lane Departure Alert)
- LTA (Lane Tracing Assist)
- AHB (Automatic High Beam)
- Dynamic radar cruise control
- RSA (Road Sign Assist)
- ^圆″_円 BSM (Blind Spot Monitor) (if equipped)
- RCTA (Rear Cross Traffic Alert)
 (if equipped)
- SEA (Safe Exit Assist) (if equipped)

- Toyota parking assist-sensor (if equipped)
- PKSB (Parking Support Brake) (if equipped)

Have the vehicle inspected by your Toyota dealer immediately.

■ If "System Stopped See Owner's Manual" is displayed

Indicates one of the following systems is disabled.

- PCS (Pre-Collision system)
- LDA (Lane Departure Alert)
- LTA (Lane Tracing Assist)
- AHB (Automatic High Beam)
- Dynamic radar cruise control
- RSA (Road Sign Assist)
- BSM (Blind Spot Monitor)
 (if equipped)
- RCTA (Rear Cross Traffic Alert)
- SEA (Safe Exit Assist) (if equipped)
- Toyota parking assist-sensor (if equipped)
- PKSB (Parking Support Brake) (if equipped)

Follow the following correction methods.

- · Check the voltage of the battery
- Check the sensors that the Toyota Safety Sense uses for foreign matter covering them. Remove them if any. (→P.170)
- Check the sensors that the BSM (Blind Spot Monitor), RCTA (Rear Cross Traffic Alert) and SEA (Safe Exit Assist) uses for foreign matter covering them. Remove them if any. (→P.211, 239)
- Check the sensors that the Toyota parking assist-sensor and PKSB (Parking Support Brake) uses for foreign matter covering them. Remove

them if anv. $(\rightarrow P.215)$

Indicates the sensors may not be operating properly. (→P.172, 214, 217, 224, 241)

When problems are solved and the sensors are operational, this indication may disappear by itself.

■If "System Stopped Front Camera Low Visibility See Owner's Manual" is displayed

Indicates one of the following systems is disabled.

- PCS (Pre-Collision system)
- LDA (Lane Departure Alert)
- LTA (Lane Tracing Assist)
- AHB (Automatic High Beam)
- Dynamic radar cruise control
- RSA (Road Sign Assist)

Follow the following correction methods.

- Using the windshield wipers, remove the dirt or foreign matter from the windshield.
- Using the air conditioning system, defog the windshield.
- Close the hood, remove any stickers, etc. to clear the obstruction in front of the front camera.
- If "System Stopped Front Camera Out of Temperature Range Wait until Normal Temperature" is displayed

Indicates one of the following systems is disabled.

- PCS (Pre-Collision system)
- LDA (Lane Departure Alert)
- LTA (Lane Tracing Assist)
- AHB (Automatic High Beam)
- Dynamic radar cruise control
- RSA (Road Sign Assist)

Follow the following correction methods.

• If the front camera is hot, such as after the vehicle is parked in the sun, use

the air conditioning system to decrease the temperature around the front camera

- If a sunshade was used when the vehicle was parked, depending on its type, the sunlight reflected from the surface of the sunshade may cause the temperature of the front camera to become excessively high
- If the front camera is cold, such after the vehicle is parked in an extremely cold environment, use the air conditioning system to increase the temperature around the front camera

■If "System Stopped Front Radar Sensor Blocked Clean Radar Sensor" is displayed

Indicates one of the following systems is disabled.

- PCS (Pre-Collision system)
- LDA (Lane Departure Alert)
- LTA (Lane Tracing Assist)
- AHB (Automatic High Beam)
- Dynamic radar cruise control

Follow the following correction methods.

- Check if there is any foreign matter attached to the radar sensor or radar sensor cover and clean them if necessary (→P.170)
- This message may be displayed when driving in an open area with few nearby vehicles or structures, such as a desert, grasslands, suburbs, etc.

The message may be cleared by driving the vehicle in an area with structures, vehicles, etc., nearby.

■ If "System Stopped Front Radar Sensor Out of Temperature Range Wait until Normal Temperature" is displayed

Indicates one of the following systems is disabled.

- PCS (Pre-Collision system)
- LDA (Lane Departure Alert)
- LTA (Lane Tracing Assist)

- AHB (Automatic High Beam)
- Dynamic radar cruise control

Follow the following correction methods.

The temperature of the radar sensor is outside of the operating range. Wait for the temperature to become appropriate.

■ If "System Stopped Front Radar In Self Calibration See Owner's Manual" is displayed

Indicates one of the following systems is disabled.

- PCS (Pre-Collision system)
- LDA (Lane Departure Alert)
- LTA (Lane Tracing Assist)
- AHB (Automatic High Beam)
- Dynamic radar cruise control

Follow the following correction methods.

- Check if there is any foreign matter attached to the radar sensor or radar sensor cover and clean them if necessary (→P.170)
- The radar sensor may be misaligned and will be adjusted automatically while driving. Continue driving for a while.

■ If "Cruise Control Unavailable See Owner's Manual" is displayed

Indicates one of the following systems is disabled.

- Dynamic radar cruise control
- Cruise control

A message is displayed when the driving assist switch is pushed repeatedly. Press the driving assist switch quickly and firmly.

If a message that indicates the need for visiting your Toyota dealer is displayed

The system or part shown on the multi-information display is malfunctioning. Have the vehicle inspected by your Toyota dealer immediately.

■ If a message that indicates the need for referring to Owner's Manual is displayed

- If "Engine Coolant Temp High" is displayed, follow the instructions accordingly. (→P.362)
- If any of the following messages are displayed on the multi-information display, it may indicate a malfunction.
 Have the vehicle inspected by your Toyota dealer immediately.
- "Smart Entry & Start System Malfunction"
- · "Hvbrid System Malfunction"
- "Check Engine"
- "Hybrid Battery System Malfunction"
- "Accelerator System Malfunction"
- · "Hybrid System Stopped"
- "Engine Stopped"
- If any of the following messages are displayed on the multi-information display, it may indicate a malfunction. Immediately stop the vehicle and contact your Toyota dealer.
- · "Braking Power Low"
- "Charging System Malfunction"
- "Oil Pressure Low"
- If "Maintenance Required for Traction Battery Cooling Parts See Owner's Manual" is shown, the filters may be clogged, the air intake vents may be blocked, or there may be a gap in the duct. Therefore, perform the following correction procedure.
- Cleaning the hybrid battery (traction battery) air intake vents (P.304)
 If the warning message is shown even if the vents are cleaned, have the vehicle inspected by your Toyota dealer.



NOTICE

■ If "High Power Consumption Partial Limit on AC/Heater Operation" is displayed frequently

There is a possible malfunction relating to the charging system or the 12-volt battery may be deteriorating. Have the vehicle inspected by your Toyota dealer.

If you have a flat tire (vehicles without spare tire)

Your vehicle is not equipped with a spare tire, but instead is equipped with an emergency tire puncture repair kit.

A puncture caused by a nail or screw passing through the tire tread can be repaired temporarily using the emergency tire puncture repair kit. (The kit contains a bottle of sealant. The sealant can be used only once to temporarily repair one tire without removing the nail or screw from the tire.) After temporarily repairing the tire with the kit, have the tire repaired or replaced by your Toyota dealer.



WARNING

If you have a flat tire

Do not continue driving with a flat tire. Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.


Before repairing the tire

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- Stop the hybrid system.
- Turn on the emergency flashers.

 Check the degree of the tire damage.

A tire should only be repaired with the emergency tire puncture repair kit if the damage is caused by a nail or screw passing through the tire

- Do not remove the nail or screw from the tire. Removing the object may widen the opening and make emergency repair with the repair kit impossible.
- To avoid sealant leakage, move the vehicle until the area of the puncture, if known, is positioned at the top of the tire.

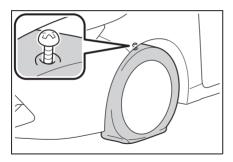


A flat tire that cannot be repaired with the emergency tire puncture repair kit

In the following cases, the tire cannot be repaired with the emergency tire puncture repair kit. Contact your Toyota dealer.

- When the tire is damaged due to driving without sufficient air pressure
- When there are any cracks or damage at any location on the tire, such as on the side wall, except the tread
- When the tire is visibly separated from the wheel
- When the cut or damage to the tread is 4 mm (0.16 in.) long or more

- When the wheel is damaged
- When two or more tires have been punctured
- When more than 2 sharp objects such as nails or screws have passed through the tread on a single tire
- When the sealant has expired

Location of the emergency tire puncture repair kit and tools

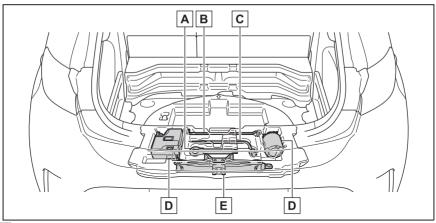

- A Towing eyelet
- **B** Jack handle
- C Wheel nut wrench
- **D** Emergency tire puncture repair kit
- E Jack (Use of the jack: →P.349)


Emergency tire puncture repair kit components

▶ Bottle



A Sticker

▶ Compressor

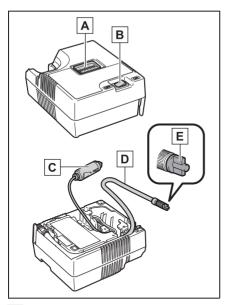

- A Air pressure gauge
- **B** Compressor switch
- **C** Power plug
- **D** Hose
- E Air release cap

■ Note for checking the emergency tire puncture repair kit

Check the sealant expiry date occasionally.

The expiry date is shown on the bottle. Do not use sealant whose expiry date has already passed. Otherwise, repairs conducted using the emergency tire puncture repair kit may not be performed properly.

■ Emergency tire puncture repair kit

- The emergency tire puncture repair kit is for filling the car tire with air.
- The sealant has a limited life span. The expiry date is marked on the bottle. The sealant should be replaced before the expiry date. Contact your

Toyota dealer for replacement.

- The sealant stored in the emergency tire puncture repair kit can be used only once to temporarily repair a single tire. If the sealant in the bottle and other parts of the kit have been used and need to be replaced, contact your Toyota dealer.
- The compressor can be used repeatedly.
- The sealant can be used when the outside temperature is from -40°C (-40°F) to 60°C (140°F).
- The kit is exclusively designed for size and type of tires originally installed on your vehicle. Do not use it for tires that a different size than the original ones, or for any other purposes.
- If the sealant gets on your clothes, it may stain.
- If the sealant adheres to a wheel or the surface of the vehicle body, the stain may not be removable if it is not cleaned at once. Immediately wipe away the sealant with a wet cloth.
- During operation of the repair kit, a loud operation noise is produced. This does not indicate a malfunction.
- Do not use to check or to adjust the tire pressure.

A

WARNING

Caution while driving

- Store the repair kit in the luggage compartment.
 Injuries may result in the event of
 - an accident or sudden braking.
- The repair kit is exclusively only for your vehicle.


Do not use repair kit on other vehicles, which could lead to an accident causing death or serious injury.

WARNING


- Do not use repair kit for tires that are different size than the original ones, or for any other purpose. If the tires have not been completely repaired, it could lead to an accident causing death or serious injury.
- Precautions for use of the seal-
- Ingesting the sealant is hazardous to your health. If you ingest sealant. consume as much water as possible, and then immediately consult a doctor
- If sealant gets in eves or adheres to skin, immediately wash it off with water. If discomfort persists, consult a doctor

Taking out the jack

Open the deck mat.

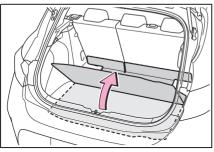

2 Take out the jack.

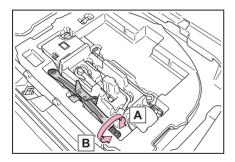

- A For tightening
- **B** For loosening

Taking out the emergency tire puncture repair kit


- 1 Open the deck mat. (\rightarrow P.339)
- 2 Take out the emergency tire puncture repair kit. (→P.337)

Emergency repair method

1 Take out the repair kit from the plastic bag.

Attach the sticker enclosed with the bottle on the specified locations. (See step 10.)


2 Pull out the hose and power plug from the bottom side of the compressor.

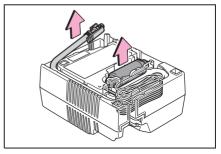

3 Connect the bottle to the compressor.


Make sure to press the bottle until its claws are securely engaged to the

compressor and no longer visible.

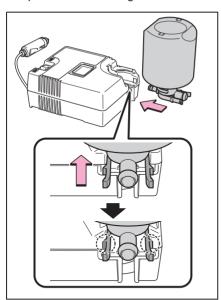


4 Connect the hose to the bottle.

Make sure to insert the hose until its claw is securely engaged to the bottle.

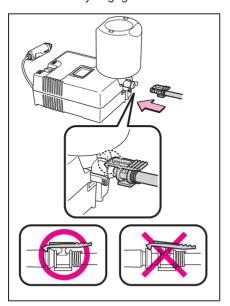


5 Remove the valve cap from the valve of the punctured tire.

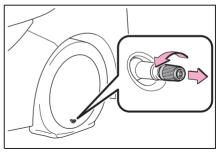


6 Extend the hose. Remove the air release cap from the hose.

You will use the air release cap again. Therefore keep it in a safe place.

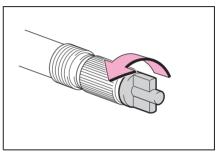


7 Connect the hose to the valve.


Screw the end of the hose clockwise as far as possible.

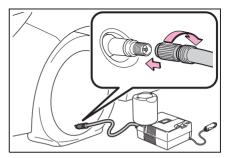


8 Make sure that the compressor switch is off

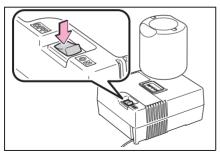

9 Connect the power plug to the power outlet socket. (→P.270)

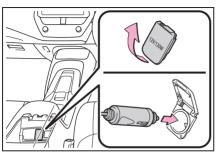


10 Attach the sticker provided with the tire puncture repair kit to a position easily seen from the driver's seat.

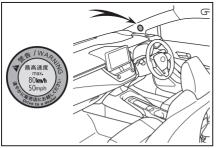


11 Check the specified tire inflation pressure.


Tire inflation pressure is specified on the label on the driver's side pillar as shown. (→P.373)

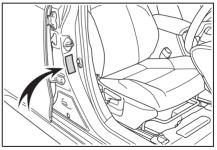

- **12** Start the hybrid system. (→P.142)
- **13** To inject the sealant and inflate the tire, turn the compressor switch on.

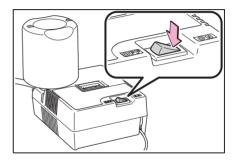

14 Inflate the tire until the specified air pressure is reached.

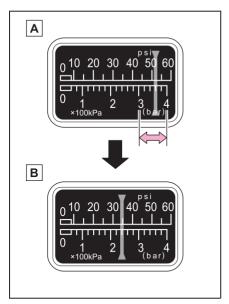

- A The sealant will be injected and the pressure will spike to between 300 kPa (3.0 kgf/cm² or bar, 44 psi) and 400 kPa (4.0 kgf/cm² or bar, 58 psi), then gradually decrease.
- B The air pressure gauge will display the actual tire inflation pressure about 1 to 5 minutes after the switch is turned on.

Turn the compressor switch off and then check the tire inflation pressure. Being careful not to over inflate, check and repeat the inflation procedure until the specified tire inflation pressure is reached

The tire can be inflated for about 5 to 20 minutes (depending on the outside temperature). If the tire inflation pressure is still lower than the specified point after inflation for 25 minutes, the tire is too damaged to be repaired. Turn the com-

pressor switch off and contact your Tovota dealer.


If the tire inflation pressure exceeds the specified air pressure, let out some air to adjust the tire inflation pressure. $(\rightarrow P.343, 373)$

15 With the compressor switch off, disconnect the hose from the valve on the tire and then pull out the power plug from the power outlet socket.

Some sealant may leak when the hose is removed

- **16** Install the valve cap onto the valve of the emergency repaired tire.
- **17** Attach the air release cap to the end of the hose.


If the air release cap is not attached, the sealant may leak and the vehicle may get dirty.

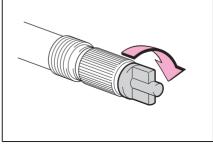


- 18 Temporarily store the bottle in the luggage compartment while it is connected to the compressor.
- 19 To spread the liquid sealant evenly within the tire, immediately drive safely for about 5 km (3 miles) below 80 km/h (50 mph).

20 After driving, stop your vehicle in a safe place on a hard, flat surface and reconnect the repair kit

Remove the air release cap from the hose before reconnecting the hose.

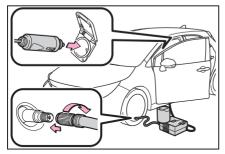

21 Turn the compressor switch on and wait for several seconds, then turn it off. Check the tire inflation pressure.

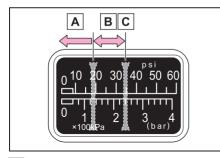


- A If the tire inflation pressure is under 130 kPa (1.3 kgf/cm² or bar, 19 psi): The puncture cannot be repaired. Contact your Toyota dealer.
- B If the tire inflation pressure is 130 kPa (1.3 kgf/cm² or bar, 19 psi) or higher, but less than the specified air pressure: Proceed to step 22.
- c If the tire inflation pressure is the

- specified air pressure (\rightarrow P.373): Proceed to step **23**.
- 22 Turn the compressor switch on to inflate the tire until the specified air pressure is reached.

 Drive for about 5 km (3 miles) and then perform step 20.
- **23** Attach the air release cap to the end of the hose.

If the air release cap is not attached, the sealant may leak and the vehicle may get dirty.

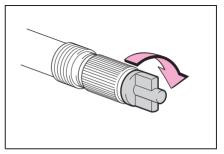


- **24** Store the bottle in the luggage compartment while it is connected to the compressor.
- 25 Taking precautions to avoid sudden braking, sudden acceleration and sharp turns, drive carefully at under 80 km/h (50 mph) to the nearest Toyota dealer that is less than 100 km (62 miles) away for tire repair or replacement.

When having the tire repaired or replaced, make sure to tell the Toyota dealer that the sealant is injected.

■ If the tire is inflated to more than the specified air pressure

Disconnect the hose from the valve.

Install the air release cap to the end of the hose and push the protrusion on the air release cap into the tire valve to let some air out.

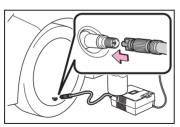

- 3 Disconnect the hose from the valve, remove the air release cap from the hose and then reconnect the hose.
- 4 Turn the compressor switch on and wait for several seconds, and then turn it off. Check that the air pressure indicator shows the specified air pressure. (→P.373)

If the air pressure is under the designated pressure, turn the compressor switch on again and repeat the inflation procedure until the specified air pressure is reached.

■ The valve of a tire that has been repaired

After a tire is repaired with the emergency tire puncture repair kit, the valve should be replaced.

A

WARNING

Do not drive the vehicle with a

Do not continue driving with a flat tire. Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair.

Driving with a flat tire may cause a circumferential groove on the side wall. In such a case, the tire may explode when using a repair kit.

When fixing the flat tire

 Stop your vehicle in a safe and flat area.

- Do not touch the wheels or the area around the brakes immediately after the vehicle has been driven. After the vehicle has been driven, the wheels and the area around the brakes may be extremely hot. Touching these areas with hands, feet or other body parts may result in burns.
- Connect the valve and hose securely with the tire installed on the vehicle. If the hose is not properly connected to the valve, air leakage may occur as sealant may be sprayed out.
- If the hose comes off the valve while inflating the tire, there is a risk that the hose will move abruptly due to air pressure.
- After inflation of the tire has completed, the sealant may splatter when the hose is disconnected or some air is let out of the tire
- Follow the operation procedure to repair the tire. If the procedures not followed, the sealant may spray out
- Keep back from the tire while it is being repaired, as there is a chance of it bursting while the repair operation is being performed. If you notice any cracks or deformation of the tire, turn off the compressor switch and stop the repair operation immediately.
- The repair kit may overheat if operated for a long period of time. Do not operate the repair kit continuously for more than 40 minutes.
- Parts of the repair kit become hot during operation. Be careful handling the repair kit during and after operation. Do not touch the metal part connecting the bottle and the compressor. It will be extremely hot.

WARNING

- Do not attach the vehicle speed warning sticker to an area other than the one indicated. If the sticker is attached to an area where an SRS airbag is located, such as the pad of the steering wheel, it may prevent the SRS airbag from operating properly.
- Driving to spread the liquid sealant evenly

Observe the following precautions to reduce the risk of accidents. Failing to do so may result in a loss of vehicle control and cause death or serious injury.

- Drive the vehicle carefully at a low speed. Be especially careful when turning and cornering.
- If the vehicle does not drive straight or you feel a pull through the steering wheel, stop the vehicle and check the following.
- · Tire condition. The tire may have separated from the wheel.
- Tire inflation pressure. If the tire inflation pressure is 130 kPa (1.3 kgf/cm² or bar, 19 psi) or less, the tire may be severely damaged.



NOTICE

When performing an emergency repair

A tire should only be repaired with the emergency tire puncture repair kit if the damage is caused by a sharp object such as nail or screw passing through the tire tread. Do not remove the sharp object from the tire. Removing the object may widen the opening and disenable emergency repair with the repair kit.

- The repair kit is not waterproof. Make sure that the repair kit is not exposed to water, such as when it is being used in the rain.
- Do not put the repair kit directly. onto dusty ground such as sand at the side of the road. If the repair kit vacuums up dust etc.. a malfunction may occur.
- Make sure to stand the kit with the bottle vertical. The kit cannot work properly if it is laid on its side.
- Precautions for the emergency tire puncture repair kit
- The repair kit power source should be 12 V DC suitable for vehicle use. Do not connect the repair kit to any other source.
- If fuel splatters on the repair kit, the repair kit may deteriorate. Take care not to allow fuel to contact it.
- Place the repair kit in a storage to prevent it from being exposed to dirt or water.
- Store the repair kit in the luggage compartment out of reach of children.
- Do not disassemble or modify the repair kit. Do not subject parts such as the air pressure indicator to impacts. This may cause a malfunction.

If you have a flat tire (vehicles with a spare tire)

Your vehicle is equipped with a spare tire. The flat tire can be replaced with the spare tire.

For details about tires: →P.298



WARNING


■ If you have a flat tire

Do not continue driving with a flat tire. Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

Before jacking up the vehicle

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- Stop the hybrid system.
- Turn on the emergency flashers.

Location of the spare tire, lack and tools

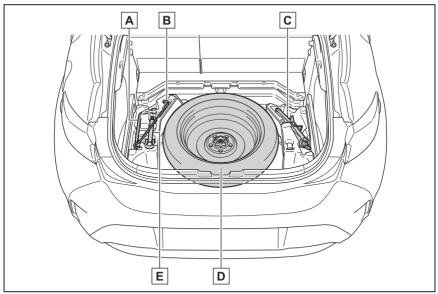

- A Wheel nut wrench
- **B** Jack handle
- C Jack
- **D** Spare tire
- E Towing eyelet


WARNING

■Using the tire jack

Observe the following precautions. Improper use of the tire jack may cause the vehicle to suddenly fall off the jack, leading to death or serious injury.

- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire. Do not use it on other vehicles. and do not use other tire jacks for replacing tires on this vehicle.

• Put the jack properly in its jack point.

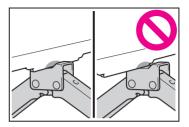

Do not put any part of your body under the vehicle while it is supported by the jack.


A

WARNING

- Do not start the hybrid system or drive the vehicle while the vehicle is supported by the jack.
- Do not raise the vehicle while someone is inside.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.
- When lowering the vehicle, make sure that there is no-one near the vehicle. If there are people nearby, warn them vocally before lowering.


Taking out the jack

Press the button to raise the deck board handle and then lift the deck board

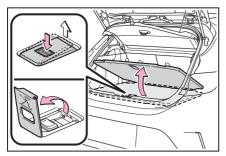


- 2 Secure the deck board.
- When the luggage cover is installed

Hook the deck board handle onto the underside of the luggage cover as shown in the illustration, to secure the deck board.

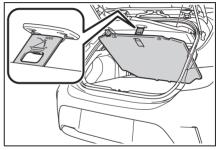


When the luggage cover is not installed

Hook the deck board handle onto the upper edge of the back door opening as shown in the illustration.

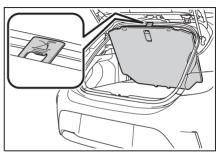

3 Take out the jack.

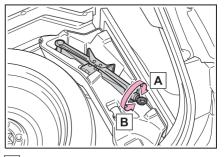

- A For tightening
- **B** For loosening

A


NOTICE

When the deck board is secured

Make sure not to close the back door when the deck board is hooked onto the luggage cover or the back door opening. Doing so may lead to damage to interior parts.

Taking out the spare tire

- Secure the deck board.
 (→P.348)
- 2 Loosen the center fastener that secures the spare tire.

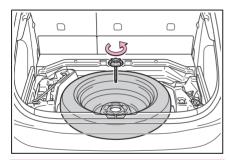

A


WARNING

■When storing the spare tire

Be careful not to catch fingers or other body parts between the spare tire and the body of the vehicle.

Replacing a flat tire

1 Chock the tires

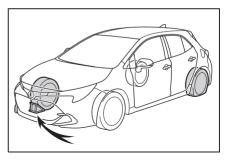


Flat tire	Wheel chock positions
Front left-hand side	Behind the rear right-hand side tire
Front right-hand side	Behind the rear left-hand side tire
Rear left-hand side	In front of the front right-hand side tire
Rear right-hand side	In front of the front left-hand side tire


2 Vehicles with a steel wheel: Remove the wheel ornament using the wrench.

Insert the wrench into the notch **A** on the wheel cap.


To protect the wheel ornament, place a rag between the wrench and the wheel ornament.

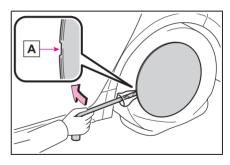


3 Slightly loosen the wheel nuts (one turn).

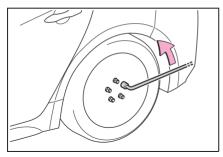


4 Turn the tire jack portion A by hand until the center of the recessed portion of the jack is in contact with the center of the jack point.

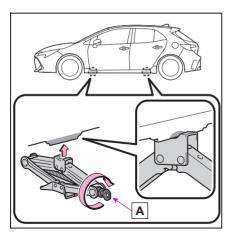

5 Assemble the jack handle extension.

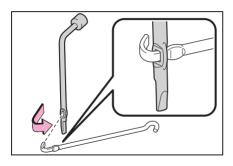


6 Raise the vehicle until the tire is slightly raised off the ground.

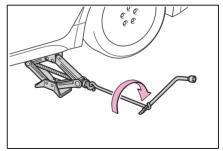

7 Remove all the wheel nuts and the tire

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

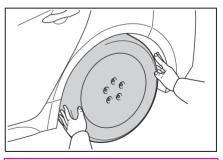

A

WARNING

Replacing a flat tire

Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven. After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc. may result in burns.


WARNING

- Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.
- · Have the wheel nuts tightened with a torque wrench to 103 N·m (10.5 kgf·m. 76 ft·lbf) as soon as possible after changing wheels.
- · Do not attach a heavily damaged wheel ornament, as it may fly off the wheel while the vehicle is moving.
- · When installing a tire, only use wheel nuts that have been specifically designed for that wheel.
- · If there are any cracks or deformations in the bolt screws, nut threads. or bolt holes of the wheel, have the vehicle inspected by your Toyota dealer
- When installing the wheel nuts, be sure to install them with the tapered ends facing inward.

Installing the spare tire


1 Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, causing the tire to come off.

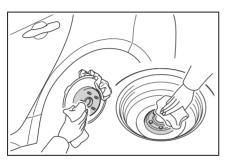


2 Install the tire and loosely tighten each wheel nut by hand by approximately the same amount


When replacing a steel wheel with a steel wheel, tighten the wheel nuts until the tapered portion A comes into loose contact with the disc wheel seat B.

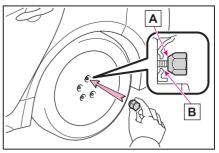

When replacing an aluminum wheel with a steel wheel, tighten the wheel nuts until the tapered portion A comes into loose contact with the disc wheel seat B.

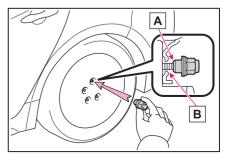


3 Lower the vehicle

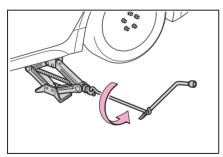

4 Firmly tighten each wheel nut two or three times in the order shown in the illustration

Tightening torque: 103 N•m (10.5 kgf•m, 76 ft•lbf)

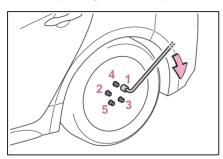

5 Stow the flat tire, tire jack and all tools.

■ The compact spare tire

- The compact spare tire is identified by the label "TEMPORARY USE ONLY" on the tire sidewall. Use the compact spare tire temporarily, and only in an emergency.
- Make sure to check the tire inflation pressure of the compact spare tire.
 (→P.373)

■ When the compact spare tire is equipped

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires.


■ If you have a flat front tire on a road covered with snow or ice

Install the compact spare tire on one of the rear wheels of the vehicle. Perform the following steps and fit tire chains to the front tires:

- 1 Replace a rear tire with the compact spare tire.
- 2 Replace the flat front tire with the tire removed from the rear of the vehicle.
- 3 Fit tire chains to the front tires.

When reinstalling the wheel ornament (steel wheels except compact spare tire)

Align the cutout of the wheel ornament with the valve stem as shown in the illustration

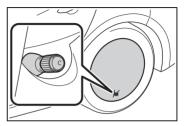

A

WARNING

- When using the compact spare tire
- Remember that the compact spare tire provided is specifically designed for use with your vehicle.
 Do not use your compact spare tire on another vehicle.
- Do not use more than one compact spare tires simultaneously.
- Replace the compact spare tire with a standard tire as soon as possible.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

WARNING

When the compact spare tire is attached

The vehicle speed may not be correctly detected, and the following systems may not operate correctly:

- ABS & Brake assist
- VSC
- TRC
- · Automatic High Beam
- · Dvnamic radar cruise control
- FPS
- PCS (Pre-Collision System)
- LDA (Lane Departure Alert)
- LTA (Lane Tracing Assist)
- BSM (if equipped)
- RCTA (if equipped)
- SEA (if equipped)
- · Toyota parking assist-sensor (if equipped)
- Parking Support Brake function (static objects) (if equipped)
- Navigation system (if equipped)

Speed limit when using the compact spare tire

Do not drive at speeds in excess of 80 km/h (50 mph) when a compact spare tire is installed on the vehicle.

The compact spare tire is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.

After using the tools and lack

Before driving, make sure all the tools and lack are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.



NOTICE

■ Be careful when driving over bumps with the compact spare tire installed on the vehicle

The vehicle becomes lower when driving with the compact spare tire compared to when driving with standard tires. Be careful when driving over uneven road surfaces

Driving with tire chains and the compact spare tire

Do not fit tire chains to the compact spare tire. Tire chains may damage the vehicle body and adversely affect driving performance.

If the hybrid system will not start

Reasons for the hybrid system not starting vary depending on the situation. Check the following and perform the appropriate procedure:

The hybrid system will not start even though the correct starting procedure is being followed. (→P.142)

One of the following may be the cause of the problem:

- The electronic key may not be functioning properly. (→P.356)
- There may not be sufficient fuel in the vehicle's tank. Refuel the vehicle
- There may be a malfunction in the immobilizer system. (→P.64)
- The hybrid system may be malfunctioning due to an electrical problem such as electronic key battery depletion or a blown fuse. However, depending on the type of malfunction, an interim measure is available to start the hybrid system. (→P.354)

The interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged. (→P.358)
- The 12-volt battery terminal connections may be loose or corroded. (→P.295)

The interior lights and headlights do not turn on, or the horn does not sound.

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged. (→P.358)
- One or both of the 12-volt battery terminals may be disconnected.
 (→P.295)

Contact your Toyota dealer if the problem cannot be repaired, or if repair procedures are unknown.

Emergency start function

When the hybrid system does not start, the following steps can be used as an interim measure to start the hybrid system if the power switch is functioning normally. Do not use this starting procedure except in case of emergency.

1 Pull the parking brake switch to check that the parking brake is set. (→P.151)

Parking brake indicator will come on.

- 2 Check that the shift lever is set in P.
- 3 Turn the power switch to ACC*.
- Press and hold the power switch for about 15 seconds while depressing the brake pedal firmly.

Even if the hybrid system can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by your Toyota dealer.

*: ACC mode can be enabled/disabled on the customize menu. (→P.376)

If you lose your keys

New genuine mechanical keys can be made by your Toyota dealer using another mechanical key and the key number stamped on your key number plate.

Keep the plate in a safe place such as your wallet, not in the vehicle.



NOTICE

■When an electronic key is lost

If the electronic key remains lost, the risk of vehicle theft increases significantly. Visit your Toyota dealer immediately with all remaining electronic keys that were provided with your vehicle.

If the electronic key does not operate properly

If communication between the electronic key and vehicle is interrupted (→P.115) or the electronic key cannot be used because the battery is depleted, the smart entry & start system and wireless remote control cannot be used. In such cases, the doors can be opened and the hybrid system can be started by following the procedure below.

- When the electronic key does not work properly
- Make sure that the smart entry & start system has not been deactivated in the customization setting. If it is off, turn the function on. (Customizable features →P.376)
- Check if battery-saving mode is set. If it is set, cancel the function. (→P.115)
- The electronic key function may be suspended. (→P.104)



NOTICE


■ In case of a smart entry & start system malfunction or other key-related problems

Take your vehicle with all the electronic keys provided with your vehicle to your Toyota dealer.

Locking and unlocking the doors


Use the mechanical key (→P.105)

in order to perform the following operations:

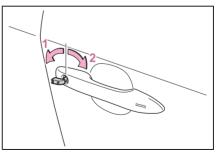

- 1 Unlocks all the doors
- 2 Locks all the doors

■ Key linked functions

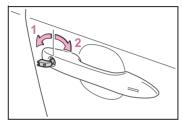

- 1 Opens the windows (turn and hold)*
- 2 Closes the windows (turn and hold)*
- *: This setting must be customized at your Toyota dealer.



WARNING

When using the mechanical key and operating the power windows

Operate the power window after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window.


Also, do not allow children to operate the mechanical key. It is possible for children and other passengers to get caught in the power window.

Starting the hybrid system

- 1 Ensure that the shift lever is in P and depress the brake pedal.
- **2** Touch the electronic key to the power switch.

When the electronic key is detected, a buzzer sounds and the power switch will turn to ON

When the smart entry & start system is deactivated in customization setting, the power switch will turn to ACC.

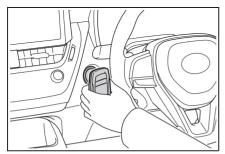

- 3 Firmly depress the brake pedal and check that is shown on the multi-information display.
- **4** Press the power switch shortly and firmly.

In the event that the hybrid system still cannot be started, contact your Toyota dealer.

■ Stopping the hybrid system

Shift the shift lever to P and press the power switch as you normally do when stopping the hybrid system.

■ Electronic key battery

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P.307)

■ Changing power switch modes

Release the brake pedal and press the power switch in step 3 above. The hybrid system does not start and modes will be changed each time the switch is pressed. (—P.144)

If the 12-volt battery is discharged

The following procedures may be used to start the hybrid system if the 12-volt battery is discharged.


You can also call your Toyota dealer or a qualified repair shop.

Restarting the hybrid system

If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your vehicle by following the steps below.

1 Confirm that the electronic key is being carried.


When connecting the jumper (or booster) cables, depending on the situation, the alarm may activate and doors locked. (→P.66)

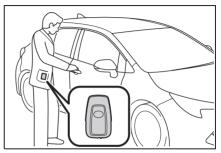

2 Open the hood. (\rightarrow P.290)

3 Connect a positive jumper cable clamp to A on your vehicle and connect the clamp on the other end of the positive cable to B on the second vehicle. Then, connect a negative cable clamp to C on the second

vehicle and connect the clamp at the other end of the negative cable to $\boxed{\mathbf{D}}$.

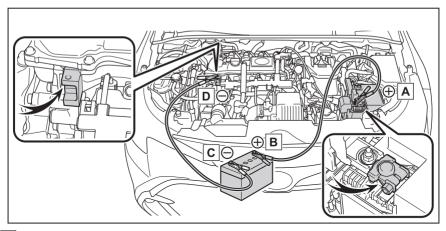

- A Positive (+) battery terminal (your vehicle)
- B Positive (+) battery terminal (second vehicle)
- C Negative (-) battery terminal (second vehicle)
- D Solid, stationary, unpainted metallic point away from the battery and any moving parts as shown in the illustration
- 4 Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the 12-volt battery of your vehicle.
- 5 Open and close any of the doors of your vehicle with the power switch OFF.
- 6 Maintain the engine speed of the second vehicle and start the hybrid system of your vehicle by turning the power switch to ON.
- 7 Make sure the "READY" indicator comes on. If the indicator does not come on, contact your Toyota dealer.

8 Once the hybrid system has started, remove the jumper cables in the exact reverse order from which they were connected.

Once the hybrid system starts, have the vehicle inspected at your Toyota dealer as soon as possible.

■ Starting the hybrid system when the 12-volt battery is discharged

The hybrid system cannot be started by push-starting.

- To prevent 12-volt battery discharge
- Turn off the headlights and the audio system while the hybrid system is off.
- Turn off any unnecessary electrical components when the vehicle is run-

ning at a low speed for an extended period, such as in heavy traffic.

■ When the 12-volt battery is removed or discharged

Information stored in the ECU is cleared. When the 12-volt battery is depleted, have the vehicle inspected at your Toyota dealer.

■ When removing the 12-volt battery terminals

When the 12-volt battery terminals are removed, the information stored in the ECU is cleared. Before removing the 12-volt battery terminals, contact your Toyota dealer.

■ Charging the 12-volt battery

The electricity stored in the 12-volt battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the 12-volt battery may discharge, and the hybrid system may be unable to start. (The 12-volt battery recharges automatically while the hybrid system is operating.)

■ When recharging or replacing the 12-volt battery

- In some cases, it may not be possible to unlock the doors using the smart entry & start system when the 12-volt battery is discharged. Use the wireless remote control or the mechanical key to lock or unlock the doors.
- The hybrid system may not start on the first attempt after the 12-volt battery has recharged but will start normally after the second attempt. This is not a malfunction.
- The power switch mode is memorized by the vehicle. When the 12-volt battery is reconnected, the system will return to the mode it was in before the 12-volt battery was discharged. Before disconnecting the 12-volt battery, turn the power switch off. If you are unsure what mode the power switch was in before the 12-volt battery discharged, be especially

careful when reconnecting the 12-volt battery.

■ When replacing the 12-volt battery

- Use a 12-volt battery that conforms to European regulations.
- Use a 12-volt battery that the case size is same as the previous one (LN1), 20 hour rate capacity (20HR) is equivalent (45Ah) or greater, and performance rating (CCA) is equivalent (295A) or greater.
- If the sizes differ, the 12-volt battery cannot be properly secured.
- If the 20 hour rate capacity is low, even if the time period where the vehicle is not used is a short time, the 12-volt battery may discharge and the hybrid system may not be able to start
- For details, consult your Toyota dealer.



WARNING

■ When removing the 12-volt battery terminals

Always remove the negative (-) terminal first. If the positive (+) terminal contacts any metal in the surrounding area when the positive (+) terminal is removed, a spark may occur, leading to a fire in addition to electrical shocks and death or serious injury.

Avoiding 12-volt battery fires or explosions

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the 12-volt battery:

 Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.



WARNING

- Do not allow the other end of the jumper cable connected to the "+" terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not allow the + and clamps of the jumper cables to come into contact with each other
- Do not smoke, use matches, cigarette lighters or allow open flame near the 12-volt battery.

12-volt battery precautions

The 12-volt battery contains poisonous and corrosive acidic electrolyte. while related parts contain lead and lead compounds. Observe the following precautions when handling the 12-volt battery:

- When working with the 12-volt battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle bodv.
- Do not lean over the 12-volt battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention. Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the 12-volt battery support, terminals, and other battery-related parts.
- Do not allow children near the 12-volt battery.



NOTICE

When handling jumper cables

When connecting the jumper cables. ensure that they do not become entangled in the cooling fans, etc.

If your vehicle overheats


The following may indicate that your vehicle is overheating.

- The engine coolant temperature gauge (→P.72, 76) is in the red zone or a loss of hybrid system power is experienced.
 (For example, the vehicle speed does not increase.)
- "Engine Coolant Temp High Stop in a Safe Place See Owner's Manual" or "Hybrid System Overheated Output Power Reduced" is shown on the multi-information display.
- Steam comes out from under the hood.

Correction procedures

- ▶ If the engine coolant temperature gauge enters the red zone or "Engine Coolant Temp High Stop in a Safe Place See Owner's Manual" is shown on the multi-information display
- Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the hybrid system.
- If you see steam: Carefully lift the hood after the steam subsides. If you do not see steam: Carefully lift the hood.


3 After the hybrid system has cooled down sufficiently, inspect the hoses and radiator core (radiator) for any leaks.

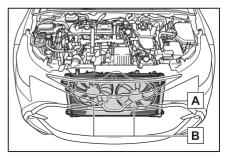

- **A** Radiator
- **B** Cooling fans

If a large amount of coolant leaks, immediately contact your Toyota dealer.


4 The coolant level is satisfactory if it is between the "MAX" and "MIN" lines on the reservoir.

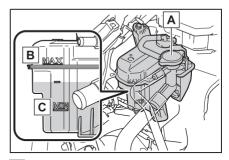

- A Reservoir
- B "MAX" line
- C "MIN" line
- 5 Add coolant if necessary.

Water can be used in an emergency if

coolant is unavailable

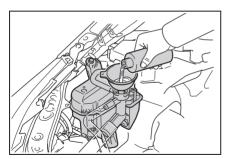


Start the hybrid system and turn the air conditioning system on to check that the radiator cooling fans operate and to check for coolant leaks from the radiator or hoses.

The fans operate when the air conditioning system is turned on immediately after a cold start. Confirm that the fans are operating by checking the fan sound and air flow. If it is difficult to check these, turn the air conditioning system on and off repeatedly. (The fans may not operate in freezing temperatures.)

- 7 If the fans are not operating: Stop the hybrid system immediately and contact your Toyota dealer.
 - If the fans are operating: Have the vehicle inspected at the nearest Toyota dealer.
- If "Hybrid System Overheated Output Power Reduced" is shown on the multi-information display
- **1** Stop the vehicle in a safe place.
- **2** Stop the hybrid system and carefully lift the hood.


3 After the hybrid system has cooled down, inspect the hoses and radiator core (radiator) for any leaks.

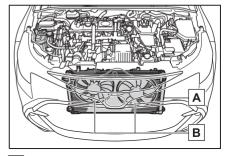

- **A** Radiator
- **B** Cooling fans


If a large amount of coolant leaks, immediately contact your Toyota dealer.

4 The coolant level is satisfactory if it is between the "MAX" and "MIN" lines on the reservoir.

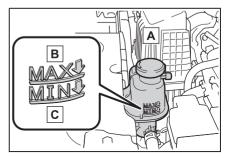

- A Reservoir
- B "MAX" line
- C "MIN" line
- 5 Add coolant if necessary.

If coolant is unavailable, use water as an emergency measure, and have the vehicle inspected at your Toyota dealer as soon as possible.

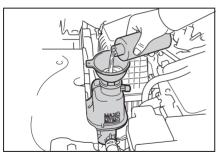

After stopping the hybrid system and waiting for 5 minutes or more, start the hybrid system again and check for the multi-information display. If the message does not disappear:

Stop the hybrid system and contact your Toyota dealer.
If the message is not displayed:
The hybrid system temperature

has dropped and the vehicle may be driven normally.

However, if the message appears again frequently, contact your Toyota dealer.



WARNING

■ When inspecting under the hood of your vehicle

Observe the following precautions. Failure to do so may result in serious injury such as burns.

 If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot.

- After the hybrid system has been turned off, check that the "READY" indicator is off. When the hybrid system is operating, the gasoline engine may automatically start, or the cooling fans may suddenly operate even if the gasoline engine stops. Do not touch or approach rotating parts such as the fan, which may lead to fingers or clothing (especially a tie, a scarf or a muffler) getting caught, resulting in serious injury.
- Do not loosen the coolant reservoir caps while the hybrid system and radiator are hot.
 High temperature steam or coolant could spray out.



NOTICE

When adding engine/power control unit coolant

Add coolant slowly after the hybrid system has cooled down sufficiently. Adding cool coolant to a hot hybrid system too quickly can cause damage to the hybrid system.

■ To prevent damage to the cooling system

Observe the following precautions:

- Avoid contaminating the coolant with foreign matter (such as sand or dust etc.).
- Do not use any coolant additive.


If the vehicle becomes stuck

Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt or snow:

Recovering procedure

- Stop the hybrid system. Set the parking brake and shift the shift lever to P.
- 2 Remove the mud, snow or sand from around the front wheels.
- 3 Place wood, stones or some other material under the front wheels to help provide traction.
- 4 Restart the hybrid system.
- 5 Shift the shift lever to D or R and release the parking brake. Then, while exercising caution, depress the accelerator pedal.
- When it is difficult to free the vehicle

Press the switch to turn off TRC.

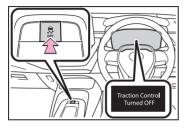



WARNING

■ When attempting to free a stuck vehicle

If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

■When shifting the shift lever

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident resulting in death or serious injury.



NOTICE

- To avoid damaging the transmission and other components
- Avoid spinning the front wheels and depressing the accelerator pedal more than necessary.
- If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.

Vehicle specifications

8-1.	Specifications
	Maintenance data (fuel, oil level, etc.)368
	Fuel information375
8-2.	Customization
	Customizable features376
8-3.	Initialization
	Items to initialize385

Maintenance data (fuel, oil level, etc.)

Dimensions

Overall length		4370 mm (172.0 in.)
Overall width		1790 mm (70.5 in.)
Overall height [*]		1435 mm (56.5 in.)
Wheelbase		2640 mm (103.9 in.)
Tread	Front	1530 mm (60.2 in.)
IIGau	Rear	1530 mm (60.2 in.)


^{*·} Unladen vehicles

Vehicle identification


■ Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Toyota. It is used in registering the ownership of your vehicle.

This number is stamped under the right-hand front seat.

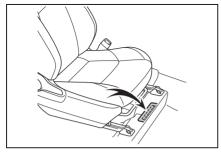


This number is also on the manufacturer's label.

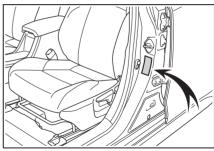

■ Engine number

The engine number is stamped on the engine block as shown.

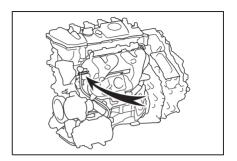

Engine

Model	2ZR-FXE
Туре	4-cylinder in line, 4-cycle, gasoline
Bore and stroke	80.5 × 88.3 mm (3.17 × 3.48 in.)
Displacement	1798 cm ³ (109.7 cu. in.)
Valve clearance	Automatic adjustment

Fuel

Fuel type	Unleaded gasoline only
Research Octane Number	91 or higher
Fuel tank capacity (Reference)	43.0 L (11.4 gal., 9.5 lmp. gal.)

Electric motor (traction motor)

Туре	Permanent magnet synchronous motor
Maximum output	70 kW
Maximum torque	185 N•m (18.9 kgf•m, 136.4 ft•lbf)

Hybrid battery (traction battery)

Туре	Lithium-ion battery
Voltage	3.7 V/cell
Capacity	4.08 Ah
Quantity	56 cells
Nominal voltage	207.2 V

Lubrication system

■ Oil capacity (Drain and refill [Reference*])

	4.2 L (4.4 qt., 3.7 lmp. qt.)
Without fil- ter	3.9 L (4.1 qt., 3.4 lmp. qt.)

*: The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up the engine and turn off the hybrid system, wait more than 5 minutes, and check the oil level on the dipstick.

■ Engine oil selection

"Toyota Genuine Motor Oil" is used in your Toyota vehicle. Use Toyota approved "Toyota Genuine Motor Oil" or equivalent to satisfy the following grade and viscosity.


Oil grade:

0W-16:

API grade SN "Resource-Conserving", SN PLUS "Resource-Conserving" or SP "Resource-Conserving"; or ILSAC GF-6B multigrade engine oil

0W-20, 5W-20, 5W-30 and 10W-30:

API grade SL "Energy-Conserving", SM "Energy-Conserving", SN "Resource-Conserving", SN PLUS "Resource-Conserving" or SP "Resource-Conserving"; or ILSAC GF-6A multigrade engine oil Recommended viscosity (SAE):

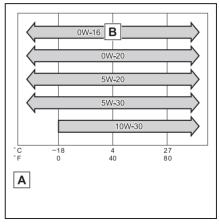

A Temperature range anticipated before next oil change

B Preferred

SAE 0W-16 is filled into your Toyota vehicle at manufacturing, and the best choice for good fuel economy and good starting in cold weather.

If you use SAE 10W-30 or a higher viscosity engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 0W-16, 0W-20, 5W-20 or 5W-30 engine oil is recommended.


Oil viscosity (0W-16 is explained here as an example):

- The 0W in 0W-16 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 16 in 0W-16 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscos-

ity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container labels:

Either or both API registered marks are added to some oil containers to help you select the oil you should use.

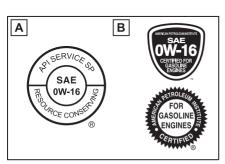

A API Service Symbol

Top portion: "API SERVICE SP" means the oil quality designation by American Petroleum Institute (API).

Center portion: "SAE 0W-16" means the SAE viscosity grade.

Lower portion: "Resource-Conserving" means that the oil has fuel-saving and environmental protection capabilities.

B ILSAC Certification Mark

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

Cooling system

Capacity (Reference)	Gasoline engine	5.5 L (5.8 qt., 4.8 lmp. qt.)
	Power con- trol unit	1.5 L (1.6 qt., 1.3 lmp. qt.)
Coolant type		Use either of the following: • "Toyota Super Long Life Coolant" • Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology Do not use plain water alone.

Ignition system (spark plug)

Make	DENSO FC16HR-CY9
Gap	0.9 mm (0.035 in.)



NOTICE

■Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust the spark plug gap.

Electrical system (12-volt battery)

Open voltage at 20°C (68°F):	12.0 V or higher (Turn the power switch off and turn on the high beam headlights for 30 seconds.)
Charging rates	
Quick charge	15 A max.
Slow charge	5 A max.

Hybrid transmission

Fluid capacity*	3.0 L (3.1 qt., 2.6 lmp. qt.)
Fluid type	Toyota Genuine e-Transaxle fluid TE

^{*:} The fluid capacity is a reference quantity.

If replacement is necessary, contact your Toyota dealer.



NOTICE

■ Hybrid transmission fluid type

Using transmission fluid other than the above type may cause abnormal noise or vibration, or ultimately damage the transmission of your vehicle.

Brakes

Pedal clearance*1	103 mm (4.1 in.) Min.
Pedal free play	1 — 6 mm (0.04 — 0.24 in.)
Parking brake indicator*2	When pulling the parking brake switch for 1 to 2 seconds: comes on
raining brake indicator	When pushing the parking brake switch for 1 to 2 seconds: turns off
Fluid type	SAE J1703 or FMVSS No.116 DOT 3

^{*1:} Minimum pedal clearance when depressed with a force of 300 N (30.6 kgf, 67.4 lbf) while the hybrid system is operating.
When performing the brake pedal inspection, also be sure to check that the

brake system warning light is not illuminated when the hybrid system is operating. (If the brake system warning light is illuminated, refer to P.324.)

*2: Make sure to confirm that the brake warning light (yellow) does not illuminate. (If the brake warning light illuminates, refer to P.324.)

Steering

Free play	Less than 30 mm (1.2 in.)
-----------	---------------------------

Tires and wheels

▶ 15-inch tires

Tire size	195/65R15 91H
Tire inflation pressure (Recommended cold tire inflation pressure)	➤ Front tire 250 kPa (2.5 kgf/cm ² or bar, 36 psi) Rear tire
illiation pressure)	240 kPa (2.4 kgf/cm ² or bar, 35 psi)
Wheel size	15 × 6 1/2J
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)

▶ 16-inch tires

Tire size	205/55R16 91V
Tire inflation pressure (Recommended cold tire inflation pressure)	➤ Front tire 250 kPa (2.5 kgf/cm ² or bar, 36 psi) ➤ Rear tire
manem process of	240 kPa (2.4 kgf/cm ² or bar, 35 psi)
Wheel size	16 × 7J
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)

▶ 18-inch tires

Tire size	225/40R18 88W

374 8-1. Specifications

Tire inflation pressure	Vehicle speed	Front wheel kPa (kgf/cm ² or bar, psi)	Rear wheel kPa (kgf/cm ² or bar, psi)	
(Recommended cold tire inflation	More than 160 km/h (100 mph)	260 (2.6, 38)	240 (2.4, 35)	
pressure)	160 km/h (100 mph) or less	230 (2.3, 33)	210 (2.1, 30)	
Wheel size	18 × 8J			
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)			

► Compact spare tire (if equipped)

Tire size	T125/70D17 98M
Tire inflation pressure (Recommended cold tire inflation pressure)	420 kPa (4.2 kgf/cm ² or bar, 60 psi)
Wheel size	17 × 4T
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)

Light bulbs

	Light bulbs	W	Туре
Exterior	License plate lights	5	Α
Interior	Luggage compartment light	5	Α

A: Wedge base bulbs (clear)

Fuel information

You must only use unleaded gasoline.

Select unleaded gasoline with a Research Octane Number of 91 or higher for optimum engine performance.

Use of ethanol blended gasoline in a gasoline engine

Toyota allows the use of ethanol blended gasoline where the ethanol content is up to 10%. Make sure that the ethanol blended gasoline to be used has a Research Octane Number that follows the above.

■ If your engine knocks

- Consult your Toyota dealer.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern



NOTICE

Notice on fuel quality

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use gasoline with metallic additives, for example manganese, iron or lead, otherwise it may cause damage on your engine or emission control system.
- Do not add aftermarket fuel additives which contain metallic additives.
- Do not use the methanol blended gasoline such as M15, M85, M100.
 The use of gasoline containing methanol may cause engine damage or failure.

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. The settings of these features can be changed using the multi-information display, on the audio system screen, or at your Toyota dealer.

Customizing vehicle features

- Changing by using the audio system screen
- 1 Select a on the main menu.
- 2 Select "Vehicle customise".
- **3** Select the item to change the settings of from the list.

For functions that can be turned on/off, select (ON)/ (OFF).

- Changing by using the meter control switches
- 1 Select 🌣 of the multi-information display.

- 7-inch display meter: Press or > to select the desired item to be customized.
- 12.3-inch display meter: Press ∧ or ∨ to select the desired item to be customized
- 3 Press or press and hold OK.

The available settings will differ depending on if OK is pressed or pressed and held. Follow the instructions on the display.



WARNING

During customization

As the hybrid system needs to be operating during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.



NOTICE

During customization

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while customizing features.

Customizable features

Some function settings are changed simultaneously with other functions being customized. Contact your Toyota dealer for further details.

- A Settings that can be changed using the audio system screen
- B Settings that can be changed using the meter control switches
- **c** Settings that can be changed by your Toyota dealer

Definition of symbols: O = Available, — = Not available

■ Gauges, meters and multi-information display (→P.68, 72, 76, 81, 87)

Function*1	Default setting	Customized setting	Α	В	С
		French			
Language	English	Spanish ^{*2}	0	0	_
	9	Brazilian Portu-			
		guese ^{*2}			
Units	L/100 km	km/L	_	0	_
Meter Type*3	2-dial	1-dial		0	_
weter Type	2 diai	non-dial)	
		Casual			
Meter Style*3	Smart	Tough	_	0	_
		Sporty			
M-4 Ot-1-*4	Smort	Casual		0	
Meter Style*4	Smart	Sporty	_	O	
D: 1.T. *4	Hybrid System Indicator	Tachometer		0	
Dial Type ^{*4}		Simple (non-dial)	_	0	
	Speedometer	Hybrid System Indi-	_	0	
Dial Type ^{*5}		cator			_
		Tachometer			
Dial Type ^{*6}	Hybrid System Indicator	Tachometer	_	0	_
EV indicator	On	Off	_	0	_
Fuel economy	Total average (Average fuel	Trip average (Average fuel consumption [after start])		- O	
ruei economy	consumption [after reset])	Tank average (Average fuel consumption [after refuel])*4			
Eco Accelerator Guidance	On	Off	_	0	_
Drive information items (First item)	Distance	Average vehicle speed	_	0	_
(* ********)		Elapsed time			

Function*1	Default setting	Customized setting	Α	В	С
Drive information items		Distance			
(Second item)	Elapsed time	Average vehicle speed	_	0	-
TRIP A Items (First item)*3	Distance	Average vehicle speed	_	0	_
		Elapsed time			
TRIP A Items (Second	Average vehicle	Distance		0	
item)*3	speed	Elapsed time			
TRIP B Items (First item)*3	Distance	Average vehicle speed	_	0	_
		Elapsed time			
TRIP B Items (Second	Average vehicle	Distance		0	
item)*3	speed	Elapsed time			
Pop-up display	On	Off	_	0	_

^{*1:} For details about each function: →P.81, 87

■ Head-up display* (→P.94)

Function	Default setting	Customized setting	Α	В	С
Head-up display	On	Off	_	0	_
Head-up display type cus-	Standard	Full		0	
tomize	Clandard	Minimum			

^{*:} If equipped

^{*2:} If equipped

^{*3: 12.3-}inch display

^{*4: 7-}inch display

^{*5: 12.3-}inch display when 1-dial display is selected

^{*6: 12.3-}inch display when 2-dial display is selected

■ Door lock (→P.107, 111, 356)

Function	Default setting	Customized setting	Α	В	С
Unlocking using a mechanical key	All doors unlocked in one step	Driver's door unlocked in one step, all doors unlocked in two step	_	_	0

■ Smart entry & start system and wireless remote control (→P.107, 114)

Function	Default setting	Customized setting	Α	В	С
Operating signal (Buzzers)	5	Off 1 to 7	0	_	0
Operation signal (Emergency flashers)	On	Off	0	_	0
Time elapsed before auto-		60 seconds			
matic door lock function is activated if door is not opened after being unlocked	30 seconds	120 seconds			0
Open door warning buzzer	On	Off	_	_	0

■ Smart entry & start system (→P.107, 114)

Function	Default setting	Customized setting	Α	В	С
Smart entry & start system	On	Off	0	_	0
Smart door unlocking	All the doors	Driver's door	0	_	0
Time elapsed before		1.5 seconds			
unlocking all the door when gripping and holding the	Off	2.0 seconds	_	_	0
driver's door handle		2.5 seconds			
Number of consecutive door lock operations	2 times	As many as desired			0
Power switch illumination	On	Off	_	—	0

■ Wireless remote control (→P.105, 107, 111)

Function	Default setting	Customized setting	Α	В	С
Wireless remote control	On	Off	_	_	0
Unlocking operation	All doors unlocked in one step	Driver's door unlocked in one step, all doors unlocked in two step	0	_	0

■ Power switch (→P.114)

Function	Customized setting	Α	В	С
ACC customization Enabling/Disabling ACC mode	On, Off	0	_	0

■ Outside rear view mirrors (→P.126)

Function	Default setting	Customized setting	Α	В	С
Automatic mirror folding and extending operation*	Linked to the locking/ unlocking of the doors	Off Linked to operation of the power switch			0

^{*:} If equipped

■ Power windows (→P.128)

Function	Default setting	Customized setting	Α	В	С
Mechanical key linked operation	Off	On	_	_	0
Wireless remote control linked operation	Off	On	_		0
Wireless remote control linked operation signal (buzzer)	On	Off			0

■ Automatic light control system (→P.156)

Function	Default setting	Customized setting	A	В	С
Light sensor sensitivity	Standard	-2 to 2	0	_	0

Function	Default setting	Customized setting	Α	В	С
Time elapsed before head-	30 seconds	Off			
lights automatically turn off		60 seconds	0	_	0
after doors are closed		90 seconds			

■ PCS (Pre-Collision System) (→P.175)

Function	Customized setting	Α	В	С
PCS (Pre-Collision System)*	On, Off	_	0	_
Warning timing	Later, Default, Earlier	_	0	_

^{*:} The system is automatically enabled each time the power switch is turned to ON.

■ LDA (Lane Departure Alert) (→P.190)

Function	Customized setting	Α	В	С
LDA (Lane Departure Alert) system	On, Off	_	0	_
Alert timing	Default, Earlier	_	0	_
Alert options	Vibration, Beep	_	0	_

■ Dynamic radar cruise control (→P.195)

Function	Customized setting	Α	В	С
Acceleration setting	High, Mid, Low	_	0	_
Speed setting (short press)	1 km/h, 5 km/h, 10 km/h ^{*1}		0	
opeed setting (short press)	1 mph, 5 mph, 10 mph ^{*2}			
Speed setting (long press)	1 km/h, 5 km/h, 10 km/h ^{*1}		0	
Speed setting (long press)	1 mph, 5 mph, 10 mph*2			
Dynamic Radar Cruise Control with Road Sign Assist	On, Off	_	0	_
Speed limit offset	-5 to +5	_	0	_
Guide message	On, Off	_	0	_
Curve speed reduction	High, Mid, Low, Off	_	0	_

382

■ RSA (Road Sign Assist) (→P.209)

Function	Customized setting	Α	В	С
RSA (Road Sign Assist)	On, Off	_	0	_
Excess speed notification method	None, Visual, Visual and Audible	_	0	_
Other notifications method	None, Visual, Visual and Audible	_	0	_
Excess speed notification level	5 km/h (3 mph), 3 km/h (2 mph), 1 km/h (1 mph)	_	0	_

■ Driver break suggestion (→P.192)

Function	Customized setting	Α	В	С
Driver break suggestion	On, Off	_	0	_

■ BSM (Blind Spot Monitor)* (→P.211)

Function	Default setting	Customized setting	Α	В	С
BSM (Blind Spot Monitor)	On	Off	_	0	_
Outside rear view mirror indicator brightness	Bright	Dim	_	0	_
Alert timing for presence of		Early			
approaching vehicle (sensitivity)	Intermediate	Late	_	O	

^{*:} If equipped

■ RCTA (Rear Cross Traffic Alert) function*1 (→P.221)

Function	Default setting	Customized setting	Α	В	С
RCTA (Rear Cross Traffic Alert)	On	Off	_	0	_
Buzzer volume of RCTA	Level 2	Level 1		0	
when operating*2	LCVCI Z	Level 3			_

^{*1:} If equipped

^{*1:} When the set speed is shown in "km/h"

^{*2:} When the set speed is shown in "MPH"

^{*2:} The sound volume is linked among the Toyota parking assist-sensor and RCTA.

■ Toyota parking assist-sensor*1 (→P.215)

Function	Default setting	Customized setting	Α	В	С
Toyota parking assist-sensor	On	Off	_	0	_
Buzzer volume*2	Level2	Level1	_	0	_

^{*1:} If equipped

■ Safe Exit Assist* (→P.238)

Function	Default setting	Customized setting	Α	В	С
Safe Exit Assist	On	Off	_	0	_
Outside rearview mirrors display	On	Off	_	0	_
Detection sensitivity	Middle	High		0	
Detection sensitivity	Middle	Low			

^{*:} If equipped

■ PKSB (Parking Support Brake)* (→P.227)

Function	Default setting	Customized setting	Α	В	С
PKSB (Parking Support Brake) function	On	Off	_	0	

^{*:} If equipped

■ Automatic air conditioning system (→P.254)

Function	Default setting	Customized setting	Α	В	С
Switching between outside air and recirculated air mode linked to automatic mode switch operation	On	Off	0		0
A/C auto switch operation	On	Off	0		0

^{*2:} The sound volume is linked among the Toyota parking assist-sensor and RCTA.

■ Illumination (→P.262)

Function	Default setting	Customized setting	Α	В	С
Time alamand before the		Off			
Time elapsed before the interior lights turn off	15 seconds	7.5 seconds	0	_	0
		30 seconds			
Operation after the power switch is turned off	On	Off			0
Operation when the doors are unlocked	On	Off	_	_	0
Operation when you approach the vehicle with the electronic key on your person	On	Off	_	_	0
Door trim ornament lights and cup holder lights	On	Off	_	_	0

■ Vehicle customization

- When the smart entry & start system is off, Smart door unlocking cannot be customized
- When the doors remain closed after unlocking the doors and the automatic door lock function is activated, the signals will be generated in accordance with the operation signal (buzzer) and the operation signal (emergency flashers) settings.
- In the following situations, customize mode in which the settings can be changed through the multi-information display will automatically be turned off
- A warning message appears after the customize mode screen is displayed
- The power switch is turned off.
- The vehicle begins to move while the customize mode screen is displayed.

Items to initialize

The following items must be initialized for normal system operation after such cases as the 12-volt battery being reconnected, or maintenance being performed on the vehicle:

List of items to initialize

Item	When to initialize	Reference
PKSB (Parking Support Brake)*	After reconnecting or changing the 12-volt battery	P.228

^{*:} If equipped

Index

What to do if (Troublesh	oot-
ing)	.388
Alphabetical Index	391

What to do if... (Troubleshooting)

If you have a problem, check the following before contacting your Toyota dealer.

The doors cannot be locked, unlocked, opened or closed



You lose your keys

- If you lose your mechanical keys, new genuine mechanical keys can be made by your Toyota dealer. (→P.355)
- If you lose your electronic keys, the risk of vehicle theft increases significantly. Contact your Toyota dealer immediately. (→P.355)



The doors cannot be locked or unlocked

- Is the electronic key battery weak or depleted? (→P.307)
- Is the power switch in ON?

When locking the doors, turn the power switch off. $(\rightarrow P.143)$

 Is the electronic key left inside the vehicle?

When locking the doors, make sure that you have the electronic key on your person.

 The function may not operate properly due to the condition of the radio wave. (→P.115)



The rear door cannot be opened

Is the child-protector lock set?

The rear door cannot be opened from inside the vehicle when the lock is set. Open the rear door from outside and then unlock the child-protector lock. $(\rightarrow P.110)$

If you think something is wrong



The hybrid system does not start

- Did you press the power switch while firmly depressing the brake pedal? (→P.142)
- Is the shift lever in P? (→P.142)
- Is the electronic key anywhere detectable inside the vehicle?
 (→P.114)
- Is the electronic key battery weak or depleted?

In this case, the hybrid system can be started in a temporary way. (→P.357)

 Is the 12-volt battery discharged? (→P.358)



The shift lever cannot be shifted from P even if you depress the brake pedal

Is the power switch in ON?

If you cannot release the shift lever by depressing the brake pedal with the

power switch in ON. (\rightarrow P.149)



The windows do not open or close by operating the power window switches

Is the window lock switch pressed?

The power window except for the one at the driver's seat cannot be operated if the window lock switch is pressed. (→P.130)



The power switch is turned off automatically

 The auto power off function will be operated if the vehicle is left in ACC or ON mode (the hybrid system is not operating) for a period of time. (→P.144)



A warning buzzer sounds during driving

 The seat belt reminder light is flashing

Are the driver and the front passenger wearing the seat belts? (\rightarrow P.327)

 The parking brake indicator is on Is the parking brake released? (→P.151)

Depending on the situation, other types of warning buzzer may also sound. (→P.324, 331)



An alarm is activated and the horn sounds (vehicles with an alarm)

 Did anyone inside the vehicle open a door during setting the alarm?

The sensor detects it and the alarm sounds. (\rightarrow P.65)

Do one of the following to deactivate or stop the alarms:

- Unlock the doors
- Turn the power switch to ACC or ON, or start the hybrid system.
 (The alarm will be deactivated or stopped after a few seconds.)



A warning buzzer sounds when leaving the vehicle

 Is the electronic key left inside the vehicle?

Check the message on the multi-information display. (→P.331)



A warning light turns on or a warning message is displayed

 When a warning light turns on or a warning message is displayed, refer to P.324, 331.

When a problem has occurred



If you have a flat tire

- Vehicles with an emergency tire puncture repair kit: Stop the vehicle in a safe place and repair the flat tire temporarily with the emergency tire puncture repair kit. (→P.335)
- Vehicles with spare tire: Stop the vehicle in a safe place and replace the flat tire with the spare tire. (→P.346)



The vehicle becomes stuck

 Try the procedure for when the vehicle becomes stuck in mud, dirt, or snow. (→P.365)

Alphabetical Index

tem)......114

Α	Anti-lock Brake System (ABS)243
A/C	Warning light
Air conditioning filter303	Armrest277
Automatic air conditioning system	Assist grips278
254	Audio system-linked display85, 92
Front seat concentrated airflow	Automatic air conditioning system
mode (S-FLOW)258	254
ABS (Anti-lock Brake System) 243	Automatic High Beam158
Warning light326	Automatic light control system156
ACA (Active Cornering Assist)244	Average fuel economy82, 90
Active Cornering Assist (ACA)244	Average vehicle speed8
AHB (Automatic High Beam) 158	Average verificie speed
Air conditioning filter303	В
Air conditioning system	В
Air conditioning filter303	Back door111
Automatic air conditioning system	Back-up light
254	Replacing light bulbs312
Front seat concentrated airflow	Battery (12-volt battery)
mode (S-FLOW)258	Battery checking295
Airbags	If the 12-volt battery is discharged
Airbag operating conditions31	358
Airbag precautions for your child .33	Preparing and checking before win-
Correct driving posture23	ter250
Curtain shield airbag operating con-	Replacing360
ditions31	Warning light325
Curtain shield airbag precautions 33	Battery (traction battery)59
General airbag precautions33	Blind Spot Monitor (BSM)211
Locations of airbags29	Bottle holders265
Modification and disposal of airbags	Brake
36	Brake hold154
Side airbag operating conditions31	Fluid
Side airbag precautions33	Parking brake151
Side and curtain shield airbags oper-	Regenerative braking57
ating conditions31	Warning light324
Side and curtain shield airbags pre-	Brake assist243
cautions33	Break-in tips135
SRS airbags29	Brightness control
SRS warning light326	Meter light control74, 80
Alarm	BSM (Blind Spot Monitor)211
Alarm65	= (= op -:
Warning buzzer324	С
Anchor fittings47	
Antennas (smart entry & start sys-	Care

Interior	Windshield 256 Dimensions 368 Display 204 Cruise control 198 Energy monitor 98 Head-up display 94 Multi-information display 81, 87 RCTA 221 Toyota parking assist-sensor 215 Warning message 331 Display change button 74 Do-it-yourself maintenance 286
Installing child restraints38	Door lock
Power window lock switch 130	Back door111
Power window precautions 129	Side doors107
Rear door child-protectors 110	Smart entry & start system114
Seat belt precautions38	Wireless remote control105
Seat heater precautions261	Doors
Child-protectors110	Back door111
Cleaning	Door glasses128
Exterior	Door lock
Interior283	Open door warning buzzer. 108, 110
Seat belts283	Outside rear view mirrors126
Wheels and wheel ornaments280	Rear door child-protectors110
Clock72, 74, 75, 76, 81	Side doors
Coardones 278	Drive distance85
Condenser	Drive information85
	Drive-Start Control (DSC)139
Cooling system294 Engine overheating362	Driving Break-in tips135
Engine overheating362	Correct driving posture23
Hybrid system overheating 363	Driving mode select switch242
Cruise control204	Hybrid vehicle driving tips248
Cup holders265	Procedures134
Current fuel consumption 82, 90	Winter drive tips250
Curtain shield airbags29	Driving information display82
Customizable features376	Driving range82, 90
ouotomizable leataree	Driving support system information
D	display85, 89, 92
В	DSC (Drive-Start Control)139
Daytime running light system 156	Dynamic radar cruise control195
Defogger	
Outside rear view mirrors257	
Rear window257	

E	Hood290
500 A I	How to start the hybrid system142
ECO Accelerator Guidance83, 91	Identification number368
Eco score83, 91	If the hybrid system will not start 354
EDR (Event data recorder)7	If your vehicle has to be stopped in
Elapsed time85	an emergency316
Electric motor (traction motor)56	Ignition switch (power switch) 142
Electric Power Steering (EPS)244	Overheating362
Warning light326	Overheating362
Electronic key104	Power switch142
Battery-saving function 115	Tachometer76
If the electronic key does not operate	Engine coolant
properly356	Capacity371
Replacing the battery307	Checking294
Emergency brake signal244	Preparing and checking before win-
Emergency Driving Stop System 206	ter250
Emergency flashers	Engine coolant temperature gauge
Emergency brake signal244	72, 76
Emergency tire puncture335	Engine oil
Emergency, in case of	Capacity369
If a warning buzzer sounds324	Checking292
If a warning light turns on324	Preparing and checking before win-
If a warning message is displayed	ter250
331	Warning light325
If the 12-volt battery is discharged	Engine switch (power switch)142
358	If your vehicle has to be stopped in
If the electronic key does not operate	an emergency316
properly356	EPS (Electric Power Steering)244
If the hybrid system will not start 354	Warning light326
If the vehicle is submerged or water	EV drive mode146
on the road is rising317	EV Driving Ratio84, 92
If you have a flat tire335	EV indicator57
If you lose your keys355	EV Ratio84, 92
If you think something is wrong 322	Event data recorder (EDR)7
If your vehicle becomes stuck 365	,
If your vehicle has to be stopped in	F
an emergency316	•
If your vehicle needs to be towed	Flat tire
319	Vehicles without a spare tire335
If your vehicle overheats362	Floor mats22
Energy monitor98	Fluid
Engine	Brake372
ACCESSORY mode144	Hybrid transmission372
Compartment292	Washer297

Fog lights161	Light switch156
Replacing light bulbs312	Replacing light bulbs312
Switch161	Head-up display94
Front fog lights161	Driving information display area94
Replacing light bulbs312	Driving support system display area
Switch161	96
Front position lights	Hybrid System Indicator97
Replacing light bulbs312	Navigation system-linked display .94
Front seats	Pop-up display97
Adjustment119	Settings96
Cleaning283	Heaters
Correct driving posture23	Automatic air conditioning system
Head restraints122	254
Seat heaters261	Outside rear view mirrors257
Front turn signal lights	Seat heaters261
Replacing light bulbs312	High mounted stoplight
Turn signal lever150	Replacing light bulbs312
Fuel	High-voltage components59
Capacity369	Hill-start assist control244
Fuel gauge72, 76	Hood
Information	Open290
Refueling167	Hooks
Type	Coat hooks278
Warning light	Grocery bag hooks
Fuel consumption	Retaining hooks (floor mat)22
Average fuel economy82, 90	Horn124
Current fuel consumption 82, 90 Fuel economy	Hybrid battery (traction battery) Location59
Fuel filler door	Specification
Refueling167	
Fuel gauge72, 76	Warning message62 Hybrid battery (traction battery) air
Fuses	intake vent304
1 4363	Hybrid battery (traction battery) air
G	vents62
g	Hybrid system56
Gauges72, 76	Emergency shut off system62
Glove box265	Energy monitor/consumption screen
Glove box light265	98
Grocery bag hooks267	EV drive mode146
, ,	High voltage components59
Н	Hybrid system precautions59
	If the hybrid system will not start 354
Head restraints122	Overheating363
Headlights	Power (ignition) switch142
AHB (Automatic High Beam) 158	Regenerative braking57

Starting the hybrid system 142 Hybrid System Indicator 72, 73, 79,	If the electronic key does not operate properly356
-	
97	If you lose your keys355
Hybrid transmission148	Key number plate104
Hybrid vehicle driving tips248	Keyless entry 107, 112, 114
	Mechanical key104
	Power switch142
·	Replacing the battery307
Identification	Warning buzzer114
Engine368	Wireless remote control105
Vehicle	Knee airbags29
Ignition switch (power switch) 142	Milee ali bays29
Auto power off function	
Changing the power switch modes	L
	Lana Danastura Alast (LDA) 400
If your vehicle has to be stopped in	Lane Departure Alert (LDA)190 Lane Tracing Assist (LTA)185
an emergency316	Operation185
Illuminated entry system263	Language (multi-information dis-
Immobilizer system64	play)86, 93
Indicators70	LDA (Lane Departure Alert)190
Initialization	Operation190
Items to initialize	
	Lever
Power windows	Auxiliary catch lever290
Inside rear view mirror125	Hood lock release lever290
Interior lights262	Shift lever148
Front interior light262	Turn signal lever150
Rear interior light262	Wiper lever162
	License plate lights
J	Light switch156
	Replacing light bulbs312
Jack	Wattage374
Positioning a floor jack291	Light
Vehicle-equipped jack337, 347	Wattage374
Jack handle337, 347	Light bulbs
Jam protection function	Replacing312
Power windows 128	Lights
	AHB (Automatic High Beam)158
K	Front interior lights262
	Headlight switch156
Keyless entry	Interior lights262
Smart entry & start system 114	Interior lights list
Wireless remote control 105	
Keys	Luggage compartment light 113
Battery-saving function 115	Personal lights
	Rear interior lights262
Electronic key104	Replacing light bulbs312

Turn signal lever150	ECO Accelerator Guidance83, 91
Vanity lights277	Eco score83, 91
Wattage374	Energy monitor98
LTA (Lane Tracing Assist)185	EV Driving Ratio84, 92
Operation185	EV Ratio84, 92
LTA (Lane Tracing Assist) switch 187	Fuel economy82, 90
Luggage compartment features267	Menu icons81
Luggage compartment light	Meter control switches82, 88
Wattage374	Navigation system-linked display85,
Luggage cover268	89, 92
	Settings86, 93
M	Vehicle information display85
	Warning message331
Maintenance	
Do-it-yourself maintenance288	N
Maintenance data368	
Maintenance requirements 286	Navigation system-linked display85,
Malfunction indicator lamp325	89, 92, 94
Manual headlight leveling dial 157	
Menu icons81	0
Meter	
Clock72, 76	"ODO TRIP" switch80
Hybrid System Indicator72, 73, 79	Odometer74, 80
Indicators70	Odometer and trip meter display
Meter control switches82, 88	Display change button74
Meter light control74, 80	Display items74, 80
Meters72, 76	"ODO TRIP" switch80
Multi-information display81, 87	Oil
Settings86, 93	Engine oil369
Warning lights324	Open tray266
Warning message331	Opener
Mirrors	Back door
Inside rear view mirror125	Fuel filler door167
Outside rear view mirror defoggers	Hood290
257	Hood290 Outside rear view mirrors
257 Outside rear view mirrors126	Hood290 Outside rear view mirrors Adjustment126
	Hood
	Hood
	Hood
257 Outside rear view mirrors	Hood
257 Outside rear view mirrors	Hood
	Hood
257 Outside rear view mirrors	Hood

P	Power windows
	Door lock linked window operation
Parking assist sensors (Toyota park-	129
ing assist-sensor)215	Jam protection function128
Parking brake	Operation128
Operation151	Window lock switch130
Parking brake engaged warning	Pre-Collision System (PCS)175
buzzer153	Function176
Warning light330	Warning light328
Warning message153	
Parking lights	R
Light switch156	
Parking Support Brake function (for	Radiator295
rear-crossing vehicles)236	RCTA
Function236	Function221
Parking Support Brake function	RCTA function222
(rear-crossing vehicles)227	Rear Cross Traffic Alert (RCTA)221
Parking Support Brake function	Rear fog light161
(static objects)227, 233	Switch161
Function233	Rear seats120
PCS (Pre-Collision System)175	Head restraints122
Function176	Rear turn signal lights
Warning light328	Replacing light bulbs312
Personal lights262	Turn signal lever150
Wattage374	Rear view mirror
PKSB (Parking Support Brake) 227	Inside rear view mirror125
Warning message232	Outside rear view mirrors126
Power control unit59	Rear window defogger257
Power control unit coolant	Rear window wiper165
Capacity371	Refueling
Checking294	Capacity369
Preparing and checking before win-	Fuel types369
ter250	Opening the fuel tank cap167
Power outlets270	Regenerative braking57
Power steering (Electric power	Replacing
steering system)244	Electronic key battery307
Warning light326	Fuses309
Power switch142	Light bulbs312
Auto power off function144	Road Sign Assist (RSA)209
Changing the power switch modes	RSA (Road Sign Assist)209
144	
Power switch (engine switch)	S
If your vehicle has to be stopped in	Cofe Fuit Appliet 200
an emergency316	Safe Exit Assist238
	Seat belt reminder light327

Seat belts25	RCTA function	221
Child restraint system installation 38	Side turn signal lights	
Cleaning and maintaining the seat	Replacing light bulbs	312
belt283	Turn signal lever	150
Emergency Locking Retractor26	Side windows	128
How to wear your seat belt26	Smart entry & start system	
How your child should wear the seat	Antenna location	114
belt26	Entry functions107	
Pregnant women, proper seat belt	Starting the hybrid system	
use25	Snow tires	250
Reminder light and buzzer327	Spare tire	
Seat belt pretensioners27	Inflation pressure	
SRS warning light326	Storage location	
Seat heaters261	Spark plug	
Seats	Specifications	
Adjustment119	Speedometer7	2, 76
Adjustment precautions119	Steering wheel	
Child seats/child restraint system	Adjustment	
installation38	Meter control switches8	2, 88
Cleaning283	Stop lights	
Head restraints122	Replacing light bulbs	
Properly sitting in the seat23	Storage features	264
Seat heaters261	Stuck	
Secondary Collision Brake244	If the vehicle becomes stuck	
Sensor	Sun visors	277
AHB (Automatic High Beam) 158	Switches	
Automatic headlight system156	AHB (Automatic High Beam)	
BSM (Blind Spot Monitor) 211	Brake Hold switch	
Inside rear view mirror126	Display change button	
Parking Support Brake function	Door lock switches	
(rear-crossing vehicles) 236	Driving mode select switch	
Parking Support Brake function	Dynamic radar cruise control sv	
(static objects)234		
Radar sensor 211, 239	Emergency flashers switch	
Rain-sensing windshield wipers. 164	EV drive mode switch	
RCTA222	Ignition switch	
Toyota parking assist-sensor 215	Light switches	
Service plug59	LTA (Lane Tracing Assist) switch	
Shift lever	Meter control switches8	
Hybrid transmission148	"ODO TRIP" switch	
Side airbags29	Outside rear view mirror switche	
Side mirrors		
Adjustment126	Parking brake switch	151
BSM (Blind Spot Monitor) 211	PKSB (Parking Support Brake)	
Folding 127	switch	228

Power door lock switch 110	Toyota parking assist-sensor
Power switch142	Function215
Power window switches128	Warning message217
RCTA switch222	Toyota Safety Sense
Rear window and outside rear view	AHB (Automatic High Beam)158
mirror defoggers switch254	Cruise control204
Seat heater switches261	Dynamic radar cruise control195
"SOS" button53	Emergency Driving Stop System206
Toyota parking assist-sensor switch	LDA (Lane Departure Alert)190
216	LTA (Lane Tracing Assist)185
Vehicle-to-vehicle distance switch	PCS (Pre-Collision System)175
200	RSA (Road Sign Assist)209
VSC OFF switch244	Traction battery (hybrid battery)
Window lock switch130	Hybrid battery (traction battery) air
Windshield wiper and washer switch	vents62
162	Location59
	Specification369
T	Warning message62
	Traction Control (TRC)244
Tachometer76	Traction motor (electric motor)56
Tail lights	Trailer towing141
Light switch156	Transmission
Replacing light bulbs312	Driving mode select switch242
Theft deterrent system	Hybrid transmission148
Alarm65	TRC (Traction Control)244
Immobilizer system64	Trip meters74, 80
Tire inflation pressure300	Turn signal lights
Maintenance data373	Replacing light bulbs312
Tires	Turn signal lever150
Chains251	
Checking298	U
Emergency tire puncture repair kit	
335	USB charging port269
If you have a flat tire335	
Inflation pressure300	V
Rotating tires300	
Size373	Vanity lights277
Snow tires250	Wattage374
Tools337, 347	Vanity mirrors277
Towing	Vehicle data recording6
Emergency towing319	Vehicle identification number368
Towing eyelet321	Vehicle information display85
Trailer towing141	Vehicle Stability Control (VSC)243
Toyota Connected Services53	VSC (Vehicle Stability Control)243
"SOS"button 53	

W	
Warning buzzers	
ABS32	6
Airbags32	
Approach warning20	
Brake hold33	
Brake Override System32	6
Brake system32	
Charging system32	5
Drive-Start Control32	
Electric power steering32	
Engine32	
High coolant temperature32	
Hybrid system32	
Hybrid system overheat32	
LDA (Lane Departure Alert) 190, 32	
Low engine oil pressure32	
LTA (Lane Tracing Assist) 185, 32	
Open door108, 11	
Open window12	
Seat belt 32	
Toyota parking assist-sensor 220 328	,
Warning label5	۵
Warning lights32	
ABS32	
Brake hold operated indicator 33	
Brake Override System32	
Brake system32	
Charging system32	
Cruise control indicator32	
Drive-Start Control32	
Driving assist information indicator	
32	9
Dynamic radar cruise control indica	-
tor32	8
Electric power steering32	
High coolant temperature32	
Hybrid system overheat32	
LDA indicator32	
Low engine oil pressure32	
Low fuel level32	
LTA indicator32	8
Malfunction indicator lamp32	5

Parking brake indicator	.330
Pre-collision system	.328
Seat belt reminder light	.327
Slip indicator	.329
SRS	.326
Toyota parking assist-sensor OF	F
indicator	.328
Warning messages	.331
Washer	
Checking	.297
Preparing and checking before v	
ter	
Switch	
Washing and waxing	
Wheels	
Replacing	
Size	
Window lock switch	.130
Windows	
Power windows	
Rear window defogger	
Washer	
Windshield wipers	
Winter driving tips	
Wireless charger	.270
Wireless remote control	
Battery-Saving Function	
Locking/Unlocking	
Replacing the battery	.307

For information regarding the equipment listed below, refer to "Multimedia Owner's Manual".

- · Navigation system
- · Audio/visual system
- · Rear view monitor system
- · Toyota Link


Certifications

► BSM (Blind Spot Monitor)



C3-054

GAS STATION INFORMATION

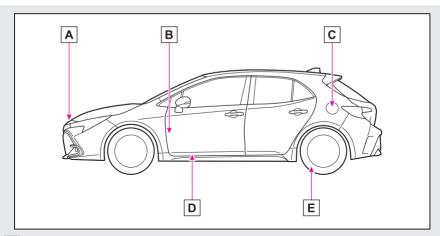

- A Auxiliary catch lever (→P.290)
- **B** Hood lock release lever (→P.290)
- C Fuel filler door (→P.168)
- **D** Fuel filler door opener (→P.168)
- **E** Tire inflation pressure (→P.373)

Fuel tank capacity (Reference)	43.0 L (11.4 gal., 9.5 lmp. gal.)	
Fuel type	Unleaded gasoline only	P.369
ruei type		P.375
Cold tire inflation pressure		P.373
Engine oil capacity (Drain and refill — reference)		P.369
Engine oil type	"Toyota Genuine Motor Oil" or equivalent	P.369

