

COROLLA

HATCHBACK



Not For Reproduction

©2009 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.

TABLE OF CONTENTS

Before driving

Adjusting and operating features such as door locks, mirrors, and steering column.

When driving

Driving, stopping and safe-driving information.

Interior features

Air conditioning and audo systems, as well as other interior features for a comfortable driving experience.

Maintenance and care

Cleaning and protecting your vehicle, performing do-ityourself maintenance, and maintenance information.

When trouble arises

What to do if the vehicle needs to be towed, gets a flat tire, or is involved in an accident.

Vehicle specifications

Detailed vehicle information.

Index

Alphabetical listing of information contained in this manual.

Before driving	1-6. Theft deterrent system Engine immobilizer system
1-1. Key information Keys	Double locking system 69 Alarm 71
1-2. Opening, closing and locking the doors Smart entry & start system	32 Installing child restraints 95 35
1-3. Adjustable components (seats, mirrors, steering wheel) Front seats Rear seats Head restraints Seat belts Steering wheel Anti-glare inside rear view mirror Outside rear view mirrors	55 Transmission
1-4. Opening and closing the windows and moon roof Power windows Moon roof	
1-5. Refueling Opening the fuel tank	

	Gauges and meters	133	3	Interior features	
	lights	142	3-1.	Using the air conditioning system and defogger Automatic air conditioning system	188 195 200
2-3.	Operating the lights and wipers		3-2.	Using the audio system	
	Headlight switch	154		Audio system types	201
	Fog light switch			Using the radio	203
	Windshield wipers and washer		40	Using the CD playerPlaying back MP3 and	207
	Rear window wiper and washer		6,	WMA discs Optimal use of the audio	213
	Hondlight alconor	4			219
	switch	165		Using the steering wheel	221
2-4.	Using other driving system	ıs			
	Cruise control.	166	3-3.	Using the interior lights	
	Driving assist systems			Interior lights list Interior light	224
2-5.	Driving information			Personal lights	224
	Cargo and luggage	175			
	Winter driving tips	176			

Trailer towing 179

2-2. Instrument cluster

3-4.	Using the storage features	4-3.	Do-it-yourself maintenance	е
	List of storage features 225 • Glove box 225 • Console box 226 • Cup holders 227 • Auxiliary boxes 229		Do-it-yourself service precautions	255 257
3-5.	Sun visors 232 Vanity mirrors 233 Portable ashtray 234 Cigarette lighter 236 Power outlet 237 Armrest 238 Floor mat 239 Luggage compartment features 240		Tires Tire inflation pressure Wheels Air conditioning filter Key batter Checking and replacing fusts Light bulbs When trouble arises	276 278 279 282 282
4	Maintenance and care		Essential information	
4-1.	Maintenance and care Cleaning and protecting		Emergency flashers If your vehicle needs to be towed	
	the vehicle exterior		If you think something is wrong	
4-2.	Maintenance Maintenance			

requirements...... 250

5-2.	Steps to take in an emerge	ency	50.00
	If a warning light turns on or a warning buzzer		Index
	sounds	320	Abbreviation list
	If a warning message is	.TO. V	Appreviation list
	displayed	324	Alababatiani inden
	If you have a flat tire	332	Alphabetical index
	If the engine will not start	340	100-00-1-00
	If the shift lever cannot be		What to do if
	shifted from P	342	
	If you lose your keys	343	
	If the electronic key does		
	not operate properly	344	WO.
	If the battery is		
	discharged	347	
	If your vehicle overheats	351	-0.
	If the vehicle becomes		40
	stuck	354	0
		06	X
		4	production
6	Vehicle specifications		
6-1.	Specifications		
	Maintenance data		
	(fuel, oil level, etc.)	358	
	Fuel information	368	

Index


Abbreviation list	372
Alphabetical index	373
What to do if	381


6-1.	Specifications
	Maintenance data

6-2. Customization

Customizable features 369

Exterior

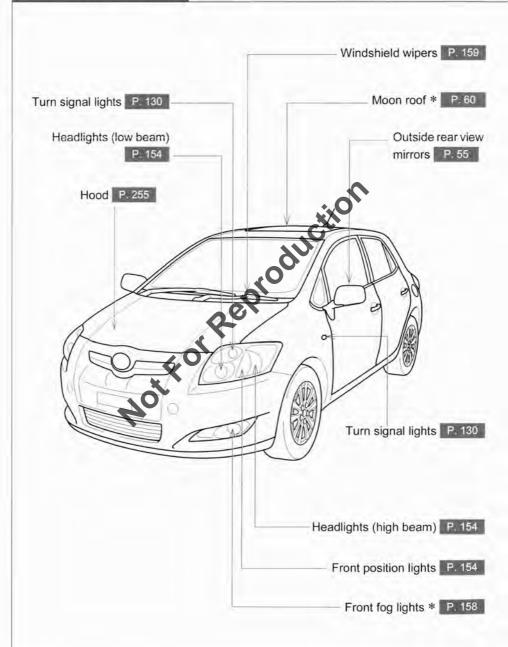


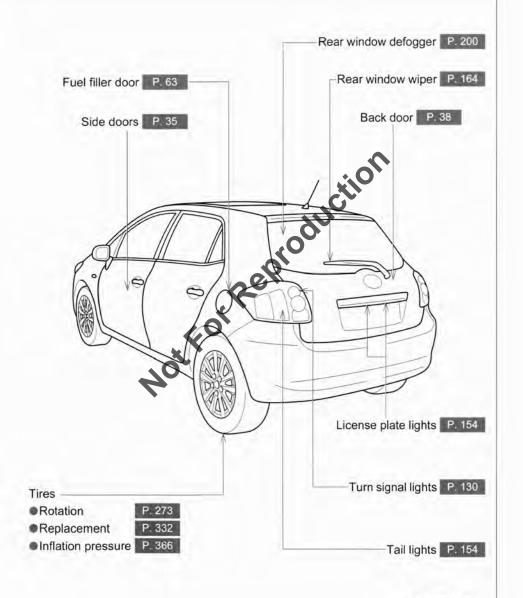


*: If equipped


Pictorial index


Interior

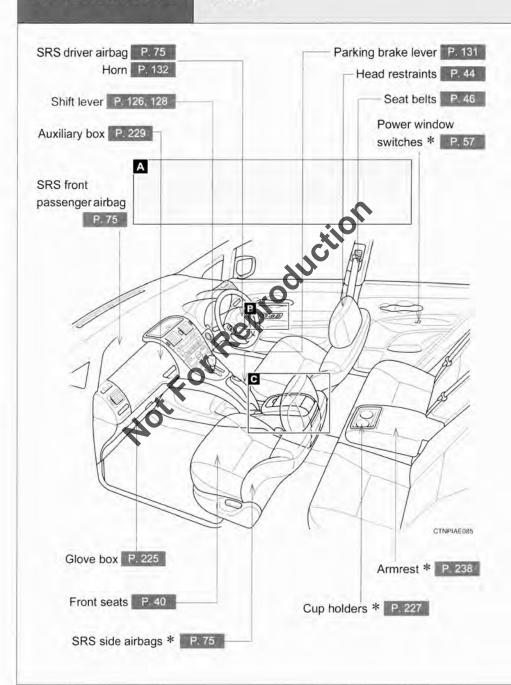

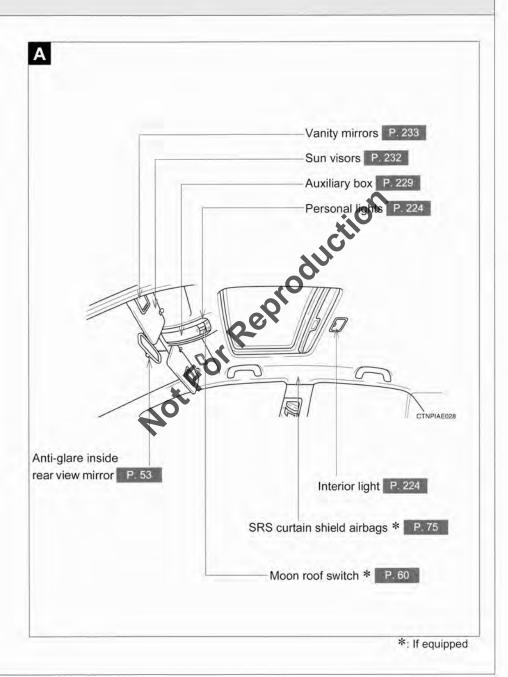


Interior

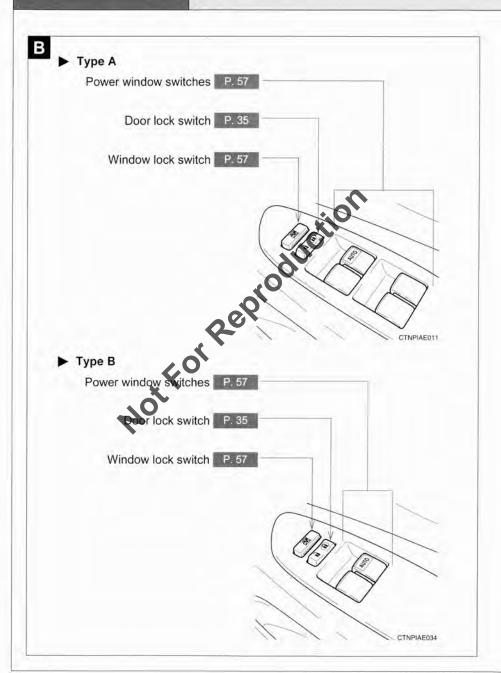


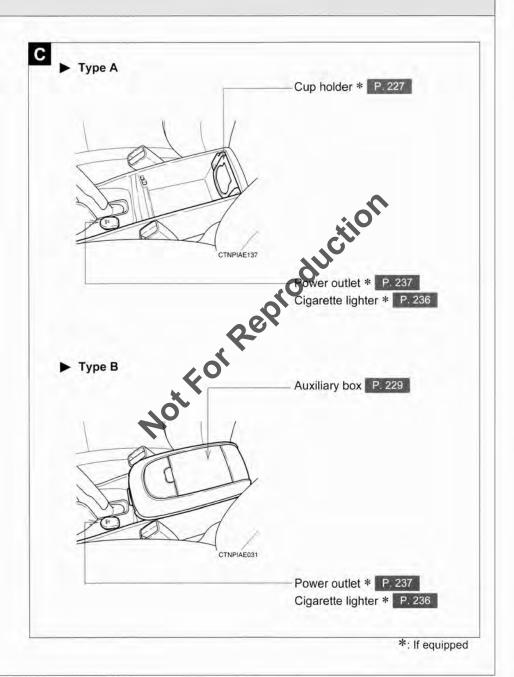

Pictorial index

Instrument panel

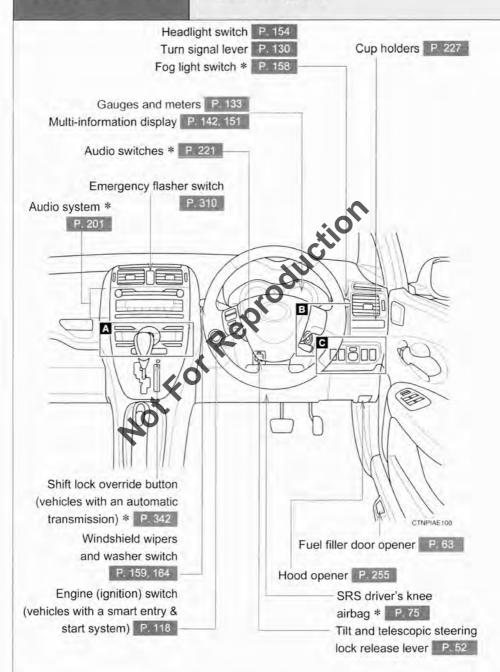


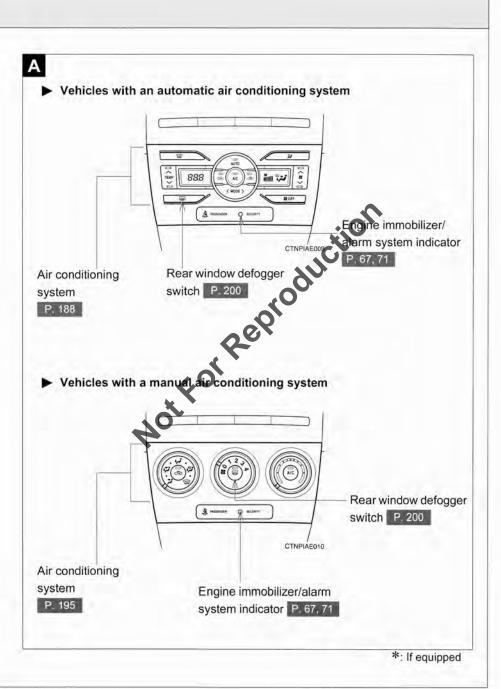



Cruise control switch * P. 166

Engine (ignition) switch (vehicles without a smart entry & start system) P. 123

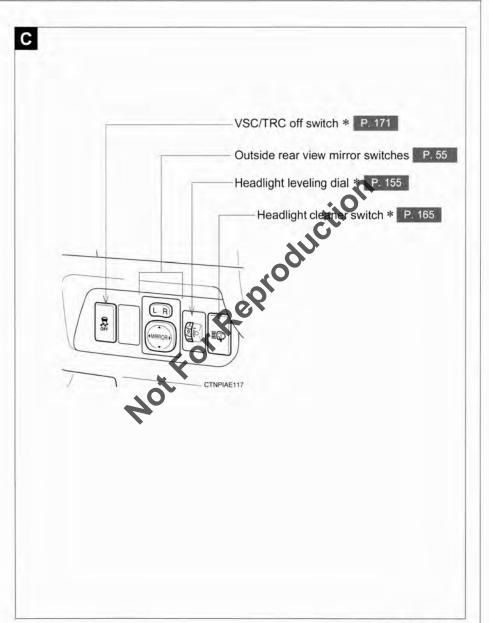

For your information

Main Owner's Manual

Please note that this manual covers all models and all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Toyota policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of equipment.

Accessories, spare parts and modification of your Toyota

A wide variety of non-genuine spare parts and accessories for Toyota vehicles are currently available in the prarket. Using these spare parts and accessories, which are not genuine Toyota products, may adversely affect the safety of your vehicle, even though these parts may be approved by certain authorities in your country. Toyota therefore cannot accept any liability or guarantee spare parts and accessories, which are not genuine Toyota products, nor for replacement or installation involving such parts.

This vehicle should not be modified with non-genuine Toyota products. Modification with on-genuine Toyota products could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from the modification may not be covered under warranty.

Installation of a mobile two-way radio system

As the installation of a mobile two-way radio system in your vehicle may affect electronic systems such as the multi-port fuel injection system/sequential multi-port fuel injection system, cruise control system, anti-lock brake system, SRS airbag system or seat belt pretensioner system, be sure to check with your Toyota dealer for precautionary measures or special instructions regarding installation.

Scrapping your Toyota

The SRS airbag and seat belt pretensioner devices in your Toyota contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by your Toyota dealer before you scrap your vehicle.

A CAUTION

General precautions while driving

Driving under the influence: Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

Defensive driving: Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

Driver distraction: Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

■ General precaution regarding children's safety

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the cigarette lighter, the windows, the moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

Symbols used throughout this manual

Cautions & Notices

A CAUTION

This is a warning against anything which may cause death or injury to people if the warning is ignored. You are informed about what you must or must not do in order to reduce the risk of injury to yourself and others.



NOTICE


This is a warning against anything which may cause damage to the vehicle or its equipment if the warning is ignored. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your Toyota Repro and its equipment.

Symbols used in illustration



Safety symbo

The symbol of a circle with a slash through means "Do not", "Do not do this for "Do not let this happen".

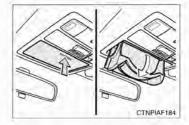

Arrows indicating operations


- Indicates the action (pushing, turning, etc.) used to operate switches and other devices.
- Indicates the outcome of an operation (e.g. a lid opens).

Before driving


1-1.	Key information Keys	20	1-4.	Opening and closing the windows and moon roof	
				Power windows	57
1-2.	Opening, closing and locking the doors			Mann roof	60
	Smart entry & start		1-5.	Refueling	
	system	22	0,	Opening the fuel tank	
		32 6		cap	63
	Side doors	35			
	Back door	38	1-6.	Theft deterrent system	
	X V			Engine immobilizer	
1-3.	Adjustable components			system	67
	(seats, mirrors,			Double locking system	69
	steering whoel)			Alarm	71
	Front seats	40			
	Rear seats	41	1-7.	Safety information	
	Head restraints	44		Correct driving posture	73
	Seat belts	46		SRS airbags	75
	Steering wheel	52		Child restraint systems	87
	Anti-glare inside rear view mirror	53		Installing child restraints	95
	Outside rear view mirrors	55			

The following keys are provided with the vehicle.

▶ Vehicles with a smart entry & start system

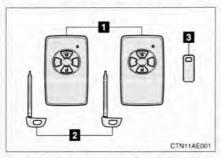


- Electronic keys
 - Operating the smart entry & start system (→P. 22)
 - Operating the wireless remote control function (→P. 32)
- 2 Mechanical keys
- Key number plate
- ▶ Vehicles without a smart entry & start system

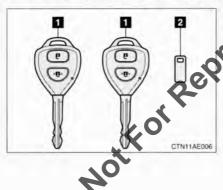

- Keys
 - Operating the wireless remote control function (→P. 32)
- 2 Key number plate

Using the mechanical key (vehicles with a smart entry & start system)

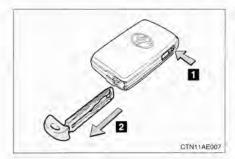

Take out the mechanical key.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or entry function does not operate properly, you will need the mechanical key. (→P. 344)

Key number plate

Keep the plate in a safe place such as your vallet, not in the vehicle. In the event that a key is lost, a new key can be made by your Toyota dealer using the key number plate. $(\rightarrow P. 343)$

When riding in an aircraft

When bringing a key with wireless remote control function onto an aircraft, make sure you do not press any buttons on the key while inside the aircraft cabin. If you are carrying the key in your bag etc, ensure that the buttons are not likely to be pressent accidentally. Pressing a button may cause the key to emit radio waves that yould interfere with the operation of the aircraft.


A NOTICE

To prevent key damage

- Do not subject the keys to strong shocks, expose them to high temperatures by placing them in direct sunlight, or get them wet.
- Do not expose the keys to electromagnetic materials or attach any material that blocks electromagnetic waves to the key surface.
- Do not disassemble the electronic key.

1-2. Opening, closing and locking the doors Smart entry & start system*


The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. (The driver should always carry the electronic key.)

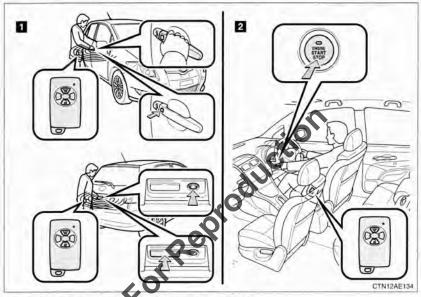

- Locks and unlocks the doors (→P. 23)
- 2 Starts the engine (→P. 118)

Unlocking and locking the doors

▶ Front door handles

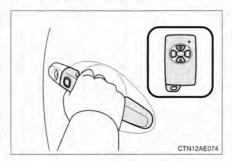




Grip the handle to unlock the doors.

Make sure to touch the sensor on the back of the handle.

The door cannot be unlocked for 3 seconds after the door is locked.

Press the lock button to lock the doors.

▶ Back door handle

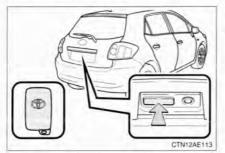

Press the button to unlock the doors.

The door cannot be unlocked for 3 seconds after the door is locked.




Press the button to lock the doors.

24


Antenna location and effective range

Antenna location

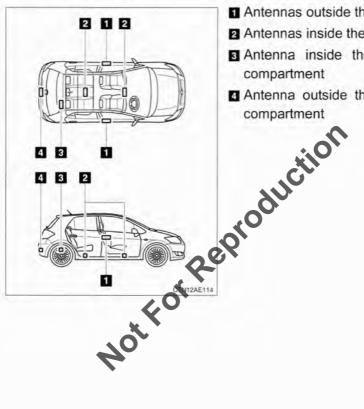

- Antennas outside the cabin
- 2 Antennas inside the cabin
- 3 Antenna inside the luggage compartment
- 4 Antenna outside the luggage

■ Effective range (areas within which the electronic key is detected)

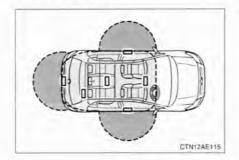

When locking or unlocking the doors

> The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) of either of the outside front door handles and back door. (Only the doors detecting the key can be operated.)

When starting the engine changing "ENGINE Not For Reprodi STOP" switch modes

The system can be operated when the electronic key is inside the vehicle.

Operation signals

A buzzer sounds and the emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: Once; Unlocked: Twice)

Conditions affecting operation

The smart entry & start system uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart entry & start system and wireless remote control from operating properly. (Ways of coping: →P. 344)

- When the electronic key battery is depleted
- Never a TV tower, electronic power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When carrying a portable radio, cellular phone cordless phone or other wireless communication devices
- When the electronic key has come into contact with, or is covered by a metallic object
- When multiple electronic keys are in the vicinity
- When carrying or using the electronic key together with the following devices that emit radio waves
 - · Another vehicle's electronic key
 - · A wireless key that emits radio waves
 - Personal computer
- If window tint with a metallic content or metallic objects are attached to the rear window

Battery-saving function

In the following circumstances, the entry function is disabled in order to prevent the vehicle and electronic key batteries from discharging.

- When the entry function has not been used for 2 weeks or more
- When the electronic key has been left within approximately 1 m (3 ft.) of the vehicle for 10 minutes or more

The system will resume operation when...

The vehicle is locked using the door handle lock switch.

- The vehicle is locked/unlocked using the wireless remote control function. (→P. 32)
- The vehicle is locked/unlocked using the mechanical key. (→P. 344)

Electronic key battery depletion

- The standard battery life is 1 to 2 years. (The battery becomes depleted even if the electronic key is not used.) If the smart entry & start system or the wireless remote control function does not operate, or the detection area becomes smaller, the battery may be depleted. Replace the battery when necessary. (→P. 282)
- To avoid serious deterioration, do not leave the electronic key within 1 m (3 ft.) of the following electrical appliances that produce a magnetic field.
- TVs

To operate the system properly

Recharging cellular phones or cordless phones
Table lamps
To operate the system properly

Make sure to care the Make sure to carry the electronic ket when operating the system. Do not get the electronic key too close to the whicle when operating the system from the outside of the vehicle.

Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention may not function.)

Note for the entry function

- Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases.
 - The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
 - The electronic key is on the instrument panel, luggage cover, floor or in the glove box when the engine is started or engine switch modes are changed.
- As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone.
- Even if the electronic key is not inside the vehicle, it may be possible to start the engine if the electronic key is near the window.

- The doors may unlock if a large amount of water splashes on the door handle, such as in the rain or in a car wash. (The doors will automatically be locked after approximately 30 seconds if the doors are not opened and closed.)
- Gripping the door handle when wearing a glove may not unlock the door.
- If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)

When the vehicle is not driven for extended periods

To prevent theft of the vehicle, do not leave the electronic key within 2 m (6 ft.) of the vehicle.

■ Security feature

If a door is not opened within approximately 30 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

Alarms and warning indicators

A combination of exterior and interior atoms as well as warning lights and warning messages shown on the multi-information display are used to reduce the chance of vehicle their and accidents resulting from erroneous operation.

- When any warning lights come on:
 Take appropriate measures according to which warning light comes on.
 (→P. 320)
- When a warning message is shown on the multi-information display (vehicles with Optitron type meters): Take appropriate measures according to the warning message on the multi-information display. (→P. 324)

The following table describes circumstances and correction procedures when only alarms are sounded.

Alarm Situation		Correction procedure
Exterior alarm sounds once for 2 seconds	Tried to lock the doors using the entry function while the electronic key was still inside the passenger compartment	Retrieve the elec- tronic key from the passenger compart- ment and lock the doors again.
Exterior alarm sounds once for 60 seconds	Tried to exit the vehicle with the electronic key and lock the doors without first turning the "ENGINE START STOP" switch OFF	Turn the "ENGINE START STOP" switch ONF and lock the doors again.
Exterior alarm sounds once for 10 seconds	Tried to lock the vehicle using the entry function while a door was open	Close all of the doors and lock the doors again.
Interior alarm sounds continu- ously*	Tried to open the door and exit the vehicle without shifting the shift lever to P	Shift the shift lever to P.
Interior alarm sounds once	The electronic key battery low	Replace the battery. (→P. 282)
Interior alarm beeps repeatedly	Turned the "ENGINE START STOP" switch to ACCESSORY mode while the driver's door was open (Opened the driver's door when the "ENGINE START STOP" switch was in ACCESSORY mode.)	Turn the "ENGINE START STOP" switch OFF and close the driver's door.
	Turned the "ENGINE START STOP" switch OFF while the driver's door was open	Close the driver's door.

^{*:} Vehicles with an automatic transmission only

If the smart entry & start system does not operate properly

- Locking and unlocking the doors: Use the mechanical key. (→P. 344)
- Starting the engine: →P. 118
- When the electronic key battery is fully depleted

→P. 282

Customization that can be configured at Toyota dealer

It is possible to deactivate the smart entry & start system, etc. (Customizable features→P. 369)

A CAUTION

■ Caution regarding interference with electronic devices

- People with implanted pacemakers or cardiac defibrillators should maintain a reasonable distance between themselves and the smart entry & start system antennas. (→P. 25)
 - The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask your Toyota dealer for details, such as the frequency of radio waves and timing of emitting the radio waves. Then, consult your doctor to see if you should disable the entry function.
- User of any electrical medical device other than implanted pacemakers and implanted cardiac defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves.


Radio waves could have unexpected effects on the operation of such medical devices.

Ask your Toyota dealer for details for disabling the entry function.

1-2. Opening, closing and locking the doors Wireless remote control


The wireless remote control can be used to lock and unlock the vehicle from outside the vehicle.

▶ Vehicles with a smart entry & start system

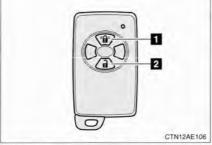

- Locks all doors
- 2 Unlocks all doors

▶ Vehicles without a smart entry & start system

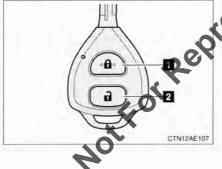

- Unlocks all doors

ction

Operation signals

A buzzer sounds (vehicles with a smart entry & start system) and the emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: Once; Unlocked: Twice)

■ Door lock buzzer (vehicles with a smart entry & start system)

If a door is not fully closed, a buzzer sounds continuously if an attempt to lock the door is made. Fully close the door to stop the buzzer, and lock the vehicle once more.

Key battery depletion

- ➤ Vehicles with a smart entry & start system
- →P. 28
- ➤ Vehicles without a smart entry & start system

The standard battery life is 1 to 2 years. (The battery becomes depleted even if the key is not used.) If the wireless (a) note control function does not operate, the battery may be depleted. Replace the battery when necessary. (\rightarrow P. 282)

■ Security feature

If a door is not opened within approximately 30 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

- When the key battery is fully depleted (vehicles with a smart entry & start system)
 - →P. 31

Conditions affecting operation

➤ Vehicles with a smart entry & start system

→P. 27

► Vehicles without a smart entry & start system

The wireless remote control function may not operate normally in the following situations.

- Near a TV tower, radio station, electric power plant, airport or other facility that generates strong radio waves
- When carrying a portable radio, cellular phone or other wireless communication device
- When multiple wireless keys are in the vicinity
- When the wireless key has come into contact with, or is covered by a metallic object
 - When a wireless key (that emits radio waves) is being used nearby
 - When the wireless key has been left near an electrical appliance such as a personal computer
- Customization that can be configured at Toyota dealer

Settings (e.g. wireless remote control s(s)em) can be changed. (Customizable features→P. 369)

1-2. Opening, closing and locking the doors Side doors

The vehicle can be locked and unlocked using the entry function, wireless remote control, key or door lock switch.

- Entry function (vehicles with a smart entry & start system) →P. 23
- Wireless remote control


→P. 32

■ Kev

- ▶ Vehicles with a smart entry & start system The doors can also be locked and unlocked with the mechanical key. (→P. 344)
- ▶ Vehicles without a smart entry & start system




Door lock switch

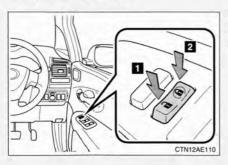

- Unlocks all doors
- 2 Locks all doors

Inside lock button

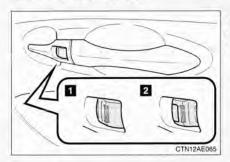

- Locks the door
- 2 Unlocks the door

The driver's door can be opened by pulling the inside handle even if the lock button is in the lock position.

Locking the front doors from the outside without a key

STEP 1 Move the inside lock button to the lock position.

STEP 2 Close the door while pulling the door handle.

▶ Vehicles with a smart entry & start system


The door cannot be locked to the "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode, or the electronic key is left inside the vehicle.

Depending on the position of the electronic key, the key may not be detected correctly and the door may be locked.

▶ Vehicles without a smart entry & start system

The door cannot be locked if the key is in the engine switch.

Rear door child-protector lock

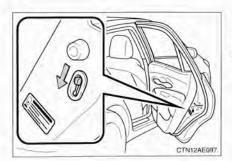

The door cannot be opened from inside the vehicle when the locks are set.

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

■ To prevent an accident

Observe the following precautions while driving the vehicle.

Failing to do so may result in a door opening and an occupant falling out, resulting in death or serious injury.

- Always use a seat belt.
- Always lock the doors.
- Ensure that all doors are properly closed.
- Do not pull the inside handle of the doors while driving.
 The doors may be opened and the passengers are thrown out of the vehicle and it may result in serious injury or death.

Be especially careful for the driver's door, the door may be opened even if the inside lock button is in locked position.

Set the rear door child protector locks when children are seated in the rear seat.


1-2. Opening, closing and locking the doors

Back door

The back door can be locked/unlocked and opened by the following procedures.

- Locking and unlocking the back door
- ► Entry function (vehicles with a smart entry & start system)
- →P. 23
- ▶ Door lock switch
- →P. 35
- ➤ Wireless remote control
- →P. 32
- ► Key
- →P. 35


Opening the back door

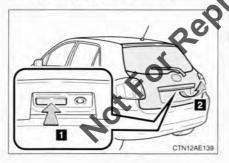

roduction

- 1 Push up
- 2 Raise


When closing the back door

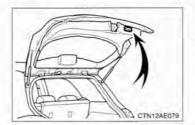

Lower the back door using the back door handle, and make sure to push the back door down from the outside to close it.

If the back door opener is inoperative

The back door can be operated from the inside.

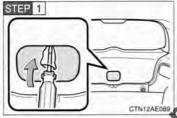



Remove the cover

To protect the cover, place a rag between the flathead screwdriver and the cover, as shown in the illustration.

Move the lever.

A CAUTION

■Caution while driving

Keep the back door closed.


This not only keeps personal belongings from being thrown out, but also prevents exhaust gases from entering the vehicle.

1-3. Adjustable components (seats, mirrors, steering wheel) Front seats



- Seat position adjustment lever
- Seatback angle adjustment lever
- 3 Vertical height adjustment lever (driver's side only)

- Do not recline the seat more than necessary when the vehicle is in motion If the seat is too reclined, the lap belt may slide past the hips and apply
 - restraint forces directly to the abdomen or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.
- After adjusting the seat, make sure that the seat is locked in position.

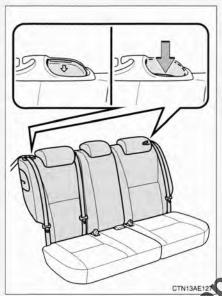


Seatback angle adjustment button

Press the button down until the lock is completely released.

Folding down rear seatbacks

■ Before folding down rear seatbacks

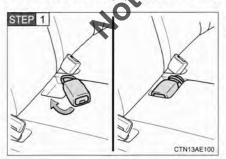

Stow the rear center seat belt buckle.



Remove the seat belt from the guide.

In case you do not remove the seat belt from the guide, the seat belt might be locked when you fold down the rear seatbacks.

Folding down rear seatbacks



Fold the seatback down while pushing the seatback angle adjustment button.

Press the button until the lock is ompletely released



Tilt the rear seatback up until it locks, making sure that you hold the seat belt to prevent it from getting caught between the seatback and the inner side of the vehicle.

After returning rear seatbacks, pass the shoulder belt through the guide.

■ Seat adjustment

- Do not recline the seat more than necessary when the vehicle is in motion to reduce the risk of sliding under the lap belt. If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.
- Be careful not to catch your hand when reclining the seatback.

After returning the seatback to the upright position

Observe the following precautions. Failure to do so may result in death or serious injury.




Make sure that the seatback is secure, lecked in position by lightly rocking it back and forth.

If the seatback is not securely locked, the red marking will be visible behind the seatback angle button. Make sure that the red marking is not visible.

• Check that the seat belts are not twisted or caught under the seat.

1-3. Adjustable components (seats, mirrors, steering wheel)

Head restraints

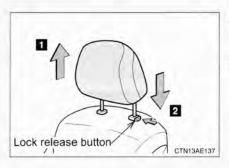


■ Up

Pull the head restraints up.

2 Down

Push and hold the lock release button when lowering the head restraint.

Removing the head restraints

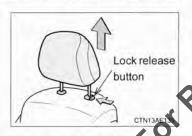

Pull the head restraint up while pushing the lock release button.

Adjusting the height of the head restraints



Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

Adjusting the rear seat head restraints

Always raise the head restraint one level from the stowed position when using.

■ Head restraint precautions

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- Do not drive with the head restraints removed.

Not For Reproduction

1-3. Adjustable components (seats, mirrors, steering wheel) Seat belts


Make sure that all occupants are wearing their seat belts before driving the vehicle.

■ Correct use of the seat belts




- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position to lap belt as low as possible over the hips.
- Adjust the position of the seatback. Sit up straight and well back in the seat.
- Do not twist the seat belt.

Fastening and releasing the seat belt

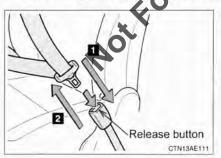

- Fastening the belt Push the tab into the buckle until a clicking sound is heard.
- Releasing the belt
 Press the release button.


Adjusting the height of the belt (front seats)

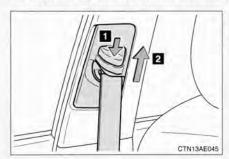

- 1 Down
- 2 Up

Move the height adjuster up and down as needed until you hear a click.

Seat belt pretensioners (front seats)

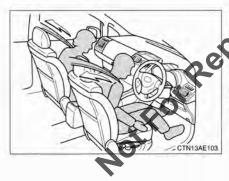

The pretensioner helps the seat tent to quickly restrain the occupant by retracting the seat belt when the vehicle is subjected to certain types of severe frontal collision.

The pretensioner may not activate in the event of a minor frontal impact, a side impact or a rear impact.

■ Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

Automatic locking retractor (ALR)

When a rear passenger's shoulder belt is completely extended and then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system (CRS) firmly. To free the belt again, fully retract the belt and then pull the belt out once more. $(\rightarrow P. 95)$

■ Pregnant women



Obtain medica advice and wear the seat belt in the proper way. (→P. 46)

Women who are pregnant should position the lab belt as low as possible over the hip on the same manner as other occupants. Extend the shoulder belt completely over the shoulder and position the belt across the chest. Avoid belt contact over the rounding of the abdominal area.

If the seat belt is not worn properly, not only a pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

■ People suffering illness

Obtain medical advice and wear the seat belt in the proper way.

Child seat belt usage

The seat belts of your vehicle were principally designed for persons of adult size.

- ■Use a child restraint system appropriate for the child, until the child become large enough to properly wear the vehicle's seat belt. (→P. 87)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions on P. 46 regarding seat belt usage.

Replacing the belt after the pretensioner has been activated

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

Seat belt regulations

If seat belt regulations exist in the country where you reside, please contact your Toyota dealer for seat belt replacement of installation.

A CAUTION

Observe the following precautions to reduce the risk of injury in the event of sudden braking or an accident.

Failing to do so may cause death or severe injury.

■ Wearing a seat belt

- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Toyota recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- Do not recline the seat any more than necessary to achieve a proper seating position. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.



Seat belt pretensioners

If the pretensioner has activated, the seat belt becomes locked: it cannot be further extended, nor will it return to the stowed position. The seat belt cannot be used again and must be replaced at your Toyota dealer.

Child restraint lock function belt precaution

Do not allow children to play with the child restraint lock function belt. If the belt becomes twisted around a child's neck, it will not be possible to pull the belt out leading to choking or other serious injuries that could result in death. If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

Seat belt damage and wear

- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat left until it is replaced. Damaged seat belt cannot protect an occupant from death or serious injury.
- Ensure that the belt and tab are locked and the belt is not twisted. If the seat belt does not function correctly, immediately contact your Toyota dealer.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by your Toyota dealer. Inappropriate handling of the pretensioner may prevent it from operating properly resulting in death or serious injury.

For Australian owners

Observe the following additional WARNINGS.

WARNING: Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

Care should be taken to avoid contamination of the weeking with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.


Belts should not be worn with straps twisted.

Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.


WARNING: No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.

1-3. Adjustable components (seats, mirrors, steering wheel) Steering wheel

The steering wheel can be adjusted to a comfortable position.

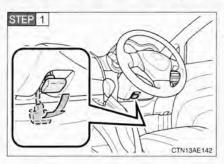

Hold the steering wheel and press the lever down.

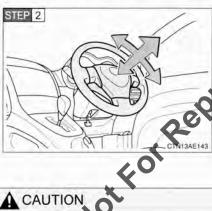

Adjust to the ideal position by moving the steering wheel horizontally and vertically.

After adjustment, pull the lever up to secure the steering wheel.

A CAUTION

■ Caution while driving

Do not adjust the steering wheel while driving.

Doing so may cause the driver to mishandle the vehicle and an accident, resulting in death or serious injury.

■ After adjusting the steering wheel


Make sure that the steering wheel is securely locked.

Otherwise, the steering wheel may move suddenly, possibly causing an accident and resulting in death or serious injury.

1-3. Adjustable components (seats, mirrors, steering wheel) Anti-glare inside rear view mirror

Glare from the headlights of vehicles behind can be reduced by using the following functions.


▶ Manual anti-glare inside rear view mirror

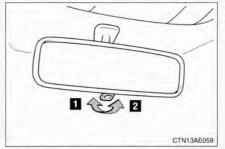

- Normal position
- 2 Anti-glare position

► Auto anti-glare inside rear view mirror

uction In automatic mode, sensors are used to detect the headlights of vehicles behind and automatically reduces the reflected light.

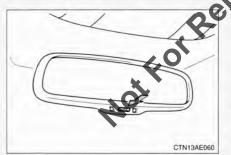


urns automatic mode on/off

The indicator comes on when automatic mode is turned on.

Vehicles without a smart entry & start system: The mirror will revert to the automatic mode each time the engine switch is turned to the "ON" position.

Vehicles with a smart entry & start system: The mirror will revert to the automatic mode time the "ENGINE each START STOP" switch is turned to IGNITION ON mode.

■ To prevent sensor error (vehicles with auto anti-glare inside rear view mirror)

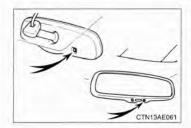

To ensure that the sensors operate properly, do not touch or cover them.


A CAUTION

■ Caution while driving

Do not adjust the position of the mirror while driving.
Doing so may lead to mishandling of the vehicle and death or serious injury. Do not adjust the position of the mirror while driving.


Doing so may lead to mishandling of the vehicle and an accident, resulting in death or serious injury.

Mirror angle can be adjusted using the switches.

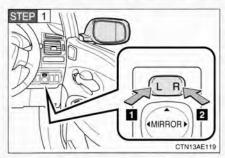

Select a mirror to adjust.


- 1 Left
- 2 Right

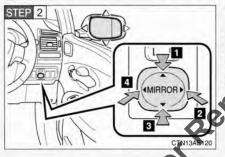

Adjust the mino

- 2 Right
- 3. 00W

Folding back the mirrors

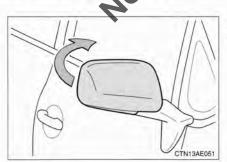

Push backward to fold the mirrors.

■ The outside rear view mirrors can be operated when

Vehicles without a smart entry & start system

The engine switch is in the "ACC" or "ON" position.

Vehicles with a smart entry & start system

The "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode.



A CAUTION

When driving the vehicle


Observe the following precautions while driving.

Failing to do so may result in loss of control
dent resulting Failing to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded back.
- Both the driver and passenger side mirrors must be extended and properly Not For adjusted before driving.


1-4. Opening and closing the windows and moon roof Power windows

The power windows can be opened and closed using the following switches.

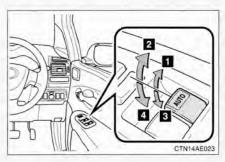

- 1 Closing
- One-touch closing (driver's window only)*
- Opening
- One-touch opening (driver's window only)*
- *: Pressing the switch in the opposite direction will stop window travel partway.

Lock switch

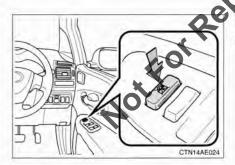

Press the switch down to lock passenger window switches.

Use this switch to prevent children from accidentally opening or closing a passenger window.

The power windows can be operated when

▶ Vehicles without a smart entry & start system

The engine switch is in the "ON" position.

➤ Vehicles with a smart entry & start system

The "ENGINE START STOP" switch is in IGNITION ON mode.

- Operating the power window after turning the "ENGINE START STOP" switch or the engine switch OFF (driver's window only)
 - ▶ Vehicles without a smart entry & start system

The power window can be operated for approximately 45 seconds even after the engine switch is turned to the "ACC" position or turned OFF. They cannot, however, be operated once either front door, so opened.

▶ Vehicles with a smart entry & start system

The power window can be operated for approximately 45 seconds even after the "ENGINE START STOP" switch is turned to ACCESSORY mode or turned OFF. They cannot, however the operated once either front door is opened.

■ Jam protection function (driver's window only)

If an object becomes car of between the window and the window frame, window travel is stopped and the window is opened slightly.

Closing the windows

Observe the following precautions.

Failing to do so may result in death or serious injury.

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- Do not allow children to operate the power windows. Closing a power window on someone can cause serious injury, and in some instances, even death.


■ Jam protection function (driver's window only)

- Never try jamming any part of your body to activate the jam protection function intentionally.
- The jam protection function may not work it something gets caught just before the window fully closes.

1-4. Opening and closing the windows and moon roof Moon roof*

Use the overhead switches to open, close, and tilt the moon roof up and down.

Opening and closing

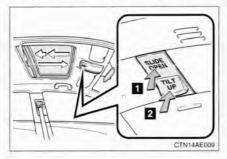

1 Open


The moon roof stops slightly before the fully opened position.

Push the switch again to fully open.

2 Close

Push the switch in the either direction to stop the moon roof partway.

Tilt up and down

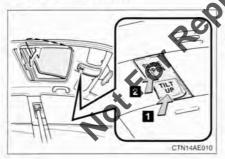

Tilt up

2 Tilt down

Push the switch in the either direction to stop the moon roof partway.

The moon roof can be operated when

► Vehicles without a smart entry & start system

The engine switch is in the "ON" position.

➤ Vehicles with a smart entry & start system

The "ENGINE START STOP" switch is in IGNITION ON mode.

Operating the moon roof after turning the "ENGINE START STOP" switch or the engine switch OFF

► Vehicles without a smart entry & start system

The moon roof can be operated for approximately 45 seconds even after the engine switch is turned to the "ACC" position or turned OFF. It cannot, however, be operated once either front door is opened.

▶ Vehicles with a smart entry & start system

The moon roof can be operated for approximately 45 seconds even after the "ENGINE START STOP" switch is turned to ACCESSORY mode or turned OFF. It cannot, however, be operated once either front door is opened.

Jam protection function

If an object is detected between the moon roof and the frame while closing or tilting down, travel is storped and the moon roof opens slightly.

■ If the moon roof cannot be closed

If the moon roof call of be closed automatically, such as when the jam protection function activates accidentally due to a malfunction, pressing and holding the switch close the moon roof.

■ To reduce wind noise

Drive with the moon roof opened to slightly before the fully open position as driving with the moon roof opened fully will cause wind noise.

Sunshade

The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.

■ Moon roof open reminder function

An alarm will sound when the driver's door is opened with the moon roof not fully closed and the "ENGINE START STOP" switch or the engine switch OFF.

Opening the moon roof

Observe the following precautions.

Failing to do so may cause death or serious injury.

- Do not allow any passengers to put their hands or heads outside the vehicle while it is moving.
- Do not sit on top of the moon roof.

Closing the moon roof

Observe the following precautions.

Failing to do so may result in death or serious injury.

- Check to make sure that all passengers do not have any part of their bodies in a position where they could be caught when the moon roof is being operated.
- Do not allow children to operate the moon roof. Closing the moon roof on someone can cause death or serious injury.

Jam protection function


- Never try jamming any part of your body to activate the jam protection function intentionally.
- The jam protection function may not work if something gets caught just before the moon roof fully closes.


Perform the following steps to open the fuel tank cap.

Before refueling the vehicle


- ▶ Vehicles without a smart entry & start system Turn the engine switch OFF and ensure that all the doors and windows are closed.
- Open the fuel iller door. ▶ Vehicles with a smart entry & start system Turn the "ENGINE START STOP" switch OFF and ensure that all the doors and windows are closed.

Opening the fuel tank cap

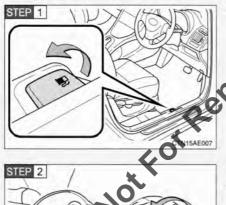

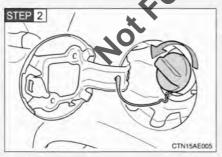


Turn the fuel tank cap slowly to open.

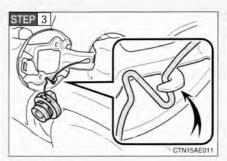

Hang the fuel tank cap on the back of the fuel filler door.

Closing the fuel tank cap

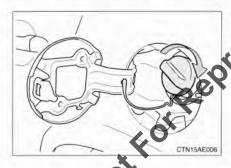

When replacing the fuel tank cap turn it until a clicking sound cheard.

After releasing your hand, the cap will turn slightly to the opposite direction.

■ Fuel types

Unleaded gasoline, Research Octane Number 91 or higher

Fuel tank capacity

Approximately 55 L (14.5 gal., 12.1 lmp. gal.)

■ Refueling the vehicle

Observe the following precautions while refueling the vehicle. Failure to do so, may result in death or serious injury.

- Touch the vehicle or some other metal surface to discharge any static electricity.
 - Sparks resulting from discharging static electricity may cause the fuel vapors to ignite.
- Always hold the grips on the fuel tank cap and turn it slowly to remove it. A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out of the filler neck and cause injury.
- Do not allow anyone that has not discharged static electricity from their bodies to come close to an open fuel tank.
- Do not inhale vaporized fuel.
 Fuel contains substances that are farmful if inhaled.
- Do not smoke while refueling the vehicle.
 Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged.

This may cause static electricity to build up, resulting in a possible ignition hazard.

■ When replacing the fuel cap

Do not use anything but a genuine Toyota fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.



A NOTICE

■ Refueling


Do not spill fuel during refueling.

Doing so may damage the vehicle, such as causing the exhaust systems to operate abnormally or damaging fuel system components or the vehicle's painted surface.

Not For Reproduction

Engine immobilizer system

The vehicle's keys have built-in transponder chips that prevent the engine from starting if the key has not been previously registered in the vehicle's on-board computer.

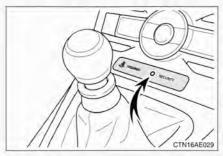

Vehicles with a smart entry & start system: The indicator light flashes after the engine switch has been turned OFF to indicate that the system is operating.

Vehicles without a smart entry
& start system: The indicator
light flashes after the key has
been removed from the
engine switch to indicate that
the system is operating.

■ Conditions that may cause the system to malfunction

- If the key is in contact with a metallic object
- If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle

⚠ NOTICE

To prevent damage to the key

Do not modify, remove or disable the engine immobilizer system. If any unauthorized changes or modifications are made, the proper operation of the system cannot be guaranteed.

Not For Reproduction

1-6. Theft deterrent system Double locking system*

Unauthorized access to the vehicle is prevented by disabling the door unlocking function from both the interior and exterior of the vehicle.



Vehicles employing this system have labels on the window glass of both front doors.

Setting the double locking system

roduction Turn the "ENGINE START STOP" Switch or the engine switch OFF, have all the passengers exit the vehicle and ensure that all the doors are closed.

Using the entry function (vehicles with a smart entry & start system): Press the lock button on the outside door handle twice within 5 seconds.

Using the wireless remote control:

Press A twice within 5 seconds.

Canceling the double locking system

Using the entry function (vehicles with a smart entry & start system): Hold the outside door handle on the driver side.

Using the wireless remote control: Press



■ Double locking system precaution

Never activate the double locking system when there are people in the vehi-

Never activate the double locking system when there are people in the cle, because all the doors cannot be opened from inside the vehicle.


The system sounds the alarm and flashes lights when forcible entry is detected.

Triggering of the alarm

The alarm is triggered in the following situations.

- A locked door is unlocked or opened in any way other than using the entry function (vehicles with a smart entry & start system) or wireless remote control door lock function (vehicles with wireless remote control). The doors will lock again automatically.
- The hood is opened while the vehicle is locke
 The battery is reconnected.

Setting the alarm system

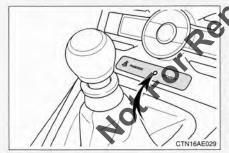

Close the doors and hood, and lock all doors using the entry function (vehicles with a smart entry & start system) or wireless remote control door lock function (vehicles with wireless remote control). The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

■ Deactivating or stopping the alarm

Unlock the doors using the entry function (vehicles with a smart entry & start system) or the wireless remote control door lock function (vehicles with wireless remote control).

Not For Reproduction

Drive in a good posture as follows:



- Sit upright and well back in the seat. (→P. 40)
- Adjust the position of the seat forward or backward to ensure the pedals can be reached and easily depressed to the extent required. (→P 40)
- Adjust the seatback so that the controls are easily operable.
- Adjust the tilt and telescopic positions of the steering wheel downward so the airbag is facing your chest. (→P. 52)
- **5** Lock the head restraint in place with the center of the head restraint closest to the top of your ears. (→P. 44)
- Wear the seat belt correctly.
 (→P. 46)

Not For Rei

■While driving

Do not adjust the position of the driver's seat while driving. Doing so could cause the driver to lose control of the vehicle.

dent. The adjustment mechanism may also be damaged.

- Do not place a cushion between the driver or passenger and the seatback. A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint, increasing the risk of death or serious injury to the driver or passenger.
- Do not place anything under the front seats except for putting them in the auxiliary box.
 Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an acci-


■ Adjusting the seat position

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid injury.

Fingers or hands may become jammed in the seat mechanism.




The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

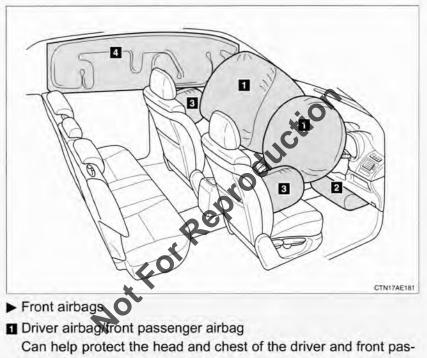

- Driver airbag/front passenger airbag Can help protect the head and chest of the driver and front passenger from impact with interior components.
- Driver's knee airbag (if equipped) Can help protect the knees of the driver.
- Side and curtain shield airbags
- Side airbags (if equipped) Can help protect the torso of the front seat occupants.
- Curtain shield airbags (if equipped) Can help protect primarily the head of outside occupants.

Airbag system components

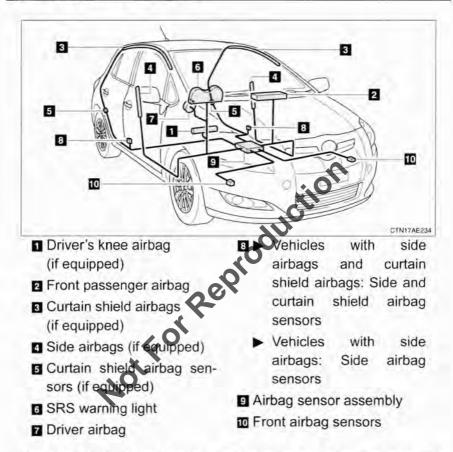

The main SRS airbag system components are shown above. The SRS airbag system is controlled by the airbag sensor assembly. The airbag sensor assembly consists of a safing sensor and an airbag sensor.

In certain types of severe frontal or side impacts, the SRS airbag system triggers the airbag inflators. A chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

If the SRS airbags deploy (inflate)

- Bruising and slight abrasions may result from contact with a deploying (inflating) SRS airbag.
- A loud noise and white powder will be emitted.
- Vehicles with curtain shield airbags: Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the front seats, and parts of the front and rear pillars and roof side rail, may be hot for several minutes. The airbag itself may also be hot.
- Vehicles without curtain shield airbags: Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the front seats may be hot for several minutes. The airbag itself may also be hot.
- The front windshield may crack.

Operating conditions (front airbags)

• The SRS front airbags will deploy if the severity of the frontal impact is above the designed threshold level comparable to an approximate 25 km/h (15 mph) collision when the vehicle impacts straight into a fixed barrier that does not move or deform.

However, this threshold velocity will be considerably higher if the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact, or in the vehicle is involved in an underride collision (e.g. a collision in which the front of the vehicle "underrides", or goes under, the bed of a truck, etc.)


It is possible that in some collisions where the forward deceleration of the vehicle is very close to the designed threshold level, the SRS front airbags and the seat belt pretensioners may not activate together.

Operating conditions (side airbags and curtain shield airbags) (if equipped)

The SRS side airbags (if equipped) and curtain shield airbags (if equipped) are designed to inflate when the passenger compartment is subjected to a severe impact from the side.

■Conditions under which the SRS airbags may deploy (inflate), other than a collision


The SRS front airbags may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.

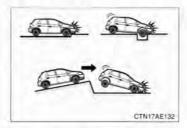

- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or vehicle falling

■ Types of collisions that may not deploy the SRS airbag (front airbags)


The SRS front airbags are generally not designed to inflate if the vehicle is involved in a side or rear collision, if it rolls ever, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.

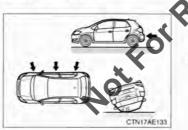

- Collision from the side
- Collision from the rear
- Vehicle rollover


■ Types of collisions that may not deploy the SRS airbag (side airbags and curtain shield airbags) (if equipped)

The SRS side airbag (if equipped) and curtain shield airbag (if equipped) system may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.

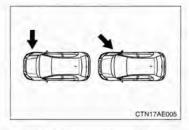

- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

The SRS side airbags (if equipped) and curtain shield airbags (if equipped) are not generally designed to inflate if the vabicle is involved in a frontal or rear collision, if it rolls over, or if it is involved in a low-speed side collision.

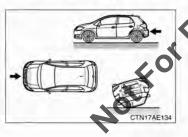


Collision from the front Collision from the rear

Vehicle rollover


■ When to contact your Toyota dealer

In the following cases, contact your Toyota dealer as soon as possible. Do not disconnect the battery cables before contacting your Toyota dealer.


Any of the SRS airbags have been inflated.

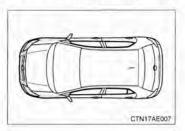


The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS airbags to inflate.

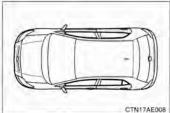

A portion of a door is damaged or deformed, of the vehicle was involved in an accident that was not severe enough to cause the SRS side airbags (if equipped) and curtain shield airbags (if equipped) to inflate.

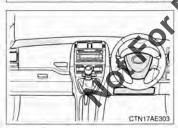

- Vehicles with a driver's knee airbag: The pad section of the steering wheel or dashboard or lower portion of the instrument panel is scratched, cracked, or otherwise damaged.
- Vehicles without a driver's knee airbag: The pad section of the steering wheel or dashboard near the front passenger airbag is scratched, cracked, or otherwise damaged.

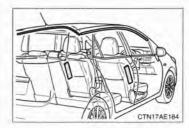

- Vehicles with side airbags: The surface of the seats with the side airbag is scratched, cracked or otherwise damaged.
- Vehicles with curtain shield airbags: The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the curtain shield airbags inside is scratched, cracked or otherwise damaged.

Not For Reproduction

■ SRS airbag precautions

Observe the following precautions regarding the airbags. Failure to do so may cause death or serious injury.

• The driver and all passengers in the vehicle must wear their seat belts properly.

The SRS airbags are supplemental devices to be used with the seat belts.

• The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag.

Since the risk zone for the driver's airbag is the first 50 \$\text{\chi}\$6 mm (2 - 3 in.) of inflation, placing yourself 250 mm (10 in.) from you driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 250 mm (10 in.) away now, you can change your driving position in several ways:


- Move your seat to the rear as far as you can while still reaching the pedals comfortably.
- Slightly recline the back of the Seat. Although vehicle designs vary, many drivers can achieve the 250 mm (10 in.) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slip cushion, or taise the seat if your vehicle has that feature.
- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

The seat should be adjusted as recommended above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.

SRS airbag precautions

- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- •Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Toyota strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are the safest for infants and children. (→P. 87)



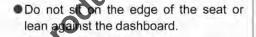



- Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.
- Do not drive the vehicle while the driver or passenger has items resting on their knees.

■SRS airbag precautions







- Vehicles with curtain shield airbags: Do not lean against the door, the roof side rail or the front, side and rear pillars.
- Vehicles without curtain shield airbags: Do not lean against the front door.
- Do not allow anyone to kneel on the passenger seat toward the door or put their head or hands outside the vehicle.

ehicles with a driver's knee airbag: Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad or lower portion of the instrument panel.

These items can become projectiles when SRS driver, front passenger and driver's knee airbags deploy.

Vehicles without a driver's knee airbag: Do not attach anything to or lean anything against areas such as the dashboard or steering wheel pad.

These items can become projectiles when SRS driver and front passenger airbags deploy.

■ SRS airbag precautions



- Vehicles with curtain shield airbags: Do not attach anything to areas such as the door, windshield glass, side door glass, front and rear pillars, roof side rail or assist grip.
- Vehicles without curtain shield airbags:
 Do not attach anything to areas such as the door, windshield dass or side door glass.



- Vehicles without a smart entry & start system and with a driver's knee airbag: Do not attach any heavy, sharp or hard objects such as keys or accessories to the key. The objects may restrict the SS driver's knee airbag inflation or be thrust into the driver's seat area by the force of the deploying airbag, thus causing a danger.
- Vehicles with a driver's knee airbag: If the vinyl cover is put on the area where the SRS driver's knee airbag will deploy, be sure to remove it.
- Do not use seat accessories which cover the parts where the SRS side airbags (if equipped) inflate as they may interfere with inflation of the airbags.
- Do not strike or apply significant levels of force to the area of the SRS airbag components shown on P. 76.
 Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.
- If breathing becomes difficult after the SRS airbag has deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.

SRS airbag precautions

- Vehicles with curtain shield airbags: If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes, are damaged or cracked, have them replaced by your Toyota dealer.
- Vehicles without curtain shield airbags: If the areas where the SRS airbags are stored, such as the steering wheel pad are damaged or cracked, have them replaced by your Toyota dealer.

■ Modification and disposal of SRS airbag system components

Do not dispose of your vehicle or perform any of the fillowing modifications without consulting your Toyota dealer.

The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags.
- Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats or seat upholstery, front, side and rear pillars or roof side rail.
- Repairs or modifications of the front fender, front bumper, or side of the occupant compartment.
- Installation of snowplows, winches, etc. to the front grille (bull bars, kangaroo bar etc.
- Modifications to the vehicle's suspension system.
- Installation of electronic devices such as mobile two-way radios or CD players.

Toyota strongly urges the use of child restraint systems.

Points to remember

Studies have shown that installing a child restraint on a rear seat is much safer than installing one to the front passenger seat.

- Choose a child restraint system appropriate to the age and size of the child.
- For installation details, follow the instructions provided with the child restraint system.
 General installation instructions are provided in this manual. (→P. 95)
- Toyota recommends that you use a child restraint system which conforms to the regulation "ECE 00.44".

Types of child restraints

Child restraint systems are classified into the following 5 groups according to the regulation "ECE No.44".

Group 0: Up to 10 kg (22 lb.) (0 - 9 months)

Group 0+: Up to 13 kg (28 lb.) (0 - 2 years)


Group I: 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)

Group II: 15 to 25 kg (34 to 55 lb.) (4 years - 7 years)

Group III: 22 to 36 kg (49 to 79 lb.) (6 years - 12 years)

In this owner's manual, the following popular 3 types of child restraint systems that can be secured with the seat belts are explained.

► Baby seat (infant seat)

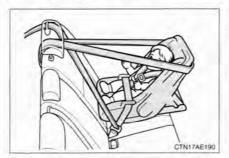

Equal to Group 0 and 0⁺ of "ECE No.44"

► Child seat (convertible seat)



Equal to Group 0+, I and II of "ECE No. 44"

▶ Junior seat (booster seat)



Equal to Group III of "ECE No.44"

Child restraint system suitability for various seating positions

Provided information in the table shows your child restraint system suitability for various seating positions.

Seating position Mass groups	Front passen- ger seat	Rear seat	
		Outside	Center
0 Up to 10 kg (22 lb.) (0 - 9 months)	X Never put	U	U
0 ⁺ Up to 13 kg (28 lb.) (0 - 2 years)	X Never put	Cilo	U
I 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)	Front facing — UF	ode	
	Rear facing Never put	U	U
II, III 15 to 36 kg (34 to 79 lb.) (4 - 12 years)	UF	u	U

Key of letters inserted in the above table:

- U: Suitable for "universal" category child restraint system approved for the use in this mass group.
- UF: Suitable for forward-facing "universal" category child restraint system approved for the use in this mass group.
- X: Not suitable seat position for children in this mass group.

The child restraint system mentioned in the table may not be available outside of the EU area.

Other child restraint systems different from the systems mentioned in the table can be used, but the suitability of the systems must be carefully checked with the child restraint system manufacturer and retailer.

Child restraint system suitability for various seating positions (with ISOFIX rigid anchor)

Provided information in the table shows your child restraint system suitability for various seating positions.

Mass groups	Size class	Fixture	Vehicle ISOFIX positions
			Rear outside
Carrycot	F	ISO/L1	X
	G	ISO/L2	.O ×
		(1)	Х
Group 0 Up to 10 kg (22 lb.)	E	ISO/R1	Х
		0	X
Group 0 ⁺ Up to 13 kg (28 lb.)	E	60/R1	X
	DO	ISO/R2	X
	4	ISO/R3	X
	60	(1)	X
Group I 9 to 18 kg (20 to 39 lb.)	D	ISO/R2	Х
	С	ISO/R3	X
	В	ISO/F2	IUF
	B1	ISO/F2X	IUF
	Α	ISO/F3	IUF
		(1)	X
Group II 15 to 25 kg (34 to 55 lb.)		(1)	X
Group III 22 to 36 kg (49 to 79 lb.)		(1)	X

(1) For the CRS which do not carry the ISO/XX size class identification (A to G), for the applicable mass group, the car manufacturer shall indicate the vehicle specific ISOFIX child restraint system(s) recommended for each position

Key letters inserted in the above table:

IUF: Suitable for ISOFIX forward-facing child restraints systems of universal category approved for use in this mass group

X: ISOFIX position not suitable for ISOFIX child restraint systems in this mass group and/or this size class.

Other child restraint systems different from the systems mentioned in the table can be used, but the suitability of the systems must be carefully checked with the child restraint system manufacturer and retailer.

When installing the child restraint system on the front passenger seat



When you have to use a child restraint system in the front passenger seat, adjust the seatback to the most upright position.

Selecting an appropriate child restraint system

Get an appropriate child restraint system for the child. The child is too large for a child restraint system, sit the child on a rear seat and use the vehicle's seat belt. (→P. 46)

Using a child restraint system

The use of a child restraint system
erly secure the infant The use of a child restraint system not suitable for the vehicle may not properly secure the infant or child, resulting in serious injury or even death.

■ Child restraint precautions

- For effective protection in automobile accidents and sudden stops, a child must be properly estrained, using a seat belt or child restraint system depending on the age and size of the child. Holding a child in your arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield, or between you and the vehicle's interior.
- Toyota strongly urges the use of a proper child restraint system that conforms to the size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Never install a rear-facing child restraint system on the front passenger seat.

In the event of an accident, the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child if the rear-facing child restraint system is installed on the front passenger seat.

■ Child restraint precautions

- A forward-facing child restraint system should be allowed to be installed on the front passenger seat only when it is unavoidable. Always move the seat as far back as possible, because the front passenger airbag could inflate with considerable speed and force. Otherwise, the child may be killed or seriously injured.
- Vehicles with side airbags and curtain shield airbags: Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front and rear pillars or roof side rail from which the side airbags or curtain shield airbags deploy even it he child is seated in the child restraint system. It is dangerous if the side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.
- Vehicles with side airbags: Do not allow the child to lean his/her head or any part of his/her body against the coor or the area of the seat from which the side airbags deploy even if the child is seated in the child restraint system. It is dangerous if the side arbags inflate, and the impact could cause death or serious injury to the child.
- Make sure you have complied with all installation instructions provided by the child restraint manufacturer and that the system is properly secured. If it is not secured properly, it may cause death or serious injury to the child in the event of a sudden stop or an accident.

Child restrain lock function belt precaution

Do not allow children to play with the child restraint lock function belt. If the belt becomes twisted around a child's neck, it will not be possible to pull the belt out leading to choking or other serious injuries that could result in death. If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

■When the child restraint system is not in use

- Keep the child restraint system properly secured on the seat even if it is not in use.
 - Do not store the restraint unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the luggage compartment. This will prevent it from injuring passengers in the event of a sudden stop or accident.

Installing child restraints

Follow the child restraint system manufacturer's instructions. Firmly secure child restraints to the rear seats using a seat belt or a ISOFIX rigid anchor. Attach the top strap when installing a child restraint.




Seat belts equipped with a child restraint locking mechanism (ALR/ELR belts on the rear seats)



ISOFIX hgid anchor (ISOFIX child (estraint system)

These exclusive fixing bars are provided for the outside rear seats. (Tags displaying the location of the anchorages are attached to the seats.)

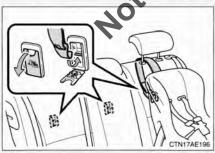


Child restraint anchor fitting


Anchor brackets are provided for the rear seats.

Installing child restraints using a seat belt (child restraint lock function belt)

Rear facing — Baby seat (infant seat)/child seat (convertible seat)

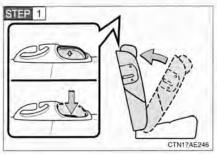

Fold the seatback while pressing the seatback angle button. Return the seatback and secure it at the first lock position. (→P. 43)

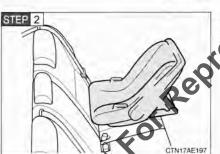

Place the child seat on the rear seal facing the rear of the vehicle.




Run the seat belt through the child seat and insert the plate into the buckle. Make sure that the belt is not twisted.




Fully extend the shoulder belt and then allow it to retract slightly in order to activate the ALR lock mode.

Lock mode allows the seat belt to retract only.

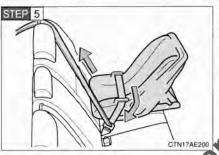


While pushing the child seat down into the rear seat, allow the shoulder belt to retract until the child seat it securely in place.


After he shoulder belt has retracted to a point where there is he slack in the belt, pull the belt to check that it cannot be extended.

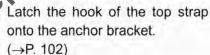


Make sure the seat belt is tightly secured, and that there is no slack in the belt.

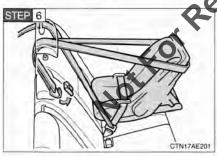

Pass the strap between the head restraint supports.

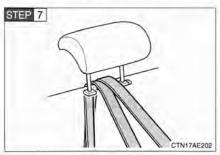

■ Forward facing — Child seat (convertible seat)

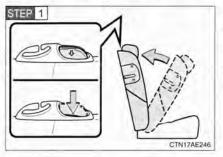


Fold the seatback while pressing angle the seatback button. Return the seatback and secure it at the first lock position.


(→P. 43)



Place the child seat on the seat

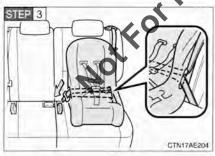


Run the seat belt through the child seat and insert the plate into the buckle. Make sure that the belt is not twisted.

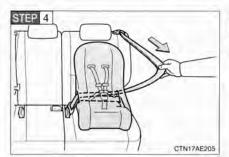


Fully extend the shoulder strap and then allow it to retract slightly into the ALR lock mode.

Lock mode allows the seat belt to retract only.

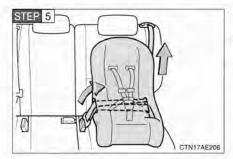



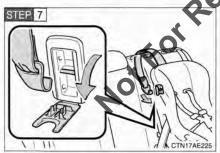



While pushing the child seat into the rear seat, allow the shoulder belt to retract until the child seat is securely in place.

After the shoulder belt has retracted to a point where there is no slack in the belt, pull the belt to check that it cannot be extended.

Remove the head restraint.


Latch the hook of the top strap onto the anchor bracket.

(→P. 102)

Make sure the seat belt is tightly secured, and that there is not slack in the belt.

Replace the head restraint.

Junior seat (booster seat)

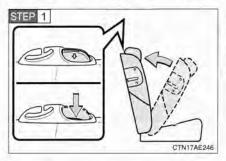

Fold the seatback while pressing the seatback angle button. Return the seatback and secure it at the first lock position.



Place the junior seat (booster seat) on the seat facing the front of the vehicle.




Sit the child in the junior seat (booster seat). Fit the seat belt to the junior seat (booster seat) according to the manufacturer's instructions and insert the plate into the buckle. Make sure that the belt is not twisted.

Check that the shoulder belt is correctly positioned over the child's shoulder, and that the lap belt is as low as possible.


(→P. 46)

Removing a child restraint installed with a seat belt

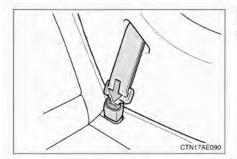

Push the buckle release button and fully retract the seat belt.

Installation with ISOFIX rigid anchor (ISOFIX child restraint system)

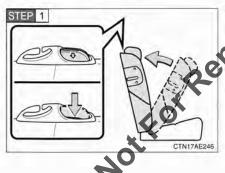

Fold the seatback while pressing the seatback angle button. Return the seatback and secure it at the first lock position.

(→P. 43)



Check the positions of the exclusive fixing bars, and install the child restraint system to the seat.

The bars are installed in the clearance between the seat cushion and seatback.


If the child restraint has a top strap, the top strap should be latched onto the anchorages.

TN17AE209 COLUCTION

Child restraint systems with alop strap



Secure the child restraint using a seat belt or ISOFIX rigid anchors, and remove the head restraint.

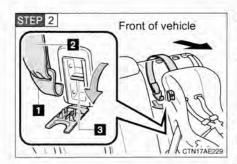

Open the anchor bracket cover. latch the hook onto the anchor bracket and tighten the top strap.

Make sure the top strap is securely latched.

- Hook
- 2 Top strap
- Anchor bracket

Replace the head restraint.



■ When installing a child restraint system in the front passenger's seat

You need a locking clip to install the child restraint system in the front seat. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from your Toyota dealer.

Locking clip for child restraint system (Part No. 73119-22010)



■ When installing a junior (booster) seat

Do not fully extend the shoulder belt to prevent the belt from going to ALR lock mode: (→P. 48)

ALR mode causes the belt to tighten only which could cause injury or discomfort to the child.

When installing a child restraint system

Follow the directions given in the child restraint system installation manual and fix the child restraint system securely in place.

If the child restraint system is not correctly fixed in place, the child or other passengers may be seriously injured or even killed to the event of sudden braking or an accident.





- s seat interferes with the estraint system and prevents it from being attached correctly, attach the child restraint system to the lefthand rear seat.
- Adjust the front passenger seat so that it does not interfere with the child restraint system.
- Only put a forward-facing child seat on the front seat when unavoidable. When installing a forward-facing or junior (booster) child seat on the front passenger seat, move the seat as far back as possible. Failing to do so may result in death or serious injury if the airbags deploy (inflate).

■When installing a child restraint system





Extreme Hazard! Do not use a rearward facing child restraint on a seat protected by an airbag in front of it! This is because the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child.

There is a sticker on the passenger side of the instrument panel and a label on the driver side sun visor, indicating it is forbidden to attach a rearward facing child restraint to the front passenger seat.

Details of the label on the driver side Syn visor are shown in the illustration below.

A WARNING AVERTISSEMENT WARNUNG AVVISO ADVERTENCIA WAARSCHUWING

G DO NOT blace a rear facing child seat on the front seat unless the passenger

B airmag s leactivated. DEATH OR SERIOUS INJURY can occur. See owner's manual

NE JAMAIS placer un siège enfant positionne dos a la route sur le siège avant.

F sau si l'airbag passager est désactivé. Risque de MORT OU BLESSURE GRAVE. Voir le manuel du propriétaire.



KEINEN rückwärtsgerichteten Kindersitz auf dem Vordersitz verwenden, außer der Beifahrer-Airbag ist deaktiviert. TOD ODER SCHWERE VERLETZUNGEN können die Folge sein. Siehe Betriebsanleitung.

NON posizionare il seggiolino per bambini rivolto in senso opposto a quello di marcia i sul sedile anteriore se l'airbag del passeggero non e'stato disattivato. Rischio di MORTE O LESIONI GRAVI. Consultare il manuale di uso e manutenzione.

NO coloque una silla para niños en sentido contrario al de la marcha del vehiculo en el asiento del acompañante, excepto si el airbag del pasajero estuviera desactivado. Riesgo de MUERTE O HERIDAS GRAVES. Consulte el manual del propietario.

GEEN tegen de rijrichting in geplaatst kinderzitje op de voorstoel plaatsen, I tenzij de passagiersairbag gedeactiveerd is DOOD OF ZWARE VERWONDINGEN kunnen het gevolg zijn. Zie instruktieboekje.

• If child restraint system regulations exist in the country where you reside, please contact your Toyota dealer for the child restraint system installation.

■When installing a child restraint system

- When a junior (booster) seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder. Failing to do so may result in death or serious injury in the event of an accident or sudden braking.
- Ensure that the belt and tab are securely locked and the seat belt is not. twisted.
- Push and pull the child seat in different directions to be sure it is secure.
- Follow all installation instructions provided by the child restraint system manufacturer.

■ To correctly attach a child restraint system to the anchorages

When using the lower anchorages, be sure that there are no foreign objects around the anchorages and that the seat belt is not caught behind the child restraint. Make sure the child restraint system is securely attached, or it may cause death or serious injury to the child in the event of a sudden stop or accident.

Using child restraint anchorages

WARNING: child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses or for attaching other items or equipment to the vehicle.

When driving

2-1.	Driving procedures		2-3.	Operating the lights and	
	Driving the vehicle	108		wipers	
	Engine (ignition) switch			Headlight switch	
	(vehicles with a smart			Fog light switch	158
	entry & start system) Engine (ignition) switch	118	, Q ^C	Windshield wipers and	
				washer	159
	(vehicles without a smart entry & start system)	123		Rear window wiper and washer	164
	Automatic	100		Headlight cleaner	
	Transmission			switch	165
	Manual Transmission				
	Turn signal lever Parking brake		2-4.	Using other driving systems	
	Horn	132		Cruise control	166
				Driving assist systems	170
2-2.	Instrument cluster				
	Gauges and meters	133	2-5.	Driving information	
	Indicators and warning	400		Cargo and luggage	175
	lights	138		Winter driving tips	176
	Multi-information display (vehicles with Optitron	142		Trailer towing	179
	type meters)	142			
	Multi-information display (vehicles with non-Optitro				
	type meters)	151			

2-1. Driving procedures

Driving the vehicle

The following procedures should be observed to ensure safe driving.

■ Starting the engine

→P. 118, 123

Driving

▶ Automatic transmission

STEP 1 With the brake pedal depressed, shift the shift lever to D.

(→P. 126)

STEP 2 Release the parking brake.

(→P. 131)

Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

► Manual transmission

With the clutch pedal fully depressed, shift the shift lever to 1. (→P. 128)

STEP 2 Release the parking brake.

(→P. 131)

Gradually release the clutch pedal. At the same time, gently depress the accelerator pedal to accelerate the vehicle.

■ Stopping

► Automatic transmission

STEP 1 With the shift lever in D, depress the brake pedal.

STEP 2 If necessary, set the parking brake.

When the vehicle is stopped for an extended period of time, shift the shift lever to P or N. (→P. 126)

▶ Manual transmission

STEP 1 With the clutch pedal fully depressed, depress the brake pedal.

STEP 2 If necessary, set the parking brake.

When the vehicle is stopped for an extended period of time, shift the shift lever to N. $(\rightarrow P. 128)$

■ Parking the vehicle

- ► Automatic transmission
- STEP 1 With the shift lever in D, depress the brake pedal.

STEP 2 Set the parking brake.

(→P. 131)

STEP 3 Shift the shift lever to P.

(→P. 126)

When parking on a hill, if necessary, block the wheels.

- STEP 4 Turn the "ENGINE START STOP" switch or the engine switch OFF to stop the engine.
- STEP 5 Lock the door, making sure that you have the key on your person.

▶ Manual transmission

With the clutch pedal fully depressed, depress the brake pedal.

STEP 2 Set the parking brake.

(→P. 131)

STEP 3 Shift the shift lever to N

(→P. 128)

When parking on a hill, shift the shift lever to 1 or R. If necessary, block the wheels.

- STEP 4 Turn the "ENCINE START STOP" switch or the engine switch OFF to stop the engine.
- STEP 5 Lock the door, making sure that you have the key on your person.

Starting on a steep uphill

▶ Automatic transmission

- STEP 1 Firmly set the parking brake and shift the shift lever to D.
- STEP 2 Gently depress the accelerator pedal.
- STEP 3 Release the parking brake.

► Manual transmission

- STEP 1 With the parking brake firmly set and the clutch pedal fully depressed, shift the shift lever to 1.
- STEP 2 Lightly depress the accelerator pedal at the same time as gradually releasing the clutch pedal.
- STEP 3 Release the parking brake.

■ Driving in the rain

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

Breaking in your new Toyota

To extend the life of the vehicle the following precautions are recommended to observe:

- For the first 300 km (186 piles): Avoid sudden stops.
- For the first 800 (n) (500 miles): Do not tow a trailer.
- For the first 1000 km (621 miles):
 - · Do not drive at extremely high speeds.
 - · Avoid sudden acceleration.
 - . Do not drive continuously in the low gears.
 - · Do not drive at a constant speed for extended periods.

Operating your vehicle in a foreign country

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. $(\rightarrow P. 360)$

■When starting the vehicle (vehicles with an automatic transmission)

Always keep your foot on the brake pedal while stopped with the engine running. This prevents the vehicle from creeping.

■ When driving the vehicle

- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.
 - Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident that could result in death or serious injury.
 - When backing up, you may twist your body around leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
 - Make sure to keep a correct driving postule even when moving the vehicle only slightly, allowing you to depress the brake and accelerator pedals properly.
 - Depress the brake pedal using you right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.
- Do not drive the vehicle over or stop the vehicle near flammable materials.
 The exhaust system and exhaust gases can be extremely hot. This may cause a fire if there is any flammable material nearby.
- Vehicles with an automatic transmission: Do not let the vehicle roll backwards while the shift lever is in a driving position, or roll forward while the shift lever is in R.
 - Doing so may cause the engine to stall or lead to poor brake and steering performance, resulting in an accident or damage to the vehicle.
- If the smell of exhaust is noticed inside the vehicle, open the windows and check that the trunk is closed. Large amounts of exhaust in the vehicle can cause driver drowsiness and an accident, resulting in death or a serious health hazard. Have the vehicle inspected by your Toyota dealer immediately.

- Do not under any circumstances shift the shift lever to P, R or N (vehicles with an automatic transmission) or R (vehicles with a manual transmission) while the vehicle is moving.
 - Doing so can cause significant damage to the transmission system and may result in a loss of vehicle control.
- Do not shift the shift lever to N while the vehicle is moving.
 Doing so may cause the engine brake to not operate properly and lead to an accident.
- Do not turn the engine off while driving.
 The power steering and brake booster systems will not operate properly if the engine is not running.
- Use engine braking (downshift) to maintain a safe speed when driving down a steep hill.
 Using the brakes continuously may cause the brakes to overheat and lose

effectiveness. (→P. 127)

- When stopped on an inclined surface, use the brake pedal and parking brake to prevent the vehicle from rolling backward or forward and causing an accident.
- Do not adjust the display the position of the steering wheel, the seat, or the inside or outside rear view mirrors while driving.
 Doing so may result in a loss of vehicle control that can cause accidents that may result in death or serious injury.
- Always check that all passengers' arms, heads or other parts of their bodies are not outside the vehicle, as this may result in death or serious injury.

■When driving on slippery road surfaces

- Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle, resulting in an accident.
- Sudden changes in engine speed, such as engine braking caused by upshifting or down-shifting, may cause the vehicle to skid, resulting in an accident.
- After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be a fected, resulting in an accident.

■ When shifting the shift lever (vehicles with an automatic transmission)

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

■ When the vehicle is stopped

- Do not race the engine.
 If the vehicle is in any gear other than P (vehicles with an automatic transmission) or N, the vehicle may accelerate suddenly and unexpectedly, and may cause an accident.
- Do not leave the vehicle with the engine running for a long time.
 If such a situation cannot be avoided, park the vehicle in an open space and check that exhaust fumes do not enter the vehicle interior.
- Vehicles with an automatic transmission: Always keep a foot on the brake pedal while the engine is running to prevent an accident caused by the vehicle moving.

■ When the vehicle is parked

 Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.

Doing so may result in the following.

- Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
- The temperature inside the vehicle may cause the plastic lenses and plastic material of eye glasses to deform or crack.
- Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.
- Always apply the parking brake, shift the shift lever to P (vehicles with an automatic transmission), stop the engine and lock the vehicle.
 Do not leave the vehicle unattended while the engine is running.
- Do not touch the exhaust pipe while the engine is running or immediately after turning the engine OFF.
 Doing so may cause burns.
- Do not leave the engine running in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the engine is running, exhaust gases may collect and enter the vehicle. This may lead to death or a serious health hazard.

■ Exhaust gases

Exhaust gases include harmful carbon monoxide (CO) that is colorless and odorless. Inhaling exhaust gases may lead to death or a serious health hazard.

- If the vehicle is in a poorly ventilated area, stop the engine. In a closed area, such as a garage, exhaust gases may collect and enter the vehicle. This may lead to death or a serious health hazard.
- The exhaust should be checked occasionally. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by your Toyota dealer. Failure to do so may allow exhaust gases to enter the vehicle, resulting in death or a serious health hazard.

■ When taking a nap in the vehicle

Always turn the engine off. Otherwise, you may accidentally move the shift lever or depress the accelerator pedal, which could cause an accident or fire due to engine overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

■When braking the vehicle

- When the brakes are wet, drive more cautiously. Braking distance increases when the brakes are wet, and may cause one side of the vehicle to brake differently than the other side. Also the parking brake may not securely hold the vehicle.
- If the power brake assist function does not operate, do not follow other vehicles closely and avoid downhills or sharp turns that require braking. In this case, braking is still possible, but will require more force on the pedal than usual. Braking distance may also increase.
- Do not pump the brake pedal if the engine stalls.
 Each push on the brake pedal uses up the reserve for the power-assisted brakes.
- The brake system consists of 2 individual hydraulic systems: If one of the systems fails, the other will still operate. In this case, the brake pedal should be depressed more firmly than usual and braking distance becomes longer.
 - Do not drive your vehicle with only a single brake system. Have your brakes fixed immediately.

If you hear a squealing or scraping noise (brake pad wear limit indicators)

Have the brake pads checked and replaced by your Toyota dealer as soon as possible.

The rotor damage can result if the pads are not replaced when needed.

It is dangerous to drive the vehicle when the wear limits of the brake pads and/or that of the brake discs are exceeded.

1

NOTICE

When driving the vehicle

- ► Vehicles with a manual transmission
- Do not rest your foot on the clutch pedal while driving. Doing so may cause clutch trouble.
- Do not use any gears other than the first gear when starting off and moving forward.
 - Doing so may damage the clutch.
- Do not use the clutch to hold the vehicle when stopping on an uphill grade. Doing so may damage the clutch.
- ▶ Vehicles with an automatic transmission

Do not use the accelerator pedal or depress accelerator and brake pedals together to hold the vehicle on a hill.

When parking the vehicle

Vehicles with an automatic transmission: Always put the shift lever in P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

Avoiding damage to vehicle parts

- Do not turn the steering wheel fully in either direction and hold it there for a long time.
 - Doing so may damage the power steering motor.
- When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.



NOTICE

If you get a flat tire while driving

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually press the brake pedal to slow down the vehicle.

- It may be difficult to control your vehicle.
- The vehicle will make abnormal sounds.
- The vehicle will behave abnormally.

Replace a flat tire with a new one. (→P. 334)

When encountering flooded roads

Do not drive on a road that has flooded after heavy tan etc. Doing so may cause the following serious damage to the vehicle

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a fleoted road and the vehicle is flooded, be sure to have your Toyota dealer check the following.

- Brake function
- Changes in quantity and quality of engine oil, transaxle fluid, etc.
- Lubricant condition for the bearings and suspension joints (where possible) and the function of all joints, bearings, etc.

Engine (ignition) switch (vehicles with a smart entry & start system)

Performing the following operations when carrying the electronic key on your person starts the engine or changes "ENGINE START STOP" switch modes.

Starting the engine


➤ Automatic transmission

STEP 1 Check that the parking brake is set.

STEP 2 Check that the shift lever is set in P.

STEP 3 Sit in the driver's seat and firmly depress the brake pedal.

The "ENGINE START STOP" switch indicator turns green. If the indicator does not turn green, the engine cannot be started.

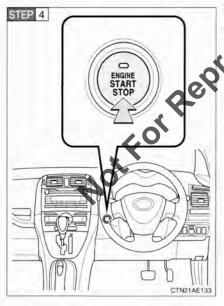

Press the "ENGINE START STOP switch.

The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the brake pedal until the engine is completely started.

The engine can be started from any mode.


▶ Manual transmission

STEP 1 Check that the parking brake is set.

STEP 2 Check that the shift lever is set in N.

STEP 3 Firmly depress the clutch pedal.

The "ENGINE START STOP" switch indicator turns green. If the indicator does not turn green, the engine cannot be started.

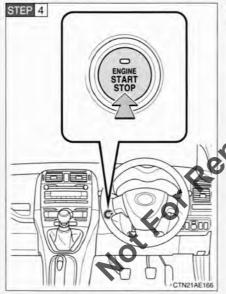

Press the "ENGINE START STOP" switch.


The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the clutch pedal until the engine is completely started.

The engine can be started from any mode.

■ Changing "ENGINE START STOP" switch mode

Modes can be changed by pressing the "ENGINE START STOP" switch with the brake pedal (vehicles with an automatic transmission) or clutch pedal (vehicles with a manual transmission) released. (The mode changes each time the switch is pressed.)

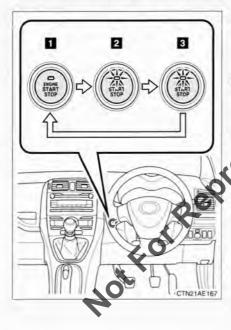

OFF*

Emergency flashers can be used.

2 ACCESSORY mode

Some electrical components such as the audio system can be used.

The "ENGINE START STOP" switch indicator turns amber.


IGNITION ON mode

All electrical components can be used.

The "ENGINE START STOP" switch indicator turns amber.

*: Vehicles with an automatic transmission: The engine cannot be switched to OFF unless the shift lever is in P.

■ Steering lock release

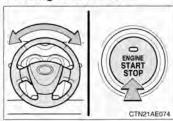

Make sure that the steering wheel lock is released.

To release the steering wheel lock, gently turn the wheel left or right while pressing the "ENGINE START STOP" switch.

When the steering wheel lock does not release, the "ENGINE START STOP" switch indicator will flash green.

If the engine does not start

The engine immobilizer system may not have been treactivated. (→P. 67)

- When the "ENGINE START STOP" switch indicator flashes in amber

 The system may be malfunctioning. Have the vehicle inspected by your Toyota dealer immediately.
- Auto power off function

 The "ENGINE START STOP" switch will automatically turn OFF when left in ACCESSORY mode for 1 hour or more.
- Key battery depletion

→P. 28

When the electronic key battery is discharged

→P. 282

■ Conditions affecting operation

→P. 27

■ Note for the entry function

→P. 28

When starting the engine

Always start the engine while sitting in the driver's seat. Do not depress the accelerator pedal while starting the engine under any circumstances. Doing so may cause an accident resulting in death or serious injury.

Stopping the engine in an emergency

If you want to stop the engine in an emergency while driving the vehicle, bush and hold the "ENGINE START STOP" switch for more than 3 seconds. However, do not touch the "ENGINE START STOP" switch while driving except in an emergency. If the engine stops while the vehicle is being driven, roductió this could lead to an unexpected accident.

NOTICE

To prevent battery discharge

Do not leave the "ENGINE STARD STOP" switch in ACCESSORY or IGNI-TION ON mode for long periods without the engine running.


- When starting the engine
 - Do not race a cold engine.
 - If the engine becomes difficult to start or stalls frequently, have the engine checked immediately.

Engine (ignition) switch (vehicles without a smart entry & start system)

Starting the engine

- ► Automatic transmission
- STEP 1 Check that the parking brake is set.
- STEP 2 Check that the shift lever is set in P.
- STEP 3 Sit in the driver's seat and firmly depress the brake pedal.
- STEP 4 Turn the engine switch to the "START" position and start the engine.
- ▶ Manual transmission
- STEP 1 Check that the parking brake is set.
- STEP 2 Check that the shift lever is set in N.
- STEP 3 Firmly depress the clutch pedal.
- Turn the engine switch to the "START" position and start the engine.

■ Engine (ignition) switch

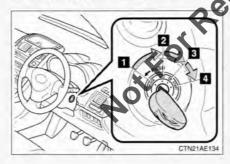

1 "LOCK"

The steering wheel is locked and the key can be removed. (Vehicles with an automatic transmission: The key can be removed only when the shift lever is in "P".)

2 "ACC"

Some electrical components such as the audio system can be used.


3 "ON"

All electrical components can be used.

4 "START"

For starting the engine.

■ Turning the key from "ACC" to "LOCK"

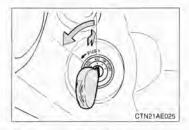

STEP 1 Shift the shift lever to P (automatic transmission) or N (manual transmission).

(→P. 126, 128)

STEP 2 Push in the key and turn to the "LOCK" position.

Steering lock release



When starting the engine, the engine switch may seem stuck in the "LOCK" position. To free it, turn the key while turning the steering wheel slightly in either direction

If the engine does not start

The engine immobilizer seem may not have been deactivated. (→P. 67)

Key reminder function

A buzzer sounds the driver's door is opened, while the engine switch is in "LOCK" or "ACC" position to remind you to remove the key.

A CAUTION

When starting the engine

Always start the engine while sitting in the driver's seat. Do not press the accelerator while starting the engine under any circumstances.

Doing so may cause an accident resulting in death or serious injury.

Caution when driving

Do not turn the engine switch to the "LOCK" position while driving. If, in an emergency, you must turn the engine OFF while the vehicle is moving, turn the engine switch only to the "ACC" position.

NOTICE

■ To prevent battery discharge


Do not leave the key in the "ACC" or "ON" position for a long periods if the engine is not running.

When starting the engine

- Do not crank for more than 30 seconds at a time. This may overheat the starter and wiring systems.
- Do not race a cold engine.
- Not For Reproduction If the engine becomes difficult to start or stalls frequently have the engine checked immediately.

Select a shift position appropriate for the driving conditions.

Shifting the shift lever

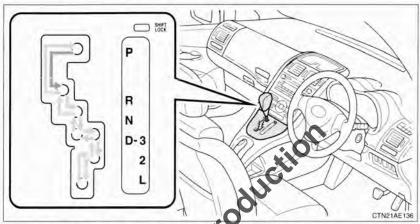

- ▶ Vehicles with a smart entry & start system While the "ENGINE START STOP" switch is in IGNITION ON mode, depress the brake pedal and move the shift lever.
 - ► Vehicles without a smart entry & start system

 While the engine switch is in the "ON" position, depress the brake pedal and move the shift lever.

Shift position uses

Shift position	Function	
P	Parking the vehicle or starting the engine	
R	Reversing	
N	Neutral	
D	Normal driving*	
3	Position for engine braking	
2	Position for more powerful engine braking	
L	Position for maximum engine braking	

To improve fuel consumption and reduce noises, set the shift lever in Reprodi the D position for normal driving.

■ Downshifting restrictions

The shift lever cannot be downshifted if the following speeds are exceeded.

km/h (mph)

Downshifting	Maximum speed
3 7 2	92 (57)
$2 \rightarrow L$	45 (27)

Reverse warning buzzer

When shifting into R, a buzzer will sound to inform the driver that the shift lever is in R.

■ When driving with the cruise control system (if equipped)


The engine brake will not operate when downshifting from D to 3. (→P. 166)


If the shift lever cannot be shifted from P

→P. 342

Manual Transmission*

Shifting the shift lever

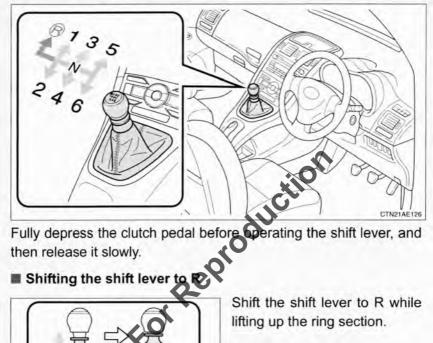

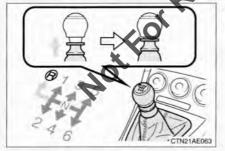

■ Maximum allowable speeds

Observe the following maximum allowable speeds in each gear when maximum acceleration is necessary.

km/h (mph)

Shift position	Maximum speed
1	45 (27)
2	84 (52)
3	123 (76)
4	123 (76) 160 (103) 197 (122)
5	(197 (122)

A NOTICE


■ To prevent damage to the transmission



Do not shift the shift lever to R without depressing the clutch pedal.

- Do not lift up the ring section except when shifting the lever to R.
- Shift the shift lever to R only when the vehicle is stationary and the clutch pedal is fully depressed.

Turn signal lever

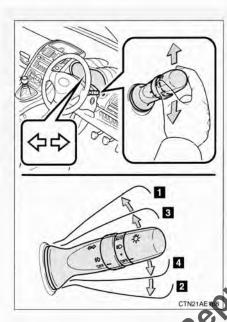

- Left turn
- Right turn
- Move and hold the lever partway to signal a lane change.

The left hand signal will flash until you release the lever.

Move and hold the lever partway to signal a lane change.


The right hand signal will flash until you release the lever.

Turn signals can be operated when

- ► Vehicles without a smart entry & start system The engine switch is in the "ON" position.
- ► Vehicles with a smart entry & start system
 The "ENGINE START STOP" switch is in IGNITION ON mode.

If the indicators flash faster than usual

Check that a light bulb in the front or rear turn signal lights has not burned out.

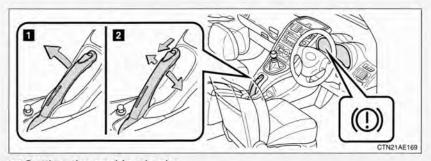

- Setting the parking brake Fully set the parking brake while depressing the brake pedal.
- 2 Releasing the parking brake Slightly raise the lever and then lower it completely while pressing the Reprod button.


NOTICE

■ Before driving

Fully release the parking brake.

Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear.

Horn

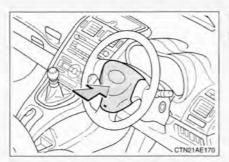

To sound the horn, press on or close to the key mark.

■ After adjusting the steering wheel

Make sure that the steering wheel is securely locked.


The horn may not sound if the steering wheel is \(\rightarrow P. 52 \) Make sure that the steering wheel is securely locked.

The horn may not sound if the steering wheel is not securely locked.

(→P. 52)

132

■ Optitron type meters

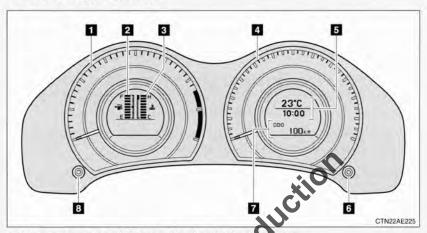

► Vehicles without a smart entry & start system

The following gauges, meters and displays illuminate when the engine switch is in the "ON" position.

▶ Vehicles with a smart entry & start system

The following gauges meters and displays illuminate when the "ENGINE START STOR" switch is in IGNITION ON mode.

- Tachometer

 Displays the engine speed in revolutions per minute.
- Fuel gauge Displays the quantity of fuel remaining in the tank.
- Engine coolant temperature gauge Displays the engine coolant temperature.
- Speedometer Displays the vehicle speed.
- Multi-information display

→P. 142

- 6 Odometer/trip meter display change button →P. 136
- 7 Odometer, trip meter and instrument panel light control display Odometer: Displays the total distance the vehicle has been driven.


Trip meter: Displays the distance the vehicle has been driven since the meter was last reset. Trip meters A and B can be used to record and display different distances independently.

Not For Reproduction Instrument panel light control display: Displays the brightness of the instrument panel lights when the headlight switch is on.

8 "DISP" button

Switches the multi-information display.

■ Non-Optitron type meters

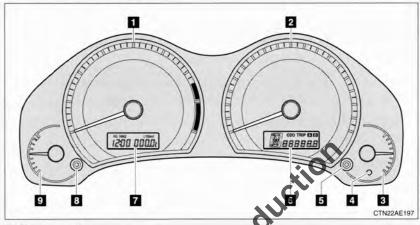

1 Tachometer

Displays the engine speed in revolutions per minute.

Speedometer

Displays the vehicle speed.

2 Speedometer

3 Fuel gauge

Displays the quantity of fuel remaining in the tank.

4 Low fuel level warning light

→P. 322

5 Odometer/trip meter display change button

→P. 136

6 Odometer, trip meter and instrument panel light control display Odometer: Displays the total distance the vehicle has been driven.

Trip meter: Displays the distance the vehicle has been driven since the meter was last reset. Trip meters A and B can be used to record and display different distances independently.

Instrument panel light control display: Displays the brightness of the instrument panel lights when the headlight switch is on.

- Multi-information display
 - →P. 151
- B "DISP" button

9 Engine coolant temperature gauge


Switching the display

Displays the engine coolant temperature.

itching the display


ssing this button Pressing this button, switches between odometer, trip meter and instrument panel light control displays.

Vehicles with Optitron type meters

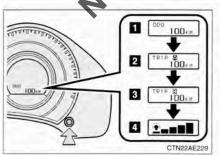

- Odometer
- 2 Trip meter A*1
- 3 Trip meter B*1
- 4 Instrument panel light control display*2
 - 1: Pushing and holding the button will reset the trip meter.
 - *2: Pushing and holding the button will adjust brightness of the instrument panel lights when the headlight switch is on.

▶ Vehicles with non-Optitron type meters

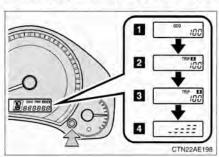

- Odometer
- 2 Trip meter A*1
- 3 Trip meter B*1
- Instrument panel light control display*2
 - *1: Pushing and holding the button will reset the trip meter.
- *2: Pushing and holding the button will adjust brightness of the instrument panel lights when the headlight switch is

A NOTICE


- To prevent damage to the engine and its components
- Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.
 - The engine may be exemeating if the temperature gauge is in the red zone (H). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P. 351)

Indicators and warning lights


The indicator and warning lights on the instrument cluster and center panel inform the driver of the status of the vehicle's various systems.

Instrument cluster


➤ Vehicles with Optitron type meters

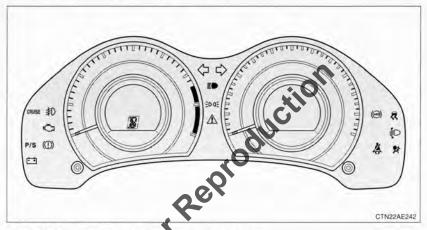

► Vehicles with non-Option type meters

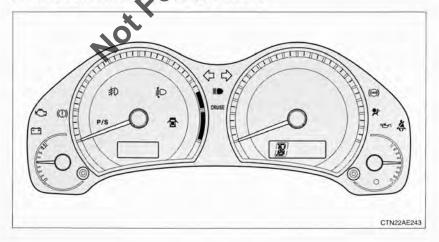

■ Center panel

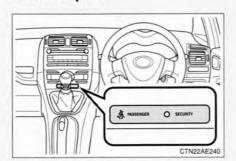

Not For Reproduction

Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.



Turn signal indicator (→P. 130)



Tail light indicator (→P. 154)



Headlight high beam indicator (→P. 155)



Front fog light indicator (→P. 158)



Slip indicator (→P. 170)

O SECURITY

Engine immobilizer/ alam system indicator P. 67, 71)



Shift position indicator (→P. 126)



Cruise control indicator (→P. 166)

(Vehicles with an automatic transmission)

*: > Vehicles without a smart entry & start system

These lights turn on when the engine switch is turned to the "ON" position to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by your Toyota dealer for details.

▶ Vehicles with a smart entry & start system

These lights turn on when the "ENGINE START STOP" switch is turned to IGNITION ON mode to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by your Toyota dealer for details.

Warning lights

Warning lights inform the driver of malfunctions in any of the vehicle's systems. (\rightarrow P. 320)



*: > Vehicles without a smart entry & start system

These lights turn on when the engine switch is turned to the "ON" position to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if a fight does not come on, or if the lights do not turn off. Have the behicle inspected by your Toyota dealer for details.

▶ Vehicles with a smart entry & start system

These lights turn on when the "ENGINE START STOP" switch is turned to IGNITION ON mode to indicate that a system check is being performed. They will turn off after the engine is started, or after a few seconds. There may be a malfunction in a system if a light does not come on, or if the lights do not turn off. Have the vehicle inspected by your Toyota dealer for details.

A CAUTION

■If a safety system warning light does not come on

Should a safety system light such as the ABS and SRS airbag warning light not come on when you start the engine, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by your Toyota dealer immediately if this occurs.

Multi-information display (vehicles with Optitron type meters)

The multi-information display presents the driver with a variety of driving-related data, including the current outside temperature, clock and data.



 Outside temperature display (→P. 143)

Indicates the outside air temperature.

- Clock (→P. 143, 145)
 Indicates the time and sets the clock.
- Date (→P. 143, 146)

Indicates the date.

Setting the date.


- Trip information (→P. 143)
 Displays driving range, fuel consumption and other cruis-
- Warning messages

ing-related information.

(→P. 324)

Automatically displayed when a malfunction occurs in one of the vehicle's system.

Switching the display

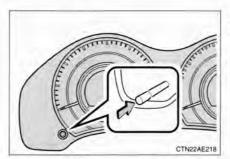

Display items can be switched by pressing the "DISP" button.

Outside temperature and clock



Displays the outside air temperature and clock.

The temperature range that can be displayed is from -30°C (-22°F) to 50°C (122°F).

Outside temperature and dat



Displays the outside air temperature and date.

Instantaneous fuel consumption



Displays instantaneous fuel consumption.

Average fuel consumption



Displays the average fuel consumption since the function was reset.

The function can be reset by pressing the "DISP" button for longer than one second when the average fuel consumption is displayed.

Driving range



Displays the estimated maximum distance that can be driven with the quantity fuel remaining.

- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated.
- Average vehicle speed



Displays the average vehicle speed since the engine was started or since the function was leset.

The function can be reset by pressing the "DISP" button for longer than one second when the average vehicle speed is displayed.

Elapsed time




Displays the elapsed time since the engine was started or since the function was reset.

The function can be reset by pressing the "DISP" button for longer than one second when the elapsed time is displayed.

Setting up display

■ Before setting

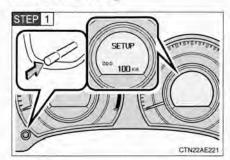

Display the set up screen on the multi-information display when the vehicle is stopped.

Press and hold the "DISP" button to enter the adjustment mode.



Select the desired item on the menu screen.

Press and hold the "DISP" button to enter the adjustment mode.

Setting the clock.

STEP 1 Select "CLOCK" on the menu screen. (→P. 145)



Press the "DISP" button to adjust the hours.

After adjusting the hours, wait 5 seconds to allow the hours to be automatically input.



Press the "DISP" button to adjust the minutes.

After adjusting the minutes, wait 5 seconds to allow the minutes to be automatically input.

Setting the date

STEP 1 Select "DATE" on the menu screen. (→P. 145)



Press the "DSP" button to select the year

After selecting the year, wait 5 seconds to allow the year to be automatically input.



Press the "DISP" button to select the month.

After selecting the month, wait 5 seconds to allow the month to be automatically input.



Press the "DISP" button to select the day.

After selecting the day, wait 5 seconds to allow the day to be automatically input.

■ Selecting the units

STEP 1 Select "UNITS" on the menu screen. (→P. 146)



Select the desired item on the unit screen

Press and hold the "DISP" button to input the choice.

STEP 3 Select the desired item.

Distance units



Select the desired distance unit.

Press and hold the "DISP" button to input the choice.

► Consumption units



Select the desired consumption unit.

Press and hold the "DISP" button to input the choice.

▶ Date form



Select the desired date form.

Press and hold the "DISP" button to input the choice.

■ Selecting the language

STEP 1 Select "LANGUAGE" on the menu screen. (→P. 145)



Select the desired language.

Press and hold the "DISP" button to input the choice.

Returning to the previous screen

Select "BACK" on the menu screen.

Press and hold the "DISP" button to input the choice.

System check display (if equipped)

Vehicles without a smart entry & start system

After turning the engine switch to the "ON" position, system operation is checked. When the system check is complete, VSC is displayed before returning to the normal screen.

 Vehicles with a smart entry & start system After turning the "ENGINE START STOP" switch GNITION ON mode. system operation is checked. When the system check is complete, is displayed before returning to the normal screen.

When disconnecting and reconnecting the battery terminals

The following information data will be

- Average fuel consumption
 Driving range
- Average vehicle
- Elapsed time

Outside temperature display

In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.

- When stopped, or driving at low speeds (less than 25 km/h [16 mph])
- When the outside temperature has changed suddenly (at the entrance/ exit of a garage, tunnel, etc.)




NOTICE

■ The multi-information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

Not For Reproduction

The multi-information display presents the driver with a variety of driving-related data, including the current outside air temperature and clock.

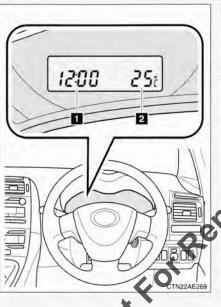


- Clock (→P. 151, 153)
 Indicates the time and sets the clock.
- Trip information and outside temperature display

Trip information Displays driving range tuel consumption and other cruising-related information.

Outside temperature display: indicates the outside air temperature.

Switching the display

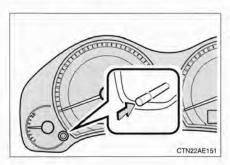

Display items can be switched by pressing the "DISP" button.

Outside temperature

12:00 25t

Displays the outside air temperature.


The temperature range that can be displayed is from -30°C (-22°F) to 50°C (122°F).

Instantaneous fuel consumption

12:00 2:00

Displays instantaneous fuel consumption.

Average fuel consumption

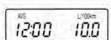

Displays the average fuel consumption since the function was reset.


The function can be reset by pressing the "DISP" button for longer than one second when the average fuel consumption is displayed.

Driving range



Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated.
- Average vehicle speed

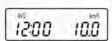

Displays the average vehicle speed since the engine was started or the function was reset.

The function can be reset by pressing the "DISP" button for longer than one second when the average vehicle speed is displayed.

Setting the clock

- STEP 1 Display the clock on the multi-information display when the vehicle is stopped, and press and hold the "DISP" button to enter the adjustment mode for the clock.
- STEP 2 Press the "DISP" button to adjust the hours. After adjusting the hours, wait 5 seconds to allow the hours to be automatically input.
- STEP 3 Press the "DISP" button to adjust the minutes. After adjusting the minutes, wait 5 seconds to allow the minutes to be automatically input.

When disconnecting and reconnecting the battery terminals

The following information data will be reset. Rep

- Clock
- Average fuel consumption

Average vehicle speed Outside temporary Outside temperature display

In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.

- When stopped, or driving at low speeds (less than 25 km/h [16 mph])
- When the outside temperature has changed suddenly (at the entrance/ exit of a garage, tunnel, etc.)




The multi-information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed.

2-3. Operating the lights and wipers Headlight switch

The headlights can be operated manually or automatically.

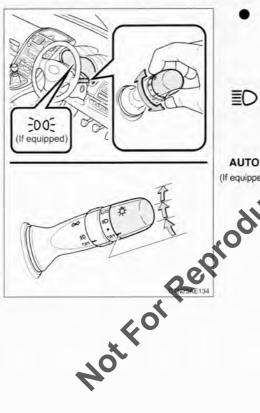

- The front position, tail, license plate and instrument panel lights turn on.
- The headlights and all lights listed above turn on.


Auto The headlights and (If equipped) front position lights turn on and off automatically.

(Vehicles without a smart entry & start system: When the engine switch is in the "ON" position

Vehicles with a smart entry & start system:

entry & start system: When the "ENGINE START STOP" switch is in IGNITION ON mode)

Turning on the high beam headlights

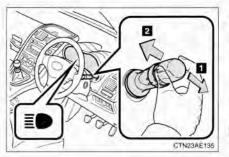

With the headlights on, push the lever forward to turn on the high beams.


Pull the lever back to the center position to turn the high beams off.

Pull the lever toward you to flash the high peams.

Release the ever to turn them off. You can flash the high beams with the headlights on or off.

Manual headlight leveling dial vehicles without discharge headlights)

The level of the headlights can be adjusted according to the number of passengers and the loading condition of the vehicle.

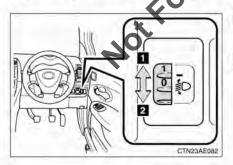


- Raises the level of the headlights
- Lowers the level of the headlights

Guide to dial settings

Occupancy and luggage load conditions		Diel position
Occupants	Luggage load	Dial position
Driver	None	0
Driver and front pas- senger	None	0
All seats occupied	None	1.5
All seats occupied	Full luggage loading	2.5
Driver	Full luggage loading	A 4

■ Headlight control sensor (if equipped)

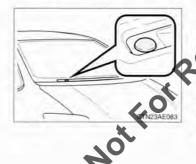

The sensor may not function properly if an object is placed on the sensor, or anythin that blocks the sensor is affixed to be windshield.

Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

Automatic light off system (if equipped)

▶ Vehicles without a smart entry & start system

Opening the driver's door with the engine switch in the "ACC" or "LOCK" position will turn the headlights and tail lights off.

To turn the lights on again, turn the engine switch to the "ON" position, or turn the headlight switch off and then back to or \equiv .

► Vehicles with a smart entry & start system

Opening the driver's door with the "ENGINE START STOP" switch in ACCESSORY mode or OFF will turn the headlights and tail lights off.

To turn the lights on again, turn the "ENGINE START STOP" switch to IGNITION ON mode, or turn the headlight switch off and then tack to or

Light reminder buzzer (if equipped)

► Vehicles without a smart entry & start system

A buzzer sounds when the engine switch is uned OFF or to the "ACC" position and the driver's door is opened while the lights are turned on.

➤ Vehicles with a smart entry & start system

A buzzer sounds when the "ENGINE START STOP" switch is turned OFF or to ACCESSORY mode and the driver's door is opened while the lights are turned on.

Automatic headlight leveling system (vehicles with discharge headlights)

The level of the headlights is automatically adjusted according to the number of passengers and the loading condition of the vehicle to ensure that the headlights do not interfere with other road users.

■ Customization that can be configured at Toyota dealer

Settings of the light sensor sensitivity can be changed. (Customizable features→P. 369)



NOTICE

To prevent battery discharge

Do not leave the lights on longer than necessary when the engine is not running.


2-3. Operating the lights and wipers Fog light switch*

The fog lights improve visibility in difficult driving conditions, such as in rain or fog. The fog lights can be used when the headlights or front position lights are turned on.




Windshield wipers and washer

▶ Intermittent wiper with interval adjuster When intermittent wiper operation is selected, wiper intervals can be adjusted.

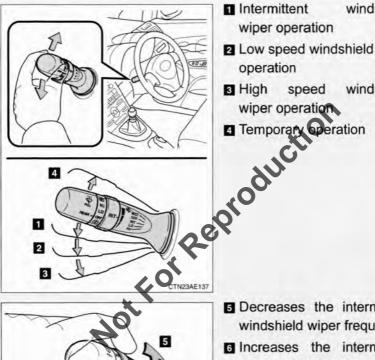


- Intermittent windshield
- 2 Low speed windshield wiper
- windshield

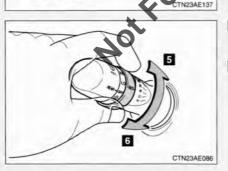

2 3


- 5 Decreases the intermittent windshield wiper frequency
- 6 Increases the intermittent windshield wiper frequency

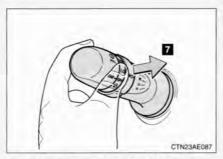


Wash/wipe operation Wipers operate automatically.

▶ Rain-sensing windshield wipers


With "AUTO" selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

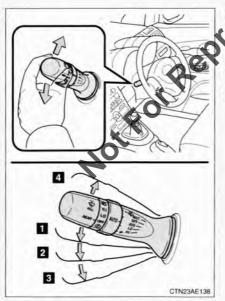

- Rain-sensing wiper opera-
- 2 Low speed wiper operation
- 3 High speed wiper operation
- 4 Temporary operation

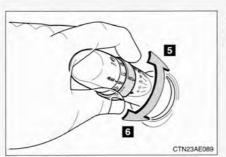

- 5 Sensor sensitivity (low)
- 6 Sensor sensitivity (high)

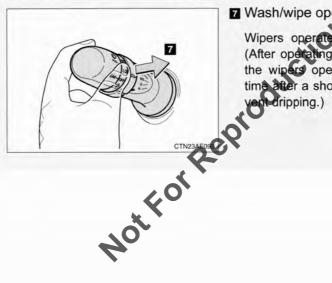

Wash/wipe operation

Wipers operate automatically. (After operating several times, the wipers operate one more time after a short delay to pre-


The windshield wiper and washer can be operated when

- ► Vehicles without a smart entry & start system The engine switch is in the "ON" position.
- ► Vehicles with a smart entry & start system
 The "ENGINE START STOP" switch is in IGNITION ON mode.

Effects of vehicle speed on wiper operation (vehicles with rain-sensing windshield wipers)

Even when the wipers are not in "AUTO" mode, wiper operation varies depending on vehicle speed when the washer is being used (delay until drip prevention wiper sweep occurs).

Rain drop sensor (vehicles with rain-sensing windshield wipers)

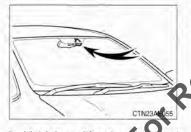

is activated.

The sensor tages the amount of rain-drops.

► Vehicles without a sprant entry & start system

If the wiper switch is turned to the "AUTO" position while the engine switch is in the "ON" position, the wiper will operate once to show that "AUTO" mode

➤ Vehicles with a smart entry & start system

If the wiper switch is turned to the "AUTO" position while the "ENGINE START STOP" switch is in IGNITION ON mode, the wiper will operate once

If no windshield washer fluid sprays

to show that "AUTO" mode is activated.

Check that the washer nozzles are not blocked and if there is washer fluid in the windshield washer fluid reservoir.

A CAUTION

■Caution regarding the use of windshield wipers in "AUTO" mode (vehicles with rain-sensing windshield wipers)

The windshield wipers may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in "AUTO" mode. Take care that your fingers or anything else do not become caught in the windshield wipers.



NOTICE

When the windshield is dry

Do not use the wipers, as they may damage the windshie

When the washer fluid tank is empty


Do not operate the switch continually as the washer fluid pump may overheat.

When a nozzle becomes block

Do not try to clear it with a pin or other object. The nozzle will be damaged. HotFor

2-3. Operating the lights and wipers

Rear window wiper and washer

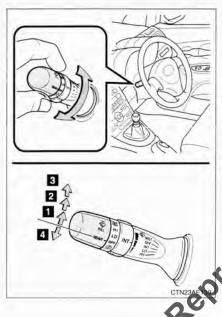

- Intermittent window wiper operation
- Normal window wiper operation
- Washer/wiper dual operation
- 4 Washer operation

CIN23A O TO GUICLION

The rear window wider and washer can be operated when

- ➤ Vehicles without a smart entry & start system The engine switch in the "ON" position.
- ► Vehicles with a smart entry & start system
 The "ENGINE START STOP" switch is in IGNITION ON mode.

A NOTICE

When the rear window is dry

Do not use the wipers, as they may damage the rear window.

When the washer fluid tank is empty


Do not operate the switch continually as the washer fluid pump may overheat.

When a nozzle becomes blocked

Do not try to clear it with a pin or other object. The nozzle will be damaged.

2-3. Operating the lights and wipers Headlight cleaner switch*

Washer fluid can be sprayed on the headlights.

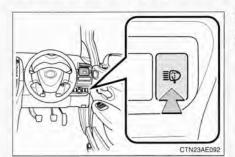

Press the switch to clean the headlights.

- The headlight cleaner can be operated when

 Vehicles without a smart entry & start =


 Only for the first time
 engine Only for the first time when the windshield washer is operated after the engine switch is turned to the "ON" postion with the headlights on, the headlight cleaners will also operate operate
 - ➤ Vehicles with a smart entry & start system Only for the first time when the windshield washer is operated after the "ENGINE START STOP switch is turned to IGNITION ON mode with the headlights on, the headlight cleaners will also operate once.

A NOTICE


When the washer fluid tank is empty


Do not use this function when the washer fluid tank is empty. This may cause the washer fluid pump to overheat.

Use cruise control to maintain a set speed without using the accelerator.

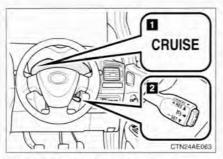

- Indicator
- 2 Cruise control switch

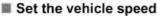

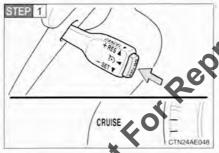

Turn the "ON-OFF" button on.

ress the button once more to deactivate the cruise control.



Accelerate or decelerate to the desired speed and push the lever down to set the cruise control speed.

■ Adjusting the speed setting




- 1 Increase speed
- 2 Decrease speed

Hold the lever until the desired speed setting is obtained.

Fine adjustment of the set speed can be made by lightly pushing the lever up or down and releasing it.

■ Canceling and resuming regular acceleration

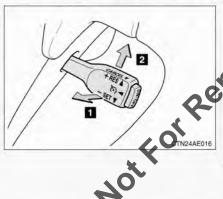

1 Cancel

Push the lever towards you to cancel cruise control.

The speed setting is also canceled when the brakes are applied or the clutch pedal is depressed (manual transmission only).

2 Resume

To resume cruise control and return to the set speed, push the lever up.

Cruise control can be set when

- The shift lever is in D or 3 (vehicles with an automatic transmission).
- Vehicle speed is above approximately 40 km/h (25 mph).

Accelerating

The vehicle can be accelerated normally. After acceleration, the set speed resumes.

Automatic cruise control cancellation

The set speed is automatically cancelled in any of the following situations.

Actual vehicle speed falls more than 16 km/h (10 mgh) below the preset vehicle speed.

At this time, the memorized set speed is not retained

- Actual vehicle speed is below 40 km/h (25 mph).
- VSC is activated. (if equipped)

If the cruise control indicator light flashes

Turn the "ON-OFF" button off once, and then reactivate the system.

If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Contact for Toyota dealer and have your Toyota inspected.

A CAUTION

■ To avoid operating the cruise control by mistake

Keep the "ON-OFF" button off when not in use.

■ Situations unsuitable for cruise control

Do not use cruise control in any of the following situations.

Doing so may result in control of the vehicle being lost and could cause an accident resulting in death or serious injury.

- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
 On steep hills
 When your vehicle is towing a trailer

Driving assist systems

To help enhance driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface.

Brake assist

Generates an increased level of braking force after the brake pedal is depressed, when the system detects a panic stop situation.

■ VSC (Vehicle Stability Control) (if equipped)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces.


TRC (Traction Control) (if equipped)

Maintains drive power and prevents the front wheels from spinning when starting the vehicle or accelerating on slippery roads.

■ EPS (Electric Power Steering)

Employs an electric note to reduce the amount of effort needed to turn the steering wheel.

When the VSC/TRC are operating

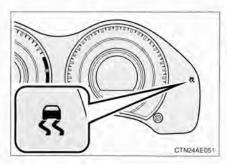


If the vehicle is in danger of slipping or the front wheels spin, the indicator flashes to indicate that the VSC/TRC have been engaged.

A buzzer (intermittent) sounds to indicate that VSC is operating.

To disable TRC and/or VSC

If the vehicle gets stuck in fresh snow or mud, TRC and VSC may reduce power from the engine to the wheels. You may need to turn the system off to enable you to rock the vehicle in order to free it.

■ Turning off TRC

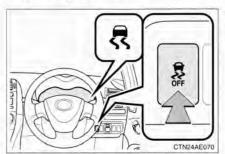


Quickly press and release the button to turn off TRC.

The slip indicator light should come on.

Press the button again to turn the system back on.

■ Turning off TRC and VSC

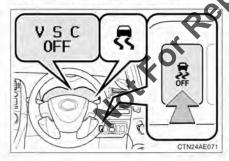

Press and hold the button for more than 3 seconds while the vehicle is stopped to turn off TRC and VSC.

The slip indicator light and message on multi-information display should come on.

Press the button again to turn the system back on.

Automatic reactivation of TRC and VSC

Turning the "ENGINE START STOP" switch or the engine switch OFF after turning off the TRC and VSC systems will automatically re-enable them.

If only the TRC system is turned off, the TRC system will turn on when vehicle speed increases.

If the TRC/VSC systems are turned off, the systems will not turn on even when vehicle speed increases.

Sounds and vibrations caused by the ABS, brake assist, VSC and TRC

- A sound may be heard from the engine compartment when the engine is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
- Any of the following conditions may occur when the above systems are operating. None of these indicates that a maturaction has occurred.
 - · Vibrations may be felt through the vehicle body and steering.
 - · A motor sound may be heard after the vehicle comes to a stop.
 - · The brake pedal may pulsate slightly after the ABS is activated.
 - The brake pedal may move down slightly after the ABS is activated.

■ EPS operation sound

When the steering wheel operates, a motor sound (whirring sound) may be heard.

This does not indicate a malfunction.

Reduced effectiveness of EPS

The effectiveness of EPS is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result. Should this occur, refrain from excessive steering input or stop the vehicle and turn the engine off. The system should return to normal within 10 minutes.

A CAUTION

■ The ABS does not operate effectively when

- Tires with inadequate gripping ability are used (such as excessively worn tires on a snow covered road).
- The vehicle hydroplanes while driving at high speed on the wet or slick road.

■Stopping distance when the ABS is operating on the wet or slick roads

The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you in the following situations.

- When driving on dirt, gravel or snow-covered roads
 When driving with tire chains
 When driving over bumps in the road

- When driving over roads with potholes or uneven roads

■TRC may not operate effectively when

Directional control and power pay not be achievable while driving on slippery road surfaces, even if the TRC system is operating.

Do not drive the vehicle in conditions where stability and power may be lost.

■When the VSC is activated

The slip indicator light flashes and a warning buzzer sounds. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes and a buzzer sounds.

■When TRC and VSC are off

Be especially careful and drive at a speed appropriate to the road conditions. As these are systems to ensure vehicle stability and driving force, do not turn off TRC and VSC unless necessary.

A CAUTION

■ Replacing tires

Make sure that all tires are of the same size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the appropriate tire pressure level.

The ABS and VSC system will not function correctly if different tires are fitted on the vehicle.

Contact your Toyota dealer for further information when replacing tires or wheels.

Handling of tires and suspension

Using tires with any kind of problem or modifying the suspension will the driving assist systems, and may cause the system to malfunction. Using tires with any kind of problem or modifying the suspension will affect Take notice of the following information about storage precautions, cargo capacity and load.

- Stow cargo and luggage in the luggage compartment whenever possible.
- Be sure all items are secured in place.
- Be careful to keep the vehicle level. Placing the weight as far forward as possible helps maintain vehicle balance.
- For better fuel economy, do not carry unnecessary weight. ucilo

A CAUTION

■Things that must not be carried in the language compartment

The following things may cause a fire it loaded in the luggage compartment.

- Receptacles containing gasoline
- Aerosol cans

■ Storage precautions

Observe the following precautions.

Failing to do so may result in death or serious injury.

- Do not place cargo or luggage in or on the following locations as the item may get under the clutch, brake or accelerator pedal and prevent the pedals from being depressed properly, block the driver's vision, or hit the driver or passengers, causing an accident.
 - · Driver's feet
 - Front passenger or rear seats (when stacking items)
 - · Luggage cover
 - · Instrument panel
 - Dashboard
 - · Auxiliary box or tray that has no lid
- Secure all items in the occupant compartment, as they may shift and injure. someone during an accident or sudden braking.

Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

■ Pre-winter preparations

- Use fluids that are appropriate to the prevailing outside temperatures.
 - · Engine oil
 - · Engine coolant
 - Washer fluid
- Have a service technician inspect the level and specific gravity of battery electrolyte.
- Have the vehicle fitted with four spow tires or purchase a set of tire chains for the front tires.

Ensure that all tires are the same size and brand, and that chains match the size of the tires

Before driving the vehicle

Perform the following according to the driving conditions.

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice.
 Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Remove any ice that has accumulated on the vehicle chassis.
- Periodically check for and remove any excess ice or snow that may have accumulated in the wheel well or on the brakes.

■ When driving the vehicle


Accelerate the vehicle slowly and drive at a reduced speed suitable to road conditions.

When parking the vehicle

Park the vehicle and move the shift lever to P (vehicles with an automatic transmission) or R (vehicles with a manual transmission) without setting the parking brake. The parking brake may freeze up, preventing it from being released.

Selecting tire chains

Use the correct tire chain size when mounting the snow chains. Chain size is regulated for each tire size.

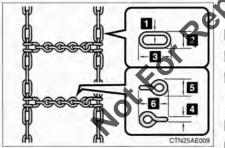

Side chain:

- 3 mm (0.12 in.) in diameter
- 2 10 mm (0.39 in.) in width
- 30 mm (1.18 in.) in length Cross chain:
- 4 mm (0.16 in.) in diameter
- 5 14 mm (0.55 in.) in width
- 6 25 mm (0.98 in.) in length

Regulations on the use of snow chains

- Regulations regarding the use of tire chains vary according to location and type of road. Always check local regulations before installing chains.
- Install the chains on the front tires.
- Retighten the chains after driving 0.5 1.0 km (1/4 1/2 mile).

■ Tire chains

Observe the following precautions when installing and removing chains.

- Install and remove tire chains in a safe location.
- Install tire chains on the front tires.
- Install tire chains following the instructions provided in the accompanying manual.

A CAUTION

■ Driving with snow tires

Observe the following precautions to reduce the risk of accidents. Failing to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the specified size.
- Maintain the recommended level of air pressure.
- Do not drive at speeds in excess of the speed limit or the speed limit specified for the snow tires being used.
- Snow tires should be installed on all wheels.

■ Driving with tire chains

Observe the following precautions to reduce the risk of accidents.

Failing to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used or 50 km/h (30 mph), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden turns and braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.

Trailer towing

Your vehicle is designed primarily as a passenger carrying vehicle. Towing a trailer will have an adverse effect on handling, performance, braking, durability, and fuel consumption. For your safety and the safety of others, do not overload the vehicle or trailer.

Toyota warranties do not apply to damage or malfunction caused by towing a trailer for commercial purposes.

For towing purposes, we recommend use of the following parts:

- When towing a caravan trailer etc., use a distributing hitch.
- When the total trailer weight is greater than the vehicle weight, use a sway control device.

Weight limits

Confirm that the total trailer weight, gross vehicle weight, gross axle weight and trailer tongue load are all within the limits.

Gross vehicle weight

The gross vehicle weight must not exceed 1805 kg (3979 lb.)

The gross vehicle weight is the sum weight of the unloaded vehicle, driver, passengers, luggage, hitch and trailer tongue load. Also included is the weight of any special equipment installed on your vehicle.

Gross axle weight

The load on either the front or rear axle resulting from distribution of the gross vehicle weight on both axles must not exceed the following.


Front: 1020 kg (2249 lb.) Rear: 1010 kg (2227 lb.)

■ Trailer tongue load

The trailer cargo load should be distributed so that the tongue load is 9 to 11% of the total trailer weight, not exceeding 60 kg (132 lb.).

(Tongue load / Total trailer weight x 100 = 9 to 11%)

The total trailer weight and tongue load can be measured with platform scales found at a highway weighing stations, building supply companies, trucking companies, junk yards, etc.

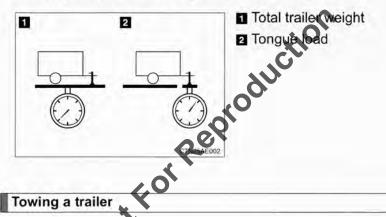

Towing a trailer

Contact your Toyota dealer for further information about additional requirements such as a towing kits, etc.

Hitch

Trailer hitch assemblies have different weight capacities established by the hitch manufacturer. Even though the vehicle may be rated for towing a higher weight, the operator must never exceed the maximum weight rating specified for the trailer hitch.

Before towing

Check that the following conditions are met:

- The vehicle's tires are properly inflated. (→P. 366)
- Trailer tires are inflated according to the trailer manufacturer's recommendation.
- All trailer lights work
- All lights work each time you connect them.
- The vehicle remains level when a loaded or unloaded trailer is hitched. Do not drive if the vehicle is not level, and check for improper tongue load, overloading, worn suspension, or other possible causes.
- The trailer cargo is securely loaded.
- The rear view mirrors conform to all applicable federal, state/provincial or local regulations. If they do not, install real view mirrors appropriate for towing purposes.

Break-in schedule

Toyota recommends that you do not use a new vehicle or a vehicle with any new power train components (engine, transmission, differential, wheel bearings, etc.) to tow a trailer for the first 800 km (500 miles) of driving.

■ Maintenance

- If you tow a trailer our vehicle will require more frequent maintenance due to the additional load. (See "Warranty and Service Booklet".)
- Retighten the fixing bolts of the towing ball and bracket after approximately 1000 km (600 miles) of trailer towing.

A CAUTION

■ To avoid accident or injury

- The total trailer weight (trailer weight plus the weight of cargo) must not exceed 1300 kg (2866 lb.).
- Do not exceed the trailer hitch assembly weight, gross vehicle weight, gross axle weight and trailer tongue load capacities.
- Never load more weight in the back than in the front of the trailer. About 60% of the load should be in the front half of the trailer, and the remaining 40% in the rear.

■ Hitches

- Use only a hitch that conforms to the total trailer weight requirement.
- Follow the directions supplied by the hitch manufacturer.
- Lubricate the hitch ball with a light coat of prease.
- Remove the trailer hitch whenever you are not towing a trailer. After removing the hitch, seal any mounting hole in the vehicle body to prevent entry of any substances into the vehicle.

■ When towing a trailer

- If the total trailer weigh exceeds 450 kg (992 lb.), trailer brakes are required.
- Never tap into your vehicle's hydraulic system, as this will lower the vehicle's braking effectiveness.
- Never tow a trailer without using a safety chain securely attached to both the trailer and the vehicle. If damage occurs to the coupling unit or hitch ball, there is danger of the trailer wandering into another lane.

NOTICE

When installing a trailer hitch

- Use only the position recommended by your Toyota dealer. Do not install the trailer hitch on the bumper; this may cause body damage.
- Do not use axle-mounted hitches, as they can cause damage to the axle housing, wheel bearings, wheels or tires.

Brakes

Toyota recommends trailers with brakes that conform to all applicable federal and state/provincial regulations.

Do not directly splice trailer lights

Directly splicing trailer lights may damage your vehicle's electrical system produ and cause a malfunction.

Trailer towing tips

Your vehicle will handle differently when towing a trailer. The 3 main causes of vehicle-trailer accidents are driver error, excessive speed and improper trailer loading. Keep the following in mind when towing.

- Before starting out, check the trailer lights and the vehicle-trailer connections. Recheck after driving a short distance.
- Practice turning, stopping and reversing with the trailer attached in an area away from traffic until you become accustomed to the feel of the vehicle.
- Reversing with a trailer attached is difficult and requires practice. Grip the bottom of the steering wheel and move your hand to the left to move the trailer to the left. Move your hand to the right to move the trailer to right. (This is generally opposite to reversing without a trailer attached.) Avoid sharp or prolonged turning. Have someone guide you when reversing to reduce the risk of an accident

- As stopping distance is increased when towing a trailer, vehicle-tovehicle distance should be increased. For each 10 km/h (6 mph) of speed, allow at least one vehicle and trailer length.
- Avoid sudden braking as you may skid, resulting in jackknifing and loss of control. This is especially true on wet or slippery surfaces.
- Avoid jerky starts or sudden acceleration.
- Avoid jerky steering and sharp turns, and slow down before making turns.
- Note that when making a turn, the trailer wheels will be closer than
 the vehicle wheels to the inside of the turn. Compensate by making
 a larger than normal turning radius.
- Crosswinds and rough roads will adversely affect handling of your vehicle and trailer, causing sway. Periodically check the rear to prepare for being passed by large trucks or buses, which may cause your vehicle and trailer to sway. If swaying occurs, firmly grip the steering wheel, reduce speed immediately but gradually, and steer straight ahead. Never increase speed. If you make no extreme correction with the steering or brakes, your vehicle and trailer will stabilize.
- Take care when passing other vehicles. Passing requires considerable distance. After passing a vehicle, do not forget the length of your trailer, and be sure you have plenty of room before changing lanes.
- In order to maintain efficient engine braking and electrical charging performance, do not use overdrive (automatic transmission) or 6 gear position (manual transmission).
- Due to the added load of the trailer, your vehicle's engine may overheat on hot days (at temperatures over 30°C [85°F]) when driving up a long or steep grade. If the engine coolant temperature gauge indicates overheating, immediately turn off the air conditioning (if in use), pull your vehicle off the road and stop in a safe spot. (→P. 351)

- Always place wheel blocks under both the vehicle and the trailer wheels when parking. Apply the parking brake firmly, and put the transmission in P (automatic transmission) or in first or R (manual transmission). Avoid parking on a slope, but if unavoidable, do so only after performing the following:
- STEP 1 Apply the brakes and keep them applied.
- STEP 2 Have someone place wheel blocks under both the vehicle and trailer wheels.
- When the wheel blocks are in place, release the brakes slowly until the blocks absorb the load.
- STEP 4 Apply the parking brake firmly.
- STEP 5 Shift into first or R (manual transmission) or P (automatic transmission) and turn off the engine
- When restarting after parking on a slope:
- STEP 1 With the transmission in A wehicles with an automatic transmission) or the clutch pedal (vehicles with a manual transmission) depressed, start the engine. On vehicles with automatic transmission, be sure to keep the brake pedal pressed.
- STEP 2 Shift into a fotward gear. If reversing, shift into R.
- Release the parking brake (also brake pedal on vehicles with automatic transmission), and slowly pull or back away from the wheel blocks. Stop and apply the brakes.
- STEP 4 Have someone retrieve the blocks.

A CAUTION

■ To avoid an accident

- Observe the legal maximum speeds for trailer towing.
- Slow down and downshift before descending steep or long downhill grades. Do not make sudden downshifts.
- Avoid holding the brake pedal down too long or applying the brakes too frequently. This could cause the brakes to overheat and result in reduced braking efficiency.


Not For Reproduction

Interior features

3-1.	Using the air conditioning	g 3-4.	Using the storage feature	s
	system and defogger		List of storage features	225
	Automatic air conditioning		Glove box	
	system	188	Console box	
	Manual air conditioning		Auxiliary boxes	
		195	Auxiliary boxes	223
	Rear window defogger	200	Other interior features	
	The second second	2		222
3-2.	Using the audio system	THE RESERVE AND ADDRESS.	Sun visors	
	Audio system types	201	Vanity mirrors	
	Using the radio	203	Portable ashtray	
	Using the CD player	207	Cigarette lighter	
	Playing back MF3 and		Power outlet	
	WMA discs	213	Armrest	
	Optimal use of the audio		Floor mat	239
	system	219	Luggage compartment	
	Using the steering wheel		features	240
	audio switches	221		
3-3.	Using the interior lights			
	Interior lights list	223		
	Interior light			
	Personal lights	224		

3-1. Using the air conditioning system and defogger Automatic air conditioning system*

Air outlets are automatically selected and fan speed is automatically adjusted according to the set temperature setting.

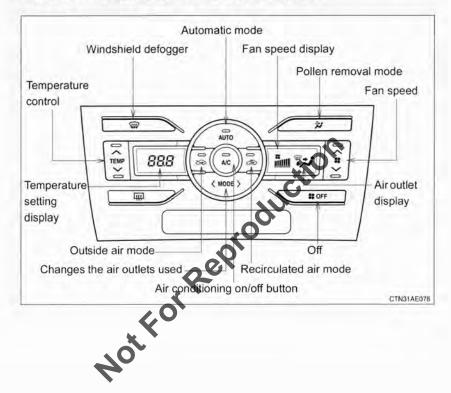


Using the automatic mode



The air conditioning system will begin to operate. Air outlets and fan speed are automatically adjusted according to the temperature setting.

STEP 2 Press "^" to increase the temperature and "v" to decrease the

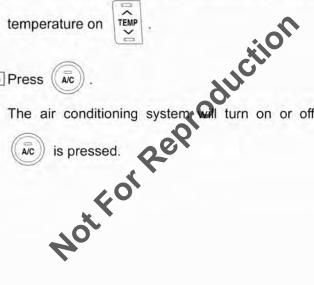





turn on or off each time



Adjusting the settings

Adjusting the temperature setting

Press "A" to increase the temperature and "V" to decrease the tem-

perature on

Adjusting the fan speed

Press "^" (increase) or "\" (decrease) on

The fan speed is shown on the display. (7 levels
Press to turn the fan off.

Changing the air outlets

Press "<" or ">" on (1000)

■ Changing the air outlets

Press "<" or ">" on (MODE)

The air outlets switch each time "<" or ">" on (wost) is pressed. The air flow shown on the display indicates the following.

Air flows to the upper body.




: Some models



Air flows to the upper body and feet.

Some models

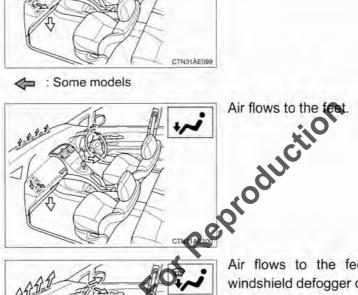



Air flows to the feet and the windshield defogger operates.


■ Switching between outside air mode and recirculated air mode

To switch to recirculated air mode, press

To switch to outside air mode, press



Defogging the windshield

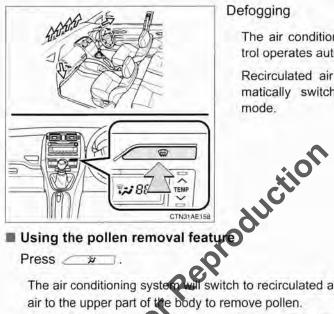

Defogging

The air conditioning system control operates automatically.

Recirculated air mode will automatically switch to outside air mode.


The air conditioning system will switch to recirculated air mode and blow air to the upper part of the body to remove pollen.

After about 3 minute Vabout 1 minute when the outside temperature is low), the air conditioning system will usually return to the mode selected before pressing

Pressing . gagain will stop the operation and return to the mode


Adjusting the position of and opening and closing the air outlets

Center outlets

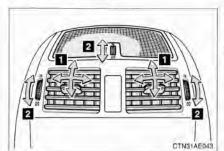

- Direct air flow to the left or right, up or down.
- 2 Turn the knob up to open the vent and down to close the vent.

► Right and left side outlets

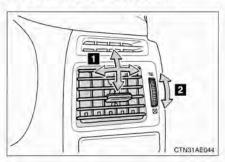

- Direct air flow to the left or right, up or down.
- Turn the knob up to open the vent and down to close the vent

Using the automatic mode

Fan speed is adjusted automatically in accordance with the temperature setting and ambient conditions. As a result, the following may occur.

- The system may switch automatically to recirculated air mode when the coolest temperature setting is selected in summer.
- Immediately after is pressed, the fan may stop for a while until warm or cool air is ready to flow.
- Cool air may flow to the area around the upper body when the heater is on.

■ Using the system in recirculated air mode

In a cold weather the windows will fog up more easily if the recirculated air mode is used for an extended period.

■ When outside air temperature approaches 0°C (32°F)

The air conditioning system may not operate even when



is pressed.

Pollen removal mode

In order to prevent the windows from fogging up when the outside air is cold, the following may occur.

- The air conditioning system does not switch to recirculated air mode.
- The air conditioning system automatically turns on.

The windows may fog up if pollen removal mode is used when the humidity is extremely high.

The filters are used to remove pollen when pollen removal mode is off.

■ When 💥 is selected for the air outlets used

For your driving comfort, air flowing to the feet may be warmer than air flowing to the upper body depending on the temperature setting. duci

A CAUTION


■ To prevent the windshield from fogging up

during cop ar operation in extremely humid weather. Do not use The difference between the temperature of the outside air and that of the windshield can cause the other surface of the windshield to fog up, blocking your vision.

To prevent battery discharge

Do not leave the air conditioning system on longer than necessary when the engine is stopped.

3-1. Using the air conditioning system and defogger Manual air conditioning system*

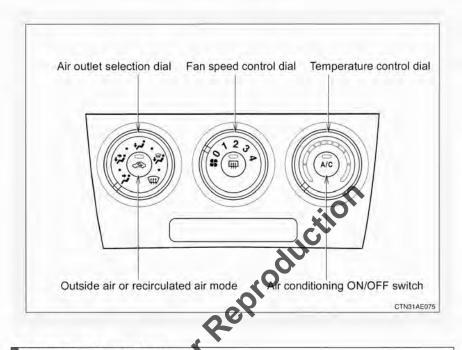

Adjusting the settings

Adjusting the temperature setting

Turn the temperature control dial clockwise (warm) or counterclockwise (cool).

If A/C is not pressed, the system will blow ambient temperature air or heated air.

Adjusting the fan speed

Turn the fan speed control dial clockwise (increase) or counterclockwise (decrease).

Set the dial to "0" to turn the fan off.


Selecting the air outlets

Set the air outlet selection dial to an appropriate position.

The positions between the air outlet selections shown below can be also selected for more detailed adjustment.



Air flows to the upper body.

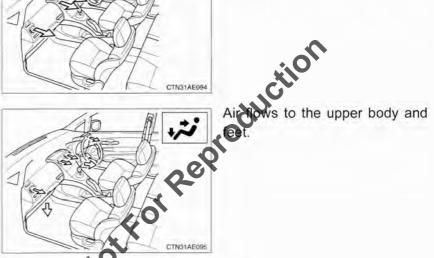




Air flows to the feet.



Air flows to the feet and the windshield defogger operates.

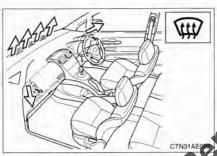

Air flows to the windshield and side windows.

The air tintake is automatically switched to outside air mode.

conditioning on clears the windshield and side windows faster.

Switching between outside air and recirculated air modes



The mode switches between outside air mode (indicator off) and recircu-


lated air mode (indicator on) modes each time




is pressed.

Adjusting the position of and opening and closing the air outlets

► Center outlets

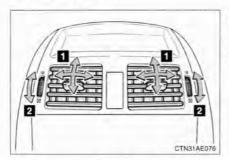

▶ Right and left side outlets

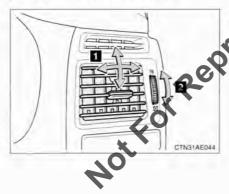

- Direct air flow to the left or right, up or down.
- Turn the knob up to open the vent and down to close the vent.

Direct air flow to t


- Direct air flow to the left or night, up or down.
- Turn the knob up to open the vent and down to close the vent.

Using the system in recirculated air mode

The windows will fog up more easily if the recirculated air mode is used for an extended period.

■ When outside air temperature approaches 0°C (32°F)

The air conditioning system may not operate even when

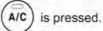

■ When 🚅 is selected for the air outlets used

For your driving comfort, air flowing to the feet may be warmer than air flowing to the upper body depending on the position of the temperature control ducti dial.

A CAUTION

■To prevent the windshield from fogging up

Do not set the air outlet selection dan to www during cool air operation in extremely humid weather. The afference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

NOTICE


To prevent battery discharge

Do not leave the air conditioning system on longer than necessary when the engine is stopped.

3-1. Using the air conditioning system and defogger Rear window defogger

Clear the rear window using the defogger.


▶ Vehicles with an automatic air conditioning system

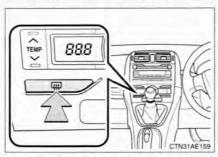

On/off

The defoggers will automatically turn off after approximately 15 minutes.


▶ Vehicles with a manual air conditioning system

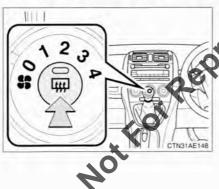


On/off)

The defoggers will automatically turn off after approximately 15 minutes.

► CD player and AM/FM radio

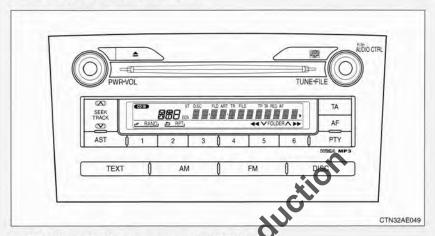

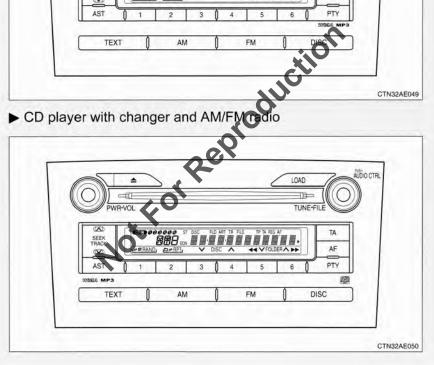

Page
P. 203
P. 207
P. 213
P. 219
P. 221

Using cellular phones

Interference may be heard through the audio swiem's speakers if a cellular phone is being used inside or close to the vehicle while the audio system is operating.


NOTICE

■ To prevent battery discharge

Do not leave the audio system on longer than necessary when the engine is stopped.

To avoid damaging the audio system

Take care not to spill drinks or other fluids over the audio system.

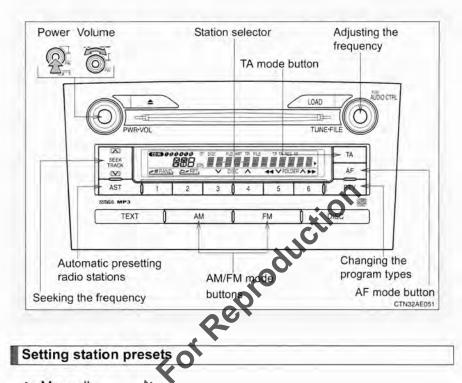

Setting station presets

▶ Manually

STEP 1 Search for desired stations by turning or pressing "A"

STEP 2 Press and hold the button (from 1 to) the station is 6 to be set to, and you hear a beep.

▶ Automatically

Press and hold AST until you hear a beep.

Up to 6 stations are set in order of reception quality. When the settings are finished, 2 beeps will be heard.

In the FM1 or FM2 mode, the stations automatically set by the audio system will be set in the FM3 presets.

RDS (Radio Data System)

This feature allows your radio to receive station and program information (classical, news, etc.) from radio stations that broadcast this information.

Listening to stations of the same network

Press AF

AF-ON, REG-OFF modes: The station among those of the same network with strong reception is selected.

AF-ON, REG-ON modes: The station among those of the same network with strong reception and broadcasting the same program is selected

Each time AF is pressed the mode changes in the order of AF-ON, REG-OFF→AF-ON, REG-OFF, REG-OFF.

Specifying program type

Press PTY

Each time is pressed, the program type changes in the order of "NEWS"→"SPORTS"→"TALK"→"POP"→"CLASSICS".

■ Traffic information

Press TA

TP mode: The system automatically switches to traffic information when a broadcast with a traffic information signal is received.

The station returns to the previous one when the traffic information ends.

TA mode: Traffic information can be heard only when a signal is received. The system switches to the mute mode when a signal is not received. In the CD or MP3/WMA mode, the system automatically switches to traffic information when a signal is received.

The audio system returns to the mute, CD or MP3/WMA mode when the traffic information ends.

The audio system mode changes as follows each time TA is pressed.

FM modes: TP→TA→OF

Modes other than the radio modes: TA→OFF

■ Emergency broadcast reception mode

"ALARM" appears on the display in the event that an emergency broadcast is received, and the emergency broadcast is aired.

■EON (Enhanced Other Network) system (for traffic announcement function)

If the RDS station (with EON data) you are listening to is not broadcasting a traffic information program and the audio system is in the TA (traffic announcement) mode, the radio will be switched automatically to a station broadcasting a traffic information program in the EON AF list when traffic information begins.


When the battery is disconnected Stations presets are erased.

Reception sensitivity

- Maintaining perfect radio reception at all times is difficult due to the continually changing position of the antenna, differences in signal strength and surrounding objects, such as trains, transmitters, etc.
- When AST is used, automatic station selection and automatic registering of stations may not be possible
- The radio antenna is mounted in the rear roof. The antenna can be removed from the base by turning it. ¢0

NOTICE

- To prevent damage remove the antenna in the following cases.
 - The antenna will touch the ceiling of a garage.
 - A cover will be put on the roof.

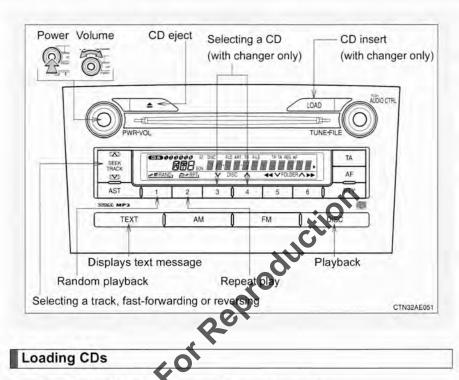

Loading CDs

- Loading a CD (CD player without changer) Insert a CD
- Loading a CD (CD player with changer)
- STEP 1 Press LOAD .

"WAIT" is shown on the display.

STEP 2 Insert a CD when the indicator on the slot turns from amber to green.

The display changes from "WAIT" to "LOAD".

Loading multiple CDs (CD player with changer only)
Press and hold until you hear a beep.
"WAIT" is shown on the display.
Insert a CD when the indicator on the slot turns from amber to green.
The display changes from "WAIT" to "LOAD".
The indicator on the slot turns to amber when the CD is inserted.
Insert the next CD when the indicator on the slot turns from amber to green again.
Repeat the procedure for the remaining CDs.
To stop the operation, press DISC .
jecting CDs
Ejecting a CD (CD player without changer) Press and remove the CD
Ejecting a CD (CD player with changer)
The number of the CD selected is shown on the display. (\land) .
STEP 2 Press and remove the CD.
Ejecting all the CDs (CD player with changer only)
Press and hold until you hear a beep, and then remove the CDs.
ODS.

desired track number is displayed.

Fast-forwarding and reversing tracks

To fast-forward or reverse, press and hold "\" or "\" on see and hold "\" or "\" or "\" on see and hold "\"."



iction

Selecting a CD (CD player with changer only)

To select the desired CD, press $3 (\lor)$ or $4 (\land)$.

Repeat play

■ To repeat a track

Press 2 (RPT).

■ To repeat all of the tracks on a CD CD player with changer only)

Press and hold 2 (RPT) until you hear a beep.

Random playback

■ Current CD

Press 1 (RAND).

Tracks are played in a random order until 1 is pressed once more.

■ All CDs (CD player with changer only)

Press and hold 1 (RAND) until you hear a beep.

Tracks on all loaded CDs are played in a random order until 1 is pressed once more.

Switching the display

Press TEXT .

Each time ___TEXT___ is pressed, the display changes in the order of Track no./Elapsed time→CD title→Track name.

Display

Up to 12 characters can be displayed at a time.

If there are 13 characters or more, pressing and holding for 1 TEXT second or more will display the remaining characters.

A maximum of 24 characters can be displayed.

is pressed for 1 second or more again or has not been pressed for 6 seconds or more, the display will return to the first 12 characters.

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.

Canceling random and repeat playback

(RPT) again. Press (RAND) or [2

Error message

This indicates a trouble either in the CD or inside the player. "ERROR": The CD may be dirty, darriaged or inserted up-side down.

Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches wirt or deterioration.







CDs with copy-protect features may not be used.

CD player protection feature

To protect the internal components, playback is automatically stopped when a problem is detected while the CD player is being used.

If CDs are left inside the CD player or in the ejected position for extended periods

CDs may be damaged and may not play properly.

Lens cleaners

Do not use lens cleaners. Doing so may damage the CD player.

⚠ NOTICE


CDs and adapters that cannot be used

Do not use the following types of CDs or 8 cm (3 in.) CD adapters or Dual Disc.


Doing so may damage the CD player and/or the CD insert/eject function.



CDs that have a diameter that is not 12 cm (4.7 in.)

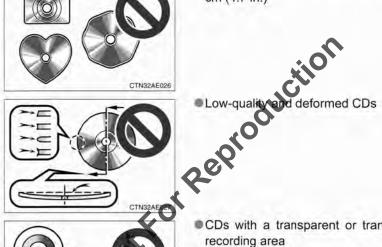



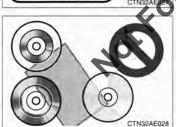

CDs with a transparent or translucent recording area




CDs that have had tape, stickers or CD-R labels attached to them, or that have had the label peeled off




CD player precautions

Failure to follow the precautions below may result in serious damage to the CDs or the player itself.

- Do not insert anything other than CDs into the CD slot.
- Do not apply oil to the CD player.
- Store CDs away from direct sunlight.
- Never try to disassemble any part of the CD player.

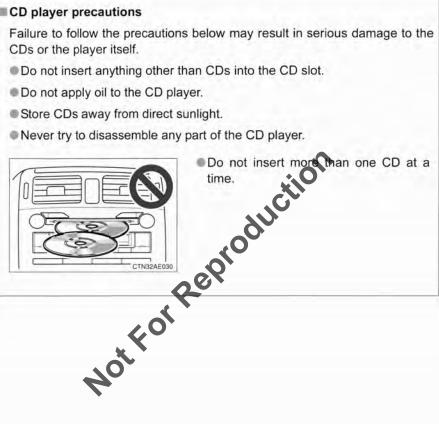

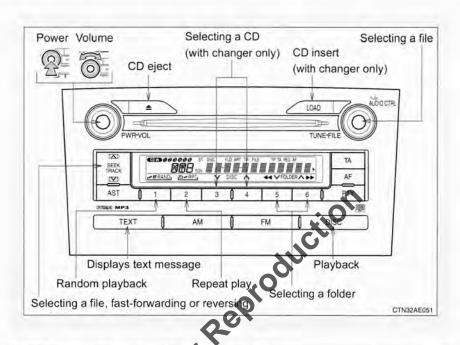

Loading and ejecting MP3 and WMA discs

→P. 207

Selecting a CD (CD player with changer only)

To select the desired CD, press 3 (v) or 4

Selecting a folder

To select the desired folder, press 5 (v) or

To return to the first folder, press and hold 5 (v) until you hear a beep.

Selecting files

Turn or press "∧" or "∨" on SEEK TRACK



to select the desired file.

Fast-forwarding and reversing files

roduction To fast-forward or reverse, press and hold "A" or "V" on



Repeat play

To repeat a file

Press 2 (RPT).

■ To repeat all of the files on a folder

(RPT) until you hear a beep. Press and hold

Random playback

- To play files from a particular folder in random order Press)
- To play all of the files on a disc in random order Press and hold 1 (RAND) until you hear a beep.

Switching the display

Press -TEXT .

> TEXT is pressed, the display changes in the order of Folder no./File no./Elapsed time→Folder name→File name→Album title (MP3 only)→Track title→Artist name.

■ Display

Up to 12 characters can be displayed at a time.

If there are 13 characters or more, pressing and holding TEXT for 1 second or more will display the remaining characters.

A maximum of 24 characters can be displayed.

If <u>TEXT</u> is pressed for 1 second or more again or has not been pressed for 6 seconds or more, the display will return to the first 12 characters.

Depending on the contents recorded, the characters may not be displayed properly or may not be displayed at all.

Canceling random and repeat playback

Press 1 (RAND) or 2 (RPT) again.

■ Error messages

"ERROR": This indicates a trouble either in the CD or inside the player. The CD may be dirty, damaged or inserted up-side down.

"NO MUSIC": This indicates that the MP3/WMA file is not included in the CD.

Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to sora ches, dirt or deterioration.





CD player protection feature

To protect the internal components, playback is automatically stopped when a problem is detected while the CD player is being used.

If CDs are left inside the CD player or in the ejected position for extended periods

CDs may be damaged and may not play properly.

Lens cleaners

Do not use lens cleaners. Doing so may damage the CD player.

■ MP3 and WMA files

MP3 (MPEG Audio LAYER3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media TM Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards and its the media/formats recorded by them that can be used.

- MP3 file compatibility
 - Compatible standards MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
 - Compatible sampling frequencies
 MPEG1 LAYER3: 32, 44.1, 48 (172)
 MPEG2 LSF LAYER3: 16, 22.75, 24 (kHz)
 - Compatible bit rates
 MPEG1 LAYER3: 64, 86, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)
 MPEG2 LSF LAYER3: 64, 80, 96, 112, 128, 144, 160 (kbps)
 Compatible with VSR
 - Compatible channel modes: stereo, joint stereo, dual channel and monaural
- WMA file compatibility
 - Compatible standards WMA Ver. 7, 8, 9
 - Compatible sampling frequencies 32, 44.1, 48 (kHz)
 - Compatible bit rates
 Ver. 7, 8: CBR 48, 64, 80, 96, 128, 160, 192 (kbps)
 Ver. 9: CBR 48, 64, 80, 96, 128, 160, 192, 256, 320 (kbps)
 Only compatible with 2-channel playback

Compatible media

Media that can be used for MP3 and WMA playback are CD-Rs and CD-RWs.

Playback in some instances may not be possible, depending on the status of the CD-R or CD-RW. Playback may not be possible or the audio may jump if the disc is scratched or marked with fingerprints.

Compatible disc formats

The following disc formats can be used.

- Disc formats: CD-ROM Mode 1 and Mode 2 CD-ROM XA Mode 2, Form 1 and Form 2
- File formats: ISO9660 Level 1, Level 2, (Romeo, Joliei)
 MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows.

- Maximum directory hierarchy: 8 levels
- Maximum length of folder names/file names: 32 characters
- Maximum number of folders: 192 (Including the root)
- · Maximum number of files per disc: 255
- File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

Multi-sessions

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3 and WMA files. However, only the first session can be played.

ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title and artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

MP3 and WMA playback

When a disc containing MP3 or WMA files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3 or WMA files or create any unnecessary folders.

If the discs contain a mixture of music data and MP3 or WMA format data, only music data can be played.

Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be mistakenly recognized and played as MP3 and WMA files. This may result in large amounts of interference and damage to the speakers.


Playback

- To play MP3 file with steady sound quality, we recommend a fixed bit rate of 128 kbps and a sampling frequency of 44.1 kHz.
- CD-R or CD-RW playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3 or WMA files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the U.S. and other countries.

NOTICE

- ■CDs and adapters that cannot be used (→P. 211)
- ■CD player precautions (→P. 212)

Interior features

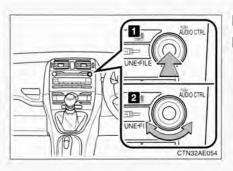

- Displays the current mode
- 2 Changes the following setting

Sound quality and volume balance (→P. 219)

The sound quality and balance setting can be changed to produce the best sound.

Using the AUDIO CONTROL function

Changing sound quality modes



order.

219

Adjusting sound quality

Turning adjusts the level.

Sound qual- ity mode	Mode displayed	Level	Turn to the left	Turn to the right
Bass*	"BAS"	-5 to 5	Low	High
Treble*	"TRE"	-5 to 5		
Front/rear volume balance	"FAD"	F7 to R7	Shifts to rear	Shifts to front
Left/right volume balance	"BAL"	L7 to R	Shifts to left	Shifts to right

^{*:} The sound quality level is adjusted individually in each radio mode or CD mode.

■ Trademark owned by SRS Labs, Inc.




The audio systems utilize SRS FOCUS® and SRS TruBass® audio enhancement technologies, under license from SRS Labs, Inc., in all modes except AM radio mode.

FOCUS, TruBass, SRS and () symbols are trademarks of SRS Labs, Inc.

FOCUS and TruBass technologies are incorporated under license from SRS Labs, Inc.

Some audio features can be controlled using the switches on the steering wheel.

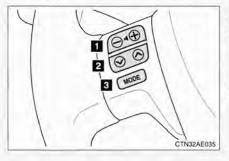

- Volume
- Radio: Select radio stations CD: Select tracks, files (MP3 and WMA) and discs
- 3 Power on, select audio source

Turning on the power

duction Press (MODE) when the audio system is turned off.

The audio system can be turned to holding MODE down until you hear a beep.

Changing the audio soulce

Press (MODE) when the audio system is turned on. The audio source changes as follows each time (MODE) is pressed.

 $AM \rightarrow FM1 \rightarrow FM2 \rightarrow FM3 \rightarrow CD$

Adjusting the volume

Press "+" on (O++) to increase the volume and "-" to decrease the volume.

Press and hold "+" or "-" on (G+) to continue increasing or decreasing the volume.

Selecting a radio station

STEP 1 Press (MODE) to select the radio mode.

To scan for receivable stations, press and hold "∧" or "∨" on (⊗ ⊗) until you hear a beep.

Selecting a track/file

STEP 1 Press (MODE) to select the CD mode.

STEP 2 Press "∧" or "∨" on [③ ⑥] to select the desired track/file.

Selecting a folder (CD player without changer only)

STEP 1 Press Mode to select the CD mode.

STEP 2 Press and hold "^" or "\" or \$\infty\$ on until you hear a beep.

Selecting a disc in the CD player (CD player with changer only)


STEP 1 Press MODE to select the CD mode.

STEP 2 Press and hold "\" or "\" on local on the local of the local on the local of the local on the local on

A CAUTION

■To reduce the risk of an accident

Exercise care when operating the audio switches on the steering wheel.

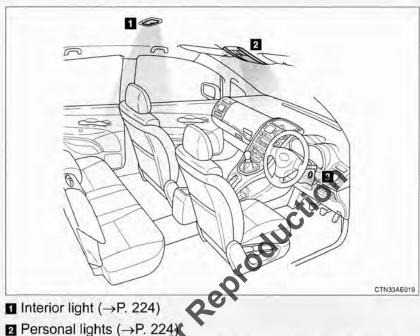

- Interior light (→P. 224)
- Personal lights (→P. 224)
- 3 Engine switch light wehicles without a smart entry & start system)

Illuminated entry system

Vehicles without a smart entry & start system

When the interior light switch is in the "DOOR" position, the interior light and engine switch light automatically turn on/off according to the engine switch position, whether the doors are locked/unlocked and whether the doors are open/closed.

Vehicles with a smart entry & start system


When the interior light switch is in the "DOOR" position and the interior light automatically turn on/off according to "ENGINE START STOP" switch mode, the presence of the electronic key, whether the doors are locked/unlocked and whether the doors are open/closed.


■ To prevent the battery from being discharged

If the interior light and engine switch light (vehicles without a smart entry & start system) remain on when the door is not fully closed and the interior light switch is in the "DOOR" position, the lights will go off automatically after 20 minutes.

Customization that can be configured at Toyota dealer


Settings (e.g. The time elapsed before lights turn off) can be changed. (Customizable features >P. 369)

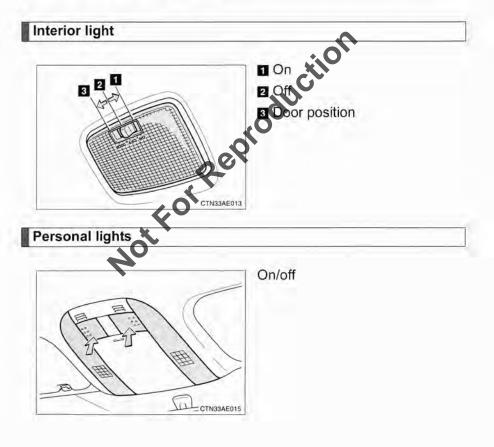

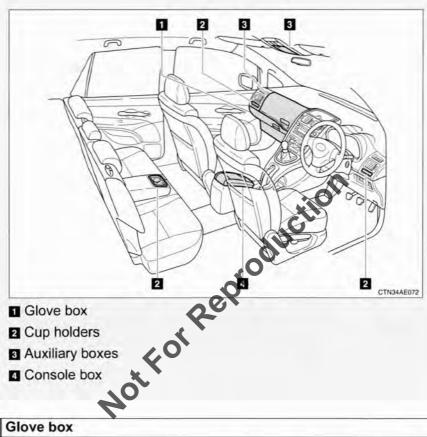

- 2 Cup holders
- Auxiliary boxes
- 4 Console box

Glove box

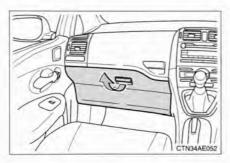

Pull up the lever.




A CAUTION

■ Caution while driving

Keep the glove box closed.

Injuries may result in the event of an accident or sudden braking.

Console box (vehicles with a console box lid)

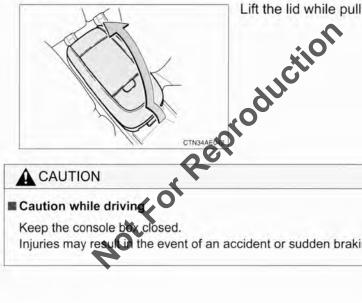


Lift the lid while pulling the lever.

Injuries may result the event of an accident or sudden braking.


Cup holders

▶ Front

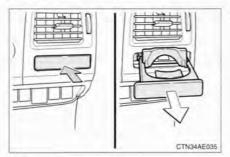

Push on the lid.

► Center (if equipped)

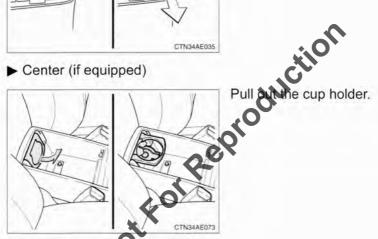


► Rear (if equipped



Pull the armrest down.

The center cup holder

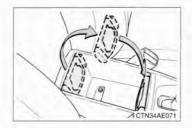

The center cup holder can be attached to either side of the console box.

A CAUTION

■ Items unsuitable for the cup holder


Do not place anything other than cups or a uninum cans in the cup holders. Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury. If possible, cover hot drinks to prevent burns.

■ When not in use

Keep the cup holders closed. Injuries may result in the event of an accident or sudden braking.


Auxiliary boxes

► Type A

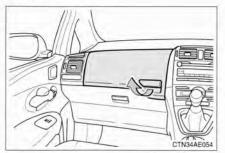


Pull up the lever.

► Type B

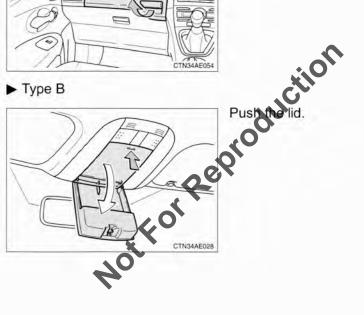

► Type C (vehicles with a console box lid)

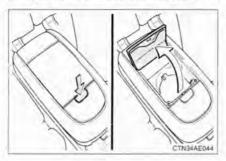

Press down and release the front of the console box lid



Remove the holder insert.

The holder can be used to install a portable ashtray. (→P. 234)

Injuries may result in the event of an accident or sudden braking.

➤ Type B

Do not store items heavier than 0.2 kg (0.4 lb.).

Doing so may cause the holder to open and the item inside may fall out, resulting in an accident.

► Type C


Do not place cups, aluminum cans or bottles in the box. They may be thrown out of the box in the event of an accident or sudden braking, resulting in injury.

A CAUTION


■When the auxiliary box is in use (Type C)

Make sure to keep the upper lid closed.

Opening the console box with the upper lid open may cause items inside the auxiliary box to fall out.

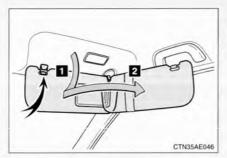


- Forward position: Flip down.
- Side position: Flip down, unhook, and swing to the side.

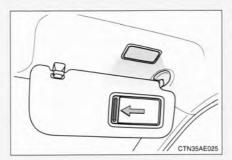


Slide the cover.

The light turns on when the cover is opened.

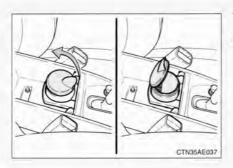

The ashtray can be installed in a cup holder. (\rightarrow P. 227)

■Installing the portable ashtray in the center console box lid (vehicles with a console box lid)

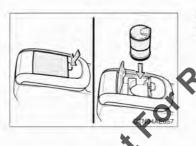

Press down and release the front of the lid and in tall the ashtray.

A CAUTION

When not in use

Keep the ashtray closed.

Injuries may result in the event of an accident or sudden braking.


When installing the ashtray in the center console box lid (vehicles with a console box lid)

Do not open the center console box lid while using it as an ashtray holder. Doing so may cause the ashtray to fall out from the holder, resulting in injury.

A CAUTION

■ To prevent fire

- Fully extinguish matches and cigarettes before putting them in the ashtray, then make sure the ashtray is fully closed.
- Do not place paper or any other type of flammable object in the ashtray.

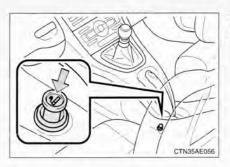

the cigarette lighter Push down.

The cigarette lighter will pop up when it is ready for use.

The cigarette lighter can be used when


- ➤ Vehicles without a smart entry & start system

 The engine switch is in the "ACC" or "ON" of the switch of the s
- KO RE The "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode.

A CAUTION

- To avoid burns or fires
 - Do not touch the metal parts of the cigarette lighter.
 - Do not hold the cigarette lighter down. It could overheat and cause a fire.
 - Do not insert anything other than the cigarette lighter into the outlet.

The power outlet can be used for 12 V accessories that run on less than 10 A.

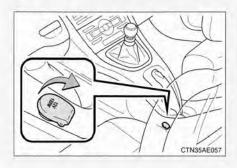

The power outlet can be used when

- duction ► Vehicles without a smart entry & start system The engine switch is in the "ACC" or "N" position.
- ➤ Vehicles with a smart entry & start system The "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON lot ki mode.

NOTICE

To avoid damaging the power outlet


Close the power outlet lid when the power outlet is not in use. Foreign objects or liquids that enter the power outlet may cause a short circuit.

To prevent the fuse from being blown

Do not use an accessory that uses more than 12 V 10 A.

To prevent the battery from being discharged

Do not use the power outlet longer than necessary when the engine is not running.

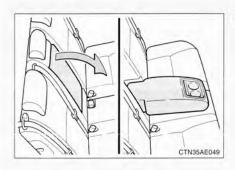

Pull the armrest down for use.

■ To prevent damage to the armrest


To prevent damage to the armrest

Do not place too much strain on the armrest

*: If equipped

Floor mat

Securely place a mat that matches the size of the space on the carpet.

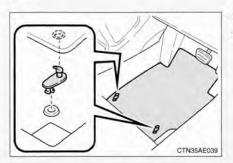

Secure the driver's floor mat using the hooks provided.

A CAUTION


■ When inserting the floor mat

Production Observe the following precautions. Failure to do so may result in the floor mat slipping and interfering with the movement of the pedals during driving, resulting in an accident.

- Make sure the floor mat s properly placed on the vehicle carpet and the correct side faces upward.
- Do not place floor mats on the top of existing mats.

Luggage compartment features

■ Cargo hooks

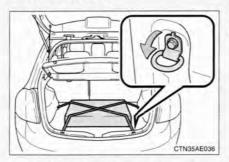


Cargo hooks are provided for securing loose items.


First-aid kit storage belt (if equipped)



■ Auxiliary boxes (inequipped)

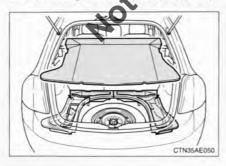

Removing the luggage cover

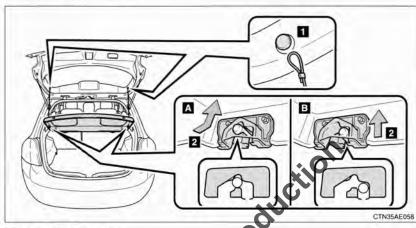

- 1 Unhook the cords.
- 2 Remove the cover from the anchor

The cover can be removed by pulling it in the direction of the arrow labeled "A".

If this does not work, pull the cover in the direction labeled "B".

A CAUTION

■ When the cargo hooks are not in use

To avoid injury, always return the cargo hooks to their positions when they are not in use.

Maintenance and care

4-1.	Maintenance and care	
	Cleaning and protecting the vahiole exterior	24
	Cleaning and protecting	
	the vehicle interior	24
42.	Maintenance	
201	Maintenance	
	requirements	25
4-3.	Do-it-yourself maintenan	се
Not For Per 4-3.	Do-it-yourself service precautions	252
	Hood	25
	Positioning a floor jack	25
	Engine compartment	259
	Tires	273
	Tire inflation pressure	276
	Wheels	278
	Air conditioning filter	279
	Key battery	282
	Checking and replacing fuses	286
	Light hulbs	298

Cleaning and protecting the vehicle exterior

Perform the following to protect the vehicle and maintain it in prime condition.

 Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.

Wash the vehicle body using a sponge or soft cloth, such as a chamois.

- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.

If water does not bead on a clean surface, apply wax when the vehicle body is cool.

■ Automatic car washes

- Before washing the vehicle, do the following.
 - · Fold the mirrors back.
 - · Remove the antenna.
- Brushes used in automatic car washes may scratch the vehicle surface and harm your vehicle's paint.

■ High pressure car washes

- Do not allow the nozzles of the car wash to come within close proximity of the windows.
- Before car wash, check that the fuel filler door on your vehicle is closed properly.

Touch-up paint (if equipped)

Touch-up paint may be used to cover small chips or scratches.

Apply the paint soon after the damage occurs or corrosion may set in. To apply the touch-up paint so it is hardly noticeable the trick is to apply it only to the bare spots. Apply only the smallest amount possible and do not paint the surface around the scratch or chip.

Aluminum wheels (if equipped)

Remove any dirt immediately by using a neutral detergent. Do not use hard brushes or abrasive cleaners. Do not use strong or harsh chemical cleaners. Use the same mild detergent and wax as used on the point.

- To prevent deterioration and body corrosion

 Wash the vehicle immediately in the Affect of the Af
 - · After driving near the sea coast
 - · After driving on salted roads
 - If you see coal tar or tree sap of the paint surface
 - · If you see dead insects or insect droppings on the paint
 - · After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
 - If the vehicle becomes heavily soiled in dust or mud
 - If liquids such as benzene and gasoline are spilled on the paint surface
 - If the paint is chipped or scratched, have it repaired immediately.



Caution about the exhaust pipe

Exhaust gasses cause the exhaust pipe to become quite hot.

When washing the vehicle, be careful not to touch the pipe until it has cooled sufficiently, as touching a hot exhaust pipe can cause burns.

NOTICE

To protect your vehicle's painted surfaces

Do not use organic cleaners such as benzene or gasoline.


Cleaning the exterior lights

- Wash carefully. Do not use organic substances or scrub with a hard brush. This may damage the surfaces of the lights.
- Do not apply wax on the surfaces of the lights. Wax may cause damage to the lenses.

To prevent damage to the windshield wiper arms

When lifting the wiper arms away from the windshield, pull the driver side wiper arm upward first, and repeat for the passenger side. When returning the wipers to their original position, do so from the passenger side first.

When using an automatic car wash (vehicles with rain-sensing windshield wipers)

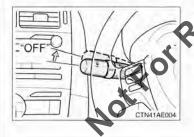

he wiper switch to "OFF".

the wiper switch is in "AUTO", the wipers may operate and the wiper blades may be damaged.

Cleaning and protecting the vehicle interior

The following procedures will help protect your vehicle's interior and keep it in top condition:

Protecting the vehicle interior

Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.

Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe any excess dirt and dust with a soft cloth dampened with diluted detergent.

Use a diluted water solution of approximately 52 neutral wool detergent.

- Wring out any excess water from the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded ventilated area.

Synthetic leather areas

- Remove loose lift using a vacuum cleaner.
- Apply a mild soap solution to the synthetic leather.
- Allow the solution to soak in for a few minutes. Remove the dirt and wipe off the solution with a clean, damp cloth.

Caring for leather areas

Toyota recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

Shampooing the carpets

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not apply water. The excellent results are obtained when keeping the carpet as dry as possible.

■ Seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraving or cuts.

CAUTION

Water in the vehicle

A CAUTION

■ Water in the vehicle

- Do not splash or spill liquid in the vehicle. Doing so may cause electrical components etc. to malfunction or catch fire.
- components or wiring in the vehicle interior wet. Do not get any of the SR (→P. 76)

Electrical mattunction may cause the airbags to deploy or not function properly, resulting in death or severe injury.

A NOTICE

Cleaning detergents

Do not use organic substances such as benzene or gasoline, acidic or alkaline solutions, dye, bleach or other detergent. Doing so may discolor the vehicle interior or cause streaks or damage to painted surfaces.

Preventing damage to leather surfaces

Observe the following precautions to avoid damage to and deterioration of leather surfaces.

- Remove any dust or dirt on leather surfaces immediately
- Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or that contain wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

Water on the floor

Do not wash the vehicle floor with water.

Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components under the floor of the vehicle, and may also cause the body to rust.

Cleaning the inside of the rear window

- Do not use glass cleaner to clean the rear window, as this may cause damage to the rear window defogger heater wires. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires.
- Be careful not to scratch or damage the heater wires.

Maintenance requirements

To ensure safe and economical driving, day-to-day care and regular maintenance is essential. Toyota recommends the following maintenance.

Scheduled maintenance

Scheduled maintenance be performed at specified intervals according to the maintenance schedule.

For full details of your maintenance schedule, read the "Warranty and Service Booklet".

■ Do-it-yourself maintenance

What about do-it-yourself maintenance?

Many maintenance items are easy to do verself if you have a little mechanical ability and a few basic automotive tools.

Note, however, that some mainterfance tasks require special tools and skills. These are best performed by qualified technicians. Even if you are an experienced do-it wouself mechanic, we recommend that repairs and maintenance be conducted by your Toyota dealer who will keep a record of maintenance on your Toyota. This record could be helpful should you even require Warranty Service.

■ Where to go for service?

It makes good sense to take your vehicle to your local Toyota dealer for service.

Toyota technicians are well-trained specialists. And they are receiving the latest service information through technical bulletins, service tips, and indealership training programs. They learn to work on Toyota before they work on your vehicle, rather than while they are working on it. Doesn't that seem like the best way?

Your Toyota dealer has invested a lot of money in special Toyota tools and service equipment. It helps do the job better and at less cost.

Your Toyota dealer's service department will perform all of the scheduled maintenance on your vehicle - reliably and economically.

Does your vehicle need repair?

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine missing, stumbling, or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the xhaust system checked immediately.)
- Flat-looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driving straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches the floor, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal

If you notice any of these clues, take your vehicle to your Toyota dealer as soon as possible. Your vehicle may need adjustment or repair.



A CAUTION

If your vehicle is not properly maintained

It could result in serious damage to the vehicle and possible personal injury or death.

Warning in handling of the battery

Battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (→P. 267)

Do-it-yourself service precautions

If you perform maintenance yourself, be sure to follow the correct procedures as given in these sections.

Items		Parts and tools
Battery condition	(→P. 267)	Warm water Baking soda Grease Conventional wrench (for terminal clamp bolts)
	(→P. 265)	Toyota Super Long Life Coolant or similar high quality ethylene glycol based non-silicate, non-amine, non-intrite and non-borate coolan with long-life hybrid or anic acid technology. Toyota Super Long Life Coolant is premixed with 50% coolant and 50% deionized water. Funnel (used only for adding coolant)
Engine oil level	(→P. 261)	Toyota Genuine Motor Oil or equivalent Rag or paper towel, funnel (used only for adding oil)
Fuses	(→P. 286)	Fuse with same amperage rating as original
Radiator and condense	er (→P. 267)	_
Tire inflation pressure	(→P. 276)	Tire pressure gauge Compressed air source
Washer fluid	(→P. 271)	Water washer fluid containing antifreeze (for winter use) Funnel

A CAUTION

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury observe the following precautions.

When working on the engine compartment

- Keep hands, clothing, and tools away from the moving fan and engine drive belt.
- Be careful not to touch the engine, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper or rags, in the engine compartment.
- Do not smoke, cause sparks or expose an oper flame to fuel or the battery. Fuel and battery fumes are flammable.
- Be extremely cautious when working on the battery. It contains poisonous and corrosive sulfuric acid.
- Take care because brake fluid car your hands or eyes and damage painted surfaces.

If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately.

If you still experience discomfort, see a doctor.

■ When working near the electric cooling fan or radiator grille

Be sure the engine switch is OFF.

With the engine switch in ON mode, the electric cooling fan may automatically start to run if the air conditioning is on and/or the coolant temperature is high. (→P. 267)

Safety glasses

Wear safety glasses to prevent flying or falling material, fluid spray, etc. from getting in the eyes.

NOTICE

If you remove the air cleaner

Driving with the air cleaner removed may cause excessive engine wear due to dirt in the air. Also a backfire could cause a fire in the engine compartment.


If the fluid level is low or high

It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.

If the reservoir needs frequent refilling, it may indicate a serious problem.

Aot For Reproduction

Release the lock from the inside of the vehicle to open the hood.

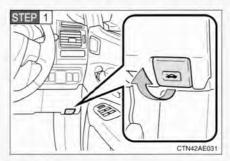


Pull the hood release lever.

The hood will pop up slightly.



Push the hoo catch to the left

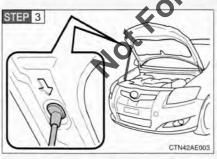

Hold the hood open by inserting the supporting rod into the slot.



A CAUTION

■ Pre-driving check

Check that the hood is fully closed and locked.

If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

■After installing the support rod into the slot

Make sure the rod supports the hood securely from falling down on to your head or body.




When closing the hood

Mhen closing the hood

Be sure to return the support rod to its clip before closing the hood. Closing the hood with the support rod up could accept the beauty to the bood. the hood with the support rod up could cause the hood to bend.

When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.


Front

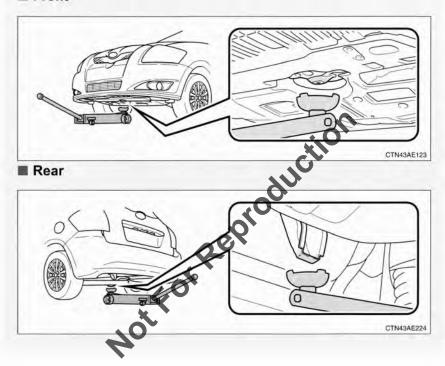




When raising your vehicle

Make sure to observe the following to reduce the possibility of death or serious injury.

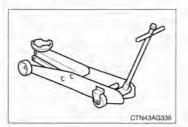

 Lift up the vehicle using a floor jack such as the one shown in the illustration.

- Do not use the jack that was supplied with your vehicle.
- Do not put any part of your body or get anderneath the vehicle supported only by the floor jack.
- Always use automotive jack stands on a solid, level surface.
- Do not start the engine while the encicle is supported by the floor jack.
- Stop the vehicle on level firm ground, firmly set the parking brake and put the shift lever in P (automatic transmission) or R (manual transmission).
- Make sure to set the foor jack properly at the jack point.
 Raising the vehicle with an improperly positioned floor jack will damage the vehicle and may cause the vehicle to fall off the floor jack.
- Do not raise the vehicle while someone is in the vehicle.
- When raising the vehicle, do not place any objects on top of or underneath the floor jack.

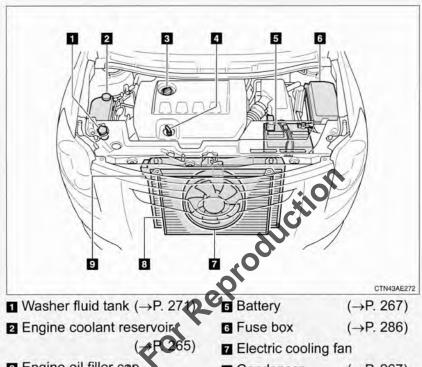

- Washer fluid tank (→P. 271)
- 2 Engine coolant reservoir
- 3 Engine oil filler cap
- (→P. 262)
- 4 Engine oil level dipstick (→P. 261)

(→P. 267)


(→P. 286)

8 Condenser (→P. 267)


9 Radiator (→P. 267)

Engine compartment cover

Removing the engine compartment cover

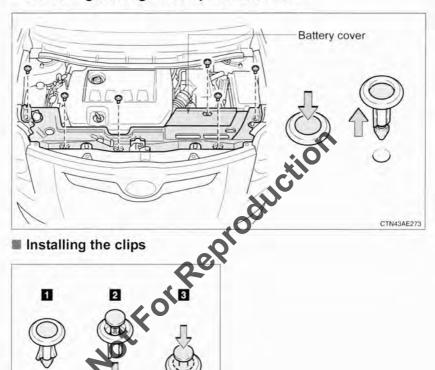

Installing the clips

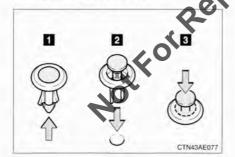

Engine oil

With the engine at operating temperature and turned off, check the oil level on the dipstick.


Checking the engine oil

STEP 1 Park the vehicle on level ground. After turning off the engine, wait more than five minutes for the oil to drain back into the bottom of the engine.




Hold a rag under the end and pull the dipstick out.

- STEP 3 Wipe the dipstick clean.
- STEP 4 Reinsert the dipstick fully.
- STEP 5 Holding a rag under the end, pull the dipstick out and check the oil level.
- STEP 6 Wipe the dipstick and reinsert it fully.

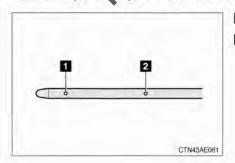

- 1 Low
- 2 Full

Adding engine oil

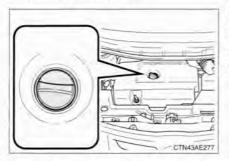

If the oil level is below or near the low level mark, add engine oil of the same type as already in the engine.

Make sure to check the oil type and prepare the items needed before adding oil.

Oil grade	20W-50 and 15W-40: API grade SL or SM multigrade engine oil 10W-30, 5W-30, 5W-20 and 0W-20: API grade SL "Energy-Conserving", SM "Energy-Conserving" or ILSAC multigrade engine oil
Items	Clean funnel

STEP 1 Remove the of filler cap.


STEP 2 Add engine oil slowly, checking the dipstick.

STEP 3 Install the filler cap, turning it clockwise.

The approximate quantity of oil needed to raise the level between low and full on the dipstick is indicated as follows:


1.5 L (1.6 qt., 1.3 lmp. qt.)

■ Recommended viscosity

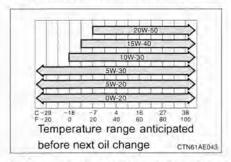

■ How to read oil container labels

One or both API registered marks are added to some oil containers to help you select the proper oil.

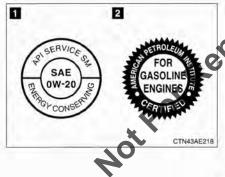

■ API Service Symbol

top portion: The oil quality designation by API (American Petroleum Institute) (SM)

Center portion: The SAE viscosity grade (SAE 0W-20)

Lower portion: "Energy-Conserving" means that the oil has fuel-saving capabilities.

ILSAC Certification Mark

The ILSAC (International Lubricant Standardization and Approval Committee) Certification Mark is displayed on the front of the container.

Engine oil consumption

- The amount of engine oil consumed depends on the oil viscosity, the quality of the oil and the way the vehicle is driven.
- More oil is consumed under driving conditions such as high speeds and frequent acceleration and deceleration.
- A new engine consumes more oil.
- When judging the amount of oil consumption, keep in mind that the oil may have become diluted, making it difficult to judge the true level accurately.
- Oil consumption: Max. 1.0 L per 1000 km (1.1 qt./605 miles. 0.9 lmp. qt./ 600 miles)
- If you consume more than 1.0 L (1.1 qt., 0.9 lmo) qt.) every 1000 km (600 Reprodit miles), contact your Toyota dealer.

A CAUTION

■ Used engine oil

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation or skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground. Call your Toyota dealer, service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.

A NOTICE


To prevent serious engine damage

Check the oil level on regular basis.

- When replacing the engine oil
 - Be careful not to spill engine oil on the vehicle components.
 - Avoid overfilling, as the engine could be damaged.
 - Check the oil level on the dipstick every time you refill the vehicle.
 - Be sure the engine oil filler cap is properly tightened.

Engine coolant

The coolant level is satisfactory if it is between the "FULL" and "LOW" lines on the reservoir when the engine is cold.

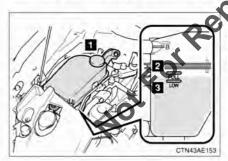

- Reservoir cap
- 2 "FULL"
- 3 "LOW"

If the level is on or below the "LOW" line, add coolant up to the "FULL" line.

If the coolant level drops within a short time after replenishing

Visually check the radiator, hoses, engine coolant filler cap, radiator cap, drain cock and water pump.

If you cannot find a leak, have your Toyota dealer test the cap and check for leaks in the cooling system.

■ Coolant selection

Only use "Toyota Super Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

"Toyota Super Long Life Coolant" is a mixture of 50% coolant and 50% deionized water. (Enabled: -35°C [-31°F])

For more details about engine coolant, contact your Toyota dealer.

CAUTION

When the engine is hot



When the engine is hot

Do not remove the coolant reservoir cap.

The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing burns or other injuries.



When adding engine coolant

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

If you spill coolant

Be sure to wash it off with water to prevent damage to parts or paint.

Radiator and condenser

Check the radiator and condenser and clear any foreign objects. If any of the above parts are extremely dirty or you are not sure of their condition, have your vehicle checked by your Toyota dealer.



A CAUTION


■ When the engine is hot

Do not touch the radiator or condenser as they may be hot and may cause roduction burns.

Battery

Battery exterior


Make sure that the battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.

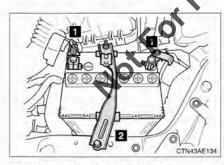

Terminals

2 Hold-down clamp

Checking battery fluid

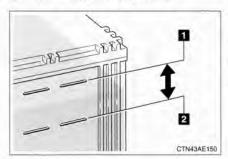


Check that the level is between the upper line and the lower line.

- 1 Upper line
- 2 Lower line

If the fluid level is at or below the lower line, add distilled water.

Adding distilled water

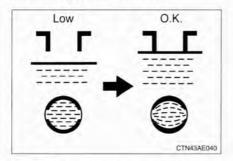

- STEP 1 Remove the vent plug.
- STEP 2 Add distilled water.

If the upper line cannot be seen, check the fluid level by looking directly at the cell. directly at the cell.

STEP 3 Put the vent plug back on and close securely.

268

■ Before recharging

When recharging, the battery produces hydrogen gas which is flammable and explosive. Therefore, before recharging:

- If recharging with the battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the battery.

After recharging/reconnecting the battery (vehicles with a smart entry & start system)

In some cases, the engine may not start. Follow the precedure bellow to initialize the system.

- STEP 1 Shift the shift lever to P (automatic transhission) or depress the brake pedal with the shift lever in N (martial transmission), and turn the "ENGINE START STOP" switch OFF.
- STEP 2 Open and close any of the doors
- STEP 3 Start the engine. (If the engine does not start first time, repeat the procedure.)

If the engine will not start even after multiple attempts at the above method, contact your Toyota dealer.

A CAUTION

■ Chemicals in the battery

A battery contains poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near battery:

- Do not cause sparks by touching the battery terminals with tools.
- Do not smoke or light a match near the battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the battery.
- Keep children away from the battery.

■ Where to safety charge the battery

Always charge the battery in an open area. Do not charge the battery in a garage or closed room where there is not sufficient ventilation.

■ Emergency measures regarding electrolyte

- If electrolyte gets in your eyes
 Flush your eyes with clear water for at least 15 minutes and get immediate medical attention. It possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin
 Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes
 It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte
 Drink a large quantity of water or milk. Follow with milk of magnesia, beaten raw egg or vegetable oil. Get emergency medical attention immediately.

A

NOTICE

When recharging the battery

Never recharge the battery while the engine is running. Also, be sure all accessories are turned off.

When adding distilled water

Avoid overfilling. Water spilled during battery recharging may cause corrosion.

Washer fluid


Vehicles with a headlight cleaner



If the fluid level is extremely low add washer fluid.

Raise the cap keeping your finger pressed down on the hole in the center and check the fluid level in the tube.

► Vehicles without a headlight cleaner

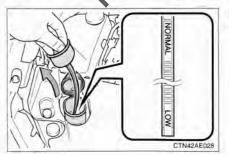

If the washer fluid level is at "LOW" add washer fluid.



A CAUTION

■ When refilling the washer fluid

Do not refill the washer fluid when the engine is hot or running, as the washer fluid contains alcohol and may catch fire if spilled on the engine etc.



NOTICE

Do not use any fluid other than washer fluid


Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surfaces.

Diluting washer fluid

Dilute washer fluid with water as necessary Refer to the freezing temperatures listed on the washer fluid tank.

Replace the tires when the treadwear indicators show.

Checking tires

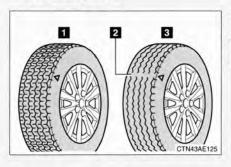


- New tread
- 2 Treadwear indicator
- Worn tread

The location of treadwear indicators is shown by the "TWI" or "\(\triangle \)" marks, etc., molded on the sidewall of each tire.

Check spare the condition and inflation pressure if not rotated.

■ Tire rotation


▶ Vehicles with aluminium wheel tires

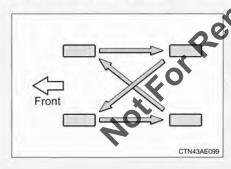

Rotate the tires in the order shown.

To equalize tire wear and help extend tire life, Toyota recommends that you rotate your tires approximately every 10000 km (6000 miles).

Vehicles with steel wheel tires

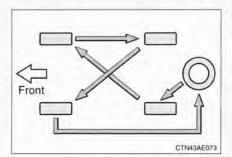

Rotate the tires in the order shown.

To equalize tire wear and help extend tire life, Toyota recommends that you rotate your approximately every 10000 km (6000 miles).

When to replace your vehicle's tires

- When to replace your vehicle's tires

 Tires should be replaced if:

 You have tire damage such as cots, splits, cracks deep enough to expose the fabric or bulges indicates interest descent expose the fabric or bulges indicating internal damage
- A tire goes flat repeatedly of cannot be properly repaired due to the size or location of a cut or other damage

If you are not sure, consult with your Toyota dealer.

Tire life

Any tire over 6 lears old must be checked by a qualified technician even if they have seldom or never been used or damage is not obvious.

If the tread wears down 4 mm (0.16 in.) or more on snow tires

The effectiveness of snow tires is lost.

A CAUTION

■ When inspecting or replacing tires

Observe the following precautions to prevent accidents.

Failure to do so may cause damage to parts of the drive train, as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

- Do not mix tires of different makes, models or tread patterns. Also, do not mix tires of remarkably different treadwear.
- Do not use tire sizes other than those recommended by Toyota.
- Do not mix differently constructed tires (radial, bias belted or bias-ply tires).
- Do not mix summer, all season and winter tires.
- Do not use tires that have been used on another vehicle. Do not use tires if you do not know how they were used previously. Rep

NOTICE

Driving on rough roads

Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire air pressure, reducing the cushioning ability of the tres. In addition driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.

If tire inflation pressures become low while driving

Do not continue driving, or your tires and/or wheels may be ruined.

Tire inflation pressure

Make sure to maintain the proper tire inflation pressure. Tire inflation pressure should be checked at least once per month. However, Toyota recommends that tire inflation pressure be checked once every two weeks. (→P. 366)

Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel efficiency

Reduced driving comfort and tire life
Reduced safety
Damage to the drive train
If a tire needs frequent refilling, have it chesked by your Toyota dealer.

Instructions for checking tire inflation pressure

When checking tire inflation pressure, observe the following:

- Check only when the tires are cold. If your vehicle has been barked for at least 3 hours and has not been driven for more than 3.5 km or 1 mile, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge. The appearance of the tire can be misleading. In addition, tire inflation pressures that are even just a few pounds off can degrade ride and handling.
- Do not bleed or reduce tire inflation pressure after driving. It is normal for the tire inflation pressure to be higher after driving.
- Never exceed the vehicle capacity weight. Passengers and luggage weight should be placed so that the vehicle is balanced.

A CAUTION

■ Proper inflation is critical to save tire performance

Keep your tires properly inflated. Otherwise, the following conditions may occur and result in an accident causing death or serious injury.

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Poor sealing of the tire bead

A greater possibility of tire damage from road hazard: NOTICE When inspecting and adjusting a second control of the separation When inspecting and adjusting tienflation pressure

Be sure to reinstall the tire valve caps.

Without the valve caps, dirt or moisture could get into the valve and cause air leakage, which could result in an accident. If the caps have been lost, replace them as soon as possible.

Wheels

If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause loss of handling control.

Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width, and offset.

Replacement wheels are available at your Toyota dealer.

Toyota does not recommend using:

- Wheels of different sizes or types
- Used wheels
- action • Bent wheels that have been straightened

Aluminum wheel precautions (if equipped)

- Use only Toyota wheel not and wrenches designed for use with your aluminum wheels.
- When rotating, regaring or changing your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- Be careful not to damage the aluminum wheels when using tire chains.
- Use only Toyota genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.

A CAUTION


■ When replacing wheels

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing serious injury or death.


The air conditioning filter must be cleaned or changed regularly to maintain air conditioning efficiency.

Removal method


STEP 1 Turn the "ENGINE START STOP" switch or the engine switch OFF.

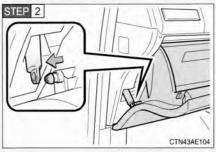

Open the glove box. Slide off the damper.

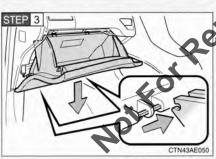


If the glove box to disconnect the claws at the bottom and remove it.

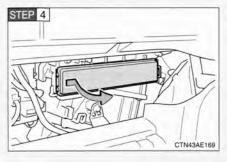

Remove the filter cover.


■ Replacement method

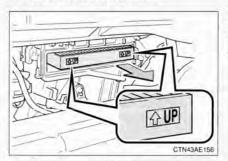

Remove the air conditioning filter and replace it with a new one.

The "↑UP" marks shown on the filter should be pointing up.

Cleaning method

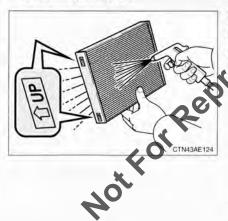

If the filter is dirty, clean by blowing compressed air through the filter from the Townward side.

Hold the air gun 5 cm (2 in.) from the filter and blow for approximately 2 minutes at 500 kPa (5.0 kgf/cm² or bar, 72 psi).

If it is not available, have the filter cleaned by your Toyota dealer.

■ Checking interval

Inspect, clean and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, more frequent cleaning or early replacement may be required. (For scheduled maintenance information, please refer to the "Warranty and Service Booklet".)

If air flow from the vents decreases dramatically

The filter may be clogged. Check the filter and replace if necessary.

1

NOTICE

- To prevent damage to the system
 - When using the air conditioning system, make sure that a filter is always installed.
 - When cleaning the filter, do not clean the filter with water.

Not For Reproduction

4-3. Do-it-yourself maintenance

Key battery


Replace the battery with a new one if it is discharged.

- You will need the following items:
 - Flathead screwdriver (To prevent damage to the key, cover the tip of the screwdriver with rag.)
 - Small Phillips-head screwdriver
 - Lithium battery CR1632 (vehicles with a smart entry & start system), CR2016 (vehicles without a smart entry & start system)

Replacing the battery (vehicles with a smart entry & start system)






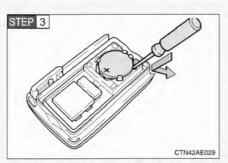


Remove the depleted battery.

Insert a new battery with the "+" terminal facing up.


■ Replacing the battery (vehicles without a smart entry & start system)

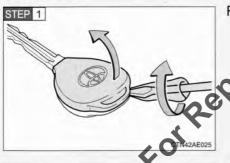

Remove the cover.

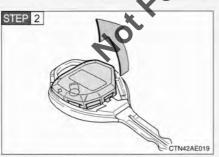

Remove the module.

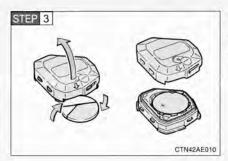

Open the case cover using a coin protected with tape etc. and remove the depleted battery.

Insert a new battery with the "+" terminal facing up.

If the key battery is discharged

The following symptoms may occur.

- The smart entry & start system and wireless remote control will not function properly.
- The operational range is reduced.
- ■Use a CR1632 (vehicles with a smart entry & start system) or CR2016 (vehicles without a smart entry & start system) lithium battery
 - Batteries can be purchased at your Toyota dealer, jewelers, or camera stores.
 - Replace only with the same or equivalent type recommended by your Toyota dealer.
 - Dispose of used batteries according to the local laws.

A CAUTION

Removed battery and other parts

Keep away from children.

These parts are small and if swallowed by a child they can cause choking.



NOTICE

For normal operation after replacing the battery

Observe the following precautions to prevent accidents.

- Always work with dry hands.
 Moisture may cause the battery to rust.
- Do not touch or move any other components inside the remote control.
- Do not bend either of the battery terminals.


Not For Reproduction

Checking and replacing fuses

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.


- STEP 1 Turn the "ENGINE START STOP" switch or the engine switch OFF.
- STEP 2 The fuses are located in the following places. To check the fuses, follow the instructions below.

■ Engine compartment

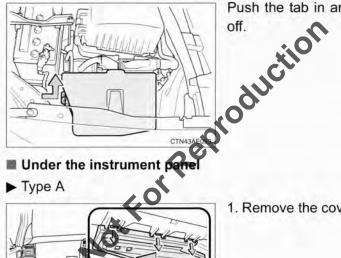


Push the tab in and lift the lid



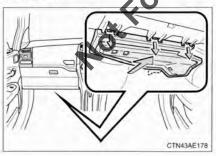


1. Remove the cover.

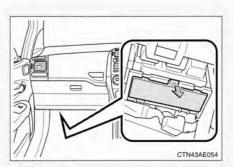

2. Remove the lid.

► Type B

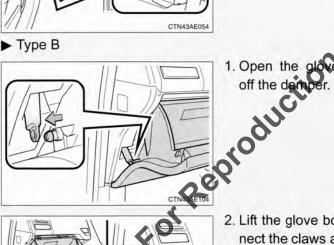


1. Open the glove box. Slide



2. Lift the glove box to disconnect the claws at the bottom and remove it.


STEP 3 After a system failure, see "Fuse layout and amperage ratings" (→P. 290) for details about which fuse to check.

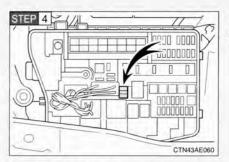

Remove the fuse with the pullout tool.

STEP 5 Check if the fuse has blown.

► Type A

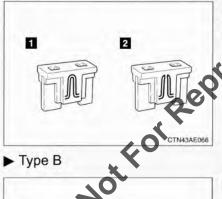


Normal fuse

2 Blown fuse

Replace it with one of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.


► Type B

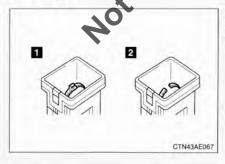

- Normal fuse
- 2 Blown fuse

Replace it with one of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.


► Type C

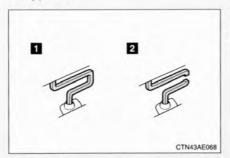

- Normal fuse
- 2 Blown fuse

Contact your Toyota dealer.

► Type D

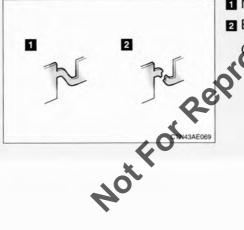


- Normal fuseBlown fuse

Contact your Toyota dealer.

Fuse layout and amperage ratings

■ Engine compartment

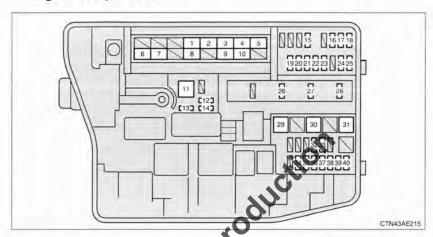


	Fuse	Ampere	Circuit
1	H-LP CLN	30 A	Headlight cleaner
2	RDI FAN	40 A	Electric cooling fan
3	ABS NO. 3	30 A	Anti-lock brake system
4	ABS NO. 1	50 A	Anti-lock brake system
5	HTR	50 A	Air conditioning system
6	ALT	120 A	Charging system, RDI FAN, H-LP CLN, ABS NO. 1, ABS NO. 3, HTR, TAIL, PANEL, FR DOOR, RL DOOR, RR DOOR, SUNROOF, CIG, ACC, IGN, METER, HTR-IG, WIPER, RR WIPER, WASHER, ECU-IG NO.1, ECU-IG NO.2, OBD, STOP, DOOR, ACC-B, FR FOG, AM1, POWER, DEF
7	EPS	60 A	Electric power steering
8	P-SYSTEM		No circuit
9	P/I	50 A	EFI MAIN, HORN, IG2

Fuse		Ampere	Circuit	
10	H-LP MAIN	50 A	H-LP LH LO, H-LP RH LO, H-LP LH HI, H-LP RH HI	
11	AMT	-	No circuit	
12	SPARE	10 A	Spare fuse	
13	SPARE	30 A	Spare fuse	
14	SPARE	20 A	Spare fuse	
15	ECU-B2	10 A	Air conditioning system, smart entry & start system	
16	ECU-B	10 A	Main body ECU* ower windows, gauge and meters, power door lock system	
17	RAD NO. 1	15 A	Audio system	
18	DOME	10 A	Interior lights, luggage compart- ment light, vanity lights, smart ent & start system, wireless remote control	
19	19 AM2 NO. 2 AM2 Main body ECU		Main body ECU	
20	20 ALT-S 7.		Charging system	
21 TURN-HAZ 10 A Turn signal lights, emergence flashers		Turn signal lights, emergency flashers		
22	ETCS	10 A	Electronic throttle control system	
23	AM2	30 A	Starting system	
24	STRG LOCK	20 A	Steering lock system	
25	IGT/INJ	-	No circuit	
26	그러워 [10]			
27	HORN	10 A	Horn	
28	IG2	15 A	Starting system, IGN, METER, multiport fuel injection system/ sequential multiport fuel injection	

Fuse		Ampere	Circuit	
29	HTR SUB NO. 1	_	No circuit	
30	HTR SUB NO. 2		No circuit	
31	HTR SUB NO. 3	_	No circuit	
32	FR DEICER	-	No circuit	
33	ABS NO. 2	_	No circuit	
34	IG2 NO.2	7.5 A	Starting system	
35	EFI NO. 2	10 A	Multiport fuel injection system/ sequential multiport fuel injection	
36	EFI NO. 1	10 A	Multiport fuel injection system/ sequential multiport fuel injection	
37	H-LP RH HI	10 A	Right hand headlight (high beam)	
38	H-LP LH HI	10 A	Leteland headlight (high beam)	
39	H-LP RH LO	10 A*1	Right-hand headlight (low beam)	
40	H-LP LH LO	10 A*1 15 A*2	Left-hand headlight (low beam)	

^{*1:} Vehicles with discharge headlights (low beam)
*2: Vehicles with discharge headlights (low beam)

■ Under the instrument panel (type A)

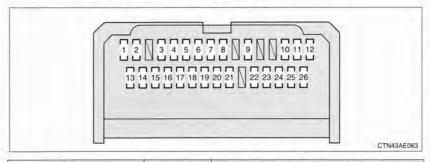


Fuse		Ampere	Circuit	
1	TAIL	10 A	Front position lights, tail lights, license plate lights, front fog lights, manual headlight leveling dial, instrument cluster lights, multiport fuel nijection system/sequential multiport fuel injection	
2	PANEL	7.5 A	Switch illumination, instrument cluster lights, glove box light, steering switches	
3	FR DOOR	20 A	Power windows	
4	RL DOOR	20 A	Power windows	
5	RR DOOR	20 A	Power windows	
6	SUNROOF	20 A	Electric moon roof	
7	CIG	15 A	Cigarette lighter, power outlet	
8	ACC	7.5 A	Outside rear view mirrors, audio system, main body ECU, smart entry & start system	
9	MIR HTR	_	No circuit	
10	RR FOG	= 11	No circuit	
11	IGN	7.5 A	Steering lock system, SRS airbag system, multiport fuel injection sys- tem/sequential multiport fuel injec- tion, smart entry & start system	

Fuse		Ampere	Circuit	
12	METER	7.5 A	Gauge and meters	
13	SEAT HTR	-	No circuit	
14	HTR-IG	10 A	Air conditioning system, rear window defogger	
15	WIPER	25 A	Windshield wipers, rain sensor	
16	RR WIPER	15 A	Rear window wiper	
17	WASHER	15 A	Windshield washer	
18	ECU-IG NO. 1	10 A	Automatic headlight leveling system, main body ECU, electric power steering electric cooling fan, shift lock control system, rain sensor, anti-lock brake system, audio system, multiport fuel injection system/sequential multiport fuel injection, headlight cleaner	
19	ECU-IG NO. 2	10 A	Back-up lights, charging system, auto anti-glare inside rear view mirror, electric moon roof, rear window defogger, air conditioning system, turn signal lights, emergency flashers, front passenger's seat belt reminder light	
20	OBD	7.5 A	On-board diagnosis system	
21	STOP	10 A	Stop lights, high mounted stop- light, anti-lock brake system, main body ECU, multiport fuel injection system/sequential multiport fuel injection	
22	DOOR	25 A	Power door lock system	
23	ACC-B	25 A	CIG, ACC	
24	4WD	-	No circuit	
25	FR FOG	15 A	Front fog lights	

	Fuse	Ampere	Circuit
26	AM1	7.5 A	Starting system, shift lock control system

Not For Reproduction

■ Under the instrument panel (type B)

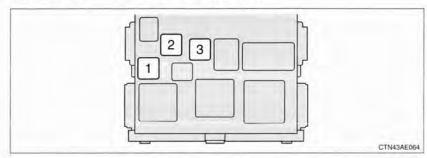

	Fuse	Ampere	Circuit
1	POWER	30 A	Power windows
2	DEF	30 A	Rear window defogger
3	PWR SEAT	_	No circuit

After a fuse is replaced

- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. P. 298)
- If the replaced fuse blows again, have the vehicle inspected by your Toyota dealer.

If there is an everload in the circuits

The fuses are designed to blow before the entire wiring harness is damaged.

A CAUTION

■To prevent system breakdowns and vehicle fire

Observe the following precautions.

Failing to do so may cause damage, and possibly a fire or injury.

- Never use a fuse of a higher amperage rating than indicated, or use any other object in place of a fuse.
- Always use a genuine Toyota fuse or equivalent. Never replace a fuse with a wire, even as a temporary fix. Roduction This can cause extensive damage or even fire.
- Do not modify the fuse or the fuse box.

NOTICE

Before replacing fuses


Have the cause of electrical overload determined and repaired by your Toyota dealer as soon as possible. HotFor

You may replace the following bulbs yourself. The difficulty level of replacement varies depending on the bulb. If necessary bulb replacement seems difficult to perform, contact your Toyota dealer.


For more information about replacing other light bulbs, contact your Toyota dealer.


- Prepare a replacement light bulb. Check the wattage of the light bulb being replaced. (→P. 367)
- Remove the engine compartment cover.

→P. 260

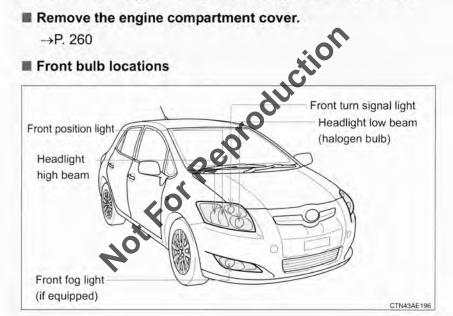


Rear bulb locations

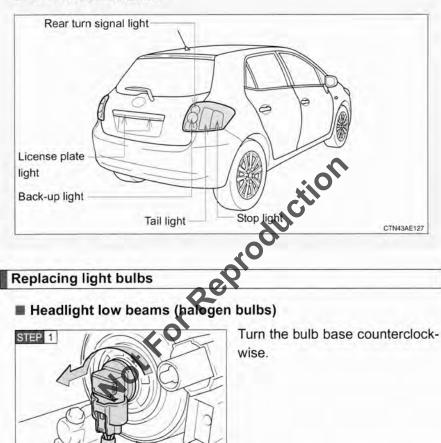

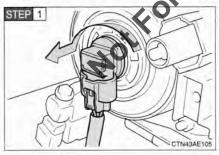


Turn the bulb base counterclock-

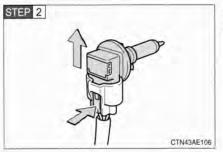


Unplug the connector depressing the lock release.

Headlight high beams

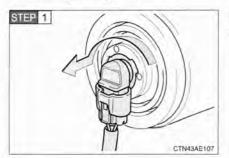


Turn the bulb base counterclockwise.

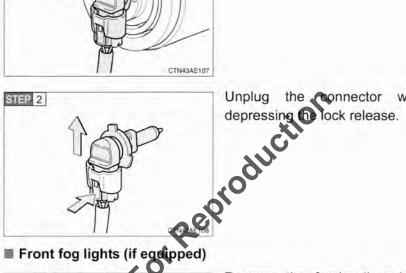


Front fog lights (if equipped)




Remove the fender liner bolts and clip.

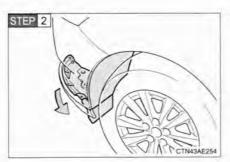

Remove the fender liner.

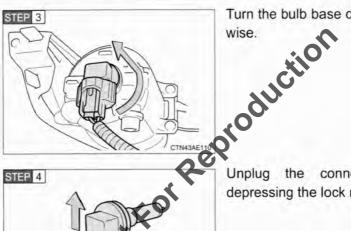

Turn the bulb base counterclock-

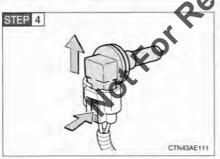


Unplug the connector while depressing the lock release.

Front position lights


STEP 1 Perform the following procedures.

▶ Left side

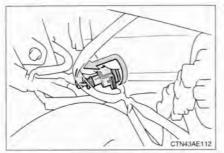


Turn the bulb base counterclockwise.

▶ Right side

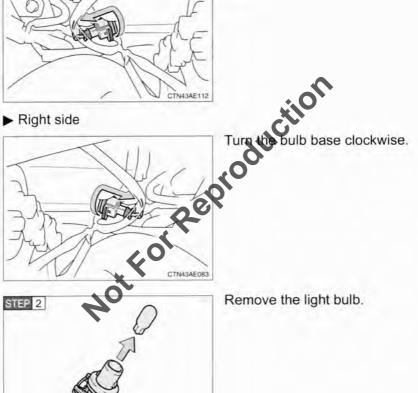





Front turn signal lights

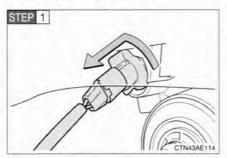


Turn the bulb base counterclockwise.

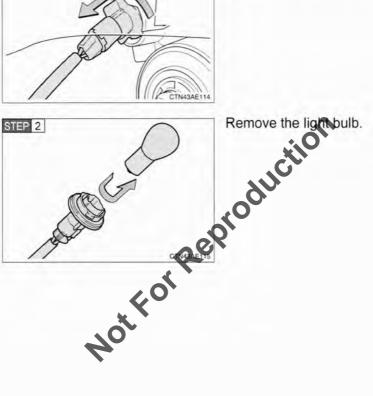

■ Back-up lights, tail lights, stop lights and rear turn signal lights

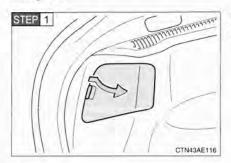


Open the back door and remove the cover.

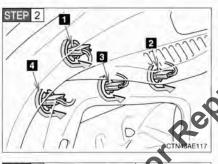

Turn the bull pase counterclockwise.


- Rear turn signal light
 - 2 Stop light
- Tail light
- 4 Back-up light

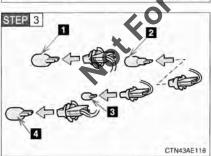

Remove the light bulb.


- 1 Rear turn signal light
- Stop light
- 3 Tail light
- 4 Back-up light

■ License plate lights

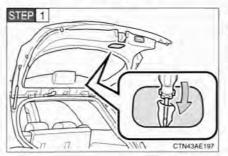


Open the back door and remove the cover.

To protect the cover, place a rag between the flathead screwdriver and the cover, as shown in the illustration.

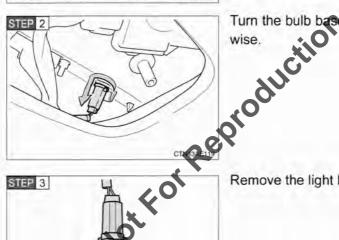

Turn the bulb base counterclock-

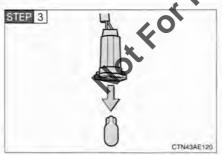

Remove the light bulb.

Lights other than the above

If any of the lights listed below has burnt out, have it replaced by your Toyota dealer.


- Headlight low beams (discharge bulb)
- Side turn signal lights
- High mounted stoplight

When replacing the left side headlight, front position light and front turn signal light bulbs

Remove the securing clip and the upper of the air cleaner duct to allow easy access to the light bulbs.

After replacing the bulbs, make sure to firmly install the upper portion of the air cleaner duct and secure it with the clip.

Remove the upper of the air cleaner duct

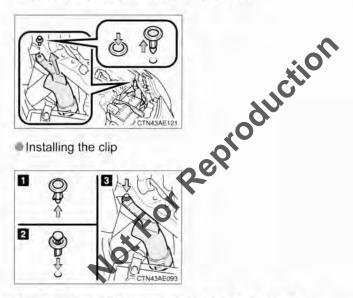

Condensation build-up on the inside of the lens

Contact your Toyota dealer for more information in the following situations. Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction.

- Large drops of water are built up on the inside of the lens.
- Water has built up inside the headlight.

■ Discharge headlights (if equipped)


If voltage to the discharge bulbs is insufficient, the bulbs may not come on, or may go out temporarily. The discharge bulbs will come on when normal power is restored.

LED high mounted stoplight

The high mounted stoplight consists of a number of LEDs. If any of the LEDs burn out, take your vehicle to your Toyota dealer to have the light replaced.

If four or more LEDs in a stop light burn out, your vehicle may not conform to local laws (ECE).

Installing the fender liner clip

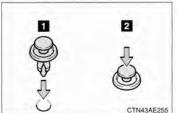

Install the clip.

CTN43AE255

CTN43AE255

ROT REPRODUCTION

A CAUTION

Replacing light bulbs

Turn off the headlights. Do not attempt to replace the bulb immediately after turning off the headlights.

The bulbs become very hot and may cause burns.

Do not touch the glass portion of the light bulb with bare hands. Hold the bulb by the plastic or metal portion.

If the bulb is scratched or dropped it may blow out or crack.

- Fully install light bulbs and any parts used to secure them. Failing to do so may result in heat damage, fire, or water entering the headlight unit. This may damage the headlights or cause condensation to build up on the lens.
- Do not attempt to take apart or repair the low beam discharge headlight bulbs, connectors, power supply circuits, or related components.
 Doing so could result in electric shock and serious injury or death.

■ Discharge headlights (if equipped)

- Contact your Toyota dealer before replacing discharge headlights (including light bulbs).
- Do not touch the high-intensity discharge headlight's high voltage socket when the headlights are nimed on.

An extremely high vortage of 20000 V will be discharged and could result in serious injury of death by electric shock.

■ To prevent damage or fire

Make sure bulbs are fully seated and locked.


When trouble arises

5

5-1.	Essential information		5-2
	Emergency flashers	310	
	If your vehicle needs to		
	be towed	311	
	If you think something		
	is wrong	318	4
	Fuel pump shut off		0
	system	349 @	
		4 -	
	1.0),	
	70		

320
324
332
340
342
343
344
347
351
354

Use the emergency flashers if the vehicle malfunctions or is involved in an accident.

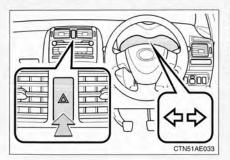

Press the switch to flash all the turn signal lights. To turn them off, press the switch once again.

NOTICE

To prevent battery discharge

roduction Do not leave the emergency flashers on longer than necessary when the engine is not running.

If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by your Toyota dealer or a commercial towing service, using a lift-type truck or a flat bed truck.

Use a safety chain system for all towing, and abide by all state/provincial and local laws.

If towing from the front, the vehicle's rear wheels and axles must be in good condition. (\rightarrow P. 315)

If they are damaged, use a towing dolly or flat bed truck.

Before towing


The following may indicate a problem with your transmission. Contact your Toyota dealer before towing.

- The engine is running, but the vehicle will not move.
- The vehicle makes an abnormal sound.

Emergency towing

If a tow truck is not available, in an emergency your vehicle may be temporarily towed using a cable or chain secured to the emergency towing eyelet(s). This should only attempted on hard, surfaced roads for short distances at low speeds.

A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.

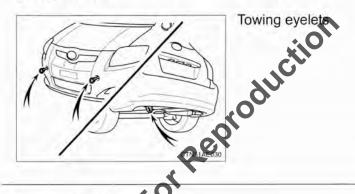

■ Emergency towing procedure

STEP 1 Release the parking brake.

STEP 2 Shift the shift lever to N.

STEP 3 ▶ Vehicles without a smart entry & start system

Put the engine switch in the "ACC" (engine off) or "ON" position (engine running).

▶ Vehicles with a smart entry & start system

Put the "ENGINE START STOP" switch in ACCESSORY (engine off) or IGNITION ON mode (engine running).

A CAUTION

Caution while towing


- Use extreme caution when towing the vehicle. Avoid sudden starts or erratic driving maneuvers which place excessive stress on the emergency towing eyelets and the cables or chains.
- If the engine is not running, the power assist for the brakes and steering will not function, making steering and braking more difficult.

NOTICE

To prevent causing serious damage to the transmission (vehicles with an automatic transmission)


Never tow this vehicle from the rear with the foot wheels on the ground. This may cause serious damage to the transmission.

Installing towing eyelets

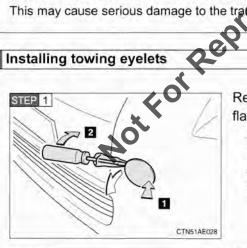


Remove the eyelet cover using a flathead screwdriver.

To protect the bodywork, place a rag between the screwdriver and the vehicle body, as shown in the illustration.

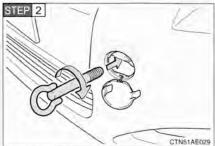

Insert the towing eyelet into the hole and tighten partially by hand.

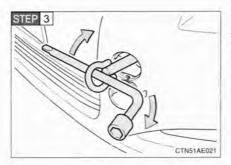

Tighten down the towing eyelet securely using a wheel nut wrench.

■ Installing towing eyelets to the vehicle

Make sure that towing eyelets are from

If not securely installed, towing may lead to accident If not securely installed, towing eyelets may come loose during towing. This may lead to accidents that cause serious injury or even death.



Towing with a sling-type truck




NOTICE

To prevent body damage

duction Do not tow with a sling-type truck, either too the front or rear.

Towing with a wheel lift-type truck from the front

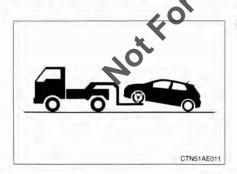


Release the parking brake.

NOTICE

To prevent damaging the vehicle

When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.

Towing with a wheel lift-type truck from the rear

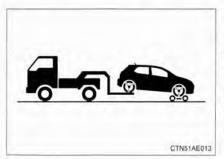

Vehicles with an automatic transmission: Use a towing dolly under the front wheels.

Vehicles with a manual transmission: We recommend to use a towing dolly under the front wheels.

Vehicles without a smart entry & start system: When not using a towing dolly, turn the engine switch to the "ACC" and shift the shift lever to N.

Vehicles with a smart entry & start system: When not using a towing dolly, turn the "ENGINE START STOP" switch to ACCESSORY mode and shift the shift lever to N.

Not For Repr

NOTICE

To prevent causing serious damage to the transmission (vehicles with an automatic transmission)

Never tow this vehicle from the rear with the front wheels on the ground.

- When towing a vehicle without using a towing dolly (vehicles with a manual transmission)
 - Vehicles without a smart entry & start system.

The engine switch must not be OFF.


The steering lock mechanism is not strong enough to hold the front wheels straight.

Vehicles with a smart entry & start system

The "ENGINE START STOP" switch must not be OP

The steering lock mechanism is not strong enough to hold the front wheels straight.

Using a flat bed truck

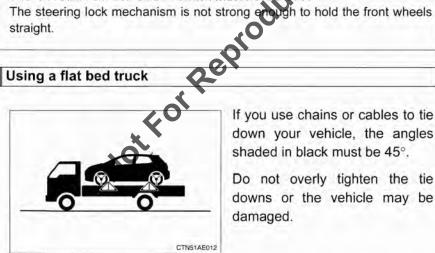

down your vehicle, the angles shaded in black must be 45°.

Do not overly tighten the tie downs or the vehicle may be damaged.

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact your Toyota dealer as soon as possible.

Visible symptoms

- Fluid leaks under the vehicle (Water dripping from the air conditioning after use is normal.)
- Flat-looking tires or uneven tire wear
- Engine coolant temperature gauge continually indicates that uction the temperature is higher than normal

Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system.
- Pinging or other noises related to the engine

Operational symptom

- Engine missing, stumbling or running rough
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

To minimize the risk of fuel leakage when the engine stalls or an airbag inflates upon collision, the fuel pump shut off system stops supplying fuel to the engine.

Follow the procedure below to restart the engine after the system is activated.

- ▶ Vehicles without a smart entry & start system
- STEP 1 Turn the engine switch to the "ACC" or "LOCK" position.
- STEP 2 Restart the engine.
- ▶ Vehicles with a smart entry & start system
- Turn the "ENGINE START STOP" switch to ACCESSORY mode or OFF.

 STEP 2 Restart the engine.

 NOTICE

■ Before starting the engine 🗼

Inspect the ground under the vehicle.

If you find that fuel has leaked on to the ground, the fuel system has been damaged and is in need of repair. Do not restart the engine.

Calmly perform the following actions if any of the warning lights turn on or flash. If a light turns on or flashes, but then turns off, this does not necessarily indicate a malfunction in the system.

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

The following warning indicates a possible problem in the brake system. Immediately stop the vehicle in a safe place and contact your Toyota dealer.

Warning light	Warning light/Details
(1)	Brake system warning light (wa)ning buzzer)* Indicates the following: • The brake fluid level is low, or • The brake system is mainunctioning. This light also comes on when the parking brake is not released. If the light turns off after the parking brake is fully released the system is operating normally.

*: Parking brake engaged warning buzzer:

The buzzer sounds to indicate that the parking brake is still engaged (with the vehicle having reached a speed of 5 km/h [3 mph]).

Stop the vehicle immediately.

The following warnings indicate the possibility of damage to the vehicle that may lead to an accident. Immediately stop the vehicle in a safe place and contact your Toyota dealer.

Warning light	Warning light/Details
==	Charging system warning light Indicates a malfunction in the vehicle's charging system.
9 - 5/1	Low engine oil pressure warning light (non-Optitron type meters) Indicates that the engine oil pressure is too low.

Have the vehicle inspected immediately.

Failing to investigate the cause of the following warnings may lead to the system operating abnormally and possibly cause an accident. Have the vehicle inspected by your Toyota dealer immediately.

Warning light	Warning light/Details
Ø	Malfunction indicator lamp Indicates a malfunction in: • The electronic engine control system; • The electronic throttle control system; or • The electronic automatic transmission control system.
*	SRS warning light Indicates a malfunction in: • The SRS airbag system; or • The seat belt pretensione system.
(ABS)	ABS warning light Indicates a malfunction in: The ABS; or The brake assist system (vehicles with a VSC only).
P/S	Electric power steering warning light Indicates a malfunction in the EPS (Electric Power Steering) system.
(If equipped)	Automatic headlight leveling system warning light Indicates a malfunction in the automatic headlight leveling system.

Follow the correction procedures.

After taking the specified steps to correct the suspected problem, check that the warning light turns off.

Warning light	Warning light/Details	Correction procedure
•	Open door warning light (non-Optitron type meters) Indicates that a door is not fully closed.	Check that all doors are closed.
	Low fuel level warning light (non-Optitron type meters) Indicates that remaining fuel is about 8.3 L (2.2 gal., 1.8 lmp. gal.) or less	Refuel the vehicle.
	Driver's seat belt reminder light (warning buzzer) Warns the driver to fasten his/het seat belt.	Fasten the seat belt.
(On the center panel)	Front passenger's seat belt reminder light (warning buzzer)* Warns the front passen- ger to fasten his or her seat belt.	Fasten the seat belt.

Warning light	Warning light/Details	Correction procedure
\triangle	Master warning light (Optitron type meters) A buzzer sounds and the warning light comes on and flashes to indicate that the master warning system has detected a malfunction.	→P. 324

: Driver's and front passenger's seat belt reminders:

The driver's and front passenger's seat belts reminder sounds to alert the driver and front passenger that his or her seat belt is not fastened. The buzzer sounds for 30 seconds after the vehicle has reached a speed of at least 20 km/h (12 mph). Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 90 more seconds.

If the malfunction indicator lamp comes on while driving

The malfunction indicator lamp will take on if the fuel tank becomes completely empty. If the fuel tank is empty, refuel the vehicle immediately. The malfunction indicator lamp will go off after several trips.

If the malfunction indicator lamp does not go off, contact your Toyota dealer as soon as possible.

Front passenger detection sensor and passenger seat belt reminder

- If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash, even if a passenger is not sitting in the seat.
- If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.


A CAUTION

■When the electric power steering warning light comes on

The steering wheel may become extremely heavy.

If the steering wheel becomes heavier than usual when operating, firmly hold and operate it using more force than usual.

If a warning is shown on the multi-information display, stay calm and perform the following actions:

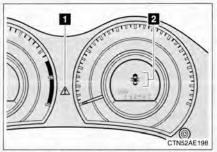

Master warning light


The master warning light also comes on or flashes in order to indicate that a message is currently being displayed on the multi-information display.

Multi-information display

If any of the warning lights turns on again after performing the following actions, contact your Toyota dealer.

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

The following warning indicates a possible problem in the brake system. Immediately stop the vehicle in a safe place and contact your Toyota dealer.

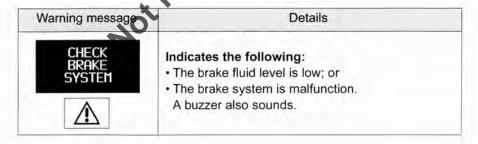

Stop the vehicle immediately.

The following warnings indicate the possibility of damage to the vehicle that may lead to an accident. Immediately stop the vehicle in a safe place and contact your Toyota dealer.

Details
Indicates an abnormal engine oil pressure. A buzzer also sounds. The warning light may turn on if the engine oil pressure is too low.
Indicates a malfunction in the vehicle's charging system. A buzzer also sounds.
Foi

Have the vehicle inspected immediately.

Failing to investigate the cause of the following warnings may lead to the system operating abnormally and possibly cause an accident. Have the vehicle inspected by your Toyota dealer immediately.

Warning message	Details
CHECK STEERING LOCK (Vehicles with a smart entry & start system)	Indicates a malfunction in the steering lock system. A buzzer also sounds.
CHECK A I RBAG	Indicates a malfunction in: The SRS aimag system; or The seat-belt pretensioner system. A buzzer also sounds.
CHECK	Indicates a malfunction in: • The electronic engine control system; or • The electronic throttle control system. A buzzer also sounds.
CHECK A B S	Indicates a malfunction in: • The ABS; or • The brake assist system. (vehicles with a VSC only) A buzzer also sounds.

Warning message	Details
CHECK V S C	Indicates a malfunction in the TRC and VSC. A buzzer also sounds.

Follow the correction procedures.

After taking the specified steps to correct the suspected problem, check that the warning light turns off.

Warning message	Details	Correction procedure
	Indicates that one or more of the side doors is not fully closed. A overzer also sounds.	Make sure that all of the side doors are closed.
	Indicates that the back door is not fully closed. A buzzer also sounds.	Close the back door.
PARKING BRAKE ENGAGED	Indicates that the parking brake is still engaged with the vehicle having reached a speed of more than 5 km/h (3 mph). A buzzer also sounds.	Release the parking brake.

Warning message	Details	Correction procedure
LOW FUEL	Indicates that remain- ing fuel is approxi- mately 7.8 L (2.1 gal.,	Refuel the vehicle.
\triangle	1.7 Imp. gal.) or less. A buzzer also sounds.	

Follow the correction procedures. (vehicles with a smart entry & start system)

After taking the specified steps to correct the suspected problem, check that the warning light turns off.

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Once	-	KEY NOT DETECTED	Indicates that the electronic key is not present when attempting to start the engine.	Confirm the location of the electronic key.


Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Once	3 times	KEY NOT DETECTED	Indicates that a door other than the driver's door has been opened or closed with the "ENGINE START STOP" switch in any mode other than OFF and the electronic key outside of the detection area	Confirm the location of the electronic key.
Once	3 times	KEY NOT DETECTED Venicles with an automatic transmission)	Indicates that the driver's door has been opened or closed with the shift lever in P, the "ENGINE START STOP" switch in any mode other than OFF and the electronic key outside of the detection area.	Turn the "ENGINE START STOP" switch OFF or confirm the location of the electronic key.

Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Once	Contin- uous	SHIFT TO P POSITION KEY NOT DETECTED JO (Displayed alternately) (vehicles with an automatic transmission)	Indicates that the driver's door has been opened or closed (with the shift lever out of in P, the "ENGINE START STOP" switch in any mode other than OFF and the electronic key outside of the detection area).	Shift the shift lever to P. Confirm the location of the electronic key.
Once	=	LOW KEY BATTERY	Indicates that the key battery is low.	Replace the battery. (→P. 282)
Once		DEPRESS BRAKE PEDAL (Vehicles with an automatic transmission)	Indicates that a door has been opened or closed and the "ENGINE START STOP" switch has been turned twice to ACCESSORY mode with the "ENGINE START STOP" switch OFF.	Press the "ENGINE START STOP" switch while applying the brakes.


Interior buzzer	Exterior buzzer	Warning message	Details	Correction procedure
Once	-	DEPRESS CLUTCH PEDAL (Vehicles with a man- ual transmission)	Indicates that a door has been opened or closed and the "ENGINE START STOP" switch has been switched twice to ACCES-SORY mode from OFF.	Press the "ENGINE START STOP" switch while depressing the clutch pedal.
Once	_	STEERING IS NOT UNLOCKED	Indicates that the seering lock has not eleased within seconds of pressing the "ENGINE START STOP" switch.	Press the "ENGINE START STOP" switch again while turning the steering wheel with the brake pedal depressed.

Remove the flat tire and replace it with the spare provided.


- Before jacking up the vehicle
 - Stop the vehicle on a hard, flat surface.
 - Set the parking brake.
 - Shift the shift lever to P (automatic transmission) or R (manual transmission).
 - Stop the engine.
 - Turn on the emergency flashers.

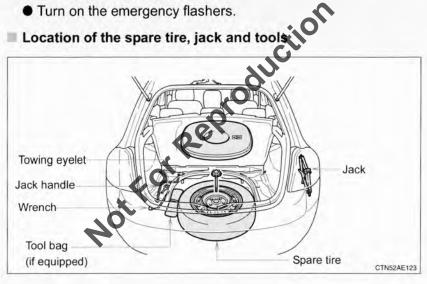


Taking out the jack

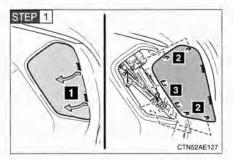

Disengage the claws and remove the cover.

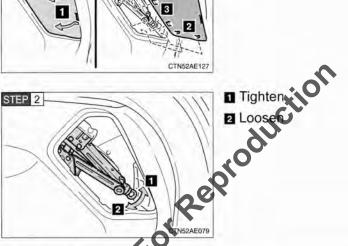


Taking out the spare tire

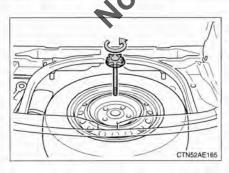

Loosen the center fastener that secures the spare tire.

Replacing a flat tire

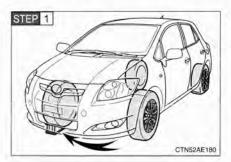


Chock the tires.

Fla	at tire	Wheel chock positions
Front	Left- hand side	Behind the rear right-hand side tire
Front	Fight- hand side	Behind the rear left- hand side tire
Bass	Left- hand side	In front of the front right-hand side tire
Rear	Right- hand side	In front of the front left-hand side tire




Vehicles with a steel wheel: Remove the wheel ornament using the wrench.


To protect the wheel ornament, place a rag between the wrench and the wheel ornament, as shown in the illustration.

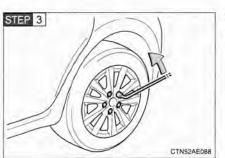


Slightly loosen the wheel nuts (one turn).

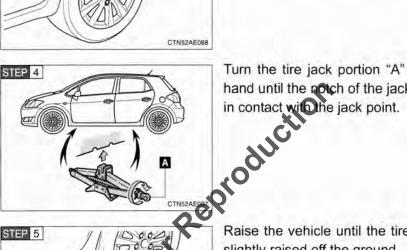

Turn the tire jack portion "A" by hand until the notch of the jack is

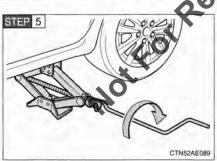


Raise the vehicle until the tire is slightly raised off the ground.

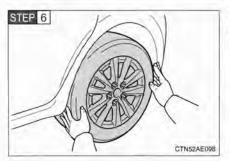

Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

Installing the tire

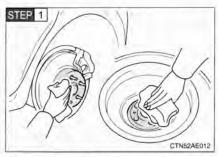


Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, and the tire may come off the vehicle.


STEP 2 Install the tire and loosely tighten each wheel nut by hand by approximately the same amount.

► Replacing a steel wheel with a steel wheel

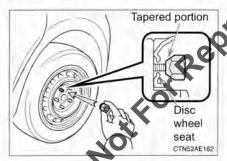


Tonten the nuts until the tapered ortion comes into loose contact with the disc wheel seat.


▶ Replacing an aluminum wheel with a steel wheel

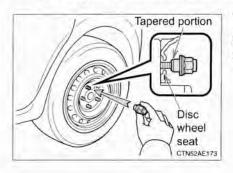

Tighten the nuts until the tapered portion comes into loose contact with the disc wheel seat.

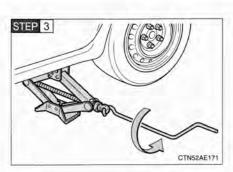


Lower the vehicle.

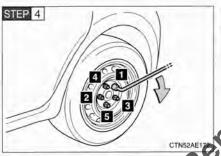

Firmly tighten each nut two or three times in the order shown in the illustration

Tightening torque: 103 Non (10.5 kgf·m, 76 ft·lbf)

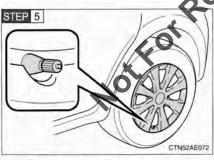

Vehicles with a steel wheel: Reinstall the wheel ornament.

Align the cutout of the wheel ornament with the valve stem as shown.

STEP 6 Stow the flat tire, tire jack and all tools.

A CAUTION

■ Using the tire jack

Improper use of the tire jack may lead to death or serious injuries due to the vehicle suddenly falling off the jack.

- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire.Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.
- Always check that the tire jack is securely set to the fack point.
- Do not put any part of your body under the vehicle supported by a jack. Use vehicle support stands.
- Do not start or run the engine while your penicle is supported by the jack.
- Do not raise the vehicle while someone is in it.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.

Take particular care when towering the vehicle to ensure that no one working on or near the vehicle vill be injured.



A CAUTION

Replacing a flat tire

Observe the following precautions to reduce the risk of death or serious injury.

- Never use oil or grease on the wheel bolts or wheel nuts.
 - Oil and grease may cause the wheel nuts to be excessively tightened. leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing a serious accident. Remove any oil or grease from the wheel bolts or wheel nuts.
- Have the wheel nuts tightened with a torque wrench to 103 N·m (10.5) kgf·m, 76 ft·lbf) as soon as possible after changing wheels. Failure to follow these precautions could cause the nuts to loosen and the wheels may fall off, which could lead to an accident causing death or serious injury.
- When using the spare tire (vehicles with aluminum wheel tires)
 - Replace the spare tire with a standard tire as soon as possible.
 - Avoid sudden acceleration, deceleration and braking, as well as sharp cor-Jot to nering.



NOTICE

Do not drive the vehicle with a flat tire.

Do not continue driving with a flat tire.

Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair.

If the engine still does not start after following the correct starting procedure (\rightarrow P. 118, 123) or releasing the steering lock (\rightarrow P. 121, 124), confirm the following points.

The engine will not start even when the starter motor operates normally.

One of the following may be the cause of the problem.

- There may not be sufficient fuel in the vehicle's tank.
 Refuel the vehicle.
- The engine may be flooded.
 Try to restart the engine once more following correct starting procedures. (→P. 118, 123)
- There may be a malfunction in the engine immobilizer system.
 (→P. 67)
- The starter motor turns over slowly, the interior lights and headlights are dim, or the norn does not sound or sounds at a low volume.

One of the following may be the cause of the problem.

- The battery may be discharged. (→P. 347)
- The battery terminal connections may be loose or corroded.
- The starter motor does not turn over (automatic transmission vehicles with a smart entry & start system).

The engine starting system may be malfunctioning due to an electrical problem such as an open circuit or a blown fuse. However, an interim measure is available to start the engine. $(\rightarrow P. 341)$

- The starter motor does not turn over, the interior lights and headlights do not turn on, or the horn does not sound.
 - One of the following may be the cause of the problem.
 - One or both of the battery terminals may be disconnected.
 - The battery may be discharged. (→P. 347)
 - There may be a malfunction in the steering lock system (vehicles with a smart entry & start system).

Contact your Toyota dealer if the problem cannot be repaired, or if repair procedures are unknown.

Emergency start function (automatic transmission vehicles with a smart entry & start system)

When the engine does not start the following steps can be used as an interim measure to start the engine if the "ENGINE START STOP" switch is functioning normally.

- STEP 1 Set the parking brake.
- STEP 2 Shift the shift lever to P.
- STEP 3 Set the "ENGINE START STOP" switch to ACCESSORY mode.
- STEP 4 Push and hold the "ENGINE START STOP" switch about 15 seconds while depressing the brake pedal firmly.

Even if the engine can be started using the above steps, the system may be malfunctioning. Have the vehicle checked by your Toyota dealer.


If the shift lever cannot be shifted with your foot on the brake, there may be a problem with the shift lock system (a system to prevent accidental operation of the shift lever). Have the vehicle inspected by your Toyota dealer immediately.

The following steps may be used as an emergency measure to ensure that the shift lever can be shifted.

STEP 1 Set the parking brake.

STEP 2 Start the engine.

STEP 3 Depress the brake pedal.

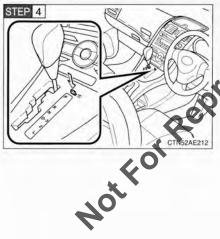

Press the Shift lock override button

The shift lever can be shifted while the button is pressed.

New genuine keys can be made by your Toyota dealer.


For vehicles with the smart entry & start system, bring the other key and the key number stamped on the key number plate.

For vehicles without the smart entry & start system, bring a master key and the key number stamped on the key number plate.

Not For Reproduction

If communication between the electronic key and vehicle is interrupted (\rightarrow P. 27) or the electronic key cannot be used because the battery is depleted, the smart entry & start system and wireless remote control cannot be used. In such cases, the doors can be opened or the engine can be started by following the procedure below.

Locking and unlocking the doors with the mechanical key

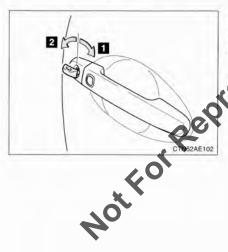


Using the mechanical key (\rightarrow P. 21) in order to perform the following operations:

Locks all doors
Unlocks all doors

Changing "ENGINE START STOP" switch modes and starting the engine

▶ Vehicles with an automatic transmission

STEP 1 Shift the shift lever to P and apply the brakes.

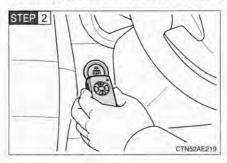

Touch the Toyota emblem side of the electronic key to the "ENGINE START STOP" switch.

An alarm will sound to indicate that the start function cannot detect the electronic key that is touched to the ENGINE START STOP" switch if any of the doors is opened and closed while the key shouched to the switch.

- STEP 3 To change "ENGINE START STOP" switch modes: Within 5 seconds of the buzzer sourcing, release the brake pedal and press the "ENGINE START STOP" switch. Modes can be changed each time the switch is pressed. (→P. 120)

 To start the engine. Press the "ENGINE START STOP" switch within 5 seconds after the buzzer sounds, keeping the brake pedal depressed.
- ▶ Vehicles with a manual transmission

STEP 1 Shift the shift lever to N and depress the clutch pedal.



Touch the Toyota emblem side of the electronic key to the "ENGINE START STOP" switch.

An alarm will sound to indicate that the start function cannot detect the electronic key that is touched to the "ENGINE START STOP" switch if any of the doors is opened and closed while the key is touched to the switch.

To change "ENGINE START STOP" switch modes: Within 5 seconds of the buzzer sounding, release the clutch pedal and press the "ENGINE START STOP" switch. Modes can be changed each time the switch is pressed. (→P. 120)

To start the engine: Press the "ENGINE START STOP" switch

within 5 seconds after the buzzer sounds, keeping the clutch pedal depressed.

In the event that the "ENGINE START STOP" switch still cannot be operated, contact your Toyota dealer.

Stopping the engine

- ► Vehicles with an automatic transmission

 Shift the shift lever to P and press the "ENGINE START STOP" switch as you normally do when stopping the engine
- ▶ Vehicles with a manual transmission. Shift the shift lever to N and press the "ENGINE START STOP" switch as you normally do when stopping the engine.

Replacing the key battery

As the above procedure is the temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery depletes. (\rightarrow P. 282)

The following procedures may be used to start the engine if the vehicle's battery is discharged.

You can call your Toyota dealer, or qualified repair shop.


If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your Toyota following the steps below.

STEP 1 Remove the battery cover. (→P. 260)



Remove the engine cover.

Raise the rear of the engine cover to remove the two rear clips, and then raise the front of the engine cover to remove the two front clips.

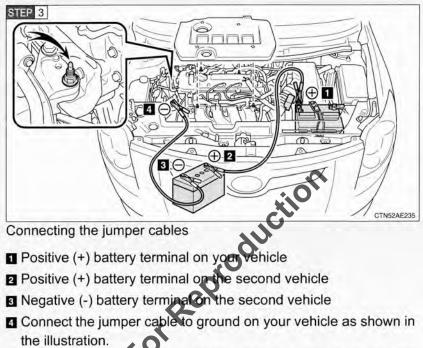

- Connect the jumper cable to ground on your vehicle as shown in the illustration.
- STEP 4 Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the battery of your vehicle.
- STEP 5 Vehicles with a smart entry & start system Open and close any of the doors with the "ENGINE START STOP" switch OFF.
- STEP 6 ➤ Vehicles without a smart entry & start system Maintain the engine speed of the second vehicle and turn the engine switch to the "ON" position, then start the vehicle's engine.
 - ▶ Vehicles with a smart entry & start system Maintain the engine speed of the second vehicle and turn the "ENGINE START STOP" switch to IGNITION ON mode, then start the vehicle's engine.

STEP 7 Once the vehicle's engine has started, remove the jumper cables in the exact reverse order in which they were connected.

Once the engine starts, have the vehicle checked at your Toyota dealer as soon as possible.

Avoiding a discharged battery

- Turn off the headlights and the audio system while the engine is turned off.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic, etc. prod

A CAUTION

Avoiding battery fires or explosions

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the battery.

- Make sure the jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any part other than the intended terminal.
- Do not allow the jumper cables to come into contact with the "+" and "-" terminals.
- Do not smoke, use matches, cigarette lighters or allow open flame near the battery.



A CAUTION

Battery precautions

The battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the battery.

- When working with the battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention. Place a wet sponge or cloth over the affected a until medical attention can be received.
- Always wash your hands after handling the battery support, terminals, and other battery-related parts.
- Do not allow children near the batter

To prevent damaging the vehicle

Do not pull- or push-start the vehicle, because the catalytic converter may overheat and become a fire hazard.

When handling jumper cables

Be careful that the jumper cables do not become tangled in the cooling fan or any of the belts when connecting or disconnecting them.

If your engine overheats:

STEP 1 Stop the vehicle in a safe place and turn off the air conditioning system.

STEP 2 Check to see if steam is coming out from under the hood.

If you see steam:

Stop the engine. Carefully lift the hood after the steam subsides and then restart the engine.

If you do not see steam:

Leave the engine running and carefully lift the hood.

STEP 3 Remove the engine compartment cover. (-P 260)


STEP 4 Check to see if the cooling fan is operating.

If the fan is operating:


Wait until the temperature of the engine (shown on the instrument cluster) begins to fall and then stop the engine.

If the fan is not operating.

Stop the engine and call your Toyota dealer.

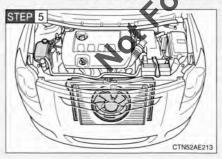

After the engine has cooled down sufficiently, check the engine coolant level and inspect the radiator core (radiator) for any leaks.

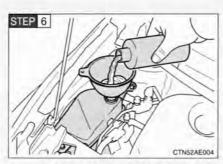

Add engine coolant if necessary.

Water can be used in an emergency if engine coolant is unavailable. (→P. 362)

Have the vehicle checked at the nearest Toyota dealer as soon as possible.

■ Overheating

If you observe the following, your vehicle may be overheating.

- The engine coolant temperature gauge enters the red zone or a loss of power is experienced.
- Steam is coming from under the hood.

▲ CAUTION

■To prevent an accident or injury when inspecting under the hood of your vehicle

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot, causing serious injury such as burns.
- Keep hands and clothing away from the fan and other belts while the engine is running.
- Do not loosen the coolant reservoir cap while the engine and radiator are hot.
 - Serious injury, such as burns, may result from hot coolant and steam released under pressure.



NOTICE

When adding engine coolant

Wait until the engine has cooled down before adding engine coolant. When adding coolant, do so slowly. Adding cool coolant to a hot engine too quickly can cause damage to the engine.

Not For Reproduction

Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt, or snow.

- STEP 1 Stop the engine. Set the parking brake and put the shift lever in P (automatic transmission) or N (manual transmission).
- STEP 2 Remove the mud, snow, or sand from around the stuck tire.
- STEP 3 Place wood, stones or some other material to help provide traction under the tires.
- STEP 4 Restart the engine.
- STEP 5 Shift the shift lever to D or R (automatic transmission) or 1 or R (manual transmission) and carefully apply the accelerator to free the vehicle.

Vehicles with a VSC/TRC: Turn off the TRC and/or VSC system if it is difficult to get out because of TRC and/or VSC operation. Kotpep (→P. 171)

A CAUTION

■ When attempting to free a stuck vehicle

If you choose to cook the vehicle back and forth to free it, make sure the surrounding area is clear, to avoid striking other vehicles, objects or persons. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

■ When shifting the shift lever (vehicles with an automatic transmission)

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

A NOTICE

- To avoid damaging the transmission and other components
 - Avoid spinning the wheels and do not rev the engine.
 - If the vehicle remains stuck after trying these procedures, the vehicle may require towing to be freed.

Not For Reproduction

Not For Reproduction

Vehicle specifications

6-1. Specifications

Maintenance data (fuel, oldlevel, etc.)....... 358 Fuel information............ 368

Not For Rep 6-2 Sustomization

Customizable features..... 369

Maintenance data (fuel, oil level, etc.)

Dimensions and weight

Overall width Overall height*1 Tread Tread Tread 1760 mm (69.3 in.) 1515 mm (59.6 in.) 2600 mm (102.4 in.) 1536 mm (60.5 in.)*2 1524 mm (60.0 in.)*3 Rear 1533 mm (60.4 in.)*2 1521 mm (59.9 in.)*3 1: Unladen vehicles 2: 195/65R15 tires 3: 205/55R16 tires	Overall height*1 1515 mm (59.6 in.) Wheelbase 2600 mm (102.4 in.) Front 1536 mm (60.5 in.)*2 1524 mm (60.0 in.)*3 Rear 1533 mm (60.4 in.)*2 1521 mm (59.9 in.)*3 1: Unladen vehicles 2: 195/65R15 tires	Overall length		4220 mm (166.1 in.)
Wheelbase 2600 mm (102.4 in.) Front 1536 mm (60.5 in.)*2 1524 mm (60.0 in.)*3 Tread	Wheelbase 2600 mm (102.4 in.) Front 1536 mm (60.5 in.)*2 1524 mm (60.0 in.)*3 Tread	Overall width		1760 mm (69.3 in.)
Tread Front 1536 mm (60.5 in.)*2 1524 mm (60.0 in.)*3	Tread Front 1536 mm (60.5 in.)*2 1524 mm (60.0 in.)*3	Overall height*1		1515 mm (59.6 in.)
Tread 1524 mm (60.0 in.)*3	Tread 1524 mm (60.0 in.)*3	Wheelbase		2600 mm (102.4 in.)
		Turks	Front	1536 mm (60.5 in.)*2 1524 mm (60.0 in.)*3
1: Unladen vehicles 2: 195/65R15 tires 3: 205/55R16 tires	1: Unladen vehicles 2: 195/65R15 tires 3: 205/55R16 tires		Rear	1533 mm (60.4 in.)*2 1521 mm (59.9 in.)*3
		1: Unladen vehi 2: 195/65R15 tir 3: 205/55R16 tir	cles res res	ducti
Ko.		1: Unladen vehi 2: 195/65R15 tir 3: 205/55R16 tir	cles res res	Reblodifich
lot ko.		1: Unladen vehi 2: 195/65R15 tii 3: 205/55R16 tii	cles res res	Reblodifich
Hot Fo.	Hoit	1: Unladen vehi 2: 195/65R15 tir 3: 205/55R16 tir	cles res res	Reproducti

^{*1:} Unladen vehicles


^{*2: 195/65}R15 tires

^{*3: 205/55}R16 tires


Vehicle identification

■ Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Toyota. It is used in registering the ownership of your vehicle.

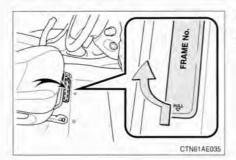

This number is stamped under the driver's seat.

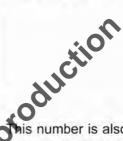




his number is also on the manufacturer's label on the driver's side center pillar.

■ Engine number

The engine number is stamped on the engine block as shown.

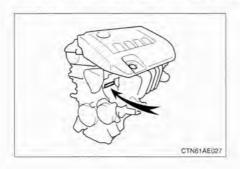

Engine

Model	2ZR-FE		
Туре	4-cylinder in line, 4-cycle, gasoline		
Bore and stroke	80.5 × 88.3 mm (3.17 × 3.48 in.)		
Displacement	1798 cm ³ (109.7 cu.in.)		
Drive belt tension	7.6 — 10.0 mm (0.30 — 0.39 in.)* Generator Water pump Air conditioning compressor CTN61AE021 *; Drive be referection with 98 N (10 kgf, 22 lbf) thum (used belt)		

Fuel

(used belt)		
Fuel	KO,	
Fuel type	Unleaded gasoline only	
Research octane num- ber	91 or higher	
Fuel tank capacity (Reference)	55 L (14.5 gal., 12.1 Imp. gal)	

Lubrication system

Oil capacity (Reference) (drain and refill) With filter	4.2 L (4.4 qt., 3.7 lmp. qt.)		
➤ Without filter	3.9 L (4.1 qt., 3.4 lmp. qt.)		
Oil grade	20W-50 and 15W-40: API grade SL or SM multigrade engine oil 10W-30, 5W-30, 5W-20 and 0W-20: API grade SL "Energy-Conserving", SM "Energy-Conserving" or ILS C multigrade engine oil		
Recommended oil viscosity	Use Toyota approver. Toyota Genuine Motor Oil" or equivalent to satisfy the grade and viscosity shown Gelow. 20W-50 15W-40 10W-30 5W-30 5W-20 10W-20 0W-20 0W-20 Temperature range anticipated before next oil change CTN61AE043		

Oil viscosity

- The 5W portion of the oil viscosity rating indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 30 in 5W-30 indicates the oil viscosity when the oil is at its operating temperature. An oil with a higher viscosity may be better suited if the vehicle is operated at high speeds, or under extreme load condition.

Cooling system

either of the following. Toyota Super Long Life Coolant" milar high-quality ethylene glycol-based on-silicate, non-amine, non-nitrite, and on-borate coolant with long-life hybrid ganic acid technology not use plain water alone.
dul
pro
ganic acid technology not use plain water alone.

Ignition system

Spark plug Make DENSO SC20HR11 1.1 mm (0.043 in.) Gap



NOTICE

Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust gap when tuning engine.

Electrical system

Battery

Specific gravity reading at 20°C (68°F):

Charging rates

Quick charge Slow charge

CODUCTION WHAT 1.290 Fully charged

- 1.200 Half charged 1.060 — 1.100 Discharged

15 A max. 5 A max.

Automatic transaxle

Fluid capacity	6.5 L (6.9 qt., 5.7 Imp. qt.)
Fluid type	Toyota Genuine ATF WS



NOTICE

Automatic transmission fluid type

Using automatic transmission fluid other than "Toyota Genuine ATF WS" may cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage the automatic transmission of your vehicle.

Manual transaxle

Gear oil capacity (Reference)	2.4 L (2.5 qt., 2.1 lmp. qt.)	
Gear oil type	TOYOTA Genuine Manual Transmission Gear Oil LV API GL-4	
Recommended gear oil viscosity	SAE 75W	

NOTICE

Manual transmission gear oil type

Using manual transmission gear oil other than "TOYOTA Genuine Manual Transmission Gear Oil LV API GL-4 SAE 75W" tray cause occurrence of idle ratting noise and bad fuel consumption.

Clutch

Clutch

Pedal free play	5 — 15 mm (0.2 — 0.6 in.)
Fluid type	SAE J1703 or FMVSS No.116 DOT 3

Brakes

Pedal clearance *1	 Vehicles without a VSC 64 mm (2.52 in.) Min. Vehicles with a VSC 69 mm (2.72 in.) Min. 		
Pedal free play	1 — 6 mm (0.04 — 0.24 in.)		
Parking brake lever travel *2	3 — 6 clicks		
Fluid type	SAE J1703 or FMVSS No. 116 DOT 3		

- *1: Minimum pedal clearance when depressed with a force of 294 N (30 kgf, 66 lbf) while the engine is running
- *2: Parking brake lever travel when pulled up with a force of 200 N (20.4 kgf, 45.0 lbf)

 Steering

 Free play

 Ress than 30 mm (1.2 in.)

Tires and wheels

Tire size	195/65R15 91H, 205/55R16 91V		
	Vehicle speed	Front wheel kPa (kgf/cm ² or bar, psi)	Rear wheel kPa (kgf/cm ² or bar, psi)
Tire inflation pressure (Recommended cold tire inflation pressure)*	More than 160 km/h (99 mph)	250 (2.5, 36)	250 (2.5, 36)
	160 km/h (99 mph) or less	220 (2.2, 32)	220 (2.2, 32)
Wheel size	15 × 6 J, 16 × 6 1		
Wheel nut torque	103 N•m (10 Ngf•m, 76 ft•lbf)		

^{*: 4} passengers and full loaded or 5 passengers and full loaded

When towing a trailer

Add 20.0 kPa (0.2 kgf/cm² or bar, 3 psi) to the recommended tire inflation pressure, and drive at speeds below 100 km/h (62 mph).

Light bulbs

	Light Bulbs	W	Туре
Headlights			
	High beam	60	D
	Low beam (discharge bulbs)	35	Α
	Low beam (halogen bulbs)	55	В
	Front turn signal lights	21	G
	Front position lights	5	E
Exterior	Front fog lights (if equipped)	G5	В
	Side turn signal lights	5	С
	Front fog lights (if equipped) Side turn signal lights Rear turn signal lights Back-up lights Stop lights Tail lights	21	С
	Back-up lights	21	E
	Stop lights	16	E
	Tail lights	5	E
	License plate lights	5	E
	Vanity lights	8	E
Interior	Interior ight	8	F
menor	Personal lights	8	E
	Luggage compartment light	5	F

A: D4S discharge bulbs

C: Wedge base bulbs (amber)

E: Wedge base bulbs (clear)

G: Single end bulbs (amber)

B: H11 halogen bulbs

D: HB3 halogen bulbs

F: Double end bulbs

Your vehicle must use only unleaded gasoline.

For optimum engine performance, select unleaded gasoline with a Research Octane Number of 91 or higher.

Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your Toyota has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

If your engine knocks

- Consult your Toyota dealer.
- You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern. eprodi

NOTICE

Notice on fuel quality

- Do not use improper fuels, it improper fuels are used the engine will be damaged.
- Do not use leaded gasoline. Leaded gasoline will cause the three-way catalytic converter to lose its effectiveness and emission control system to function improperly.

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by your Toyota dealer.

Some function settings are changed simultaneously with other functions being customized. Contact your Toyota dealer.

Item	Function	Default setting	Customized setting
Smart entry	Smart entry & start system	ON STORY	OFF
& start system (→P. 22)	Operation signal • Emergency flashers • Buzzer	OON	OFF
	Wireless remote control	ON	OFF
Wireless remote control (→P. 32)	Time elapsed before automatic door lock function is activated if	30 seconds	60 seconds
	door is not opened after being unlocked		120 seconds
	Deration signal Emergency flashers Buzzer (vehicles with a smart entry & start system)	ON	OFF
	Door lock buzzer (vehi- cles with a smart entry & start system)	ON	OFF
Automatic light control system (→P. 154)	Light sensor sensitivity	Level 3	Level 1 to 5

Item	Function	Default setting	Customized setting
Illumination (→P. 223) Ope "EN	Time elapsed before	15 seconds	7.5 seconds
	lights turn off		30 seconds
	Operation when the doors are unlocked	ON	OFF
	Operation after the "ENGINE START STOP" or engine switch turned OFF	ON	OFF

Not For Reproduction

Index

	Abbreviation list	37
	Alphabetical index	37
	What o do if	38
Hothol		

Abbreviation list Abbreviation/Acronym list

ABBREVIATIONS	MEANING
A/C	Air Conditioning
ABS	Anti-lock Brake System
ACC	Accessory
ALR	Automatic Locking Retractor
CRS	Child Restraint System
DISP	Display
ECU	Electronic Control Unit
ELR	Emergency Locking Retractor
EPS	Emergency Locking Retractor Electric Power Steering Light Emitting Diode
LED	Light Emitting Diode
SRS	Supplemental Restraint System
TRC	Traction Control
VIN	Vehicle dentalcation Number
VSC	Vehicle Stability Control

Alphabetical index Alphabetical index

A/C188, 195	
ABS170	
Air conditioning filter279	
Air conditioning system	
Air conditioning filter279	
Automatic air conditioning	
system 188	
Manual air conditioning	
system195	
Airbags	
Airbag operating conditions 77	
Airbag precautions for your	
child82	
Airbag warning light321	
Curtain shield airbag operating	
conditions77	
Curtain shield airbag	
precautions82	
General airbag precautions82	C
Locations of airbags	Y
Modification and disposal of	
Proper driving posture73, 82	é
Side airbag operating	
conditions77	
Side airbag precautions 82	
SRS airbags75	
Alarm71	
Antenna206	
Anti-lock brake system170	
Armrest238	
Ashtrays234	1
Audio system	
Antenna206	
CD player/changer207	
MP3/WMA disc213	
Optimal use219	
Radio203	
Steering wheel audio	
switch221	
Type201	

Automatic air conditioning	
system18	A
Automatic headlight leveling	
system15	7
Automatic light control	
system15	4
Automatic transmission	
Automatic transmission 120	6
If the shift lever cannot be	
shifted from P34	2
Auxiliary box229, 24	0
Back-up fights	
Replacing light bulbs298	
Waitage36	
Back door3	8
Battery	
Checking26	7
If the vehicle has discharged	
battery 34	7
Preparing and checking before	
winter17	6
Brake	
Parking brake13	1
Brake assist 170	0
Break-in tips11	0

В

C

Care	
Exterior24	4
Interior24	7
Seat belts248	8
Cargo hooks24	0
CD changer20	7
CD player20	
Chains170	
Child restraint system	
Baby (Infant) seats,	
definition87	7
Baby (Infant) seats,	
installation99	5
Child (Convertible) seats,	
definition87	7
Child (Convertible) seats,	
installation99	5
Installing CRS with ISOFIX	ì
rigid anchor10	N
Installing CRS with seat	7
belts96	3
Installing CRS with top	
straps102	2
Junior (Booster) seats,	
definition87	7
Junior (Beoster) seats,	
installation95	5
Child safety	
Airbag precautions82	2
Battery precautions 270, 350	
Child restraint system87	
Child-protectors36	
How your child should wear	
the seat belt49)
Installing child restraints95	
Moon roof precautions62	
Power window lock switch 57	
Power window precautions 59	
Removed key battery	
precautions284	1
Seat belt precautions49	
Design providents in the state of	

Child-protectors	36
Cigarette lighter	
Cleaning	
Exterior	.244
Interior	.247
Seat belts	.248
Clock142	, 151
Condenser	. 267
Console box	. 226
Cooling system	
Engine overheating	.351
Cruise control	.166
Cup holde	
Curtain shield airbags	
Customizable features	.369
0	
Defogger	
Rear window	.200
Dimension	1000
Display	
Trip information142,	151
Warning message	
Do-it-yourself maintenance	
Doors	
Door glasses	57
Door lock	
Double locking system	69
Side mirrors	
Driver's seat belt reminder	
light	.322
Driving	
Break-in tips	.110
Correct posture	
Procedures	
Winter driving tips	176
200	



Electric power steering170	
Electronic key	
If your electronic key battery is	
discharged344	
Emergency flashers	
Switch310	
Emergency, in case of	
If the engine will not start 340	
If the shift lever cannot be	
shifted from P342	
If the vehicle has discharged	
battery347	
If the warning buzzer	
sounds320	
If the warning light turns on320	
If the warning message is	
displayed324	
If you have a flat tire332	
If you lose your keys343	-
If you think something is	ı
wrong318	
If the electronic key does not	
operate properly344	
If your vehicle becomes	
stuck354	
If your vehicle needs to be	
towed311	
If your vahicle overheats 351	

Engine
Compartment259
Engine switch 120, 123
Hood255
How to start the
engine118, 123
Identification number359
If the engine will not start 340
Ignition switch 120, 123
Overheating 351
Engine compartment cover 260
Engine coolant
Capacity
Cheeking265
Preparing and checking before
Winter176
Engine coolant temperature
gauge133
Engine immobilizer system 67
Engine oil
Capacity361
Checking261
Preparing and checking before
winter176
Engine switch light223
EPS 170

First-aid kit storage belt240	G Gas station information 384
Floor mat239	Gauges133
luid	Glove box225
Washer271	
og lights	H Hazard lights
Replacing light bulbs298	Switch310
Switch 158	Head restraints
Wattage367	Adjusting44
ront fog lights	Headlight cleaner165
Replacing light bulbs298	Headlights
Switch 158	Discharge headlights
Wattage367	precautions308
ront passenger's seat belt	Replacing light bulbs298
reminder light322	switch 154
ront position lights	Wattage 36
Replacing light bulbs298	Nood25
Switch 154	Hooks
Wattage367	Cargo hook240
ront seats	Horn132
Adjustment lights	710111111111111111111111111111111111111
ront turn signal lights	Identification
Replacing light bulbs 298	
Wattage367	Engine359
uel	Vehicle359
Capacity360	Ignition switch120, 12
Fuel gauge	Illuminated entry system 223
Fuel pump shut off system319	Indicator lights13
Gas station information384	Inside rear view mirror5
Information368	Interior lights
Refueling63	Interior lights22
Type360	Switch224
uel door63	Wattage367
uel filler door63	
uel pump shut off system 319	
uses286	
uses200	

Jack	M Maintenance
Positioning a floor jack 257	Do-it-yourself maintenance252
Vehicle-equipped jack332	Maintenance data358
Jack handle332	Maintenance requirements 250
	Manual air conditioning
Keys	system195
Electronic key20	Manual headlight leveling
Engine switch120, 123	switch155
If you lose your keys343	Manual transmission128
If your electronic key battery is	Meter
discharged344	Instrument panel light
Ignition switch120, 123	control
Key number20	Meters
Keys20	Mirrors
Mechanical key20	Inside rear view mirror 53
Wireless remote control32	Side mirrors55
30000000000000000000000000000000000000	Vanity mirrors233
Language	Moon roof60
Multi-information	MP3 disc213
display142, 61	Multi-information
License plate lights	display142, 151
Replacing light bulbs	
Wattage367	Odometer133
Light bulbs	Oil
Replacing	Engine oil
Wattage367	Opener
Lights	Back door38
Emergency flasher switch 310	Fuel filler door63
Fog light switch158	Hood255
Hazard light switch310	Outside rear view mirrors
Headlights switch154	Adjusting and folding55
Interior light switch224	Outside temperature
Personal light switch224	display143, 151
Replacing light bulbs298	Overheating, Engine351
Turn signal lever130	100000000000000000000000000000000000000
Vanity lights233	
Wattage367	

Lock steering column..... 121, 124

Parking brake131	S Seat belts
Parking lights	Adjusting the seat belt 46
Replacing light bulbs298	Automatic Locking Retractor
Switch 154	(ALR)48
Wattage367	Child restraint system
Personal lights	installation 95
Switch224	Cleaning and maintaining
Wattage367	the seat belts248
Pollen removal mode192	Emergency Locking Retractor
Power outlet237	(ELR)48
Power windows57	How to wear your seat belt 46
	How your child should wear
Radiator267	the seat belt49
Radio203	Pregnant women, proper seat
RDS (Radio date system)204	belt use48
Rear seat	Reminder light322
Adjustment41	Seat belt pretensioners47
Folding down41	Seats
Rear turn signal lights	Adjustment40
Replacing light bulbs298	Adjustment precautions 40
Wattage367	Child seats/child restraint
Rear window defogger200	system installation95
Rear window wiper	Cleaning247
	Front seat adjustment 40
Replacing Key battery 282	Front seat adjustment
Fuses	precautions40
Light bulbs298	Head restraint44
Tires	Properly sitting in the seat 73
,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	Rear seat adjustment41
	Rear seat adjustment
	precautions43
	Service reminder
	indicators138
	Shift lever
	If the shift lever cannot
	be shifted from P342
	Manual transmission 128
	Automatic transmission 126
	Shift look system 342

Side airbags

Side mirror
Adjusting and folding55
Side turn signal lights
Wattage367
Smart entry & start system
Entry function22
Starting the engine118
Spare tire
Inflation pressure366
Storage location,332
Spark plug363
Specifications358
Speedometer 133
Steering
Column lock release 121, 124
Steering wheel
Audio switches221
Adjustment52
Stop lights
Replacing light bulbs
Wattage
Storage feature225
Storage precautions 175
Stuck If your vehicle becomes stuck
stuck354
Sun visors232
Sunshade
Roof61
Switch
Emergency flasher switch310
Engine switch120, 123
Fog light switch158
Hazard light switch310
Ignition switch120, 123
Light switches154
Power door lock switch35
Power window switch57
Window lock switch57
Wiper and washer 159, 164

Tachometer	133
Tail lights	
Replacing light bulbs	298
Switch	154
Wattage	367
Theft deterrent system	
Alarm	71
Double locking system	69
Engine immobilizer system.	67
Tire inflation pressure	276
Tires	
Chains	176
Checking	273
If you have a flat tire	332
Inflation pressure	276
Replacing	332
Rotating tires	273
Size	366
Snow tires	176
Spare tire	332
Tools	332
Total load capacity	358
Towing	
Emergency towing	312
Trailer towing	
Traction control	
TRC	170
Trip information 142	, 151
Trip meter	133
Turn signal lights	
Replacing light bulbs	298
Switch	130
Wattage	367

Vanity lights	
Vanity lights	233
Wattage	
Vanity mirrors	233
Vehicle identification	
number	359
Vehicle stability control	170
vsc	170
Warning buzzers	
Brake system	320
Seat belt reminder	322
Warning lights	
Anti-lock brake system	32
Automatic headlight leveling	
system	32
Brake assist system	32
Brake system	320
Charging system	32
Electric power steering	2
system	32
Electronic engine control	
system	32
Engine oil pressure	
Malfunction in cator lamp	
Master warning light	322
Open door	322
Pretensioners	32
Seat belt reminder light	322
SRS airbags	321

Warning messages	
Anti-lock brake system32	6
Back door32	
Brake assist system32	6
Brake system 32	4
Charging system32	
Electric power steering	
system32	6
Electronic engine control	
system32	6
Engine system32	6
Engine sil pressure32	5
Low level32	7
Open door32	
Parking brake32	7
Smart entry & start system 32	8
SRS airbags32	6
Steering lock32	
Vehicle stability control 17	0
Washer	
Checking27	1
Preparing and checking	
before winter17	6
Switch 159, 16	4
Washing and waxing24	4
Weight35	8
Wheels27	8
Window glasses5	7
Window lock switch5	7
Windows	
Power windows5	7
Rear window defogger 20	0
Washer 159, 16	4
Windshield wipers 15	9
Wireless remote control key	
Replacing the battery28	2
Wireless remote control 3	2
WMA disc21	3


A tire punctures	P. 332 If you have a flat tire
	P. 340 If the engine will not start P. 67 Engine immobilizer system
The engine does not start	P. 344 If the electronic key does not operate properly
	P. 347 If the battery is discharged
The shift lever cannot be moved out	P. 342 If the shift lever cannot be shifted from P
The engine coolant temperature gauge enters the red zone	
Steam can be seen coming from under the hood	P. 351 If your vehicle overheats
Steam can be seen coming from under the hood The key is lost	P. 343 If you lose your keys
The battery runs out	P. 347 If the battery is discharged
The doors cannot be locked	P. 35 Doors
The horn begins to sound	P. 71 Alarm
The vehicle is stuck in mud or sand	P. 354 If the vehicle becomes stuck


The warning light or indicator light comes on

P. 320

If a warning light turns on or a warning buzzer sounds...

▶ Vehicles with Optitron type meters

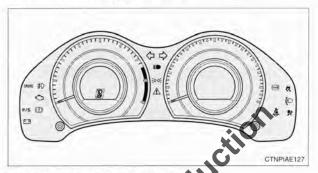

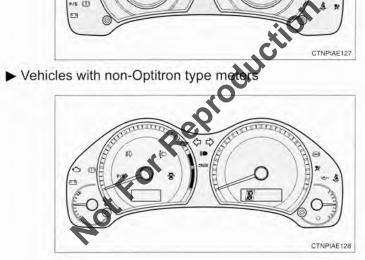

■Warning lights



The warning mes displayed

tem warning light

P. 321

If a warning message is displayed

GAS STATION INFORMATION Auxiliary catch lever Fuel filler door P. 255 P. 63 CTNPIAE049 Hood lock release lever Fuel filler door opener flation pressure P. 63 P. 366 P. 255 55 L (1 gal., 12.1 Imp. gal.) Fuel tank capacity (Reference) Unleaded gasoline, Research Octane Fuel type Momber 91 or higher Cold tire inflation P. 366 pressure Engine oil capacity L (qt., Imp. qt.) (Reference) With filter 4.2 (4.4, 3.7) (Drain and refill) Without filter 3.9 (4.1, 3.4) Toyota Genuine Motor Oil or equivalent Oil grade: 20W-50 and 15W-40: API grade SL or SM multigrade engine Engine oil type oil 10W-30, 5W-30, 5W-20 and 0W-20:

API grade SL "Energy-Conserving", SM "Energy-Conserving" or ILSAC multigrade engine oil Not For Reproduction

POT FOT LOT

Publication No.OM12D74E Part No.01999-12D74 Printed in Japan 01-0901-00 ©

カローラハッチバック (豪州E)